

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|-----------------|---------|------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| 1 Series | E81/E82/E87/E88 | Body | JBE Junction-box electronics | ● | ● | ● | ● | ● | ● | |
| 1 Series | E81/E82/E87/E88 | Body | JBE2 Junction Box electronics | ● | ● | ● | ● | ● | ● | |
| 1 Series | E81/E82/E87/E88 | Body | JNAV Navigation system, Japan | ● | ● | ● | ● | ● | ● | |
| 1 Series | E81/E82/E87/E88 | Body | M-ASK-BO User interface | ● | ● | ● | ● | ● | ● | |
| 1 Series | E81/E82/E87/E88 | Body | M-ASK-GW Gateway | ● | ● | ● | ● | ● | ● | |
| 1 Series | E81/E82/E87/E88 | Body | M-ASK-NAV Navigation system | ● | ● | ● | ● | ● | ○ | |
| 1 Series | E81/E82/E87/E88 | Body | MOST system analysis | ● | ● | ● | ○ | ○ | ○ | |
| 1 Series | E81/E82/E87/E88 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | F02 |
| 1 Series | E81/E82/E87/E88 | Body | RAD Radio | ● | ● | ● | ● | ● | ● | |
| 1 Series | E81/E82/E87/E88 | Body | RAD2-BO User interface | ● | ● | ● | ● | ● | ● | |
| 1 Series | E81/E82/E87/E88 | Body | RAD2-GW Gateway | ● | ● | ● | ● | ● | ● | |
| 1 Series | E81/E82/E87/E88 | Body | RLSS Rain/Light Solar Sensor | ● | ● | ● | ● | ○ | ○ | |
| 1 Series | E81/E82/E87/E88 | Body | SDARS Satellite tuner | ● | ● | ● | ● | ● | ● | |
| 1 Series | E81/E82/E87/E88 | Body | SINE Siren and tilt sensor | ● | ● | ● | ● | ○ | ○ | |
| 1 Series | E81/E82/E87/E88 | Body | SMBF Seat memory, front passenger | | | | | | | |
| 1 Series | E81/E82/E87/E88 | Body | SMFA Seat module, driver | ● | ● | ● | ● | ● | ● | |
| 1 Series | E81/E82/E87/E88 | Body | TCU Telematic control unit | ● | ● | ● | ● | ● | ● | |
| 1 Series | E81/E82/E87/E88 | Body | ULF Universal charging and hands-free facility | ● | ● | ● | ● | ● | ● | |
| 1 Series | E81/E82/E87/E88 | Body | ULF-SBX Interface box | ● | ● | ● | ● | ● | ● | |
| 1 Series | E81/E82/E87/E88 | Body | ULF-SBX-H Interface box High | ● | ● | ● | ● | ● | ● | |
| 1 Series | E81/E82/E87/E88 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| 1 Series | E81/E82/E87/E88 | Chassis | AL active front steering (AFS70) | ● | ● | ● | ● | ○ | ● | |
| 1 Series | E81/E82/E87/E88 | Chassis | AL active steering | ● | ● | ● | ● | ○ | ● | |
| 1 Series | E81/E82/E87/E88 | Chassis | EPS Electronic Power Steering | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|-----------------|---------|-----------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|--------------------------------------------------------------------------|
| 1 Series | E81/E82/E87/E88 | Chassis | RDC Tyre pressure control | ● | ● | ● | ● | ● | ● | |
| 1 Series | E81/E82/E87/E88 | Drive | CAS Car Access System | ● | ● | ● | ● | ● | ● | |
| 1 Series | E81/E82/E87/E88 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |
| 1 Series | E81/E82/E87/E88 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18F19, F20, F21 |
| 1 Series | E81/E82/E87/E88 | Drive | EKPS fuel-pump control | ● | ● | ● | ● | ● | ● | F29 |
| 3 Series | E36[>9803] | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ○ | ● | F03 |
| 3 Series | E36[>9803] | Body | BCO/MID On-board computer/MID | | | | | | | |
| 3 Series | E36[>9803] | Body | CVM/CVM2 Convertible top module | ● | ● | ● | ● | ● | ● | |
| 3 Series | E36[>9803] | Body | IHKA/IHKA2 Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | F04 |
| 3 Series | E36[>9803] | Body | IR Radio/infrared locking system | | | | | | | |
| 3 Series | E36[>9803] | Body | KOM Instrument cluster | ● | ● | ● | ● | ● | ○ | F24, F28 |
| 3 Series | E36[>9803] | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | F02 |
| 3 Series | E36[>9803] | Body | URS Rollover sensor | ● | ● | ● | ● | ○ | ○ | |
| 3 Series | E36[>9803] | Body | ZKE Central body electronics | ● | ● | ● | ● | ● | ○ | F27 |
| 3 Series | E36[>9803] | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| 3 Series | E36[>9803] | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |
| 3 Series | E36[>9803] | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18 F19, F20, F21 |
| 3 Series | E36[>9803] | Drive | EWS Vehicle immobilizer | ● | ● | ● | ● | ● | ○ | F22 |

MaxiDAS_BMW_V3.01 Function List

NOTES:

● This function is supported.

○ This function is not supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|-------|-----------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| 3 Series | E36[>9803] | Drive | GR Cruise control | ● | ● | ● | ● | ● | ○ | |
| 3 Series | E36[>9803] | Drive | TOENS Thermal oil-level sensor | ● | ● | ● | ● | ● | ○ | |
| 3 Series | E46 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ○ | ● | F03 |
| 3 Series | E46 | Body | AHL Adaptive directional headlights | ● | ● | ● | ● | ● | ● | |
| 3 Series | E46 | Body | AIC Automatic Interval control | ● | ● | ● | ● | ○ | ○ | |
| 3 Series | E46 | Body | BIT Basis Interface Telephone | ● | ● | ● | ● | ○ | ○ | F25, F22 |
| 3 Series | E46 | Body | BM On-board monitor | ● | ● | ● | ● | ● | ○ | |
| 3 Series | E46 | Body | CVM/CVM2 Convertible top module | ● | ● | ● | ● | ● | ● | |
| 3 Series | E46 | Body | IHKA/IHKA2 Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | F04 |
| 3 Series | E46 | Body | IHKR Heater and A/C control | ● | ● | ● | ● | ● | ● | F22 |
| 3 Series | E46 | Body | JBIT Japan Basis Interface Telephone | ● | ○ | ○ | ● | ○ | ○ | |
| 3 Series | E46 | Body | KOM Instrument cluster | ● | ● | ● | ● | ● | ○ | F24, F28 |
| 3 Series | E46 | Body | LSZ Light switching centre | ● | ● | ● | ● | ● | ○ | |
| 3 Series | E46 | Body | MIR Multi-Information Radio | ● | ● | ● | ● | ○ | ○ | |
| 3 Series | E46 | Body | NAJ Navigation computer, Japan | ● | ● | ● | ● | ● | ○ | |
| 3 Series | E46 | Body | NAR Navigation radio | ● | ● | ● | ○ | ● | ○ | |
| 3 Series | E46 | Body | NAV Navigation computer | ● | ● | ● | ● | ● | ○ | F26 |
| 3 Series | E46 | Body | NAV Navigation computer MKII | ● | ● | ● | ● | ○ | ○ | |
| 3 Series | E46 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | F02 |
| 3 Series | E46 | Body | RAD Radio | ● | ● | ● | ● | ● | ● | |
| 3 Series | E46 | Body | RLS Rain/Light Sensor | ● | ● | ● | ● | ○ | ● | |
| 3 Series | E46 | Body | SES Language-input system | ● | ● | ● | ○ | ● | ○ | |
| 3 Series | E46 | Body | SHD Sliding/tilting sunroof | ● | ● | ● | ● | ● | ● | |
| 3 Series | E46 | Body | SMB Entrance aid, passenger | ● | ● | ● | ● | | ○ | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

● This function is supported.

○ This function is not supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|---------|------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|---------------------------------------------------------------------------|
| 3 Series | E46 | Body | SMF Entrance aid, driver | ● | ● | ● | ● | ● | ○ | |
| 3 Series | E46 | Body | SMF Seat memory, driver | ● | ● | ● | ● | ● | ○ | |
| 3 Series | E46 | Body | SPMBT Mirror memory, passenger | ● | ● | ● | ● | ● | ○ | |
| 3 Series | E46 | Body | SPMFT Mirror memory, driver | ● | ● | ● | ● | ● | ○ | |
| 3 Series | E46 | Body | SZM Switching centre, centre console | ● | ● | ● | ● | ● | ● | |
| 3 Series | E46 | Body | TCU Telematic control unit | ● | ● | ● | ● | ● | ● | |
| 3 Series | E46 | Body | TEL Telephone interface | ○ | ○ | ○ | ● | ● | ○ | |
| 3 Series | E46 | Body | ULF Universal charging and hands-free facility | ● | ● | ● | ● | ● | ● | |
| 3 Series | E46 | Body | URS Rollover sensor | ● | ● | ● | ● | ○ | ○ | |
| 3 Series | E46 | Body | VID Video module | ● | ● | ● | ○ | ○ | ○ | |
| 3 Series | E46 | Body | VID Video module III | ● | ● | ● | ○ | ○ | ○ | |
| 3 Series | E46 | Body | ZKE Central body electronics | ● | ● | ● | ● | ● | ○ | F27 |
| 3 Series | E46 | Body | ZUH Auxiliary heater | ● | ● | ● | ● | ● | ○ | F23 |
| 3 Series | E46 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| 3 Series | E46 | Chassis | DDS Deflation Detection System | ● | ● | ● | ● | ○ | ○ | F29 |
| 3 Series | E46 | Chassis | LWS Steering angle sensor | ● | ● | ● | ● | ○ | ○ | |
| 3 Series | E46 | Chassis | MFL Multi-function steering wheel | ● | ● | ● | ● | ○ | ○ | |
| 3 Series | E46 | Chassis | RDC Tyre pressure control | ● | ● | ● | ● | ● | ● | |
| 3 Series | E46 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |
| 3 Series | E46 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18, F19, F20, F21 |
| 3 Series | E46 | Drive | EKP Fuel pump | ● | ● | ● | ● | ● | ○ | F29 |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|-----------------|-------|------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| 3 Series | E46 | Drive | EWS Vehicle immobilizer | ● | ● | ● | ● | ● | ○ | F22 |
| 3 Series | E46 | Drive | GR Cruise control | ● | ● | ● | ● | ● | ○ | |
| 3 Series | E90/E91/E92/E93 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ○ | ● | F03 |
| 3 Series | E90/E91/E92/E93 | Body | AHM Trailer module | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | AMP Amplifier | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | CA Comfort access system | ● | ● | ● | ● | ○ | ● | |
| 3 Series | E90/E91/E92/E93 | Body | CAN communication analysis/CAN/bytflight | ● | ● | ○ | ○ | ○ | ○ | |
| 3 Series | E90/E91/E92/E93 | Body | CCC-A Applications | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | CCC-ANT Aerial tuner | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | CCC-ASK Audio system controller | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | CCC-BO User interface | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | CCC-GW Gateway | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | CDC CD Changer | ● | ● | ● | ○ | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | CIC Car Information Computer | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | CIC-GW Gateway | ● | ● | ● | ○ | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | CID Central information display | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | CNAV Navigation system, China | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | CON Controller | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | CTM Convertible-top module | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | DAB Digital tuner | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | DWA anti-theft alarm system | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | FLA High Beam Assist | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | FRM footwell module | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | FRM2 footwell module 2 | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

● This function is supported.

○ This function is not supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|-----------------|------|-----------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| 3 Series | E90/E91/E92/E93 | Body | FZD Function centre, roof | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | IBOC Digital tuner US | ● | ● | ● | ● | ○ | ● | |
| 3 Series | E90/E91/E92/E93 | Body | IHKA/IHKA2 Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | F04 |
| 3 Series | E90/E91/E92/E93 | Body | IHKR Heater and A/C control | ● | ● | ● | ● | ● | ● | F22 |
| 3 Series | E90/E91/E92/E93 | Body | IHR Integrated heater control | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | INSTR Instrument cluster | ● | ● | ● | ● | ● | ● | F01, F24, F28 |
| 3 Series | E90/E91/E92/E93 | Body | JBE Junction-box electronics | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | JBE2 Junction Box electronics | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | JNAV Navigation system, Japan | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | KNAV Navigation system, Korea | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | M-ASK-BO User interface | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | M-ASK-GW Gateway | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | M-ASK-NAV Navigation system | ● | ● | ● | ● | ● | ○ | |
| 3 Series | E90/E91/E92/E93 | Body | MOST system analysis | ● | ● | ● | ○ | ○ | ○ | |
| 3 Series | E90/E91/E92/E93 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | F02 |
| 3 Series | E90/E91/E92/E93 | Body | RAD Radio | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | RAD2-BO User interface | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | RAD2-GW Gateway | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | RLSS Rain/Light Solar Sensor | ● | ● | ● | ● | ○ | ○ | |
| 3 Series | E90/E91/E92/E93 | Body | SDARS Satellite tuner | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | SHD Panorama glass sunroof | | | | | | | |
| 3 Series | E90/E91/E92/E93 | Body | SINE Siren and tilt sensor | ● | ● | ● | ● | ○ | ○ | |
| 3 Series | E90/E91/E92/E93 | Body | SMBF Seat module, passenger | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | SMFA Seat module, driver | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|-----------------|---------|------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|---------------------------------------------------------------------------|
| 3 Series | E90/E91/E92/E93 | Body | TCU Telematic control unit | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | ULF Universal charging and hands-free facility | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | ULF-SBX Interface box | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | ULF-SBX-H Interface box High | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Body | VM Video Module | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| 3 Series | E90/E91/E92/E93 | Chassis | ACC Active Cruise Control | ● | ● | ● | ○ | ○ | ● | |
| 3 Series | E90/E91/E92/E93 | Chassis | AL active front steering(AFS70) | ● | ● | ● | ● | ○ | ● | |
| 3 Series | E90/E91/E92/E93 | Chassis | AL active steering | ● | ● | ● | ● | ○ | ● | |
| 3 Series | E90/E91/E92/E93 | Chassis | EDC Damper Control | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Chassis | EPS Electronic Power Steering | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Chassis | LDM Longitudinal Dynamics Management | ● | ● | ● | ● | ○ | ● | |
| 3 Series | E90/E91/E92/E93 | Chassis | RDC Tyre pressure control | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Drive | CAS Car Access System | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Drive | DME/DDE(Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |
| 3 Series | E90/E91/E92/E93 | Drive | DKG Twin-clutch gearbox | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Drive | EGS/AGS(Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18, F19, F20, F21 |
| 3 Series | E90/E91/E92/E93 | Drive | EKPS fuel-pump control | ● | ● | ● | ● | ● | ● | F29 |
| 3 Series | E90/E91/E92/E93 | Drive | GWS Gear selector switch | ● | ● | ● | ● | ● | ● | |
| 3 Series | E90/E91/E92/E93 | Drive | VTG Transfer case | ● | ● | ● | ● | ● | ● | |
| 5 Series | E39 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ○ | ● | F03 |

MaxiDAS_BMW_V3.01 Function List

NOTES:

● This function is supported.

○ This function is not supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|------|----------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| 5 Series | E39 | Body | AIC Automatic Interval control | ● | ● | ● | ● | ○ | ○ | |
| 5 Series | E39 | Body | BIT Basis Interface Telephone | ● | ● | ● | ● | ○ | ○ | F25, F22 |
| 5 Series | E39 | Body | BM On-board monitor | ● | ● | ● | ● | ● | ○ | |
| 5 Series | E39 | Body | DSP Digital Sound Processor | ● | ● | ● | ● | ○ | ○ | |
| 5 Series | E39 | Body | GM base module | ● | ● | ● | ● | ● | ○ | F27 |
| 5 Series | E39 | Body | GSR Cruise control | ● | ● | ● | ● | ○ | ○ | |
| 5 Series | E39 | Body | HKM Boot-lid module | ● | ● | ● | ○ | ○ | ○ | |
| 5 Series | E39 | Body | IHKA/IHKA2 Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | F04 |
| 5 Series | E39 | Body | IHKR Heater and A/C control | ● | ● | ● | ● | ● | ● | F22 |
| 5 Series | E39 | Body | IHR Integrated heater control | ● | ● | ● | ● | ● | ● | |
| 5 Series | E39 | Body | IKE Instrument-cluster electronics | ● | ● | ● | ○ | ○ | ○ | F23 |
| 5 Series | E39 | Body | IRIS Integrated Radio-Information System | ● | ○ | ○ | ○ | ○ | ○ | |
| 5 Series | E39 | Body | JBIT Japan Basis Interface Telephone | ● | ○ | ○ | ● | ○ | ○ | |
| 5 Series | E39 | Body | KOM Instrument cluster | ● | ● | ● | ● | ● | ○ | F24, F28 |
| 5 Series | E39 | Body | LCM Light Check Module | ● | ● | ● | ● | ● | ○ | |
| 5 Series | E39 | Body | LCM Light Check Module IV | ● | ● | ● | ● | ● | ○ | |
| 5 Series | E39 | Body | LRA Automatic headlight vertical aim control | ● | ● | ● | ● | ● | ○ | |
| 5 Series | E39 | Body | MID Multi Information Display | ● | ● | ● | ○ | ○ | ○ | |
| 5 Series | E39 | Body | NAJ Navigation computer, Japan | ● | ● | ● | ● | ● | ○ | |
| 5 Series | E39 | Body | NAV Navigation computer | ● | ● | ● | ● | ● | ○ | F26 |
| 5 Series | E39 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | F02 |
| 5 Series | E39 | Body | RAD Radio | ● | ● | ● | ● | ● | ● | |
| 5 Series | E39 | Body | RLS Rain/Light Sensor | ● | ● | ● | ● | ○ | ● | |
| 5 Series | E39 | Body | SES Language-input system | ● | ● | ● | ○ | ● | ○ | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|---------|------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|---------------------------------------------------------------------------|
| 5 Series | E39 | Body | SM/LSM Seat/steering-column memory | ○ | ○ | ○ | ● | ● | ○ | |
| 5 Series | E39 | Body | STH park heating | ● | ● | ● | ● | ● | ○ | F23 |
| 5 Series | E39 | Body | SZM Switching centre, centre console | ● | ● | ● | ● | ● | ● | |
| 5 Series | E39 | Body | TCU Telematic control unit | ● | ● | ● | ● | ● | ● | |
| 5 Series | E39 | Body | TEL Telephone interface | ○ | ○ | ○ | ● | ● | ○ | |
| 5 Series | E39 | Body | ULF Universal charging and hands-free facility | ● | ● | ● | ● | ● | ● | |
| 5 Series | E39 | Body | VID Video module | ● | ● | ● | ○ | ○ | ○ | |
| 5 Series | E39 | Body | ZKE Central body electronics | ● | ● | ● | ● | ● | ○ | F27 |
| 5 Series | E39 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| 5 Series | E39 | Chassis | DDS Deflation Detection System | ● | ● | ● | ● | ○ | ○ | F29 |
| 5 Series | E39 | Chassis | EDC Damper Control | ● | ● | ● | ● | ● | ● | |
| 5 Series | E39 | Chassis | EHC Electronic Ride-Height Control | ● | ● | ● | ● | ● | ● | |
| 5 Series | E39 | Chassis | LEW Steering-angle sensor | ● | ● | ● | ● | ○ | ○ | |
| 5 Series | E39 | Chassis | MFL Multi-function steering wheel | ● | ● | ● | ● | ○ | ○ | |
| 5 Series | E39 | Chassis | RDC Tyre pressure control | ● | ● | ● | ● | ● | ● | |
| 5 Series | E39 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |
| 5 Series | E39 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18, F19, F20, F21 |
| 5 Series | E39 | Drive | EWS Vehicle immobilizer | ● | ● | ● | ● | ● | ○ | F22 |
| 5 Series | E39 | Drive | GR Cruise control | ● | ● | ● | ● | ● | ○ | |
| 5 Series | E60/E61 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ○ | ● | F03 |
| 5 Series | E60/E61 | Body | AHL Adaptive directional headlights | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|------|----------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| 5 Series | E60/E61 | Body | AHM Trailer module | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | ALBBF active backrest width, front passenger | ● | ● | ● | ● | ○ | ● | |
| 5 Series | E60/E61 | Body | ALBFA active backrest width, driver | ● | ● | ● | ● | ○ | ● | |
| 5 Series | E60/E61 | Body | AMP Amplifier | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | CA Comfort access system | ● | ● | ● | ● | ○ | ● | |
| 5 Series | E60/E61 | Body | CAN communication analysis/CAN/bytflight | ● | ● | ○ | ○ | ○ | ○ | |
| 5 Series | E60/E61 | Body | CCC-A Applications | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | CCC-ANT Aerial tuner | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | CCC-ASK Audio system controller | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | CCC-BO User interface | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | CCC-GW Gateway | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | CDC CD Changer | ● | ● | ● | ○ | ● | ● | |
| 5 Series | E60/E61 | Body | CHAMP-BO User interface | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | CHAMP-GW Gateway | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | CIC Car Information Computer | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | CIC-GW Gateway | ● | ● | ● | ○ | ● | ● | |
| 5 Series | E60/E61 | Body | CID Central information display | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | CNAV Navigation system, China | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | CON Controller | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | DAB Digital tuner | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | DVDC DVD Changer | ● | ● | ● | ○ | ● | ● | |
| 5 Series | E60/E61 | Body | DWA anti-theft alarm system | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | FBI Flexible Bus Interface | ● | ● | ● | ● | ○ | ● | |
| 5 Series | E60/E61 | Body | FD Rear-compartment display | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

● This function is supported.

○ This function is not supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|------|---------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| 5 Series | E60/E61 | Body | FD2 Rear-compartment display 2 | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | FLA High Beam Assist | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | HKL Rear-lid lift | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | HUD Head-Up Display | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | IHKA/IHKA2 Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | F04 |
| 5 Series | E60/E61 | Body | INSTR Instrument cluster | ● | ● | ● | ● | ● | ● | F01, F24, F28 |
| 5 Series | E60/E61 | Body | JNAV Navigation system, Japan | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | KBM Body basic module | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | KGM Body Gateway Module | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | KHI Headset interface | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | KNAV Navigation system, Korea | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | LM2 Light module 2 | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | LM2 Light module 2 with adaptive headlight | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | M-ASK-BO User interface | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | M-ASK-GW Gateway | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | M-ASK-NAV Navigation system | ● | ● | ● | ● | ● | ○ | |
| 5 Series | E60/E61 | Body | MOST system analysis | ● | ● | ● | ○ | ○ | ○ | |
| 5 Series | E60/E61 | Body | MPM Micro-power module | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | NVE Night Vision Electronics | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | NVK Night Vision camera | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | F02 |
| 5 Series | E60/E61 | Body | RLS Rain/Light Sensor | ● | ● | ● | ● | ○ | ● | |
| 5 Series | E60/E61 | Body | RLSS Rain/Light Solar Sensor | ● | ● | ● | ● | ○ | ○ | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

● This function is supported.

○ This function is not supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|------|------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| 5 Series | E60/E61 | Body | RSE Rear Seat Entertainment | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | SBSL Satellite, B-pillar, left | ● | ● | ● | ● | ○ | ● | |
| 5 Series | E60/E61 | Body | SBSR Satellite, B-pillar, right | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | SDARS Satellite tuner | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | SFZ Satellite vehicle centre | ● | ● | ● | ● | ○ | ● | |
| 5 Series | E60/E61 | Body | SGM-SIM Safety and Gateway Module (SIM) | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | SGM-ZGM Safety and Gateway Module (ZGM) | ● | ● | ● | ○ | ○ | ● | |
| 5 Series | E60/E61 | Body | SHD Slide/tilt sunroof 2 | | | | | | | |
| 5 Series | E60/E61 | Body | SHD Sliding/tilting sunroof | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | SHZH Independent/auxiliary heater | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | SINE Siren and tilt sensor | ● | ● | ● | ● | ○ | ○ | |
| 5 Series | E60/E61 | Body | SMBF Seat module, passenger | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | SMFA Seat module, driver | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | SVS Language processing system | ● | ● | ● | ○ | ● | ● | |
| 5 Series | E60/E61 | Body | SZL Steering column switch centre 2 | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | SZL Switch centre, steering column | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | SZM Switching centre, centre console | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | TCU Telematic control unit | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | TLC Lane Departure Warning | ● | ● | ● | ● | ● | ○ | |
| 5 Series | E60/E61 | Body | TMBF Door module, front passenger | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | TMFA Door module, driver | ● | ● | ● | ● | ○ | ● | |
| 5 Series | E60/E61 | Body | ULF Universal charging and hands-free facility | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | ULF-SBX Interface box | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Body | ULF-SBX-H Interface box High | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|---------|---------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|---------------------------------------------------------------------------|
| 5 Series | E60/E61 | Body | VM Video Module | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| 5 Series | E60/E61 | Chassis | ACC Active Cruise Control | ● | ● | ● | ○ | ○ | ● | |
| 5 Series | E60/E61 | Chassis | ACC2 Active Cruise Control 2 | ● | ● | ● | ○ | ○ | ● | |
| 5 Series | E60/E61 | Chassis | AL active front steering(AFS70) | ● | ● | ● | ● | ○ | ● | |
| 5 Series | E60/E61 | Chassis | AL active steering | ● | ● | ● | ● | ○ | ● | |
| 5 Series | E60/E61 | Chassis | ARS Dynamic Drive 2 | ● | ● | ● | ● | ● | ● | F03 |
| 5 Series | E60/E61 | Chassis | EDC Damper Control | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Chassis | EHC Electronic Ride-Height Control | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Chassis | LDM Longitudinal Dynamics Management | ● | ● | ● | ● | ○ | ● | |
| 5 Series | E60/E61 | Chassis | LRR Long-range sensor | ● | ● | ● | ○ | ○ | ● | |
| 5 Series | E60/E61 | Chassis | RDC Tyre pressure control | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Drive | CAS Car Access System | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |
| 5 Series | E60/E61 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18, F19, F20, F21 |
| 5 Series | E60/E61 | Drive | EKPS fuel-pump control | ● | ● | ● | ● | ● | ● | F29 |
| 5 Series | E60/E61 | Drive | GWS Gear selector switch | ● | ● | ● | ● | ● | ● | |
| 5 Series | E60/E61 | Drive | VTC Valvetronic | ● | ○ | ○ | ○ | ○ | ● | |
| 5 Series | E60/E61 | Drive | VTC2 Valvetronic 2 | ● | ○ | ○ | ○ | ○ | ● | |
| 5 Series | E60/E61 | Drive | VTG Transfer case | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ○ | ● | F03 |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|------|-------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| 6 Series | E63/E64 | Body | AHL Adaptive directional headlights | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | AMP Amplifier | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | CA Comfort access system | ● | ● | ● | ● | ○ | ● | |
| 6 Series | E63/E64 | Body | CAN communication analysis/CAN/byteflight | ● | ● | ○ | ○ | ○ | ○ | |
| 6 Series | E63/E64 | Body | CCC-A Applications | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | CCC-ANT Aerial tuner | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | CCC-ASK Audio system controller | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | CCC-BO User interface | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | CCC-GW Gateway | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | CDC CD Changer | ● | ● | ● | ○ | ● | ● | |
| 6 Series | E63/E64 | Body | CHAMP-BO User interface | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | CHAMP-GW Gateway | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | CIC Car Information Computer | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | CIC-GW Gateway | ● | ● | ● | ○ | ● | ● | |
| 6 Series | E63/E64 | Body | CID Central information display | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | CNAV Navigation system, China | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | CON Controller | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | CVM/CVM2 Convertible top module | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | DAB Digital tuner | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | DVDC DVD Changer | ● | ● | ● | ○ | ● | ● | |
| 6 Series | E63/E64 | Body | DWA anti-theft alarm system | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | FLA High Beam Assist | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | HUD Head-Up Display | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | IBOC Digital tuner US | ● | ● | ● | ● | ○ | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|------|---------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| 6 Series | E63/E64 | Body | IHKA/IHKA2 Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | F04 |
| 6 Series | E63/E64 | Body | INSTR Instrument cluster | ● | ● | ● | ● | ● | ● | F01, F24, F28 |
| 6 Series | E63/E64 | Body | JNAV Navigation system, Japan | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | KBM Body basic module | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | KGM Body Gateway Module | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | KNAV Navigation system, Korea | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | LM2 Light module 2 | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | LM2 AHL light module 2 with adaptive headlight | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | M-ASK-B0 User interface | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | M-ASK-GW Gateway | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | MOST system analysis | ● | ● | ● | ○ | ○ | ○ | |
| 6 Series | E63/E64 | Body | MPM Micro-power module | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | NVE Night Vision Electronics | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | NVK Night Vision camera | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | F02 |
| 6 Series | E63/E64 | Body | RLS Rain/Light Sensor | ● | ● | ● | ● | ○ | ● | |
| 6 Series | E63/E64 | Body | RLSS Rain/Light Solar Sensor | ● | ● | ● | ● | ○ | ○ | |
| 6 Series | E63/E64 | Body | SBSL Satellite, B-pillar, left | ● | ● | ● | ● | ○ | ● | |
| 6 Series | E63/E64 | Body | SBSR Satellite, B-pillar, right | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | SDARS Satellite tuner | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | SFZ Satellite vehicle centre | ● | ● | ● | ● | ○ | ● | |
| 6 Series | E63/E64 | Body | SGM-SIM Safety and Gateway Module (SIM) | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | SGM-ZGM Safety and Gateway Module (ZGM) | ● | ● | ● | ○ | ○ | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|---------|------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| 6 Series | E63/E64 | Body | SHD Slide/tilt sunroof 2 | | | | | | | |
| 6 Series | E63/E64 | Body | SHZH Independent/auxiliary heater | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | SMBF Seat memory, front passenger | | | | | | | |
| 6 Series | E63/E64 | Body | SMF Seat memory, driver | ● | ● | ● | ● | ● | ○ | |
| 6 Series | E63/E64 | Body | SVS Language processing system | ● | ● | ● | ○ | ● | ● | |
| 6 Series | E63/E64 | Body | SZL Steering column switch centre 2 | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | SZL Switch centre, steering column | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | SZM Switching centre, centre console | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | TCU Telematic control unit | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | TLC Lane Departure Warning | ● | ● | ● | ● | ● | ○ | |
| 6 Series | E63/E64 | Body | TMBF Door module, front passenger | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | TMFA Door module, driver | ● | ● | ● | ● | ○ | ● | |
| 6 Series | E63/E64 | Body | ULF Universal charging and hands-free facility | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | ULF-SBX Interface box | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | ULF-SBX-H Interface box High | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Body | VM Video Module | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| 6 Series | E63/E64 | Chassis | ACC2 Active Cruise Control 2 | ● | ● | ● | ○ | ○ | ● | |
| 6 Series | E63/E64 | Chassis | AL active front steering(AFS70) | ● | ● | ● | ● | ○ | ● | |
| 6 Series | E63/E64 | Chassis | AL active steering | ● | ● | ● | ● | ○ | ● | |
| 6 Series | E63/E64 | Chassis | ARS Dynamic Drive | ● | ● | ● | ● | ● | ● | F03 |
| 6 Series | E63/E64 | Chassis | ARS Dynamic Drive 2 | ● | ● | ● | ● | ● | ● | F03 |
| 6 Series | E63/E64 | Chassis | EDC Damper Control | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Chassis | LDM Longitudinal Dynamics Management | ● | ● | ● | ● | ○ | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|---------|-----------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|---------------------------------------------------------------------------|
| 6 Series | E63/E64 | Chassis | LRR Long-range sensor | ● | ● | ● | ○ | ○ | ● | |
| 6 Series | E63/E64 | Chassis | RDC Tyre pressure control | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Drive | CAS Car Access System | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Drive | DME/DDE(Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |
| 6 Series | E63/E64 | Drive | EGS/AGS(Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18, F19, F20, F21 |
| 6 Series | E63/E64 | Drive | EKPS fuel-pump control | ● | ● | ● | ● | ● | ● | F29 |
| 6 Series | E63/E64 | Drive | GWS Gear selector switch | ● | ● | ● | ● | ● | ● | |
| 6 Series | E63/E64 | Drive | VTC Valvetronic | ● | ○ | ○ | ○ | ○ | ● | |
| 6 Series | E63/E64 | Drive | VTC2 Valvetronic 2 | ● | ○ | ○ | ○ | ○ | ● | |
| 7 Series | E38 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ○ | ● | F03 |
| 7 Series | E38 | Body | AIC Automatic Interval control | ● | ● | ● | ● | ○ | ○ | |
| 7 Series | E38 | Body | BIT Basis Interface Telephone | ● | ● | ● | ● | ○ | ○ | F25, F22 |
| 7 Series | E38 | Body | BM On-board monitor | ● | ● | ● | ● | ● | ○ | |
| 7 Series | E38 | Body | BMBT On-board monitor, control panel | ● | ● | ● | ● | ○ | ○ | |
| 7 Series | E38 | Body | CCM Check Control Module | ● | ● | ● | ○ | ○ | ○ | |
| 7 Series | E38 | Body | DSP Digital Sound Processor | ● | ● | ● | ● | ○ | ○ | |
| 7 Series | E38 | Body | FBZV Radio-control system | ● | ● | ● | ○ | ○ | ○ | |
| 7 Series | E38 | Body | FGB rear compartment blower | ● | ● | ● | ○ | ○ | ○ | |
| 7 Series | E38 | Body | FHK rear-compartment heating/air conditioning | ● | ● | ● | ○ | ○ | ○ | |
| 7 Series | E38 | Body | FID Rear-compartment information display | ● | ● | ● | ○ | ○ | ○ | |
| 7 Series | E38 | Body | FMBT Rear-compartment monitor, control panel | | | | | | | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

● This function is supported.

○ This function is not supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|------|-------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| 7 Series | E38 | Body | FMGT Rear-compartment monitor, graphics section | | | | | | | |
| 7 Series | E38 | Body | GR2 Cruise control | ● | ● | ● | ● | ○ | ○ | |
| 7 Series | E38 | Body | HKM Boot-lid module | ● | ● | ● | ○ | ○ | ○ | |
| 7 Series | E38 | Body | IHKA/IHKA2 Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | F04 |
| 7 Series | E38 | Body | IHKR Heater and A/C control | ● | ● | ● | ● | ● | ● | F22 |
| 7 Series | E38 | Body | IKE Instrument-cluster electronics | ● | ● | ● | ○ | ○ | ○ | F23 |
| 7 Series | E38 | Body | IR Infrared compact locking system | | | | | | | |
| 7 Series | E38 | Body | IR Radio/infrared locking system | | | | | | | |
| 7 Series | E38 | Body | JBIT Japan Basis Interface Telephone | ● | ○ | ○ | ● | ○ | ○ | |
| 7 Series | E38 | Body | LCM Light Check Module | ● | ● | ● | ● | ● | ○ | |
| 7 Series | E38 | Body | LM Lights Module | ● | ● | ● | ● | ● | ● | |
| 7 Series | E38 | Body | LRA Automatic headlight vertical aim control | ● | ● | ● | ● | ● | ○ | |
| 7 Series | E38 | Body | MID Multi Information Display | ● | ● | ● | ○ | ○ | ○ | |
| 7 Series | E38 | Body | NAJ Navigation computer, Japan | ● | ● | ● | ● | ● | ○ | |
| 7 Series | E38 | Body | NAV Navigation computer | ● | ● | ● | ● | ● | ○ | F26 |
| 7 Series | E38 | Body | NAV Navigation computer MKIII | ● | ● | ● | ● | ○ | ○ | |
| 7 Series | E38 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | F02 |
| 7 Series | E38 | Body | RAD Radio | ● | ● | ● | ● | ● | ● | |
| 7 Series | E38 | Body | RCC Radio-clock module | ● | ○ | ○ | ● | ○ | ○ | |
| 7 Series | E38 | Body | SES Language-input system | ● | ● | ● | ○ | ● | ○ | |
| 7 Series | E38 | Body | SHD Sliding/tilting sunroof | ● | ● | ● | ● | ● | ● | |
| 7 Series | E38 | Body | SM/LSM Seat/steering-column memory | ○ | ○ | ○ | ● | ● | ○ | |
| 7 Series | E38 | Body | SMB passenger seat memory | ● | ● | ● | ● | | ○ | |
| 7 Series | E38 | Body | STH park heating | ● | ● | ● | ● | ● | ○ | F23 |

MaxiDAS_BMW_V3.01 Function List

NOTES:

● This function is supported.

○ This function is not supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|---------|----------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|---------------------------------------------------------------------------|
| 7 Series | E38 | Body | SZM Switching centre, centre console | ● | ● | ● | ● | ● | ● | |
| 7 Series | E38 | Body | TEL Telephone interface | ○ | ○ | ○ | ● | ● | ○ | |
| 7 Series | E38 | Body | URS Rollover sensor | ● | ● | ● | ● | ○ | ○ | |
| 7 Series | E38 | Body | VID Video module | ● | ● | ● | ○ | ○ | ○ | |
| 7 Series | E38 | Body | VID Video module III | ● | ● | ● | ○ | ○ | ○ | |
| 7 Series | E38 | Body | ZKE Central body electronics | ● | ● | ● | ● | ● | ○ | F27 |
| 7 Series | E38 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| 7 Series | E38 | Chassis | EDC Damper Control | ● | ● | ● | ● | ● | ● | |
| 7 Series | E38 | Chassis | LEW Steering-angle sensor | ● | ● | ● | ● | ○ | ○ | |
| 7 Series | E38 | Chassis | MFL Multi-function steering wheel | ● | ● | ● | ● | ○ | ○ | |
| 7 Series | E38 | Chassis | RDC Tyre pressure control | ● | ● | ● | ● | ● | ● | |
| 7 Series | E38 | Chassis | RDW tyre-blowout warning | ● | ● | ● | ● | ○ | ○ | |
| 7 Series | E38 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |
| 7 Series | E38 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18, F19, F20, F21 |
| 7 Series | E38 | Drive | EML Electronic engine-power control | ● | ● | ● | ○ | ○ | ○ | |
| 7 Series | E38 | Drive | EWS Vehicle immobilizer | ● | ● | ● | ● | ● | ○ | F22 |
| 7 Series | E38 | Drive | TRS Electronic battery isolator switch | ● | ● | ● | ○ | ○ | ○ | |
| 7 Series | E65 | Body | AHL Adaptive directional headlights | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | AHM Trailer module | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | AMP Amplifier | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | ANT Aerial/antenna tuner | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|------|-------------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| 7 Series | E65 | Body | ASK Audio system controller | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | BZM Control centre, centre console | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | CA Comfort access system | ● | ● | ● | ● | ○ | ● | |
| 7 Series | E65 | Body | CAN communication analysis/CAN/byteflight | ● | ● | ○ | ○ | ○ | ○ | |
| 7 Series | E65 | Body | CD Control Display | ● | ● | ● | ○ | ● | ● | |
| 7 Series | E65 | Body | CDC CD Changer | ● | ● | ● | ○ | ● | ● | |
| 7 Series | E65 | Body | CD-GW Control Display(Gateway) | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | CEM Clean Energy Module | ● | ● | ● | ● | ○ | ○ | |
| 7 Series | E65 | Body | CNAV Navigation system, China | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | CON Controller | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | DAB Digital tuner | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | DVDC DVD Changer | ● | ● | ● | ○ | ● | ● | |
| 7 Series | E65 | Body | DWA anti-theft alarm system | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | FBI Flexible Bus Interface | ● | ● | ● | ● | ○ | ● | |
| 7 Series | E65 | Body | FBZM Rear compartment, control centre, centre console | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | FCON Rear compartment controller | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | FD Rear-compartment display | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | FKA Rear heater/air conditioning | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | FLA High Beam Assist | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | HKL Rear-lid lift | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | IBOC Digital tuner US | ● | ● | ● | ● | ○ | ● | |
| 7 Series | E65 | Body | IHKA/IHKA2 Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | F04 |
| 7 Series | E65 | Body | INSTR Instrument cluster | ● | ● | ● | ● | ● | ● | F01, F24, F28 |
| 7 Series | E65 | Body | JBIT Japan Basis Interface Telephone | ● | ○ | ○ | ● | ○ | ○ | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|------|-----------------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| 7 Series | E65 | Body | JNAV Navigation system, Japan | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | KHI Headset interface | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | KNAV Navigation system, Korea | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | LM Lights Module | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | LM2 Light module 2 | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | LM2 Light module 2 with adaptive headlight | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | LM2 AHL2 Light module 2 with adaptive headlight 2 | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | MOST system analysis | ● | ● | ● | ○ | ○ | ○ | |
| 7 Series | E65 | Body | NAJ Navigation computer, Japan | ● | ● | ● | ● | ● | ○ | |
| 7 Series | E65 | Body | NAV Navigation computer | ● | ● | ● | ● | ● | ○ | F26 |
| 7 Series | E65 | Body | NVE Night Vision Electronics | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | NVK Night Vision camera | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | F02 |
| 7 Series | E65 | Body | PM Power Module | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | RLS Rain/Light Sensor | ● | ● | ● | ● | ○ | ● | |
| 7 Series | E65 | Body | SASL Satellite, A-pillar, left | ● | ● | ● | ● | ○ | ● | |
| 7 Series | E65 | Body | SASR Satellite, A-pillar, right | ● | ● | ● | ● | ○ | ● | |
| 7 Series | E65 | Body | SBSL Satellite, B-pillar, left | ● | ● | ● | ● | ○ | ● | |
| 7 Series | E65 | Body | SBSR Satellite, B-pillar, right | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | SDARS Satellite tuner | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | SEC2 Supplementary control unit 2 | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | SFZ Satellite vehicle centre | ● | ● | ● | ● | ○ | ● | |
| 7 Series | E65 | Body | SG-FD Control unit, rear-compartment display | ● | ● | ● | ○ | ● | ● | |
| 7 Series | E65 | Body | SG-FD-GW Control unit, rear-compartment display (gateway) | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|------|-------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| 7 Series | E65 | Body | SGM-SIM Safety and Gateway Module(SIM) | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | SGM-ZGM Safety and Gateway Module(ZGM) | ● | ● | ● | ○ | ○ | ● | |
| 7 Series | E65 | Body | SHD Slide/tilt sunroof 2 | | | | | | | |
| 7 Series | E65 | Body | SHD Sliding/tilting sunroof | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | SHZH Independent/auxiliary heater | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | SIM Safety and Information Module | ● | ● | ● | ● | ● | ○ | |
| 7 Series | E65 | Body | SINE Siren and tilt sensor | ● | ● | ● | ● | ○ | ○ | |
| 7 Series | E65 | Body | SMBF Seat module, passenger | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | SMBFH Seat module, passenger's side, rear | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | SMFA Seat module, driver | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | SMFAH Seat module, driver's side, rear | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | SSBF Satellite, seat, passenger | ● | ● | ● | ● | ○ | ● | |
| 7 Series | E65 | Body | SSFA Satellite, seat, driver | ● | ● | ● | ● | ○ | ● | |
| 7 Series | E65 | Body | SSH Satellite, seat, rear | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | STVL Satellite, door, front left | ● | ● | ● | ● | ○ | ● | |
| 7 Series | E65 | Body | STVR Satellite, door, front right | ● | ● | ● | ● | ○ | ● | |
| 7 Series | E65 | Body | SVS Language processing system | ● | ● | ● | ○ | ● | ● | |
| 7 Series | E65 | Body | SZL Switch centre, steering column | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | TCU Telematic control unit | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | TEL Telephone interface | ○ | ○ | ○ | ● | ● | ○ | |
| 7 Series | E65 | Body | TEL Telephone(USA) | ● | ● | ● | ○ | ● | ● | |
| 7 Series | E65 | Body | TMBFH Door module, passenger's side, rear | ● | ● | ● | ● | ○ | ● | |
| 7 Series | E65 | Body | TMBFT Door module, passenger door | ● | ● | ● | ● | ○ | ● | |
| 7 Series | E65 | Body | TMFAH Door module, driver's side, rear | ● | ● | ● | ● | ○ | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|----------|--------------|---------|---------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|---------------------------------------------------------------------------|
| 7 Series | E65 | Body | TMFAT Door module, driver's door | ● | ● | ● | ● | ○ | ● | |
| 7 Series | E65 | Body | VM Video Module | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | WIM Wiper module | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | ZBM Two-battery management | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Body | ZGM Central Gateway Module | ● | ● | ● | ○ | ○ | ● | |
| 7 Series | E65 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| 7 Series | E65 | Chassis | ACC Active Cruise Control | ● | ● | ● | ○ | ○ | ● | |
| 7 Series | E65 | Chassis | ACC2 Active Cruise Control 2 | ● | ● | ● | ○ | ○ | ● | |
| 7 Series | E65 | Chassis | ARS Dynamic Drive | ● | ● | ● | ● | ● | ● | F03 |
| 7 Series | E65 | Chassis | ARS Dynamic Drive 2 | ● | ● | ● | ● | ● | ● | F03 |
| 7 Series | E65 | Chassis | CIM Chassis Integration Module | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Chassis | CIM2 Chassis Integration Module 2 | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Chassis | EDC Damper Control | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Chassis | EHC Electronic Ride-Height Control | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Chassis | EMF Parking brake | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Chassis | RDC Tyre pressure control | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Drive | CAS Car Access System | ● | ● | ● | ● | ● | ● | |
| 7 Series | E65 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |
| 7 Series | E65 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18, F19, F20, F21 |
| 7 Series | E65 | Drive | EKPS fuel-pump control | ● | ● | ● | ● | ● | ● | F29 |
| 7 Series | E65 | Drive | HPFI control unit | | | | | | | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|-----------|--------------|-------|-----------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| 7 Series | E65 | Drive | VTC Valvetronic | ● | ○ | ○ | ○ | ○ | ● | |
| 7 Series | E65 | Drive | VTC2 Valvetronic 2 | ● | ○ | ○ | ○ | ○ | ● | |
| X3 Series | E83 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ○ | ● | F03 |
| X3 Series | E83 | Body | AHL Adaptive directional headlights | ● | ● | ● | ● | ● | ● | |
| X3 Series | E83 | Body | CDC CD Changer | ● | ● | ● | ○ | ● | ● | |
| X3 Series | E83 | Body | CID Central information display | ● | ● | ● | ● | ● | ● | |
| X3 Series | E83 | Body | DSP Digital Sound Processor | ● | ● | ● | ● | ○ | ○ | |
| X3 Series | E83 | Body | GM base module | ● | ● | ● | ● | ● | ○ | F27 |
| X3 Series | E83 | Body | IHKA/IHKA2 Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | F04 |
| X3 Series | E83 | Body | IHKR Heater and A/C control | ● | ● | ● | ● | ● | ● | F22 |
| X3 Series | E83 | Body | INSTR Instrument cluster | ● | ● | ● | ● | ● | ● | F01, F24, F28 |
| X3 Series | E83 | Body | JBIT Japan Basis Interface Telephone | ● | ○ | ○ | ● | ○ | ○ | |
| X3 Series | E83 | Body | LM Lights Module | ● | ● | ● | ● | ● | ● | |
| X3 Series | E83 | Body | LSZ Light switch centre II | ● | ● | ● | ● | ● | ○ | |
| X3 Series | E83 | Body | MIR Multi-Information Radio | ● | ● | ● | ● | ○ | ○ | |
| X3 Series | E83 | Body | NAJ Navigation computer, Japan | ● | ● | ● | ● | ● | ○ | |
| X3 Series | E83 | Body | NAV Navigation computer | ● | ● | ● | ● | ● | ○ | F26 |
| X3 Series | E83 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | F02 |
| X3 Series | E83 | Body | RAD Radio | ● | ● | ● | ● | ● | ● | |
| X3 Series | E83 | Body | RLS Rain/Light Sensor | ● | ● | ● | ● | ○ | ● | |
| X3 Series | E83 | Body | SBBF Seat occupancy, passenger | ● | ● | ● | | ○ | ○ | |
| X3 Series | E83 | Body | SES Language-input system | ● | ● | ● | ○ | ● | ○ | |
| X3 Series | E83 | Body | SHD Sliding/tilting sunroof | ● | ● | ● | ● | ● | ● | |
| X3 Series | E83 | Body | SMF Seat memory, driver | ● | ● | ● | ● | ● | ○ | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

● This function is supported.

○ This function is not supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|-----------|--------------|---------|------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|---------------------------------------------------------------------------|
| X3 Series | E83 | Body | SZM Switching centre, centre console | ● | ● | ● | ● | ● | ● | |
| X3 Series | E83 | Body | TCU Telematic control unit | ● | ● | ● | ● | ● | ● | |
| X3 Series | E83 | Body | ULF Universal charging and hands-free facility | ● | ● | ● | ● | ● | ● | |
| X3 Series | E83 | Body | VID Video module | ● | ● | ● | ○ | ○ | ○ | |
| X3 Series | E83 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| X3 Series | E83 | Chassis | LWS Steering angle sensor | ● | ● | ● | ● | ○ | ○ | |
| X3 Series | E83 | Chassis | MFL Multi-function steering wheel | ● | ● | ● | ● | ○ | ○ | |
| X3 Series | E83 | Chassis | RDC Tyre pressure control | ● | ● | ● | ● | ● | ● | |
| X3 Series | E83 | Chassis | SVT Servotronic | ● | ● | ● | ● | ○ | ○ | |
| X3 Series | E83 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |
| X3 Series | E83 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18, F19, F20, F21 |
| X3 Series | E83 | Drive | EKPS fuel-pump control | ● | ● | ● | ● | ● | ● | F29 |
| X3 Series | E83 | Drive | EWS Vehicle immobilizer | ● | ● | ● | ● | ● | ○ | F22 |
| X3 Series | E83 | Drive | VTG Transfer case | ● | ● | ● | ● | ● | ● | |
| X5 Series | E53 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ○ | ● | F03 |
| X5 Series | E53 | Body | AHL Adaptive directional headlights | ● | ● | ● | ● | ● | ● | |
| X5 Series | E53 | Body | AIC Automatic Interval control | ● | ● | ● | ● | ○ | ○ | |
| X5 Series | E53 | Body | BIT Basis Interface Telephone | ● | ● | ● | ● | ○ | ○ | F25, F22 |
| X5 Series | E53 | Body | BM On-board monitor | ● | ● | ● | ● | ● | ○ | |
| X5 Series | E53 | Body | DSP Digital Sound Processor | ● | ● | ● | ● | ○ | ○ | |
| X5 Series | E53 | Body | IHKA/IHKA2 Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | F04 |

MaxiDAS_BMW_V3.01 Function List

NOTES:

● This function is supported.

○ This function is not supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|-----------|--------------|------|------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| X5 Series | E53 | Body | IHKR Heater and A/C control | ● | ● | ● | ● | ● | ● | F22 |
| X5 Series | E53 | Body | IKE Instrument-cluster electronics | ● | ● | ● | ○ | ○ | ○ | F23 |
| X5 Series | E53 | Body | JBIT Japan Basis Interface Telephone | ● | ○ | ○ | ● | ○ | ○ | |
| X5 Series | E53 | Body | KOM Instrument cluster | ● | ● | ● | ● | ● | ○ | F24, F28 |
| X5 Series | E53 | Body | LCM Light Check Module | ● | ● | ● | ● | ● | ○ | |
| X5 Series | E53 | Body | LCM Light Check Module IV | ● | ● | ● | ● | ● | ○ | |
| X5 Series | E53 | Body | LRA Automatic headlight vertical aim control | ● | ● | ● | ● | ● | ○ | |
| X5 Series | E53 | Body | MID Multi Information Display | ● | ● | ● | ○ | ○ | ○ | |
| X5 Series | E53 | Body | NAJ Navigation computer, Japan | ● | ● | ● | ● | ● | ○ | |
| X5 Series | E53 | Body | NAV Navigation computer | ● | ● | ● | ● | ● | ○ | F26 |
| X5 Series | E53 | Body | NAV Navigation computer MKII | ● | ● | ● | ● | ○ | ○ | |
| X5 Series | E53 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | F02 |
| X5 Series | E53 | Body | PDC2 Park Distance Control 2 | ● | ● | ● | ● | ● | ○ | |
| X5 Series | E53 | Body | RAD Radio | ● | ● | ● | ● | ● | ● | |
| X5 Series | E53 | Body | RLS Rain/Light Sensor | ● | ● | ● | ● | ○ | ● | |
| X5 Series | E53 | Body | SBBF Seat occupancy, passenger | ● | ● | ● | | ○ | ○ | |
| X5 Series | E53 | Body | SES Language-input system | ● | ● | ● | ○ | ● | ○ | |
| X5 Series | E53 | Body | SHD Sliding/tilting sunroof | ● | ● | ● | ● | ● | ● | |
| X5 Series | E53 | Body | SM/SLM Seat/steering-column memory | ● | ● | ● | ● | ● | ○ | |
| X5 Series | E53 | Body | STH park heating | ● | ● | ● | ● | ● | ○ | F23 |
| X5 Series | E53 | Body | SZM Switching centre, centre console | ● | ● | ● | ● | ● | ● | |
| X5 Series | E53 | Body | TCU Telematic control unit | ● | ● | ● | ● | ● | ● | |
| X5 Series | E53 | Body | TEL Telephone interface | ○ | ○ | ○ | ● | ● | ○ | |
| X5 Series | E53 | Body | ULF Universal charging and hands-free facility | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|-----------|--------------|---------|------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|--------------------------------------------------------------------------|
| X5 Series | E53 | Body | VID Video module | ● | ● | ● | ○ | ○ | ○ | |
| X5 Series | E53 | Body | ZKE Central body electronics | ● | ● | ● | ● | ● | ○ | F27 |
| X5 Series | E53 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| X5 Series | E53 | Chassis | EHC Electronic Ride-Height Control | ● | ● | ● | ● | ● | ● | |
| X5 Series | E53 | Chassis | EHC2 Electronic ride-level control | | | | | | | |
| X5 Series | E53 | Chassis | LEW Steering-angle sensor | ● | ● | ● | ● | ○ | ○ | |
| X5 Series | E53 | Chassis | MFL Multi-function steering wheel | ● | ● | ● | ● | ○ | ○ | |
| X5 Series | E53 | Chassis | RDC Tyre pressure control | ● | ● | ● | ● | ● | ● | |
| X5 Series | E53 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |
| X5 Series | E53 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18 F19, F20, F21 |
| X5 Series | E53 | Drive | EWS Vehicle immobilizer | ● | ● | ● | ● | ● | ○ | F22 |
| X5 Series | E53 | Drive | VTG Transfer case | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ○ | ● | F03 |
| X5 Series | E70 | Body | AHM Trailer module | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | AMPH Hi-Fi amplifier | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | AMPT Top Hi-Fi amplifier | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | CA Comfort access system | ● | ● | ● | ● | ○ | ● | |
| X5 Series | E70 | Body | CAN communication analysis/CAN/bytflight | ● | ● | ○ | ○ | ○ | ○ | |
| X5 Series | E70 | Body | CCC-A Applications | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | CCC-ANT Aerial tuner | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | CCC-ASK Audio system controller | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

● This function is supported.

○ This function is not supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|-----------|--------------|------|-----------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| X5 Series | E70 | Body | CCC-BO User interface | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | CCC-GW Gateway | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | CDC CD Changer | ● | ● | ● | ○ | ● | ● | |
| X5 Series | E70 | Body | CHAMP-BO User interface | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | CHAMP-GW Gateway | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | CID Central information display | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | CNAV Navigation system, China | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | CON Controller | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | DAB Digital tuner | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | DVDC DVD Changer | ● | ● | ● | ○ | ● | ● | |
| X5 Series | E70 | Body | FD Rear-compartment display | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | FKA Rear heater/air conditioning | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | FLA High Beam Assist | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | FRM2 footwell module 2 | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | FZD Function centre, roof | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | HKL Rear-lid lift | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | HUD Head-Up Display | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | IBOC Digital tuner US | ● | ● | ● | ● | ○ | ● | |
| X5 Series | E70 | Body | IHKA/IHKA2 Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | F04 |
| X5 Series | E70 | Body | INSTR Instrument cluster | ● | ● | ● | ● | ● | ● | F01, F24, F28 |
| X5 Series | E70 | Body | JBE2 Junction Box electronics | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | JNAV Navigation system, Japan | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | KHM Headphones module | | | | | | | |
| X5 Series | E70 | Body | KNAV Navigation system, Korea | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|-----------|--------------|---------|---------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| X5 Series | E70 | Body | M-ASK-B0 User interface | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | M-ASK-GW Gateway | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | MOST system analysis | ● | ● | ● | ○ | ○ | ○ | |
| X5 Series | E70 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | F02 |
| X5 Series | E70 | Body | RFK Reversing camera | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | RLSS Rain/Light Solar Sensor | ● | ● | ● | ● | ○ | ○ | |
| X5 Series | E70 | Body | RSE Rear Seat Entertainment | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | SDARS Satellite tuner | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | SINE Siren and tilt sensor | ● | ● | ● | ● | ○ | ○ | |
| X5 Series | E70 | Body | SMBF Seat module, passenger | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | SMFA Seat module, driver | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | TCU Telematic control unit | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | ULF-SBX Interface box | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | ULF-SBX-H Interface box High | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | VM Video Module | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Body | VSW video switch | ● | ● | ● | ● | ● | ○ | |
| X5 Series | E70 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| X5 Series | E70 | Chassis | AL active front steering(AFS70) | ● | ● | ● | ● | ○ | ● | |
| X5 Series | E70 | Chassis | ARS Dynamic Drive | ● | ● | ● | ● | ● | ● | F03 |
| X5 Series | E70 | Chassis | EDCSHL Damper satellite, rear left | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Chassis | EDCSHR Damper satellite, rear right | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Chassis | EDCSVL Damper satellite, front left | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Chassis | EDCSVR Damper satellite, front right | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Chassis | EHC Electronic Ride-Height Control | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|-----------|--------------|---------|------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|---------------------------------------------------------------------------|
| X5 Series | E70 | Chassis | EMF Parking brake | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Chassis | RDC Tyre pressure control | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Chassis | VDM Vertical Dynamics Management | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Drive | CAS Car Access System | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |
| X5 Series | E70 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18, F19, F20, F21 |
| X5 Series | E70 | Drive | EKPS fuel-pump control | ● | ● | ● | ● | ● | ● | F29 |
| X5 Series | E70 | Drive | GWS Gear selector switch | ● | ● | ● | ● | ● | ● | |
| X5 Series | E70 | Drive | VTC Valvetronic | ● | ○ | ○ | ○ | ○ | ● | |
| X5 Series | E70 | Drive | VTC2 Valvetronic 2 | ● | ○ | ○ | ○ | ○ | ● | |
| X5 Series | E70 | Drive | VTG Transfer case | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ○ | ● | F03 |
| X6 Series | E71 | Body | AHM Trailer module | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | AMPH Hi-Fi amplifier | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | AMPT Top Hi-Fi amplifier | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | CA Comfort access system | ● | ● | ● | ● | ○ | ● | |
| X6 Series | E71 | Body | CAN communication analysis/CAN/bytflight | ● | ● | ○ | ○ | ○ | ○ | |
| X6 Series | E71 | Body | CCC-A Applications | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | CCC-ANT Aerial tuner | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | CCC-ASK Audio system controller | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | CCC-B0 User interface | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|-----------|--------------|------|-----------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| X6 Series | E71 | Body | CCC-GW Gateway | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | CDC CD Changer | ● | ● | ● | ○ | ● | ● | |
| X6 Series | E71 | Body | CHAMP-BO User interface | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | CHAMP-GW Gateway | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | CID Central information display | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | CNAV Navigation system, China | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | CON Controller | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | DAB Digital tuner | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | DVDC DVD Changer | ● | ● | ● | ○ | ● | ● | |
| X6 Series | E71 | Body | FD Rear-compartment display | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | FKA Rear heater/air conditioning | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | FLA High Beam Assist | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | FRM2 footwell module 2 | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | FZD Function centre, roof | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | HKL Rear-lid lift | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | HUD Head-Up Display | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | IBOC Digital tuner US | ● | ● | ● | ● | ○ | ● | |
| X6 Series | E71 | Body | IHKA/IHKA2 Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | F04 |
| X6 Series | E71 | Body | INSTR Instrument cluster | ● | ● | ● | ● | ● | ● | F01, F24, F28 |
| X6 Series | E71 | Body | JBE2 Junction Box electronics | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | JNAV Navigation system, Japan | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | KHM Headphones module | | | | | | | |
| X6 Series | E71 | Body | KNAV Navigation system, Korea | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | M-ASK-BO User interface | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

● This function is supported.

○ This function is not supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|-----------|--------------|---------|---------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| X6 Series | E71 | Body | M-ASK-GW Gateway | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | MOST system analysis | ● | ● | ● | ○ | ○ | ○ | |
| X6 Series | E71 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | F02 |
| X6 Series | E71 | Body | RFK Reversing camera | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | RLSS Rain/Light Solar Sensor | ● | ● | ● | ● | ○ | ○ | |
| X6 Series | E71 | Body | RSE Rear Seat Entertainment | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | SDARS Satellite tuner | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | SINE Siren and tilt sensor | ● | ● | ● | ● | ○ | ○ | |
| X6 Series | E71 | Body | SMBF Seat module, passenger | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | SMFA Seat module, driver | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | TCU Telematic control unit | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | ULF-SBX Interface box | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | ULF-SBX-H Interface box High | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | VM Video Module | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Body | VSW video switch | ● | ● | ● | ● | ● | ○ | |
| X6 Series | E71 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| X6 Series | E71 | Chassis | AL active steering | ● | ● | ● | ● | ○ | ● | |
| X6 Series | E71 | Chassis | ARS Dynamic Drive 2 | ● | ● | ● | ● | ● | ● | F03 |
| X6 Series | E71 | Chassis | EDCSHL Damper satellite, rear left | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Chassis | EDCSHR Damper satellite, rear right | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Chassis | EDCSVL Damper satellite, front left | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Chassis | EDCSVR Damper satellite, front right | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Chassis | EHC Electronic Ride-Height Control | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Chassis | EMF Parking brake | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|-----------|--------------|---------|---------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|---------------------------------------------------------------------------|
| X6 Series | E71 | Chassis | ICM Integrated Chassis Management | ● | ● | ● | ● | ○ | ○ | |
| X6 Series | E71 | Chassis | RDC Tyre pressure control | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Chassis | VDM Vertical Dynamics Management | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Drive | CAS Car Access System | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |
| X6 Series | E71 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18, F19, F20, F21 |
| X6 Series | E71 | Drive | EKPS fuel-pump control | ● | ● | ● | ● | ● | ● | F29 |
| X6 Series | E71 | Drive | GWS Gear selector switch | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Drive | QMVH Lateral-moment distribution, rear axle | ● | ● | ● | ● | ● | ● | |
| X6 Series | E71 | Drive | VTG Transfer case | ● | ● | ● | ● | ● | ● | |
| Z3 Series | E36 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ○ | ● | F03 |
| Z3 Series | E36 | Body | IR Radio/infrared locking system | | | | | | | |
| Z3 Series | E36 | Body | KOM Instrument cluster | ● | ● | ● | ● | ● | ○ | F24, F28 |
| Z3 Series | E36 | Body | ZKE Central body electronics | ● | ● | ● | ● | ● | ○ | F27 |
| Z3 Series | E36 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| Z3 Series | E36 | Chassis | LEW Steering-angle sensor | ● | ● | ● | ● | ○ | ○ | |
| Z3 Series | E36 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |
| Z3 Series | E36 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18, F19, F20, F21 |

MaxiDAS_BMW_V3.01 Function List

NOTES:

● This function is supported.

○ This function is not supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|-----------|--------------|-------|--------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| Z3 Series | E36 | Drive | EWS Vehicle immobilizer | ● | ● | ● | ● | ● | ○ | F22 |
| Z3 Series | E36 | Drive | GR Cruise control | ● | ● | ● | ● | ● | ○ | |
| Z3 Series | E36 | Drive | TOENS Thermal oil-level sensor | ● | ● | ● | ● | ● | ○ | |
| Z4 Series | E85/E86 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ○ | ● | F03 |
| Z4 Series | E85/E86 | Body | CDC CD Changer | ● | ● | ● | ○ | ● | ● | |
| Z4 Series | E85/E86 | Body | CID Central information display | ● | ● | ● | ● | ● | ● | |
| Z4 Series | E85/E86 | Body | CVM/CVM2 Convertible top module | ● | ● | ● | ● | ● | ● | |
| Z4 Series | E85/E86 | Body | DSP Digital Sound Processor | ● | ● | ● | ● | ○ | ○ | |
| Z4 Series | E85/E86 | Body | GM5 General module 5 | ● | ● | ● | ● | ● | ○ | F27 |
| Z4 Series | E85/E86 | Body | IHKA/IHKA2 Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | F04 |
| Z4 Series | E85/E86 | Body | IHKS Integrated heating/air-conditioning control | ● | ● | ● | ● | ● | ● | |
| Z4 Series | E85/E86 | Body | INSTR Instrument cluster | ● | ● | ● | ● | ● | ● | F01, F24, F28 |
| Z4 Series | E85/E86 | Body | LSZ Light switch centre II | ● | ● | ● | ● | ● | ○ | |
| Z4 Series | E85/E86 | Body | MIR Multi-Information Radio | ● | ● | ● | ● | ○ | ○ | |
| Z4 Series | E85/E86 | Body | NAJ Navigation computer, Japan | ● | ● | ● | ● | ● | ○ | |
| Z4 Series | E85/E86 | Body | NAV Navigation computer | ● | ● | ● | ● | ● | ○ | F26 |
| Z4 Series | E85/E86 | Body | PDC Park distance control | ● | ● | ● | ● | ● | ● | F02 |
| Z4 Series | E85/E86 | Body | RAD Radio | ● | ● | ● | ● | ● | ● | |
| Z4 Series | E85/E86 | Body | RLS Rain/Light Sensor | ● | ● | ● | ● | ○ | ● | |
| Z4 Series | E85/E86 | Body | SBBF Seat occupancy, passenger | ● | ● | ● | | ○ | ○ | |
| Z4 Series | E85/E86 | Body | SBSL Satellite, B-pillar, left | ● | ● | ● | ● | ○ | ● | |
| Z4 Series | E85/E86 | Body | SBSR Satellite, B-pillar, right | ● | ● | ● | ● | ● | ● | |
| Z4 Series | E85/E86 | Body | SES Language-input system | ● | ● | ● | ○ | ● | ○ | |
| Z4 Series | E85/E86 | Body | SIM Safety and Information Module | ● | ● | ● | ● | ● | ○ | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

● This function is supported.

○ This function is not supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|-----------|--------------|---------|------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|---------------------------------------------------------------------------|
| Z4 Series | E85/E86 | Body | SMF Seat memory, driver | ● | ● | ● | ● | ● | ○ | |
| Z4 Series | E85/E86 | Body | STVL Satellite, door, front left | ● | ● | ● | ● | ○ | ● | |
| Z4 Series | E85/E86 | Body | STVR Satellite, door, front right | ● | ● | ● | ● | ○ | ● | |
| Z4 Series | E85/E86 | Body | SZM Switching centre, centre console | ● | ● | ● | ● | ● | ● | |
| Z4 Series | E85/E86 | Body | TCU Telematic control unit | ● | ● | ● | ● | ● | ● | |
| Z4 Series | E85/E86 | Body | ULF Universal charging and hands-free facility | ● | ● | ● | ● | ● | ● | |
| Z4 Series | E85/E86 | Body | VID Video module | ● | ● | ● | ○ | ○ | ○ | |
| Z4 Series | E85/E86 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| Z4 Series | E85/E86 | Chassis | EPS Electronic Power Steering | ● | ● | ● | ● | ● | ● | |
| Z4 Series | E85/E86 | Chassis | LWS Steering angle sensor | ● | ● | ● | ● | ○ | ○ | |
| Z4 Series | E85/E86 | Chassis | MFL Multi-function steering wheel | ● | ● | ● | ● | ○ | ○ | |
| Z4 Series | E85/E86 | Chassis | RDC Tyre pressure control | ● | ● | ● | ● | ● | ● | |
| Z4 Series | E85/E86 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |
| Z4 Series | E85/E86 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18, F19, F20, F21 |
| Z4 Series | E85/E86 | Drive | EKPS fuel-pump control | ● | ● | ● | ● | ● | ● | F29 |
| Z4 Series | E85/E86 | Drive | EWS Vehicle immobilizer | ● | ● | ● | ● | ● | ○ | F22 |
| Z8 Series | E52 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ○ | ● | F03 |
| Z8 Series | E52 | Body | BIT Basis Interface Telephone | ● | ● | ● | ● | ○ | ○ | F25, F22 |
| Z8 Series | E52 | Body | CVM/CVM2 Convertible top module | ● | ● | ● | ● | ● | ● | |
| Z8 Series | E52 | Body | DSP Digital Sound Processor | ● | ● | ● | ● | ○ | ○ | |
| Z8 Series | E52 | Body | GM base module | ● | ● | ● | ● | ● | ○ | F27 |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|-----------|--------------|---------|--------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|---------------------------------------------------------------------------|
| Z8 Series | E52 | Body | IHKS Integrated heating/air-conditioning control | ● | ● | ● | ● | ● | ● | |
| Z8 Series | E52 | Body | KOM Instrument cluster | ● | ● | ● | ● | ● | ○ | F24, F28 |
| Z8 Series | E52 | Body | LCM Light Check Module | ● | ● | ● | ● | ● | ○ | |
| Z8 Series | E52 | Body | LCM Light Check Module IV | ● | ● | ● | ● | ● | ○ | |
| Z8 Series | E52 | Body | LRA Automatic headlight vertical aim control | ● | ● | ● | ● | ● | ○ | |
| Z8 Series | E52 | Body | MIR Multi-Information Radio | ● | ● | ● | ● | ○ | ○ | |
| Z8 Series | E52 | Body | NAV Navigation computer MKII | ● | ● | ● | ● | ○ | ○ | |
| Z8 Series | E52 | Body | NAV Navigation computer MKIII | ● | ● | ● | ● | ○ | ○ | |
| Z8 Series | E52 | Body | RAD Radio | ● | ● | ● | ● | ● | ● | |
| Z8 Series | E52 | Body | TEL Telephone interface | ○ | ○ | ○ | ● | ● | ○ | |
| Z8 Series | E52 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| Z8 Series | E52 | Chassis | DDS Deflation Detection System | ● | ● | ● | ● | ○ | ○ | F29 |
| Z8 Series | E52 | Chassis | ELV Electronic steering-column locking | ● | ● | ● | ● | ○ | ○ | F03 |
| Z8 Series | E52 | Chassis | LEW Steering-angle sensor | ● | ● | ● | ● | ○ | ○ | |
| Z8 Series | E52 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |
| Z8 Series | E52 | Drive | EGS/AGS (Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18, F19, F20, F21 |
| Z8 Series | E52 | Drive | EWS Vehicle immobilizer | ● | ● | ● | ● | ● | ○ | F22 |
| Z Reihe | Z4_E89 | Drive | CAS Car Access System | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Drive | DKG Twin-clutch gearbox | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Drive | DME/DDE (Engine Electronics) | ● | ● | ● | ● | ● | ● | F03, F05, F06, F30 |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|---------|--------------|---------|---------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|--------------------------------------------------------------------------|
| Z Reihe | Z4_E89 | Drive | EGS/AGS(Transmission Control) | ● | ● | ● | ● | ● | ● | F03, F07, F08, F09, F10, F11, F12, F13, F14, F15, F16, F18 F19, F20, F21 |
| Z Reihe | Z4_E89 | Drive | EKPS Fuel-pump control | ● | ● | ● | ● | ● | ● | F29 |
| Z Reihe | Z4_E89 | Drive | GWS Gear selector switch | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Chassis | ABS/ASC/DSC Dynamic Stability Control | ● | ● | ● | ● | ● | ● | F03 |
| Z Reihe | Z4_E89 | Chassis | EDC Damper Control | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Chassis | EMF Parking brake | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Chassis | EPS Electronic Power Steering | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Chassis | RDC Tyre pressure control | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | AMP Amplifier | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | CA Comfort access system | ● | ● | ● | ● | ○ | ● | |
| Z Reihe | Z4_E89 | Body | CAN communication analysis | ● | ● | ○ | ○ | ○ | ○ | |
| Z Reihe | Z4_E89 | Body | CDC CD Changer | ● | ● | ● | ○ | ● | ● | |
| Z Reihe | Z4_E89 | Body | CIC Car Information Computer | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | CIC-GW Gateway | ● | ● | ● | ○ | ● | ● | |
| Z Reihe | Z4_E89 | Body | CID Central Information Display | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | CNAV Navigation system, China | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | CON Controller | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | CTM Convertible-top module | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | DAB Digital tuner | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | DVDC DVD Changer | ● | ● | ● | ○ | ● | ● | |
| Z Reihe | Z4_E89 | Body | DWA anti-theft alarm system | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|---------|--------------|------|------------------------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| Z Reihe | Z4_E89 | Body | FLA High Beam Assist | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | FRM2 Footwell module 2 | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | FZD Function centre, roof | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | IHKA/IHKA2 Heater/automatic A/C control | ● | ● | ● | ● | ● | ● | F04 |
| Z Reihe | Z4_E89 | Body | IHKR Heater and A/C control | ● | ● | ● | ● | ● | ● | F22 |
| Z Reihe | Z4_E89 | Body | IHR Integrated heater control | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | INSTR Instrument cluster | ● | ● | ● | ● | ● | ● | F01, F24, F28 |
| Z Reihe | Z4_E89 | Body | JBE2 Junction Box electronics | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | JNAV Navigation system, Japan | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | KNAV Navigation system, Korea | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | M-ASK-BO User interface | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | M-ASK-BO User interface | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | MOST system analysis | ● | ● | ● | ○ | ○ | ○ | |
| Z Reihe | Z4_E89 | Body | MRS/AB Airbag/ACSM | ● | ● | ● | ● | ○ | ● | F03 |
| Z Reihe | Z4_E89 | Body | PDC Park Distance Control | ● | ● | ● | ● | ● | ● | F02 |
| Z Reihe | Z4_E89 | Body | RAD Radio | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | RAD2-BO User interface | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | RAD2-GW Gateway | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | RLSS Rain/light solar sensor | ● | ● | ● | ● | ○ | ○ | |
| Z Reihe | Z4_E89 | Body | SDARS Satellite tuner | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | SINE Siren and tilt sensor | ● | ● | ● | ● | ○ | ○ | |
| Z Reihe | Z4_E89 | Body | SMFA Seat module, driver | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | TCU Telematic Control Unit | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | ULF Universal charging and hands-free facility | ● | ● | ● | ● | ● | ● | |

MaxiDAS_BMW_V3.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

| Series | Model Series | Part | Systems | Ecu Info | Read DTC | Erase DTC | Live Data | Component activation | Physical HW | Other Function |
|---------|--------------|------|------------------------------|----------|----------|-----------|-----------|----------------------|-------------|----------------|
| Z Reihe | Z4_E89 | Body | ULF-SBX Interface box | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | ULF-SBX-H Interface box High | ● | ● | ● | ● | ● | ● | |
| Z Reihe | Z4_E89 | Body | VM Video Module | ● | ● | ● | ● | ● | ● | |