- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
(All MYO5) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005 MY	4X4	•	•	•	•
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005 MY	ABS	•	•	•	•
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005 MY	GEM	•	•	•	•
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005 MY	IC	•	•	•	•
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005 MY	PAM	•	•	•	•
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005 MY	PCM	•	•	•	•
(All MY05) Escape/Tribute/Maverick/Mariner	2. 3L	DURATEC-HE / I4	2005 MY	RCM	•	•	•	•
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005 MY	4X4	•	•	•	•
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005 MY	ABS	•	•	•	•
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005 MY	GEM	•	•	•	•
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005 MY	IC	•	•	•	•
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005 MY	PAM	•	•	•	•
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005 MY	PCM	•	•	•	•
(All MY05) Escape/Tribute/Maverick/Mariner	3. 0L	4V	2005 MY	RCM	•	•	•	•
626 / 626 WAGON / TELSTAR	1.8L	FP	2000 MY	ABS/TCS	•	•	•	•
626 / 626 WAGON / TELSTAR	1.8L	FP	2000 MY	PCM	•	•	•	•
626 / 626 WAGON / TELSTAR	2. 0L	FS	2000 MY	ABS/TCS	•	•	•	•
626 / 626 WAGON / TELSTAR	2. 0L	FS	2000 MY	PCM	•	•	•	•
626 / 626_WAGON / TELSTAR	1.8L	FP	1997 MY	PCM	•	•	•	•
626 / 626_WAGON / TELSTAR	1.8L	FP	1999 MY	ABS	•	•	•	•
626 / 626_WAGON / TELSTAR	1.8L	FP	1999 MY	PCM	•	•	•	•
626 / 626_WAGON / TELSTAR	2. 0L	FS	1997 MY	ABS	•	•	•	•
626 / 626_WAGON / TELSTAR	2. 0L	FS	1997 MY	PCM	•	•	•	•
626 / 626_WAGON / TELSTAR	2. 0L	FS	1998 MY	ABS/TCS	•	•	•	•
626 / 626_WAGON / TELSTAR	2. 0L	FS	1998 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
626 / 626 WAGON / TELSTAR	2. OL	FS	1999 MY	ABS	•	•	•	•
626 / 626_WAGON / TELSTAR	2. 0L	FS	1999 MY	ABS/TCS	•	•	•	•
626 / 626_WAGON / TELSTAR	2. 0L	FS	1999 MY	PCM	•	•	•	•
626 / 626_WAGON / TELSTAR	2. 0L	FS	2000 MY	ABS/TCS	•	•	•	•
626 / 626_WAGON / TELSTAR	2. 0L	FS	2000 MY	PCM	•	•	•	•
626 / 626_WAGON / TELSTAR	2. 0L	FS	2001 MY	ABS/TCS	•	•	•	•
626 / 626_WAGON / TELSTAR	2. 0L	FS	2001 MY	PCM	•	•	•	•
626 / 626_WAGON / TELSTAR	2. 0L	RF-T	1999 MY	ABS	•	•	•	•
626 / 626_WAGON / TELSTAR	2. 0L	RF-T	1999 MY	PCM	•	•	•	•
626 / 626_WAGON / TELSTAR	2. 0L	RF-T	2000 MY	ABS	•	•	•	•
626 / 626_WAGON / TELSTAR	2. 5L	KL	1997 MY	PCM	•		•	
626 / 626_WAGON / TELSTAR	2. 5L	KL	1998 MY	ABS/TCS	•		•	
626 / 626_WAGON / TELSTAR	2. 5L	KL	1998 MY	PCM	•	•	•	•
626 / 626_WAGON / TELSTAR	2. 5L	KL	2000 MY	ABS/TCS	•	•	•	•
626 / 626_WAGON / TELSTAR	2. 5L	KL	2000 MY	PCM	•		•	
626 / 626_WAGON / TELSTAR	2. 5L	KL	2001 MY	ABS/TCS	•		•	
626 / 626_WAGON / TELSTAR	2. 5L	KL	2001 MY	PCM	•		•	•
AEROSTAR	3. 0L	0ther	1996 MY	PCM	•	•	•	•
AEROSTAR	3. 0L	0ther	1997 MY	PCM	•		•	•
AEROSTAR	4. 0L	0ther	1996 MY	PCM	•		•	•
AEROSTAR	4. 0L	0ther	1997 MY	PCM	•	•	•	•
Aspire	1. 3L	0ther	1996 MY	PCM	•	•	•	0
Aspire	1. 3L	0ther	1997 MY	PCM	•	•	•	0
Aspire	1.5L	Other	1997 MY	PCM	•	•	•	•
Aviator	4. 6L	4V	2003 MY	4X4	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Aviator	4. 6L	4V	2003 MY	ABS/TCS	•	•	•	•
Aviator	4. 6L	4V	2003 MY	DCSM	•	•	•	•
Aviator	4. 6L	4V	2003 MY	DSM	•	•	•	•
Aviator	4. 6L	4V	2003 MY	EATC	•	•	•	•
Aviator	4. 6L	4V	2003 MY	IC	•			•
Aviator	4. 6L	4V	2003 MY	NAV	•	•	•	0
Aviator	4. 6L	4V	2003 MY	PAM	•	•	•	•
Aviator	4. 6L	4V	2003 MY	PCM	•	•		•
Aviator	4. 6L	4V	2003 MY	PCSM	•		•	•
Aviator	4. 6L	4V	2003 MY	RCM	•			•
Aviator	4. 6L	4V	2003 MY	TPM	•			•
Aviator	4. 6L	4V	2003 MY	VAPS	•		•	•
Aviator	4. 6L	4V	2003 MY	VEMS	•	•	•	•
Aviator	4. 6L	4V	2003 MY	VSM	•	•	•	•
Aviator	4. 6L	4V	2004 MY	4X4	•			0
Aviator	4. 6L	4V	2004 MY	ABS/TCS	•			
Aviator	4. 6L	4V	2004 MY	DCSM	•	•	•	•
Aviator	4. 6L	4V	2004 MY	DSM	•			
Aviator	4. 6L	4V	2004 MY	EATC	•	•	•	•
Aviator	4. 6L	4V	2004 MY	IC	•	•	•	•
Aviator	4. 6L	4V	2004 MY	NAV	•	•	•	0
Aviator	4. 6L	4V	2004 MY	PAM	•	•	•	•
Aviator	4. 6L	4V	2004 MY	PCM	•	•	•	•
Aviator	4. 6L	4V	2004 MY	PCSM	•	•	•	•
Aviator	4. 6L	4V	2004 MY	RCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Aviator	4. 6L	4V	2004 MY	TPM	•	•	•	•
Aviator	4. 6L	4V	2004 MY	VAPS	•	•	•	•
Aviator	4. 6L	4V	2004 MY	VSM	•	•	•	•
Aviator	4. 6L	4V	2005 MY	4X4	•	•	•	0
Aviator	4. 6L	4V	2005 MY	ABS/TCS	•	•	•	•
Aviator	4.6L	4V	2005 MY	DCSM	•		•	•
Aviator	4. 6L	4V	2005 MY	DSM	•		•	•
Aviator	4. 6L	4V	2005 MY	EATC	•	•	•	•
Aviator	4. 6L	4V	2005 MY	IC	•	•	•	•
Aviator	4. 6L	4V	2005 MY	NAV	•	•	•	0
Aviator	4. 6L	4V	2005 MY	PAM	•	•	•	•
Aviator	4. 6L	4V	2005 MY	PCM	•	•	•	•
Aviator	4. 6L	4V	2005 MY	PCSM	•	•	•	•
Aviator	4. 6L	4V	2005 MY	RCM	•	•	•	•
Aviator	4. 6L	4V	2005 MY	TPM	•	•	•	•
Aviator	4. 6L	4V	2005 MY	VAPS	•	•	•	•
Aviator	4. 6L	4V	2005 MY	VSM	•	•	•	•
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL	2001 MY	ABS	•	•	•	
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL	2002 MY	ABS	•	•	•	
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL_T	2001 MY	ABS	•	•	•	
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL_T	2002 MY	ABS	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 5L	WL_T	2005 MY	ABS	•	•	•	
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 6L	G6	1999 MY	ABS	•	•	•	
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2. 9L	W9	2002 MY	ABS	•	•	•	
Bantam	1. 3L	Zetec Rocam	2001 MY	PCM	•	•	•	0
Bantam	1. 3L	Zetec Rocam	2006 MY	PCM	•	•	•	•
Bantam	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2009. 25 MY	IC	•	•	•	
Bantam	1.4L	Duratorq Turbo Diesel Common Rail Injection	2009.25 MY	PCM	•	•	•	•
Bantam	1.4L	Duratorq Turbo Diesel Common Rail Injection	2009.25 MY	RCM	•	•	•	0
Bantam	1.6L	Zetec Rocam	2001 MY	PCM	•		•	0
Bantam	1.6L	Zetec Rocam	2006 MY	PCM	•		•	•
Blackwood	5. 4L	4V	2002 MY	ABS/TCS	•		•	•
Blackwood	5. 4L	4V	2002 MY	DSM	•		•	•
Blackwood	5. 4L	4V	2002 MY	EATC	•		•	0
Blackwood	5. 4L	4V	2002 MY	GEM	•	•	•	•
Blackwood	5. 4L	4V	2002 MY	HEC	•		•	•
Blackwood	5. 4L	4V	2002 MY	LTM	•	•	•	0
Blackwood	5. 4L	4V	2002 MY	PAM	•	•	•	•
Blackwood	5. 4L	4V	2002 MY	PCM	•	•	•	•
Blackwood	5. 4L	4V	2002 MY	RAP	•	•	•	•
Blackwood	5. 4L	4V	2002 MY	RASM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Blackwood	5. 4L	4V	2002 MY	RCM	•	•	•	•
Blackwood	5. 4L	4V	2003 MY	ABS/TCS	•	•	•	•
Blackwood	5. 4L	4V	2003 MY	DSM	•	•	•	•
Blackwood	5. 4L	4V	2003 MY	EATC	•	•	•	0
Blackwood	5. 4L	4V	2003 MY	GEM	•	•	•	•
Blackwood	5. 4L	4V	2003 MY	HEC	•	•	•	•
Blackwood	5. 4L	4V	2003 MY	LTM	•	•	•	0
Blackwood	5. 4L	4V	2003 MY	PAM	•	•	•	•
Blackwood	5. 4L	4V	2003 MY	PCM	•	•	•	•
Blackwood	5. 4L	4V	2003 MY	RAP	•	•	•	•
Blackwood	5. 4L	4V	2003 MY	RASM	•	•	•	•
Blackwood	5. 4L	4V	2003 MY	RCM	•	•	•	•
BONGO / BONGO BRAWNY / SPECTRON	1.8L	F8	1999 MY	ABS	•	•	•	•
BONGO / BONGO BRAWNY / SPECTRON	1.8L	F8	2002 MY	ABS/TCS	•	•	•	•
BONGO / BONGO BRAWNY / SPECTRON	1.8L	F8	2002 MY	PCM	•	•	•	
BONGO / BONGO BRAWNY / SPECTRON	1.8L	F8	2002 MY	TCM	•	•	•	•
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2003 MY	ABS/TCS	•	•	•	•
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2003 MY	PCM	•	•	•	•
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2003 MY	TCM	•	•	•	•
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2004 MY	ABS/TCS	•	•	•	•
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2004 MY	PCM	•	•	•	•
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2004 MY	TCM	•	•	•	•
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2007 MY	ABS/TCS	•	•	•	•
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2007 MY	PCM	•	•	•	•
BONGO / BONGO BRAWNY / SPECTRON	2. 0L	RF-T	2007 MY	TCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
BONGO / BONGO BRAWNY / SPECTRON	2. 2L	R2	1999 MY	ABS	•	•	•	•
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	1.8L	F8	1999 MY	ABS	•	•	•	•
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 0L	FE	1997 MY	ABS	•	•	•	•
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 0L	FE	1998 MY	ABS	•	•	•	•
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2. 0L	FE	1999 MY	ABS	•	•	•	•
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2.0L	FE	2002 MY	ABS/TCS	•	•	•	•
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2.0L	FE	2002 MY	PCM	•	•	•	
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2.0L	FE	2002 MY	TCM	•	•	•	•
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2.2L	R2	1999 MY	ABS	•	•	•	•
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2.5L	WL	1999 MY	ABS	•	•	•	•
Bronco	5. OL	Other	1996 MY	PCM	•	•	•	•
Bronco	5.8L	Other	1996 MY	PCM	•	•	•	•
BT-50 / Ranger	2. 2L	F2	2007 MY	ABS/TCS	•	•	•	•
BT-50 / Ranger	2.2L	F2	2007 MY	PCM	•	•	•	
BT-50 / Ranger	2.2L	F2	2007 MY	RCM	•	•	•	0
BT-50 / Ranger	2.5L	WL	2007 MY	ABS/TCS	•	•	•	•
BT-50 / Ranger	2.5L	WL	2007 MY	PCM	•	•	•	
BT-50 / Ranger	2.5L	WL	2007 MY	RCM	•	•	•	0
BT-50 / Ranger	2.5L	WL_CD	2007 MY	ABS/TCS	•	•	•	•
BT-50 / Ranger	2.5L	WL_CD	2007 MY	PCM	•	•	•	•
BT-50 / Ranger	2.5L	WL_CD	2007 MY	RCM	•	•	•	0
BT-50 / Ranger	2.5L	WL_CD	2007 MY	TCM	•	•	•	•
BT-50 / Ranger	2.6L	G6	2007 MY	ABS/TCS	•	•	•	•
BT-50 / Ranger	2.6L	G6	2007 MY	PCM	•	•	•	
BT-50 / Ranger	2.6L	G6	2007 MY	RCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
BT-50 / Ranger	3. 0L	WE-CD	2007 MY	ABS/TCS	•	•	•	•
BT-50 / Ranger	3. 0L	WE-CD	2007 MY	PCM	•	•	•	•
BT-50 / Ranger	3. 0L	WE-CD	2007 MY	RCM	•	•	•	0
BT-50 / Ranger	3. 0L	WE-CD	2007 MY	TCM	•	•	•	•
BT-50 / Ranger	4. 0L	V6 SOHC	2007 MY	ABS/TCS	•	•	•	•
BT-50 / Ranger	4. 0L	V6 SOHC	2007 MY	ES0F	•	•	•	•
BT-50 / Ranger	4. 0L	V6 SOHC	2007 MY	PCM	•	•	•	•
BT-50 / Ranger	4. 0L	V6 SOHC	2007 MY	RCM	•	•		0
CAPELLA / CAPELLA_W / TELSTAR / TELSTAR W	1.8L	FP	1999 MY	ABS	•	•	•	•
CAPELLA / CAPELLA_W / TELSTAR / TELSTAR W	2. 0L	FS	1999 MY	ABS	•	•		•
CAPELLA / CAPELLA_W / TELSTAR / TELSTAR W	2.5L	KL	1999 MY	ABS	•	•		•
CF/LCF	4. 5L	Direct Injection - Turbo	2006 MY	ABS	•	•	•	•
CF/LCF	4. 5L	Direct Injection - Turbo	2006 MY	TCM	•	•	•	
CF/LCF	4. 5L	Direct Injection - Turbo	2007 MY	ABS	•	•	•	•
CF/LCF	4. 5L	Direct Injection - Turbo	2007 MY	TCM	•	•		
CF/LCF	4. 5L	Direct Injection - Turbo	2008 MY	ABS	•	•		•
CF/LCF	4. 5L	Direct Injection - Turbo	2008 MY	TCM	•	•		
CF/LCF	4. 5L	Direct Injection - Turbo	2009 MY	ABS	•	•		•
CF/LCF	4. 5L	Direct Injection - Turbo	2009 MY	TCM	•	•		
Continental	4.6L	4V	1995 MY	ABS/TCS	•	•	•	0
Continental	4.6L	4V	1995 MY	ACM	•	•	•	•
Continental	4. 6L	4V	1995 MY	CPM	•	•	•	•
Continental	4. 6L	4V	1995 MY	DDM	•	•	•	0
Continental	4. 6L	4V	1995 MY	DSM	•	•	•	0
Continental	4. 6L	4V	1995 MY	EATC	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Continental	4.6L	4V	1995 MY	LCM	•	•	•	•
Continental	4. 6L	4V	1995 MY	PCM	•	•	•	•
Continental	4. 6L	4V	1995 MY	VDM	•	•	•	•
Continental	4. 6L	4V	1995 MY	VIC	•	•	•	•
Continental	4. 6L	4V	1996 MY	ABS/TCS	•	•	•	•
Continental	4. 6L	4V	1996 MY	ACM	•	•	•	•
Continental	4. 6L	4V	1996 MY	CPM	•	•	•	•
Continental	4.6L	4V	1996 MY	DDM	•	•	•	•
Continental	4. 6L	4V	1996 MY	DSM	•	•	•	•
Continental	4. 6L	4V	1996 MY	EATC	•	•	•	0
Continental	4. 6L	4V	1996 MY	IAB	•	•	•	•
Continental	4. 6L	4V	1996 MY	LCM	•	•	•	•
Continental	4. 6L	4V	1996 MY	PCM	•	•	•	•
Continental	4.6L	4V	1996 MY	RESCU	•	•	•	0
Continental	4.6L	4V	1996 MY	VDM	•	•	•	•
Continental	4.6L	4V	1996 MY	VIC	•	•	•	•
Continental	4.6L	4V	1997 MY	ABS/TCS	•	•	•	•
Continental	4. 6L	4V	1997 MY	ACM	•	•	•	•
Continental	4.6L	4V	1997 MY	СРМ	•	•	•	•
Continental	4.6L	4V	1997 MY	DDM	•	•	•	•
Continental	4.6L	4V	1997 MY	DSM	•	•	•	•
Continental	4. 6L	4V	1997 MY	EATC	•	•	•	0
Continental	4. 6L	4V	1997 MY	IAB	•	•	•	•
Continental	4. 6L	4V	1997 MY	LCM	•	•	•	•
Continental	4. 6L	4V	1997 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Continental	4. 6L	4V	1997 MY	RESCU	•	•	•	0
Continental	4. 6L	4V	1997 MY	VDM	•	•	•	•
Continental	4. 6L	4V	1997 MY	VIC	•	•	•	•
Continental	4. 6L	4V	1998 MY	ABS/TCS	•	•	•	•
Continental	4. 6L	4V	1998 MY	ACM	•	•	•	•
Continental	4. 6L	4V	1998 MY	CPM	•	•	•	•
Continental	4. 6L	4V	1998 MY	DDM	•	•	•	•
Continental	4. 6L	4V	1998 MY	DSM	•	•	•	•
Continental	4. 6L	4V	1998 MY	EATC	•	•	•	0
Continental	4. 6L	4V	1998 MY	ECS	•	•	•	0
Continental	4. 6L	4V	1998 MY	LCM	•	•	•	•
Continental	4. 6L	4V	1998 MY	NGSC	•	•	•	0
Continental	4. 6L	4V	1998 MY	PCM	•	•	•	•
Continental	4. 6L	4V	1998 MY	RESCU	•	•	•	0
Continental	4. 6L	4V	1998 MY	VDM	•	•	•	•
Continental	4. 6L	4V	1998 MY	VIC	•	•	•	•
Continental	4. 6L	4V	1999 MY	ABS/TCS	•	•	•	•
Continental	4. 6L	4V	1999 MY	ACM	•	•	•	•
Continental	4. 6L	4V	1999 MY	CPM	•	•	•	•
Continental	4. 6L	4V	1999 MY	DDM	•	•	•	•
Continental	4. 6L	4V	1999 MY	DSM	•	•	•	•
Continental	4. 6L	4V	1999 MY	EATC	•	•	•	0
Continental	4. 6L	4V	1999 MY	LCM	•	•	•	•
Continental	4. 6L	4V	1999 MY	NGSC	•	•	•	0
Continental	4. 6L	4V	1999 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Continental	4.6L	4V	1999 MY	RCM	•	•	•	•
Continental	4. 6L	4V	1999 MY	RESCU	•	•	•	0
Continental	4. 6L	4V	1999 MY	VDM	•	•	•	•
Continental	4. 6L	4V	1999 MY	VIC	•	•	•	•
Continental	4. 6L	4V	2000 MY	ABS/TCS	•	•	•	•
Continental	4. 6L	4V	2000 MY	ACM	•	•	•	•
Continental	4. 6L	4V	2000 MY	CPM	•	•	•	•
Continental	4. 6L	4V	2000 MY	DDM	•	•	•	•
Continental	4. 6L	4V	2000 MY	DSM	•	•	•	•
Continental	4. 6L	4V	2000 MY	EATC	•	•	•	0
Continental	4. 6L	4V	2000 MY	LCM	•	•	•	•
Continental	4. 6L	4V	2000 MY	NGSC	•	•	•	0
Continental	4. 6L	4V	2000 MY	PCM	•	•	•	•
Continental	4. 6L	4V	2000 MY	RCM	•	•	•	•
Continental	4. 6L	4V	2000 MY	RESCU	•	•	•	0
Continental	4. 6L	4V	2000 MY	VDM	•	•	•	•
Continental	4. 6L	4V	2000 MY	VIC	•	•	•	•
Continental	4. 6L	4V	2002 MY	ABS/TCS	•	•	•	•
Continental	4. 6L	4V	2002 MY	ACM	•	•	•	•
Continental	4. 6L	4V	2002 MY	CPM	•	•	•	•
Continental	4. 6L	4V	2002 MY	DDM	•	•	•	•
Continental	4. 6L	4V	2002 MY	DSM	•	•	•	•
Continental	4. 6L	4V	2002 MY	EATC	•	•	•	0
Continental	4. 6L	4V	2002 MY	LCM	•	•	•	•
Continental	4. 6L	4V	2002 MY	NGSC	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Continental	4. 6L	4V	2002 MY	PCM	•	•	•	•
Continental	4. 6L	4V	2002 MY	RCM	•	•	•	•
Continental	4. 6L	4V	2002 MY	VDM	•	•	•	•
Continental	4. 6L	4V	2002 MY	VIC	•	•	•	•
Contour	2. 0L	GFP	1996 MY	ABS/TCS	•	•	•	•
Contour	2. 0L	GFP	1996 MY	PCM	•	•	•	•
Contour	2. 0L	GFP	1997 MY	ABS/TCS	•	•	•	•
Contour	2. 0L	GFP	1997 MY	PCM	•	•	•	•
Contour	2. 0L	GFP	1998 MY	ABS/TCS	•	•	•	•
Contour	2. 0L	GFP	1998 MY	CSM	•	•	•	•
Contour	2. 0L	GFP	1998 MY	PATS	•	•	•	•
Contour	2. 0L	GFP	1998 MY	PCM	•	•	•	•
Contour	2. 0L	GFP	1999 MY	ABS/TCS	•	•	•	•
Contour	2. 0L	GFP	1999 MY	CSM	•	•	0	•
Contour	2. 0L	GFP	1999 MY	PCM	•	•	•	•
Contour	2. 0L	GFP	1999 MY	RCM	•	•	•	•
Contour	2. 0L	GFP	2000 MY	ABS/TCS	•	•	•	•
Contour	2. 0L	GFP	2000 MY	CSM	•	•	0	•
Contour	2. 0L	GFP	2000 MY	PCM	•	•	•	•
Contour	2. 0L	GFP	2000 MY	RCM	•	•	•	•
Contour	2. 0L	Zetec	1996 MY	ABS/TCS	•	•	•	•
Contour	2. OL	Zetec	1996 MY	PCM	•	•	•	•
Contour	2. OL	Zetec	1997 MY	ABS/TCS	•	•	•	•
Contour	2. 0L	Zetec	1997 MY	PCM	•	•	•	•
Contour	2. 0L	Zetec	1998 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Contour	2. 0L	Zetec	1998 MY	CSM	•	•	•	•
Contour	2. 0L	Zetec	1998 MY	PATS	•		•	•
Contour	2. 0L	Zetec	1998 MY	PCM	•	•	•	•
Contour	2. 0L	Zetec	1999 MY	ABS/TCS	•	•	•	•
Contour	2. 0L	Zetec	1999 MY	CSM	•	•	0	•
Contour	2. 0L	Zetec	1999 MY	PCM	•	•	•	
Contour	2. 0L	Zetec	1999 MY	RCM	•	•	•	•
Contour	2. 0L	Zetec	2000 MY	ABS/TCS	•		•	•
Contour	2. 0L	Zetec	2000 MY	CSM	•	•	0	•
Contour	2. 0L	Zetec	2000 MY	PCM	•	•	•	
Contour	2. 0L	Zetec	2000 MY	RCM	•	•	•	
Contour	2. 5L	Duratec-VE	1996 MY	ABS/TCS	•	•	•	•
Contour	2. 5L	Duratec-VE	1996 MY	PCM	•	•	•	•
Contour	2. 5L	Duratec-VE	1997 MY	ABS/TCS	•	•	•	
Contour	2. 5L	Duratec-VE	1997 MY	PCM	•	•	•	
Contour	2. 5L	Duratec-VE	1998 MY	ABS/TCS	•	•	•	
Contour	2. 5L	Duratec-VE	1998 MY	CSM	•	•	•	
Contour	2. 5L	Duratec-VE	1998 MY	PATS	•	•	•	•
Contour	2. 5L	Duratec-VE	1998 MY	PCM	•	•	•	•
Contour	2. 5L	Duratec-VE	1999 MY	ABS/TCS	•	•	•	•
Contour	2. 5L	Duratec-VE	1999 MY	CSM	•	•	0	•
Contour	2. 5L	Duratec-VE	1999 MY	PCM	•	•	•	
Contour	2. 5L	Duratec-VE	1999 MY	RCM	•	•	•	•
Contour	2. 5L	Duratec-VE	2000 MY	ABS/TCS	•	•	•	•
Contour	2. 5L	Duratec-VE	2000 MY	CSM	•	•	0	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Contour	2. 5L	Duratec-VE	2000 MY	PCM	•	•	•	•
Contour	2. 5L	Duratec-VE	2000 MY	RCM	•	•	•	•
Contour	2. 5L	НО	1998 MY	ABS/TCS	•	•	•	•
Contour	2.5L	НО	1998 MY	CSM	•	•	•	•
Contour	2.5L	НО	1998 MY	PATS	•		•	•
Contour	2.5L	НО	1998 MY	PCM	•	•	•	•
Contour	2.5L	НО	1999 MY	ABS/TCS	•	•	•	•
Contour	2. 5L	НО	1999 MY	CSM	•		0	•
Contour	2. 5L	НО	1999 MY	PCM	•			•
Contour	2. 5L	НО	1999 MY	RCM	•			•
Cougar	2. 0L	Zetec	1998.75 MY	ABS/TCS	•	•	•	•
Cougar	2. 0L	Zetec	1998.75 MY	CSM	•	•	0	
Cougar	2. 0L	Zetec	1998.75 MY	HEC	•	•	•	•
Cougar	2. 0L	Zetec	1998.75 MY	IAB	•			0
Cougar	2. 0L	Zetec	1998.75 MY	PCM	•	•	•	•
Cougar	2. 0L	Zetec	1999 MY	ABS/TCS	•	•	•	•
Cougar	2. 0L	Zetec	1999 MY	CSM	•	•	•	
Cougar	2. 0L	Zetec	1999 MY	HEC	•	•	•	•
Cougar	2. 0L	Zetec	1999 MY	IAB	•			0
Cougar	2. 0L	Zetec	1999 MY	PCM	•			•
Cougar	2. 0L	Zetec	2000 MY	ABS/TCS	•			•
Cougar	2. 0L	Zetec	2000 MY	CSM	•	•	•	
Cougar	2. 0L	Zetec	2000 MY	HEC	•	•	•	•
Cougar	2. 0L	Zetec	2000 MY	IAB	•	•	•	0
Cougar	2. 0L	Zetec	2000 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Cougar	2. 0L	Zetec	2000.5 MY	ABS/TCS	•	•	•	•
Cougar	2. 0L	Zetec	2000.5 MY	CSM	•		0	
Cougar	2. 0L	Zetec	2000.5 MY	HEC	•	•	•	•
Cougar	2. 0L	Zetec	2000.5 MY	IAB	•	•	•	0
Cougar	2. 0L	Zetec	2000.5 MY	PCM	•	•	•	•
Cougar	2. 0L	Zetec	2002 MY	ABS/TCS	•	•	•	
Cougar	2. 0L	Zetec	2002 MY	CSM	•	•	•	
Cougar	2. 0L	Zetec	2002 MY	HEC	•		•	
Cougar	2. 0L	Zetec	2002 MY	IAB	•	•	•	0
Cougar	2. 0L	Zetec	2002 MY	PCM	•	•	•	
Cougar	2. 5L	Duratec-VE	1998.75 MY	ABS/TCS	•	•	•	
Cougar	2. 5L	Duratec-VE	1998.75 MY	CSM	•	•	0	
Cougar	2. 5L	Duratec-VE	1998.75 MY	HEC	•	•	•	
Cougar	2. 5L	Duratec-VE	1998.75 MY	IAB	•	•	•	0
Cougar	2. 5L	Duratec-VE	1998.75 MY	PCM	•	•	•	
Cougar	2. 5L	Duratec-VE	1999 MY	ABS/TCS	•	•	•	
Cougar	2. 5L	Duratec-VE	1999 MY	CSM	•	•	•	
Cougar	2. 5L	Duratec-VE	1999 MY	HEC	•	•	•	
Cougar	2. 5L	Duratec-VE	1999 MY	IAB	•	•	•	0
Cougar	2. 5L	Duratec-VE	1999 MY	PCM	•	•	•	
Cougar	2. 5L	Duratec-VE	1999.75 MY	ABS/TCS	•	•	•	
Cougar	2. 5L	Duratec-VE	1999.75 MY	CSM	•	•	0	
Cougar	2. 5L	Duratec-VE	1999.75 MY	HEC	•	•	•	•
Cougar	2. 5L	Duratec-VE	1999.75 MY	IAB	•	•	•	0
Cougar	2.5L	Duratec-VE	1999.75 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Cougar	2.5L	Duratec-VE	2000 MY	ABS/TCS	•	•	•	•
Cougar	2. 5L	Duratec-VE	2000 MY	CSM	•	•	•	
Cougar	2. 5L	Duratec-VE	2000 MY	HEC	•	•	•	•
Cougar	2.5L	Duratec-VE	2000 MY	IAB	•	•	•	0
Cougar	2.5L	Duratec-VE	2000 MY	PCM	•	•	•	•
Cougar	2.5L	Duratec-VE	2000.5 MY	ABS/TCS	•	•	•	•
Cougar	2.5L	Duratec-VE	2000.5 MY	CSM	•	•	0	
Cougar	2.5L	Duratec-VE	2000.5 MY	HEC	•	•	•	•
Cougar	2.5L	Duratec-VE	2000.5 MY	IAB	•	•	•	0
Cougar	2.5L	Duratec-VE	2000.5 MY	PCM	•	•	•	
Cougar	2.5L	Duratec-VE	2001 MY	MC	•	•	•	0
Cougar	2.5L	Duratec-VE	2001 MY	REM	•	•	•	0
Cougar	2.5L	Duratec-VE	2002 MY	ABS/TCS	•	•	•	•
Cougar	2.5L	Duratec-VE	2002 MY	CSM	•	•	•	
Cougar	2.5L	Duratec-VE	2002 MY	HEC	•	•	•	•
Cougar	2.5L	Duratec-VE	2002 MY	IAB	•	•	•	0
Cougar	2.5L	Duratec-VE	2002 MY	PCM	•	•	•	•
Cougar	3.8L	Other	1996 MY	ABS/TCS	•	•	•	•
Cougar	3.8L	Other	1996 MY	HEC	•	•	•	•
Cougar	3.8L	Other	1996 MY	PCM	•	•	•	•
Cougar	3.8L	Other	1997 MY	ABS/TCS	•	•	•	•
Cougar	3.8L	Other	1997 MY	HEC	•	•	•	•
Cougar	3.8L	Other	1997 MY	PCM	•	•	•	•
Cougar	4. 6L	2V	1994 MY	ABS/TCS	•	•	•	•
Cougar	4.6L	2V	1994 MY	HEC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Cougar	4. 6L	2V	1994 MY	PCM	•	•	•	•
Cougar	4. 6L	2V	1995 MY	ABS/TCS	•	•	•	•
Cougar	4. 6L	2V	1995 MY	HEC	•	•	•	•
Cougar	4. 6L	2V	1995 MY	PCM	•	•	•	•
Cougar	4. 6L	2V	1996 MY	ABS/TCS	•	•	•	•
Cougar	4. 6L	2V	1996 MY	HEC	•	•	•	•
Cougar	4. 6L	2V	1996 MY	PCM	•	•	•	•
Cougar	4. 6L	2V	1997 MY	ABS/TCS	•	•		•
Cougar	4. 6L	2V	1997 MY	HEC	•	•	•	•
Cougar	4. 6L	2V	1997 MY	PCM	•	•	•	•
Crown Victoria	4. 6L	2V	1995 MY	ABS/TCS	•			0
Crown Victoria	4. 6L	2V	1995 MY	DDM	•			0
Crown Victoria	4. 6L	2V	1995 MY	DSM	•			0
Crown Victoria	4. 6L	2V	1995 MY	EATC	•	•	•	0
Crown Victoria	4. 6L	2V	1995 MY	LCM	•	•	•	0
Crown Victoria	4. 6L	2V	1995 MY	PCM	•	•	•	•
Crown Victoria	4. 6L	2V	1996 MY	ABS/TCS	•	•	•	•
Crown Victoria	4. 6L	2V	1996 MY	DDM	•			•
Crown Victoria	4. 6L	2V	1996 MY	DSM	•	•	•	•
Crown Victoria	4. 6L	2V	1996 MY	EATC	•	•	•	0
Crown Victoria	4. 6L	2V	1996 MY	IAB	•	•	•	0
Crown Victoria	4. 6L	2V	1996 MY	LCM	•	•	•	•
Crown Victoria	4. 6L	2V	1996 MY	PCM	•	•	•	•
Crown Victoria	4. 6L	2V	1997 MY	ABS/TCS	•	•	•	•
Crown Victoria	4. 6L	2V	1997 MY	DDM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Crown Victoria	4. 6L	2V	1997 MY	DSM	•	•	•	•
Crown Victoria	4. 6L	2V	1997 MY	EATC	•	•	•	0
Crown Victoria	4. 6L	2V	1997 MY	IAB	•	•	•	0
Crown Victoria	4. 6L	2V	1997 MY	LCM	•	•	•	•
Crown Victoria	4. 6L	2V	1997 MY	PCM	•	•	•	•
Crown Victoria	4. 6L	2V	1998 MY	ABS/TCS	•	•	•	•
Crown Victoria	4. 6L	2V	1998 MY	DDM	•	•	•	•
Crown Victoria	4. 6L	2V	1998 MY	EATC	•	•	•	0
Crown Victoria	4. 6L	2V	1998 MY	ECS	•	•	•	0
Crown Victoria	4. 6L	2V	1998 MY	LCM	•	•	•	•
Crown Victoria	4. 6L	2V	1998 MY	PATS	•	•	•	•
Crown Victoria	4. 6L	2V	1998 MY	PCM	•	•	•	•
Crown Victoria	4.6L	2V	1999 MY	ABS/TCS	•	•	•	•
Crown Victoria	4. 6L	2V	1999 MY	DDM	•	•	•	•
Crown Victoria	4. 6L	2V	1999 MY	EATC	•	•	•	0
Crown Victoria	4. 6L	2V	1999 MY	ECS	•	•	•	0
Crown Victoria	4.6L	2V	1999 MY	LCM	•	•	•	•
Crown Victoria	4.6L	2V	1999 MY	PATS	•		•	•
Crown Victoria	4. 6L	2V	1999 MY	PCM	•	•	•	•
Crown Victoria	4. 6L	2V	2000 MY	ABS/TCS	•	•	•	•
Crown Victoria	4. 6L	2V	2000 MY	DDM	•	•	•	•
Crown Victoria	4.6L	2V	2000 MY	EATC	•	•	•	0
Crown Victoria	4.6L	2V	2000 MY	ECS	•	•	•	0
Crown Victoria	4. 6L	2V	2000 MY	LCM	•	•	•	•
Crown Victoria	4. 6L	2V	2000 MY	PATS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Crown Victoria	4. 6L	2V	2000 MY	PCM	•	•	•	•
Crown Victoria	4.6L	2V	2000 MY	RCM	•	•	•	•
Crown Victoria	4.6L	2V	2002 MY	ABS/TCS	•	•	•	•
Crown Victoria	4.6L	2V	2002 MY	DDM	•	•	•	•
Crown Victoria	4.6L	2V	2002 MY	EATC	•	•		0
Crown Victoria	4.6L	2V	2002 MY	LCM	•	•	•	•
Crown Victoria	4.6L	2V	2002 MY	PATS	•	•	•	•
Crown Victoria	4.6L	2V	2002 MY	PCM	•	•	•	•
Crown Victoria	4.6L	2V	2002 MY	RCM	•	•	•	•
Crown Victoria	4.6L	2V	2003 MY	ABS/TCS	•	•	•	•
Crown Victoria	4.6L	2V	2003 MY	DDM	•	•	•	•
Crown Victoria	4.6L	2V	2003 MY	EATC	•	•	•	0
Crown Victoria	4.6L	2V	2003 MY	FIM	•	•	•	0
Crown Victoria	4.6L	2V	2003 MY	LCM	•	•	•	•
Crown Victoria	4.6L	2V	2003 MY	PCM	•	•	•	•
Crown Victoria	4.6L	2V	2003 MY	RASM	•	•		•
Crown Victoria	4.6L	2V	2003 MY	RCM	•	•		•
Crown Victoria	4.6L	2V	2003 MY	VAPS	•	•	•	•
Crown Victoria	4.6L	2V	2004 MY	ABS/TCS	•	•		•
Crown Victoria	4.6L	2V	2004 MY	DDM	•	•		•
Crown Victoria	4.6L	2V	2004 MY	EATC	•	•		0
Crown Victoria	4.6L	2V	2004 MY	FIM	•	•	•	0
Crown Victoria	4.6L	2V	2004 MY	LCM	•	•	•	•
Crown Victoria	4.6L	2V	2004 MY	MC	•	•	•	0
Crown Victoria	4.6L	2V	2004 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Crown Victoria	4.6L	2V	2004 MY	RASM	•	•	•	•
Crown Victoria	4.6L	2V	2004 MY	RCM	•	•	•	•
Crown Victoria	4.6L	2V	2004 MY	VAPS	•	•	•	•
Crown Victoria	4.6L	2V	2005 MY	ABS	•	•	•	•
Crown Victoria	4.6L	2V	2005 MY	DDM	•	•	•	
Crown Victoria	4.6L	2V	2005 MY	EATC	•	•	•	0
Crown Victoria	4.6L	2V	2005 MY	FSSM	•	•	•	•
Crown Victoria	4.6L	2V	2005 MY	LCM	•	•	•	
Crown Victoria	4.6L	2V	2005 MY	MC	•	•	•	0
Crown Victoria	4.6L	2V	2005 MY	PCM	•	•	•	
Crown Victoria	4.6L	2V	2005 MY	RASM	•	•	•	
Crown Victoria	4.6L	2V	2005 MY	RCM	•	•	•	
Crown Victoria	4.6L	2V	2005 MY	VAPS	•	•	•	•
Crown Victoria	4.6L	2V	2006 MY	ABS	•	•	•	
Crown Victoria	4.6L	2V	2006 MY	DDM	•	•	•	•
Crown Victoria	4.6L	2V	2006 MY	EATC	•	•	•	0
Crown Victoria	4.6L	2V	2006 MY	FSSM	•	•	•	
Crown Victoria	4.6L	2V	2006 MY	IC	•	•	•	•
Crown Victoria	4.6L	2V	2006 MY	LCM	•	•	•	
Crown Victoria	4.6L	2V	2006 MY	MC	•	•	•	0
Crown Victoria	4.6L	2V	2006 MY	PCM	•	•	•	
Crown Victoria	4.6L	2V	2006 MY	RASM	•	•	•	
Crown Victoria	4.6L	2V	2006 MY	RCM	•	•	•	
Crown Victoria	4.6L	2V	2006 MY	VAPS	•	•	•	•
Crown Victoria	4.6L	2V	2007 MY	ABS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Crown Victoria	4. 6L	2V	2007 MY	DDM	•	•	•	•
Crown Victoria	4. 6L	2V	2007 MY	EATC	•	•	•	0
Crown Victoria	4. 6L	2V	2007 MY	FSSM	•	•	•	•
Crown Victoria	4. 6L	2V	2007 MY	IC	•	•	•	•
Crown Victoria	4. 6L	2V	2007 MY	LCM	•	•	•	•
Crown Victoria	4. 6L	2V	2007 MY	MC	•	•	•	0
Crown Victoria	4. 6L	2V	2007 MY	PCM	•	•	•	•
Crown Victoria	4. 6L	2V	2007 MY	RCM	•	•	•	0
Crown Victoria	4. 6L	2V	2007 MY	VDM	•	•	•	•
Crown Victoria	4. 6L	2V	2008 MY	ABS	•	•	•	•
Crown Victoria	4. 6L	2V	2008 MY	DDM	•	•	•	•
Crown Victoria	4. 6L	2V	2008 MY	FSSM	•	•	•	•
Crown Victoria	4. 6L	2V	2008 MY	IC	•	•	•	•
Crown Victoria	4. 6L	2V	2008 MY	LCM	•	•	•	•
Crown Victoria	4. 6L	2V	2008 MY	MC	•	•	•	0
Crown Victoria	4. 6L	2V	2008 MY	PCM	•	•	•	•
Crown Victoria	4. 6L	2V	2008 MY	RCM	•	•	•	0
Crown Victoria	4. 6L	2V	2008 MY	VDM	•	•	•	•
Crown Victoria	4. 6L	2V	2009 MY	ABS	•	•	•	•
Crown Victoria	4. 6L	2V	2009 MY	DDM	•	•	•	
Crown Victoria	4. 6L	2V	2009 MY	FSSM	•	•	•	•
Crown Victoria	4. 6L	2V	2009 MY	IC	•	•	•	•
Crown Victoria	4. 6L	2V	2009 MY	LCM	•	•	•	•
Crown Victoria	4. 6L	2V	2009 MY	MC	•	•	•	0
Crown Victoria	4. 6L	2V	2009 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Crown Victoria	4. 6L	2V	2009 MY	RCM	•	•	•	0
Crown Victoria	4. 6L	2V	2009 MY	VDM	•	•	•	•
Crown Victoria	4. 6L	2V	2010 MY	ABS	•	•	•	•
Crown Victoria	4. 6L	2V	2010 MY	DDM	•	•	•	
Crown Victoria	4. 6L	2V	2010 MY	FSSM	•	•	•	•
Crown Victoria	4. 6L	2V	2010 MY	IC	•	•	•	•
Crown Victoria	4. 6L	2V	2010 MY	MC	•	•	•	0
Crown Victoria	4. 6L	2V	2010 MY	PCM	•	•	•	•
Crown Victoria	4. 6L	2V	2010 MY	RCM	•	•	•	0
Crown Victoria	4. 6L	2V	2010 MY	VDM	•	•	•	
Crown Victoria	4. 6L	2V_NGV	1996 MY	ABS/TCS	•	•	•	•
Crown Victoria	4. 6L	2V_NGV	1996 MY	DDM	•	•	•	•
Crown Victoria	4. 6L	2V_NGV	1996 MY	DSM	•	•	•	
Crown Victoria	4. 6L	2V_NGV	1996 MY	FIM	•	•	•	0
Crown Victoria	4. 6L	2V_NGV	1996 MY	IAB	•	•	•	0
Crown Victoria	4. 6L	2V_NGV	1996 MY	LCM	•	•	•	
Crown Victoria	4. 6L	2V_NGV	1996 MY	PCM	•	•	•	
Crown Victoria	4. 6L	2V_NGV	1997 MY	ABS/TCS	•	•	•	•
Crown Victoria	4. 6L	2V_NGV	1997 MY	DDM	•	•	•	
Crown Victoria	4. 6L	2V_NGV	1997 MY	DSM	•	•	•	
Crown Victoria	4. 6L	2V_NGV	1997 MY	FIM	•	•	•	0
Crown Victoria	4. 6L	2V_NGV	1997 MY	IAB	•	•	•	0
Crown Victoria	4. 6L	2V_NGV	1997 MY	LCM	•	•	•	•
Crown Victoria	4. 6L	2V_NGV	1997 MY	PCM	•	•	•	
Crown Victoria	4. 6L	2V_NGV	1998 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Crown Victoria	4. 6L	2V_NGV	1998 MY	DDM	•	•	•	•
Crown Victoria	4.6L	2V_NGV	1998 MY	EATC	•	•	•	0
Crown Victoria	4.6L	2V_NGV	1998 MY	ECS	•	•	•	0
Crown Victoria	4.6L	2V_NGV	1998 MY	FIM	•	•	•	0
Crown Victoria	4.6L	2V_NGV	1998 MY	LCM	•	•	•	•
Crown Victoria	4.6L	2V_NGV	1998 MY	PATS	•	•	•	•
Crown Victoria	4.6L	2V_NGV	1998 MY	PCM	•	•	•	•
Crown Victoria	4.6L	2V_NGV	1999 MY	ABS/TCS	•	•	•	•
Crown Victoria	4.6L	2V_NGV	1999 MY	DDM	•	•	•	•
Crown Victoria	4.6L	2V_NGV	1999 MY	EATC	•	•	•	0
Crown Victoria	4.6L	2V_NGV	1999 MY	ECS	•	•	•	0
Crown Victoria	4.6L	2V_NGV	1999 MY	FIM	•	•	•	0
Crown Victoria	4.6L	2V_NGV	1999 MY	LCM	•	•	•	•
Crown Victoria	4.6L	2V_NGV	1999 MY	PATS	•	•	•	•
Crown Victoria	4.6L	2V_NGV	1999 MY	PCM	•	•	•	•
Crown Victoria	4.6L	2V_NGV	2000 MY	ABS/TCS	•	•	•	•
Crown Victoria	4.6L	2V_NGV	2000 MY	DDM	•	•	•	•
Crown Victoria	4.6L	2V_NGV	2000 MY	EATC	•	•	•	0
Crown Victoria	4.6L	2V_NGV	2000 MY	ECS	•	•	•	0
Crown Victoria	4.6L	2V_NGV	2000 MY	FIM	•	•	•	0
Crown Victoria	4.6L	2V_NGV	2000 MY	LCM	•	•	•	•
Crown Victoria	4.6L	2V_NGV	2000 MY	PATS	•	•	•	•
Crown Victoria	4.6L	2V_NGV	2000 MY	PCM	•	•	•	•
Crown Victoria	4.6L	2V_NGV	2000 MY	RCM	•	•	•	•
Crown Victoria	4. 6L	Other	1995 MY	ABS/TCS	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Crown Victoria	4. 6L	Other	1995 MY	PCM	•	•	•	•
DEMIO / FESTIVA MINI WAGON	1. 3L	B3	1996 MY	ABS	•	•	•	•
DEMIO / FESTIVA MINI WAGON	1. 3L	B3	1999 MY	ABS	•	•	•	•
DEMIO / FESTIVA MINI WAGON	1. 3L	B3	2000 MY	ABS/TCS	•	•	•	•
DEMIO / FESTIVA MINI WAGON	1. 3L	B3	2000 MY	PCM	•		•	•
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1996 MY	ABS	•		•	•
DEMIO / FESTIVA MINI WAGON	1.5L	B5	1999 MY	ABS	•	•	•	•
E-Series	4. 2L	0ther	1997 MY	ABS/TCS	•		•	•
E-Series	4. 2L	0ther	1997 MY	ECS	•		•	
E-Series	4. 2L	0ther	1997 MY	PCM	•		•	•
E-Series	4. 2L	0ther	1998 MY	ABS/TCS	•		•	•
E-Series	4. 2L	Other	1998 MY	ECS	•	•	•	
E-Series	4. 2L	0ther	1998 MY	PCM	•	•	•	•
E-Series	4. 2L	0ther	1999 MY	ABS/TCS	•		•	•
E-Series	4. 2L	0ther	1999 MY	ECS	•		•	
E-Series	4. 2L	0ther	1999 MY	PCM	•		•	
E-Series	4. 2L	0ther	2000 MY	ABS/TCS	•		•	
E-Series	4. 2L	Other	2000 MY	ECS	•	•	•	
E-Series	4. 2L	0ther	2000 MY	PCM	•		•	•
E-Series	4. 2L	0ther	2002 MY	ABS/TCS	•		•	
E-Series	4. 2L	0ther	2002 MY	ECS	•	•	•	
E-Series	4. 2L	0ther	2002 MY	PCM	•	•	•	•
E-Series	4. 2L	0ther	2003 MY	ABS/TCS	•	•	•	•
E-Series	4. 2L	Other	2003 MY	ECS	•	•	•	
E-Series	4. 2L	0ther	2003 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
E-Series	4. 6L	2V	2003 MY	ABS/TCS	•	•	•	•
E-Series	4. 6L	2V	2003 MY	ECS	•	•	•	
E-Series	4. 6L	2V	2003 MY	PCM	•	•	•	•
E-Series	4. 6L	2V	2004 MY	ABS/TCS	•	•	•	•
E-Series	4. 6L	2V	2004 MY	IC	•	•	•	•
E-Series	4. 6L	2V	2004 MY	PCM	•	•	•	•
E-Series	4. 6L	2V	2004 MY	RAP	•	•	•	•
E-Series	4. 6L	2V	2004 MY	RCM	•	•	•	0
E-Series	4. 6L	2V	2005 MY	ABS/TCS	•	•	•	•
E-Series	4. 6L	2V	2005 MY	IC	•	•	•	•
E-Series	4. 6L	2V	2005 MY	PCM	•	•	•	•
E-Series	4. 6L	2V	2005 MY	RAP	•	•	•	•
E-Series	4. 6L	2V	2005 MY	RCM	•	•	•	0
E-Series	4. 6L	2V	2006 MY	ABS	•	•	•	•
E-Series	4. 6L	2V	2006 MY	ABS/TCS	•	•	•	•
E-Series	4. 6L	2V	2006 MY	IC	•	•	•	•
E-Series	4. 6L	2V	2006 MY	PCM	•	•	•	
E-Series	4. 6L	2V	2006 MY	RAP	•	•	•	•
E-Series	4. 6L	2V	2006 MY	RCM	•	•	•	0
E-Series	4. 6L	2V	2007 MY	ABS	•	•	•	•
E-Series	4. 6L	2V	2007 MY	ABS/TCS	•	•	•	•
E-Series	4. 6L	2V	2007 MY	IC	•	•	•	•
E-Series	4. 6L	2V	2007 MY	PAM	•	•	•	•
E-Series	4. 6L	2V	2007 MY	PCM	•	•	•	•
E-Series	4. 6L	2V	2007 MY	RCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
E-Series	4.6L	2V	2007 MY	VSM	•	•	•	•
E-Series	4. 6L	2V	2008 MY	ABS	•	•	•	•
E-Series	4. 6L	2V	2008 MY	IC	•	•	•	•
E-Series	4. 6L	2V	2008 MY	PAM	•	•	•	•
E-Series	4. 6L	2V	2008 MY	PCM	•	•	•	•
E-Series	4. 6L	2V	2008 MY	RCM	•	•	•	0
E-Series	4. 6L	2V	2008 MY	VSM	•	•	•	•
E-Series	4. 6L	2V	2009 MY	ABS	•	•	•	•
E-Series	4. 6L	2V	2009 MY	ACM	•	•	•	•
E-Series	4. 6L	2V	2009 MY	GEM / SJB	•	•	•	•
E-Series	4. 6L	2V	2009 MY	IPC	•	•	•	•
E-Series	4. 6L	2V	2009 MY	PAM	•	•	•	•
E-Series	4. 6L	2V	2009 MY	PCM	•	•	•	•
E-Series	4. 6L	2V	2009 MY	RCM	•	•	•	0
E-Series	4. 6L	2V	2009 MY	TBC	•	•	•	0
E-Series	4. 6L	2V	2010 MY	ABS	•	•	•	•
E-Series	4. 6L	2V	2010 MY	ACM	•	•	•	•
E-Series	4. 6L	2V	2010 MY	GEM / SJB	•	•	•	•
E-Series	4. 6L	2V	2010 MY	GPSM	•	•	•	0
E-Series	4. 6L	2V	2010 MY	IPC	•	•	•	•
E-Series	4. 6L	2V	2010 MY	PAM	•	•	•	•
E-Series	4. 6L	2V	2010 MY	PCM	•	•	•	•
E-Series	4. 6L	2V	2010 MY	RCM	•	•	•	0
E-Series	4. 6L	2V	2010 MY	SDARS	•	•	•	
E-Series	4. 6L	2V	2010 MY	TBC	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
E-Series	4. 6L	0ther	1997 MY	ABS/TCS	•	•	•	•
E-Series	4. 6L	0ther	1997 MY	ECS	•	•	•	
E-Series	4. 6L	0ther	1997 MY	PCM	•	•	•	•
E-Series	4. 6L	0ther	1998 MY	ABS/TCS	•	•	•	•
E-Series	4. 6L	0ther	1998 MY	ECS	•	•	•	
E-Series	4. 6L	0ther	1998 MY	PCM	•	•	•	•
E-Series	4. 6L	0ther	1999 MY	ABS/TCS	•	•	•	•
E-Series	4. 6L	0ther	1999 MY	ECS	•	•	•	
E-Series	4. 6L	0ther	1999 MY	PCM	•	•	•	•
E-Series	4. 6L	0ther	2000 MY	ABS/TCS	•	•	•	•
E-Series	4. 6L	0ther	2000 MY	ECS	•	•	•	
E-Series	4. 6L	0ther	2000 MY	PCM	•	•	•	•
E-Series	4. 6L	0ther	2002 MY	ABS/TCS	•	•	•	•
E-Series	4. 6L	0ther	2002 MY	ECS	•	•	•	
E-Series	4. 6L	0ther	2002 MY	PCM	•	•	•	•
E-Series	4. 9L	GFP	1996 MY	ABS/TCS	•	•	•	0
E-Series	4. 9L	GFP	1996 MY	PCM	•	•	•	•
E-Series	4. 9L	0ther	1996 MY	ABS/TCS	•	•	•	0
E-Series	4. 9L	0ther	1996 MY	PCM	•	•	•	•
E-Series	5. 0L	0ther	1996 MY	ABS/TCS	•	•	•	0
E-Series	5. 0L	0ther	1996 MY	PCM	•	•	•	•
E-Series	5. 4L	2V	2004 MY	ABS/TCS	•	•	•	•
E-Series	5. 4L	2V	2004 MY	AFCM	•	•	•	0
E-Series	5. 4L	2V	2004 MY	IC	•	•	•	•
E-Series	5. 4L	2V	2004 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
E-Series	5. 4L	2V	2004 MY	RAP	•	•	•	•
E-Series	5. 4L	2V	2004 MY	RCM	•	•	•	0
E-Series	5. 4L	2V	2005 MY	ABS/TCS	•	•	•	•
E-Series	5. 4L	2V	2005 MY	IC	•	•	•	•
E-Series	5. 4L	2V	2005 MY	PCM	•	•	•	•
E-Series	5. 4L	2V	2005 MY	RAP	•	•	•	•
E-Series	5. 4L	2V	2005 MY	RCM	•	•	•	0
E-Series	5. 4L	2V	2006 MY	ABS	•	•	•	•
E-Series	5. 4L	2V	2006 MY	ABS/TCS	•	•	•	•
E-Series	5. 4L	2V	2006 MY	IC	•	•	•	•
E-Series	5. 4L	2V	2006 MY	PCM	•	•	•	•
E-Series	5. 4L	2V	2006 MY	RAP	•	•	•	•
E-Series	5. 4L	2V	2006 MY	RCM	•	•	•	0
E-Series	5. 4L	2V	2007 MY	ABS	•	•	•	•
E-Series	5. 4L	2V	2007 MY	ABS/TCS	•	•	•	•
E-Series	5. 4L	2V	2007 MY	IC	•	•	•	•
E-Series	5. 4L	2V	2007 MY	PAM	•	•	•	•
E-Series	5. 4L	2V	2007 MY	PCM	•	•	•	•
E-Series	5. 4L	2V	2007 MY	RCM	•	•	•	0
E-Series	5. 4L	2V	2007 MY	VSM	•	•	•	•
E-Series	5. 4L	2V	2008 MY	ABS	•	•	•	•
E-Series	5. 4L	2V	2008 MY	IC	•	•	•	•
E-Series	5. 4L	2V	2008 MY	PAM	•	•	•	•
E-Series	5. 4L	2V	2008 MY	PCM	•	•	•	•
E-Series	5. 4L	2V	2008 MY	RCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
E-Series	5. 4L	2V	2008 MY	VSM	•	•	•	•
E-Series	5. 4L	2V	2009 MY	ABS	•	•	•	•
E-Series	5. 4L	2V	2009 MY	ACM	•	•	•	•
E-Series	5. 4L	2V	2009 MY	GEM / SJB	•	•	•	•
E-Series	5. 4L	2V	2009 MY	IPC	•	•	•	•
E-Series	5. 4L	2V	2009 MY	PAM	•	•	•	•
E-Series	5. 4L	2V	2009 MY	PCM	•	•	•	•
E-Series	5. 4L	2V	2009 MY	RCM	•	•	•	0
E-Series	5. 4L	2V	2009 MY	TBC	•	•	•	0
E-Series	5. 4L	2V	2010 MY	ABS	•	•	•	•
E-Series	5. 4L	2V	2010 MY	ACM	•	•	•	•
E-Series	5. 4L	2V	2010 MY	GEM / SJB	•	•	•	•
E-Series	5. 4L	2V	2010 MY	GPSM	•	•	•	0
E-Series	5. 4L	2V	2010 MY	IPC	•	•	•	•
E-Series	5. 4L	2V	2010 MY	PAM	•	•	•	•
E-Series	5. 4L	2V	2010 MY	PCM	•	•	•	•
E-Series	5. 4L	2V	2010 MY	RCM	•	•	•	0
E-Series	5. 4L	2V	2010 MY	SDARS	•	•	•	
E-Series	5. 4L	2V	2010 MY	TBC	•	•	•	0
E-Series	5. 4L	BIF	1999 MY	ABS/TCS	•	•	•	•
E-Series	5. 4L	BIF	1999 MY	AFCM	•	•	•	0
E-Series	5. 4L	BIF	1999 MY	ECS	•	•	•	
E-Series	5. 4L	BIF	1999 MY	PCM	•	•	•	•
E-Series	5. 4L	NGV	1997 MY	ABS/TCS	•	•	•	•
E-Series	5. 4L	NGV	1997 MY	ECS	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
E-Series	5. 4L	NGV	1997 MY	PCM	•	•	•	•
E-Series	5. 4L	NGV	1998 MY	ABS/TCS	•	•	•	•
E-Series	5. 4L	NGV	1998 MY	ECS	•	•	•	
E-Series	5. 4L	NGV	1998 MY	FIM	•	•	•	0
E-Series	5. 4L	NGV	1998 MY	PCM	•	•	•	•
E-Series	5. 4L	NGV	1999 MY	ABS/TCS	•	•	•	•
E-Series	5. 4L	NGV	1999 MY	ECS	•	•	•	
E-Series	5. 4L	NGV	1999 MY	FIM	•	•	•	0
E-Series	5. 4L	NGV	1999 MY	PCM	•	•	•	•
E-Series	5. 4L	NGV	2000 MY	ABS/TCS	•	•	•	•
E-Series	5. 4L	NGV	2000 MY	ECS	•	•	•	
E-Series	5. 4L	NGV	2000 MY	FIM	•	•	•	0
E-Series	5. 4L	NGV	2000 MY	PCM	•	•	•	•
E-Series	5. 4L	Other	1997 MY	ABS/TCS	•	•	•	•
E-Series	5. 4L	Other	1997 MY	ECS	•	•	•	
E-Series	5. 4L	Other	1997 MY	PCM	•	•	•	•
E-Series	5. 4L	Other	1998 MY	ABS/TCS	•	•	•	•
E-Series	5. 4L	Other	1998 MY	ECS	•	•	•	
E-Series	5. 4L	Other	1998 MY	PCM	•	•	•	•
E-Series	5. 4L	Other	1999 MY	ABS/TCS	•	•	•	•
E-Series	5. 4L	Other	1999 MY	ECS	•	•	•	
E-Series	5. 4L	Other	1999 MY	PCM	•	•	•	•
E-Series	5. 4L	Other	2000 MY	ABS/TCS	•	•	•	•
E-Series	5. 4L	Other	2000 MY	ECS	•	•	•	
E-Series	5. 4L	Other	2000 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
E-Series	5. 4L	Other	2002 MY	ABS/TCS	•	•	•	•
E-Series	5. 4L	Other	2002 MY	AFCM	•	•	•	0
E-Series	5. 4L	Other	2002 MY	ECS	•	•	•	
E-Series	5. 4L	Other	2002 MY	FIM	•	•	•	0
E-Series	5. 4L	Other	2002 MY	PCM	•	•	•	•
E-Series	5. 4L	Other	2003 MY	ABS/TCS	•	•	•	•
E-Series	5. 4L	Other	2003 MY	AFCM	•	•	•	0
E-Series	5. 4L	Other	2003 MY	ECS	•	•	•	
E-Series	5. 4L	Other	2003 MY	FIM	•	•	•	0
E-Series	5. 4L	Other	2003 MY	PCM		•		
E-Series	5.8L	Other	1996 MY	ABS/TCS	•	•	•	0
E-Series	5.8L	Other	1996 MY	PCM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2004 MY	ABS/TCS	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2004 MY	IC	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2004 MY	PCM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2004 MY	RAP	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2004 MY	RCM	•	•	•	0
E-Series	6. 0L	Direct Injection - Turbo	2004 MY	TCM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2005 MY	ABS/TCS	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2005 MY	IC	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2005 MY	PCM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2005 MY	RAP	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2005 MY	RCM	•	•	•	0
E-Series	6. 0L	Direct Injection - Turbo	2005 MY	TCM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2006 MY	ABS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
E-Series	6. 0L	Direct Injection - Turbo	2006 MY	ABS/TCS	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2006 MY	IC	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2006 MY	PCM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2006 MY	RAP	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2006 MY	RCM	•	•	•	0
E-Series	6. 0L	Direct Injection - Turbo	2006 MY	TCM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2007 MY	ABS	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2007 MY	ABS/TCS	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2007 MY	IC	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2007 MY	PAM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2007 MY	PCM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2007 MY	RCM	•	•	•	0
E-Series	6. 0L	Direct Injection - Turbo	2007 MY	TCM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2007 MY	VSM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2008 MY	ABS	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2008 MY	IC	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2008 MY	PAM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2008 MY	PCM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2008 MY	RCM	•	•	•	0
E-Series	6. 0L	Direct Injection - Turbo	2008 MY	TCM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2008 MY	VSM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2009 MY	ABS	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2009 MY	ACM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2009 MY	GEM / SJB	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2009 MY	IPC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
E-Series	6. 0L	Direct Injection - Turbo	2009 MY	PAM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2009 MY	PCM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2009 MY	RCM	•	•	•	0
E-Series	6. 0L	Direct Injection - Turbo	2009 MY	TBC	•	•	•	0
E-Series	6. 0L	Direct Injection - Turbo	2009 MY	TCM		•	•	•
E-Series	6.0L	Direct Injection - Turbo	2010 MY	ABS	•	•	•	•
E-Series	6.0L	Direct Injection - Turbo	2010 MY	ACM	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2010 MY	GEM / SJB	•	•	•	•
E-Series	6. 0L	Direct Injection - Turbo	2010 MY	GPSM	•	•	•	0
E-Series	6.0L	Direct Injection - Turbo	2010 MY	IPC	•	•	•	•
E-Series	6.0L	Direct Injection - Turbo	2010 MY	PAM	•	•	•	•
E-Series	6.0L	Direct Injection - Turbo	2010 MY	PCM	•	•	•	•
E-Series	6.0L	Direct Injection - Turbo	2010 MY	RCM	•	•	•	0
E-Series	6. 0L	Direct Injection - Turbo	2010 MY	SDARS	•	•	•	
E-Series	6. 0L	Direct Injection - Turbo	2010 MY	TBC	•	•	•	0
E-Series	6. 0L	Direct Injection - Turbo	2010 MY	TCM		•	•	•
E-Series	6.8L	2V	2004 MY	ABS/TCS		•	•	•
E-Series	6.8L	2V	2004 MY	IC	•	•	•	•
E-Series	6.8L	2V	2004 MY	PCM	•	•	•	•
E-Series	6.8L	2V	2004 MY	RAP	•	•	•	•
E-Series	6.8L	2V	2004 MY	RCM		•	•	0
E-Series	6.8L	2V	2005 MY	ABS/TCS		•	•	•
E-Series	6.8L	2V	2005 MY	IC	•	•	•	•
E-Series	6.8L	2V	2005 MY	PCM	•	•	•	•
E-Series	6.8L	2V	2005 MY	RAP	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
E-Series	6. 8L	2V	2005 MY	RCM	•	•	•	0
E-Series	6. 8L	2V	2006 MY	ABS	•	•	•	•
E-Series	6. 8L	2V	2006 MY	ABS/TCS	•	•	•	•
E-Series	6. 8L	2V	2006 MY	IC	•	•	•	•
E-Series	6. 8L	2V	2006 MY	PCM	•	•	•	•
E-Series	6. 8L	2V	2006 MY	RAP	•	•	•	•
E-Series	6.8L	2V	2006 MY	RCM	•	•	•	0
E-Series	6. 8L	2V	2007 MY	ABS	•	•	•	•
E-Series	6. 8L	2V	2007 MY	ABS/TCS	•	•	•	•
E-Series	6. 8L	2V	2007 MY	IC	•	•	•	•
E-Series	6. 8L	2V	2007 MY	PAM	•	•	•	•
E-Series	6. 8L	2V	2007 MY	PCM	•	•	•	•
E-Series	6. 8L	2V	2007 MY	RCM	•	•	•	0
E-Series	6. 8L	2V	2007 MY	VSM	•	•	•	•
E-Series	6. 8L	2V	2008 MY	ABS	•	•	•	•
E-Series	6. 8L	2V	2008 MY	IC	•	•	•	•
E-Series	6. 8L	2V	2008 MY	PAM	•	•	•	•
E-Series	6. 8L	2V	2008 MY	PCM	•	•	•	•
E-Series	6. 8L	2V	2008 MY	RCM	•	•	•	0
E-Series	6. 8L	2V	2008 MY	VSM	•	•	•	•
E-Series	6. 8L	2V	2009 MY	ABS	•	•	•	•
E-Series	6. 8L	2V	2009 MY	ACM	•	•	•	•
E-Series	6. 8L	2V	2009 MY	GEM / SJB	•	•	•	•
E-Series	6. 8L	2V	2009 MY	IPC	•	•	•	•
E-Series	6. 8L	2V	2009 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
E-Series	6.8L	2V	2009 MY	PCM	•	•	•	•
E-Series	6.8L	2V	2009 MY	RCM	•	•	•	0
E-Series	6.8L	2V	2009 MY	TBC	•	•	•	0
E-Series	6.8L	2V	2010 MY	ABS	•		•	•
E-Series	6.8L	2V	2010 MY	ACM	•		•	•
E-Series	6.8L	2V	2010 MY	GEM / SJB	•		•	•
E-Series	6.8L	2V	2010 MY	GPSM	•		•	0
E-Series	6.8L	2V	2010 MY	IPC	•	•	•	•
E-Series	6.8L	2V	2010 MY	PAM	•		•	•
E-Series	6.8L	2V	2010 MY	PCM	•	•	•	•
E-Series	6.8L	2V	2010 MY	RCM	•		•	0
E-Series	6.8L	2V	2010 MY	SDARS	•		•	
E-Series	6.8L	2V	2010 MY	TBC	•		•	0
E-Series	6.8L	Other	1997 MY	ABS/TCS	•		•	•
E-Series	6.8L	Other	1997 MY	ECS	•		•	
E-Series	6.8L	Other	1997 MY	PCM	•		•	•
E-Series	6.8L	Other	1998 MY	ABS/TCS	•		•	•
E-Series	6.8L	Other	1998 MY	ECS	•	•	•	
E-Series	6.8L	Other	1998 MY	PCM	•		•	•
E-Series	6.8L	Other	1999 MY	ABS/TCS	•		•	•
E-Series	6.8L	Other	1999 MY	ECS	•		•	
E-Series	6.8L	Other	1999 MY	PCM	•		•	
E-Series	6.8L	Other	2000 MY	ABS/TCS	•		•	•
E-Series	6.8L	Other	2000 MY	ECS	•		•	
E-Series	6.8L	Other	2000 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
E-Series	6.8L	Other	2002 MY	ABS/TCS	•	•	•	•
E-Series	6.8L	Other	2002 MY	ECS	•	•	•	
E-Series	6.8L	Other	2002 MY	PCM	•	•	•	•
E-Series	6.8L	Other	2003 MY	ABS/TCS	•	•	•	•
E-Series	6.8L	0ther	2003 MY	ECS	•	•	•	
E-Series	6.8L	0ther	2003 MY	PCM	•	•	•	•
E-Series	7. 3L	Direct Injection - Turbo	1995 MY	ABS/TCS	•	•	•	0
E-Series	7. 3L	Direct Injection - Turbo	1995 MY	PCM	•	•	•	•
E-Series	7. 3L	Direct Injection - Turbo	1996 MY	ABS/TCS	•	•	•	0
E-Series	7. 3L	Direct Injection - Turbo	1996 MY	PCM	•	•	•	•
E-Series	7. 3L	Direct Injection - Turbo	1997 MY	ABS/TCS	•	•	•	•
E-Series	7. 3L	Direct Injection - Turbo	1997 MY	ECS	•	•	•	
E-Series	7. 3L	Direct Injection - Turbo	1997 MY	PCM	•	•	•	•
E-Series	7. 3L	Direct Injection - Turbo	1998 MY	ABS/TCS	•	•	•	•
E-Series	7. 3L	Direct Injection - Turbo	1998 MY	ECS	•	•	•	
E-Series	7. 3L	Direct Injection - Turbo	1998 MY	PCM	•	•	•	•
E-Series	7. 3L	Direct Injection - Turbo	1999 MY	ABS/TCS	•	•	•	•
E-Series	7. 3L	Direct Injection - Turbo	1999 MY	ECS	•	•	•	
E-Series	7. 3L	Direct Injection - Turbo	1999 MY	PCM	•	•	•	•
E-Series	7. 3L	Direct Injection - Turbo	2000 MY	ABS/TCS	•	•	•	•
E-Series	7. 3L	Direct Injection - Turbo	2000 MY	ECS	•	•	•	
E-Series	7. 3L	Direct Injection - Turbo	2000 MY	PCM	•	•	•	•
E-Series	7. 3L	Direct Injection - Turbo	2002 MY	ABS/TCS	•	•	•	•
E-Series	7. 3L	Direct Injection - Turbo	2002 MY	ECS	•	•	•	
E-Series	7. 3L	Direct Injection - Turbo	2002 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
E-Series	7. 3L	Direct Injection - Turbo	2003 MY	ABS/TCS	•	•	•	•
E-Series	7. 3L	Direct Injection - Turbo	2003 MY	ECS	•	•	•	
E-Series	7. 3L	Direct Injection - Turbo	2003 MY	PCM	•	•	•	•
E-Series	7. 5L	Other	1996 MY	ABS/TCS	•	•	•	0
E-Series	7. 5L	Other	1996 MY	PCM	•		•	•
E-Series Shuttle Bus	6.8L	H2ICE	2006 MY	ABS/TCS	•	•	•	•
E-Series Shuttle Bus	6.8L	H2ICE	2006 MY	AFCM	•	•	•	•
E-Series Shuttle Bus	6.8L	H2ICE	2006 MY	EMM	•		•	•
E-Series Shuttle Bus	6.8L	H2ICE	2006 MY	IC	•		•	•
E-Series Shuttle Bus	6.8L	H2ICE	2006 MY	PCM	•		•	•
E-Series Shuttle Bus	6.8L	H2ICE	2006 MY	RCM	•		•	0
Econovan	2. 0L	ОНС	2008 MY	PCM	•		•	•
EcoSport	1. 0L	Zetec Rocam	2003.25 MY	ABS/TCS	•	•	•	•
EcoSport	1. 0L	Zetec Rocam	2003.25 MY	GEM	•		•	•
EcoSport	1. 0L	Zetec Rocam	2003.25 MY	IC	•		•	•
EcoSport	1. 0L	Zetec Rocam	2003.25 MY	PCM	•		•	•
EcoSport	1. 0L	Zetec Rocam	2003.25 MY	RCM	•		•	•
EcoSport	1. 0L	Zetec Rocam	2003.25 MY	RKE	•	•	•	•
EcoSport	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	ABS/TCS	•	•	•	•
EcoSport	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	GEM	•	•	•	•
EcoSport	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	IC	•	•	•	•
EcoSport	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	PCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
EcoSport	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	RCM	•	•	•	•
EcoSport	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	RKE	•	•	•	•
EcoSport	1. 6L	FFV	2003.25 MY	ABS/TCS	•	•	•	•
EcoSport	1. 6L	FFV	2003.25 MY	GEM	•	•	•	•
EcoSport	1.6L	FFV	2003.25 MY	IC	•	•	•	•
EcoSport	1.6L	FFV	2003.25 MY	PCM	•	•	•	•
EcoSport	1.6L	FFV	2003.25 MY	RCM	•	•	•	•
EcoSport	1. 6L	FFV	2003.25 MY	RKE	•	•	•	•
EcoSport	1. 6L	FFV	2006 MY	ABS/TCS	•	•	•	•
EcoSport	1. 6L	FFV	2006 MY	GEM	•	•	•	•
EcoSport	1. 6L	FFV	2006 MY	IC	•	•	•	•
EcoSport	1. 6L	FFV	2006 MY	PCM	•	•	•	•
EcoSport	1. 6L	FFV	2006 MY	RCM	•	•	•	•
EcoSport	1. 6L	FFV	2006 MY	RKE	•	•	•	•
EcoSport	1. 6L	FFV	2009 MY	ABS/TCS	•	•	•	•
EcoSport	1. 6L	FFV	2009 MY	IC	•	•	•	•
EcoSport	1. 6L	FFV	2009 MY	PCM	•	•	•	•
EcoSport	1. 6L	FFV	2009 MY	RCM	•	•	•	•
EcoSport	1. 6L	FFV	2009 MY	RKE	•	•	•	•
EcoSport	1. 6L	FFV	2011 MY	ABS/TCS	•	•	•	•
EcoSport	1. 6L	FFV	2011 MY	IC	•	•	•	•
EcoSport	1. 6L	FFV	2011 MY	PCM	•	•	•	•
EcoSport	1. 6L	FFV	2011 MY	RCM	•	•	•	•
EcoSport	1. 6L	FFV	2011 MY	RKE	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
EcoSport	1.6L	Zetec Rocam	2003.25 MY	ABS/TCS	•	•	•	•
EcoSport	1.6L	Zetec Rocam	2003.25 MY	GEM	•	•	•	•
EcoSport	1. 6L	Zetec Rocam	2003.25 MY	IC	•	•	•	•
EcoSport	1. 6L	Zetec Rocam	2003.25 MY	PCM	•	•	•	•
EcoSport	1. 6L	Zetec Rocam	2003.25 MY	RCM	•	•	•	•
EcoSport	1. 6L	Zetec Rocam	2003.25 MY	RKE	•	•	•	•
EcoSport	1. 6L	Zetec Rocam	2009 MY	ABS/TCS	•	•	•	•
EcoSport	1. 6L	Zetec Rocam	2009 MY	IC	•	•	•	•
EcoSport	1. 6L	Zetec Rocam	2009 MY	PCM	•	•	•	•
EcoSport	1. 6L	Zetec Rocam	2009 MY	RCM	•	•	•	•
EcoSport	1. 6L	Zetec Rocam	2009 MY	RKE	•	•	•	•
EcoSport	2. 0L	DURATEC-HE / I4	2003.25 MY	ABS/TCS	•	•	•	•
EcoSport	2. 0L	DURATEC-HE / I4	2003.25 MY	GEM	•	•	•	•
EcoSport	2. 0L	DURATEC-HE / I4	2003.25 MY	IC	•	•	•	•
EcoSport	2. 0L	DURATEC-HE / I4	2003.25 MY	PCM	•	•	•	•
EcoSport	2. 0L	DURATEC-HE / I4	2003.25 MY	RCM	•	•	•	•
EcoSport	2. 0L	DURATEC-HE / I4	2003.25 MY	RKE	•	•	•	•
EcoSport	2. 0L	DURATEC-HE / I4	2006 MY	ABS/TCS	•	•	•	•
EcoSport	2. 0L	DURATEC-HE / I4	2006 MY	GEM	•	•	•	•
EcoSport	2. 0L	DURATEC-HE / I4	2006 MY	IC	•	•	•	•
EcoSport	2. 0L	DURATEC-HE / I4	2006 MY	PCM	•	•	•	•
EcoSport	2. 0L	DURATEC-HE / I4	2006 MY	RCM	•	•	•	•
EcoSport	2. 0L	DURATEC-HE / I4	2006 MY	RKE	•	•	•	•
EcoSport	2. 0L	DURATEC-HE / I4	2007 MY	ABS/TCS	•	•	•	•
EcoSport	2. 0L	DURATEC-HE / I4	2007 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
EcoSport	2. 0L	DURATEC-HE / I4	2007 MY	PCM	•	•	•	•
EcoSport	2. 0L	DURATEC-HE / I4	2007 MY	RCM	•	•	•	•
EcoSport	2. 0L	DURATEC-HE / I4	2007 MY	RKE	•	•	•	•
EcoSport	2. 0L	FFV	2009 MY	ABS/TCS	•	•	•	•
EcoSport	2. 0L	FFV	2009 MY	IC	•	•	•	•
EcoSport	2. 0L	FFV	2009 MY	PCM	•	•	•	•
EcoSport	2. 0L	FFV	2009 MY	RCM	•	•	•	•
EcoSport	2. 0L	FFV	2009 MY	RKE	•	•	•	•
EcoSport	2. 0L	FFV	2009 MY	TCM	•	•	•	0
EcoSport	2. 0L	Zetec Rocam	2009 MY	ABS/TCS	•	•	•	•
EcoSport	2. 0L	Zetec Rocam	2009 MY	IC	•	•	•	•
EcoSport	2. 0L	Zetec Rocam	2009 MY	PCM	•	•	•	•
EcoSport	2. 0L	Zetec Rocam	2009 MY	RCM	•	•	•	•
EcoSport	2. 0L	Zetec Rocam	2009 MY	RKE	•	•	•	•
EcoSport	2. 0L	Zetec Rocam	2009 MY	TCM	•	•	•	0
Edge	3. 5L	4V	2007 MY	4X4	•	•	•	•
Edge	3. 5L	4V	2007 MY	ABS	•	•	•	
Edge	3. 5L	4V	2007 MY	ACM	•	•	•	•
Edge	3. 5L	4V	2007 MY	DSM	•	•	•	•
Edge	3. 5L	4V	2007 MY	EATC	•	•	•	•
Edge	3. 5L	4V	2007 MY	GEM	•	•	•	
Edge	3. 5L	4V	2007 MY	IC	•	•	•	
Edge	3. 5L	4V	2007 MY	OCSM	•	•	•	
Edge	3. 5L	4V	2007 MY	PAM	•	•	•	•
Edge	3. 5L	4V	2007 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Edge	3. 5L	4V	2007 MY	RCM	•	•	•	
Edge	3. 5L	4V	2007 MY	RETM	•	•	•	0
Edge	3. 5L	4V	2007 MY	SASM	•	•	•	0
Edge	3. 5L	4V	2007 MY	SDARS	•	•	•	•
Edge	3. 5L	4V	2008 MY	4X4	•	•	•	•
Edge	3. 5L	4V	2008 MY	ABS	•	•	•	•
Edge	3. 5L	4V	2008 MY	ACM	•	•	•	•
Edge	3. 5L	4V	2008 MY	APIM	•	•	•	0
Edge	3. 5L	4V	2008 MY	DSM	•	•	•	•
Edge	3. 5L	4V	2008 MY	GEM / SJB	•	•	•	•
Edge	3. 5L	4V	2008 MY	HVAC	•	•	•	•
Edge	3. 5L	4V	2008 MY	IC	•	•	•	•
Edge	3. 5L	4V	2008 MY	LTM	•	•	•	0
Edge	3. 5L	4V	2008 MY	OCSM	•	•	•	
Edge	3. 5L	4V	2008 MY	PAM	•	•	•	•
Edge	3. 5L	4V	2008 MY	PCM	•	•	•	•
Edge	3. 5L	4V	2008 MY	RCM	•	•	•	
Edge	3. 5L	4V	2008 MY	RETM	•	•	•	0
Edge	3. 5L	4V	2008 MY	SASM	•	•	•	0
Edge	3. 5L	4V	2008 MY	SDARS	•	•	•	•
Edge	3. 5L	4V	2009 MY	4X4	•	•	•	•
Edge	3. 5L	4V	2009 MY	ABS	•	•	•	•
Edge	3. 5L	4V	2009 MY	ACM	•	•	•	
Edge	3. 5L	4V	2009 MY	ACM	•	•	•	0
Edge	3. 5L	4V	2009 MY	APIM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Edge	3.5L	4V	2009 MY	DSM	•	•	•	•
Edge	3. 5L	4V	2009 MY	GEM / SJB	•	•	•	•
Edge	3. 5L	4V	2009 MY	HVAC	•	•	•	•
Edge	3. 5L	4V	2009 MY	IC	•	•	•	•
Edge	3. 5L	4V	2009 MY	LTM	•			0
Edge	3. 5L	4V	2009 MY	OCSM	•	•	•	
Edge	3. 5L	4V	2009 MY	PAM	•	•	•	•
Edge	3. 5L	4V	2009 MY	PCM	•			•
Edge	3. 5L	4V	2009 MY	RCM	•		•	
Edge	3. 5L	4V	2009 MY	RETM	•			0
Edge	3. 5L	4V	2009 MY	SASM	•			0
Edge	3. 5L	4V	2009 MY	SDARS	•			•
Edge	3. 5L	4V	2010 MY	4X4	•	•	•	•
Edge	3. 5L	4V	2010 MY	ABS	•		•	•
Edge	3. 5L	4V	2010 MY	ACM	•			
Edge	3. 5L	4V	2010 MY	ACM	•			0
Edge	3. 5L	4V	2010 MY	APIM	•			0
Edge	3. 5L	4V	2010 MY	DSM	•			•
Edge	3. 5L	4V	2010 MY	GEM / SJB	•	•	•	•
Edge	3. 5L	4V	2010 MY	GPSM	•	•	•	0
Edge	3. 5L	4V	2010 MY	HVAC	•	•	•	•
Edge	3. 5L	4V	2010 MY	IC	•	•	•	
Edge	3. 5L	4V	2010 MY	LTM	•	•	•	0
Edge	3. 5L	4V	2010 MY	OCSM	•	•	•	0
Edge	3. 5L	4V	2010 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Edge	3. 5L	4V	2010 MY	PCM	•	•	•	•
Edge	3.5L	4V	2010 MY	RCM	•	•	•	
Edge	3.5L	4V	2010 MY	RETM	•	•	•	0
Edge	3. 5L	4V	2010 MY	SASM	•	•	•	0
Edge	3. 5L	4V	2010 MY	SDARS	•	•	•	•
Edge	3.5L	4V	2011 MY	ACM	•	•	•	0
Edge	3.5L	4V	2011 MY	APIM	•	•	•	0
Edge	3. 5L	4V	2011 MY	DSM	•	•	•	•
Edge	3. 5L	4V	2011 MY	DSP	•	•	•	0
Edge	3.5L	4V	2011 MY	FCDIM	•	•	•	
Edge	3.5L	4V	2011 MY	FCIM	•	•	•	
Edge	3.5L	4V	2011 MY	GPSM	•	•	•	0
Edge	3.5L	4V	2011 MY	HUD	•	•	•	0
Edge	3.5L	4V	2011 MY	IPC	•	•	•	•
Edge	3.5L	4V	2011 MY	OCSM	•	•	•	0
Edge	3.5L	4V	2011 MY	PCM	•	•	•	•
Edge	3.5L	4V	2011 MY	RCM	•	•	•	0
Edge	3.5L	4V	2011 MY	RFA	•	•	•	•
Edge	3.5L	4V	2011 MY	SCCM	•	•	•	0
Edge	3.7L	4V	2011 MY	ACM	•	•	•	0
Edge	3.7L	4V	2011 MY	APIM	•	•	•	0
Edge	3. 7L	4V	2011 MY	DSM	•		•	
Edge	3. 7L	4V	2011 MY	DSP	•	•	•	0
Edge	3. 7L	4V	2011 MY	FCDIM	•	•	•	•
Edge	3. 7L	4V	2011 MY	FCIM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Edge	3. 7L	4V	2011 MY	GPSM	•	•	•	0
Edge	3. 7L	4V	2011 MY	HUD	•	•	•	0
Edge	3. 7L	4V	2011 MY	IPC	•		•	•
Edge	3. 7L	4V	2011 MY	OCSM	•	•	•	0
Edge	3. 7L	4V	2011 MY	PCM	•	•	•	•
Edge	3. 7L	4V	2011 MY	RCM	•	•	•	0
Edge	3. 7L	4V	2011 MY	RFA	•	•	•	•
Edge	3. 7L	4V	2011 MY	SCCM	•	•	•	0
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2005 MY	4X4	•	•	•	•
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2005 MY	ABS	•	•	•	•
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2005 MY	BCM	•	•	•	
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2005 MY	EPS	•	•	•	0
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2005 MY	GEM	•	•	•	•
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2005 MY	IC	•	•	•	
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2005 MY	PAM	•	•	•	0
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2005 MY	PCM	•	•	•	•
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2005 MY	RCM	•	•	•	•
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2005 MY	TCM	•	•	•	0
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2006 MY	4X4	•		•	•
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2006 MY	ABS	•		•	•
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2006 MY	BCM	•		•	
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2006 MY	EPS	•		•	0
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2006 MY	GEM	•	•	•	•
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2006 MY	IC	•	•	•	
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2006 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2006 MY	PCM	•	•	•	•
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2006 MY	RCM	•	•	•	•
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2006 MY	TCM	•	•	•	0
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2007 MY	4X4	•	•	•	•
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2007 MY	ABS	•	•	•	•
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2007 MY	BCM	•	•	•	
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2007 MY	EPS	•	•	•	0
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2007 MY	GEM	•	•	•	•
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2007 MY	IC	•	•	•	
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2007 MY	PAM	•	•	•	•
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2007 MY	PCM	•	•	•	•
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2007 MY	RCM	•	•	•	•
Escape / Marine Hybrid	2. 3L	HEV / ATKINSON 4V	2007 MY	TCM	•	•	•	0
Escape / Tribute (2006/4 -)	2. 3L	L3	2006 MY	ABS	•	•	•	•
Escape / Tribute (2006/4 -)	2. 3L	L3	2006 MY	GEM	•	•	•	•
Escape / Tribute (2006/4 -)	2. 3L	L3	2006 MY	IC	•	•	•	0
Escape / Tribute (2006/4 -)	2. 3L	L3	2006 MY	PCM	•	•	•	•
Escape / Tribute (2006/4 -)	2. 3L	L3	2006 MY	RCM	•	•	•	•
Escape / Tribute (2006/3)	2. 3L	L3	2003 MY	ABS	•	•	•	•
Escape / Tribute (2006/3)	2. 3L	L3	2003 MY	GEM	•	•	•	•
Escape / Tribute (2006/3)	2. 3L	L3	2003 MY	IC		•	•	0
Escape / Tribute (2006/3)	2. 3L	L3	2003 MY	PCM	•	•	•	
Escape / Tribute (2006/3)	2. 3L	L3	2003 MY	RCM	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2001 MY	ABS/TCS	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2001 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Escape / Tribute / Maverick	2. 0L	Zetec	2001 MY	IC	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2001 MY	PCM	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2001 MY	RCM	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2002 MY	ABS/TCS	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2002 MY	GEM	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2002 MY	IC	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2002 MY	PCM	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2002 MY	RCM	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2003 MY	ABS/TCS	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2003 MY	GEM	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2003 MY	IC	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2003 MY	PAM	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2003 MY	PCM	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2003 MY	RCM	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2004 MY	ABS/TCS	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2004 MY	GEM	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2004 MY	IC	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2004 MY	PAM	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2004 MY	PCM	•	•	•	•
Escape / Tribute / Maverick	2. 0L	Zetec	2004 MY	RCM	•	•	•	•
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 MY	4X4	•	•	•	•
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 MY	ABS	•	•	•	•
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 MY	GEM	•	•	•	•
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 MY	IC	•	•	•	•
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 MY	PCM	•	•	•	•
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2006 MY	RCM	•	•	•	•
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2007 MY	4X4	•	•	•	•
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2007 MY	ABS	•	•	•	•
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2007 MY	GEM	•	•	•	•
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2007 MY	IC	•	•	•	•
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2007 MY	PAM	•	•	•	•
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2007 MY	PCM	•	•	•	•
Escape / Tribute / Maverick	2. 3L	DURATEC-HE / I4	2007 MY	RCM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2001 MY	ABS/TCS	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2001 MY	GEM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2001 MY	IC	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2001 MY	PCM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2001 MY	RCM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2002 MY	ABS/TCS	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2002 MY	GEM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2002 MY	IC	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2002 MY	PCM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2002 MY	RCM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2003 MY	ABS/TCS	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2003 MY	GEM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2003 MY	IC	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2003 MY	PAM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2003 MY	PCM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2003 MY	RCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Escape / Tribute / Maverick	3. 0L	4V	2004 MY	ABS/TCS	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2004 MY	GEM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2004 MY	IC	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2004 MY	PAM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2004 MY	PCM		•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2004 MY	RCM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2006 MY	4X4	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2006 MY	ABS	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2006 MY	GEM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2006 MY	IC	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2006 MY	PAM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2006 MY	PCM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2006 MY	RCM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2007 MY	4X4	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2007 MY	ABS	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2007 MY	GEM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2007 MY	IC	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2007 MY	PAM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2007 MY	PCM	•	•	•	•
Escape / Tribute / Maverick	3. 0L	4V	2007 MY	RCM	•	•	•	•
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008 MY	4X4	•	•	•	•
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008 MY	ABS		•	•	•
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008 MY	ACM	•	•	•	•
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008 MY	FCIM	•	•	•	•
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008 MY	FDIM		•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008 MY	GEM / SJB	•	•	•	•
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008 MY	HVAC	•	•	•	•
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008 MY	IC	•	•	•	•
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008 MY	OCSM	•	•	•	0
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008 MY	PAM	•	•	•	•
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008 MY	PCM	•	•	•	
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008 MY	RCM	•	•	•	
Escape_/Tribute / Mariner	2. 3L	DURATEC-HE / I4	2008 MY	SDARS	•	•	•	•
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008 MY	4X4	•	•	•	•
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008 MY	ABS	•	•	•	
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008 MY	ACM	•	•	•	
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008 MY	BCM	•	•	•	
Escape_/Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008 MY	FCIM	•	•	•	•
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008 MY	FDIM	•	•	•	•
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008 MY	GEM / SJB	•	•	•	•
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008 MY	HVAC	•	•	•	
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008 MY	IC	•	•	•	
Escape_/Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008 MY	OCSM	•	•	•	0
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008 MY	PAM	•	•	•	•
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008 MY	PCM	•	•	•	•
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008 MY	RCM	•	•	•	
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008 MY	SDARS	•	•	•	
Escape_/Tribute / Mariner	2. 3L	HEV / ATKINSON 4V	2008 MY	TCM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 MY	4X4	•	•	•	
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 MY	ABS	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 MY	ACM	•	•	•	
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 MY	ACM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 MY	APIM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 MY	FCIM	•	•	•	•
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 MY	FDIM	•	•	•	
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 MY	GEM / SJB	•	•	•	•
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 MY	HVAC	•	•	•	•
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 MY	IC	•	•	•	•
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 MY	OCSM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 MY	PAM	•	•	•	•
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 MY	PCM	•	•	•	•
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 MY	RCM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 MY	SDARS	•	•	•	•
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2010 MY	4X4	•	•	•	•
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2010 MY	ABS	•	•	•	•
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2010 MY	ACM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2010 MY	APIM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2010 MY	FCIM	•	•	•	•
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2010 MY	FDIM	•	•	•	•
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2010 MY	GEM / SJB	•	•	•	•
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2010 MY	GPSM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2010 MY	HVAC	•	•	•	•
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2010 MY	IC	•	•	•	•
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2010 MY	OCSM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2010 MY	PAM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2010 MY	PCM	•	•	•	•
Escape_/Tribute / Mariner	2.5L	DURATEC-HE / I4	2010 MY	RCM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	4X4	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	ABS	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	ACM	•	•	•	
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	ACM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	APIM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	BCM	•	•	•	
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	FCIM	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	FDIM	•	•	•	
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	GEM / SJB	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	HVAC	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	IC	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	OCSM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	PAM	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	PCM	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	RCM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	SDARS	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 MY	TCM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 MY	4X4	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 MY	ABS	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 MY	ACCM#2	•	•	•	0
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 MY	ACM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 MY	APIM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 MY	BCM	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Escape /Tribute / Mariner	2. 5L	HEV / ATKINSON 4V	2010 MY	FCIM	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 MY	FDIM	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 MY	GEM / SJB	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 MY	GPSM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 MY	HVAC	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 MY	IC	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 MY	OCSM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 MY	PAM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 MY	PCM	•	•	•	•
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 MY	RCM	•	•	•	0
Escape_/Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 MY	TCM	•	•	•	0
Escape_/Tribute / Mariner	3. 0L	4V	2008 MY	4X4	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2008 MY	ABS	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2008 MY	ACM	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2008 MY	FCIM	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2008 MY	FDIM	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2008 MY	GEM / SJB	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2008 MY	HVAC	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2008 MY	IC	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2008 MY	OCSM	•	•	•	0
Escape_/Tribute / Mariner	3. 0L	4V	2008 MY	PAM	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2008 MY	PCM	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2008 MY	RCM	•	•	•	
Escape_/Tribute / Mariner	3. 0L	4V	2008 MY	SDARS	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2009 MY	4X4	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Escape_/Tribute / Mariner	3. 0L	4V	2009 MY	ABS	Codes	Codes	Data	Test
Escape / Tribute / Mariner	3. 0L	4V	2009 MY	ACM	•	•	•	
Escape /Tribute / Mariner	3. 0L	4V	2009 MY	ACM	•	•	•	0
Escape /Tribute / Mariner	3. 0L	4V	2009 MY	APIM	•	•	•	0
Escape_/Tribute / Mariner	3. 0L	4V	2009 MY	FCIM	•	•	•	•
Escape /Tribute / Mariner	3. 0L	4V	2009 MY	FDIM	•	•	•	
Escape /Tribute / Mariner	3. 0L	4V	2009 MY	GEM / SJB	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2009 MY	HVAC	•	•	•	•
Escape /Tribute / Mariner	3. 0L	4V	2009 MY	IC	•	•	•	•
Escape /Tribute / Mariner	3. 0L	4V	2009 MY	OCSM	•	•	•	0
Escape /Tribute / Mariner	3. 0L	4V	2009 MY	PAM	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2009 MY	PCM	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2009 MY	RCM	•	•	•	0
Escape_/Tribute / Mariner	3. 0L	4V	2009 MY	SDARS	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2010 MY	4X4	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2010 MY	ABS	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2010 MY	ACM	•	•	•	0
Escape_/Tribute / Mariner	3. 0L	4V	2010 MY	APIM	•	•	•	0
Escape_/Tribute / Mariner	3. 0L	4V	2010 MY	FCIM	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2010 MY	FDIM	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2010 MY	GEM / SJB	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2010 MY	GPSM	•	•	•	0
Escape_/Tribute / Mariner	3. 0L	4V	2010 MY	HVAC	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2010 MY	IC	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2010 MY	OCSM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Escape_/Tribute / Mariner	3. 0L	4V	2010 MY	PAM	•	•	•	0
Escape_/Tribute / Mariner	3. 0L	4V	2010 MY	PCM	•	•	•	•
Escape_/Tribute / Mariner	3. 0L	4V	2010 MY	RCM	•	•	•	0
Escort	1. 3L	Endura-E	1995.5 MY	ABS	•	•	•	0
Escort	1. 3L	Endura-E	1995.5 MY	ABS/TCS	•		•	•
Escort	1. 3L	Endura-E	1995.5 MY	CSM	•	•	•	0
Escort	1. 3L	Endura-E	1995.5 MY	HEC	•	•	•	•
Escort	1. 3L	Endura-E	1995.5 MY	PATS	•		•	0
Escort	1. 3L	Endura-E	1995.5 MY	PATS	•		0	•
Escort	1. 3L	Endura-E	1995.5 MY	PCM	•		•	•
Escort	1. 3L	Endura-E	1996 MY	ABS/TCS	•		•	•
Escort	1. 3L	Endura-E	1996 MY	CSM	•	•	•	0
Escort	1. 3L	Endura-E	1996 MY	HEC	•	•	•	•
Escort	1. 3L	Endura-E	1996 MY	PATS	•	•	•	0
Escort	1. 3L	Endura-E	1996 MY	PATS	•	•	0	•
Escort	1. 3L	Endura-E	1996 MY	PCM	•	•	•	•
Escort	1. 3L	Endura-E	1997 MY	ABS/TCS	•	•	•	•
Escort	1. 3L	Endura-E	1997 MY	CSM	•	•	•	0
Escort	1. 3L	Endura-E	1997 MY	HEC	•		•	•
Escort	1. 3L	Endura-E	1997 MY	PATS	•		•	0
Escort	1. 3L	Endura-E	1997 MY	PATS	•		0	•
Escort	1. 3L	Endura-E	1997 MY	PCM	•		•	•
Escort	1. 3L	Endura-E	1998 MY	ABS	•	•	•	0
Escort	1. 3L	Endura-E	1998 MY	ABS/TCS	•	•	•	•
Escort	1.3L	Endura-E	1998 MY	CSM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Escort	1. 3L	Endura-E	1998 MY	HEC	•	•	•	•
Escort	1. 3L	Endura-E	1998 MY	PATS	•	•	•	0
Escort	1. 3L	Endura-E	1998 MY	PCM	•	•	•	•
Escort	1.4L	1.4 PT-E SFI	1994 MY	ABS/TCS	•	•	•	•
Escort	1.4L	1.4 PT-E SFI	1994 MY	CSM	•	•	•	0
Escort	1.4L	1.4 PT-E SFI	1994 MY	HEC	•	•	•	•
Escort	1.4L	1.4 PT-E SFI	1994 MY	PATS	•	•	•	0
Escort	1.4L	1.4 PT-E SFI	1994 MY	PATS	•	•	0	•
Escort	1.4L	1.4 PT-E SFI	1994 MY	PCM	•	•	•	•
Escort	1.4L	1.4 PT-E SFI	1994.5 MY	ABS/TCS	•	•	•	•
Escort	1.4L	1.4 PT-E SFI	1994.5 MY	CSM	•	•	•	0
Escort	1.4L	1.4 PT-E SFI	1994.5 MY	HEC	•	•	•	•
Escort	1.4L	1.4 PT-E SFI	1994.5 MY	PATS	•	•	•	0
Escort	1.4L	1.4 PT-E SFI	1994.5 MY	PATS	•	•	0	•
Escort	1.4L	1.4 PT-E SFI	1994.5 MY	PCM	•	•	•	•
Escort	1.4L	1.4 PT-E SFI	1995 MY	ABS	•	•	•	0
Escort	1.4L	1.4 PT-E SFI	1995 MY	ABS/TCS	•	•	•	•
Escort	1.4L	1.4 PT-E SFI	1995 MY	CSM	•	•	•	0
Escort	1.4L	1.4 PT-E SFI	1995 MY	HEC	•	•	•	•
Escort	1.4L	1.4 PT-E SFI	1995 MY	PATS	•	•	•	0
Escort	1.4L	1.4 PT-E SFI	1995 MY	PCM	•	•	•	•
Escort	1. 4L	1.4 PT-E SFI	1997.75 MY	ABS	•	•	•	0
Escort	1. 4L	1.4 PT-E SFI	1997.75 MY	ABS/TCS	•	•	•	•
Escort	1.4L	1.4 PT-E SFI	1997.75 MY	CSM	•	•	•	0
Escort	1.4L	1.4 PT-E SFI	1997.75 MY	HEC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Escort	1.4L	1.4 PT-E SFI	1997.75 MY	PATS	•	•	•	0
Escort	1.4L	1.4 PT-E SFI	1997.75 MY	PATS	•	•	0	•
Escort	1.4L	1.4 PT-E SFI	1997.75 MY	PCM	•	•	•	•
Escort	1.4L	1.4 PT-E SFI	1998 MY	ABS	•	•	•	0
Escort	1.4L	1.4 PT-E SFI	1998 MY	ABS/TCS	•	•	•	•
Escort	1.4L	1.4 PT-E SFI	1998 MY	CSM	•	•	•	0
Escort	1.4L	1.4 PT-E SFI	1998 MY	HEC	•	•	•	•
Escort	1.4L	1.4 PT-E SFI	1998 MY	PATS	•	•	•	0
Escort	1.4L	1.4 PT-E SFI	1998 MY	PCM	•	•	•	•
Escort	1.6L	PT-E	Other	ABS/TCS	•	•	•	•
Escort	1.6L	PT-E	Other	CSM	•	•	•	0
Escort	1.6L	PT-E	Other	HEC	•	•	•	•
Escort	1.6L	PT-E	Other	PATS	•	•	•	0
Escort	1.6L	PT-E	Other	PATS	•	•	0	•
Escort	1.6L	PT-E	Other	PCM	•	•	•	•
Escort	1.6L	Zetec	1993 MY	ABS/TCS	•	•	•	•
Escort	1.6L	Zetec	1993 MY	CSM	•	•	•	0
Escort	1.6L	Zetec	1993 MY	HEC	•	•	•	•
Escort	1.6L	Zetec	1993 MY	PATS	•	•	•	0
Escort	1.6L	Zetec	1993 MY	PATS	•	•	0	•
Escort	1.6L	Zetec	1993 MY	PCM	•	•	•	•
Escort	1.6L	Zetec	1993.5 MY	ABS/TCS	•	•	•	•
Escort	1.6L	Zetec	1993.5 MY	CSM	•	•	•	0
Escort	1.6L	Zetec	1993.5 MY	HEC	•	•	•	•
Escort	1.6L	Zetec	1993.5 MY	PATS	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Escort	1.6L	Zetec	1993.5 MY	PATS	•	•	0	•
Escort	1. 6L	Zetec	1993.5 MY	PCM	•	•	•	•
Escort	1. 6L	Zetec	1994 MY	ABS/TCS	•	•	•	•
Escort	1. 6L	Zetec	1994 MY	CSM	•	•	•	0
Escort	1. 6L	Zetec	1994 MY	HEC	•	•	•	•
Escort	1. 6L	Zetec	1994 MY	PATS	•	•	0	•
Escort	1.6L	Zetec	1994.5 MY	ABS/TCS	•	•	•	•
Escort	1. 6L	Zetec	1994.5 MY	CSM	•	•	•	0
Escort	1. 6L	Zetec	1994.5 MY	HEC	•	•	•	•
Escort	1. 6L	Zetec	1994.5 MY	PATS	•	•	0	•
Escort	1. 6L	Zetec	1995 MY	ABS	•	•	•	0
Escort	1. 6L	Zetec	1995 MY	ABS/TCS	•	•	•	•
Escort	1. 6L	Zetec	1995 MY	CSM	•	•	•	0
Escort	1. 6L	Zetec	1995 MY	HEC	•	•	•	•
Escort	1. 6L	Zetec	1995 MY	PATS	•	•	0	•
Escort	1. 6L	Zetec	1995.5 MY	ABS	•	•	•	0
Escort	1. 6L	Zetec	1995.5 MY	ABS/TCS	•	•	•	•
Escort	1. 6L	Zetec	1995.5 MY	CSM	•	•	•	0
Escort	1. 6L	Zetec	1995.5 MY	HEC	•	•	•	•
Escort	1. 6L	Zetec	1995.5 MY	PATS	•	•	•	0
Escort	1. 6L	Zetec	1995.5 MY	PATS	•	•	0	•
Escort	1. 6L	Zetec	1995.5 MY	PCM	•	•	•	•
Escort	1. 6L	Zetec	1996 MY	ABS/TCS	•	•	•	•
Escort	1. 6L	Zetec	1996 MY	CSM	•	•	•	0
Escort	1. 6L	Zetec	1996 MY	HEC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Escort	1.6L	Zetec	1996 MY	PATS	•	•	•	0
Escort	1. 6L	Zetec	1996 MY	PATS	•	•	0	•
Escort	1. 6L	Zetec	1996 MY	PCM	•	•	•	•
Escort	1. 6L	Zetec	1996.5 MY	ABS	•	•	•	0
Escort	1. 6L	Zetec	1996.5 MY	ABS/TCS	•	•	•	•
Escort	1. 6L	Zetec	1996.5 MY	CSM	•	•	•	0
Escort	1. 6L	Zetec	1996.5 MY	HEC	•	•	•	•
Escort	1. 6L	Zetec	1996.5 MY	PATS	•	•	0	•
Escort	1. 6L	Zetec	1997 MY	ABS/TCS	•	•	•	•
Escort	1. 6L	Zetec	1997 MY	CSM	•	•	•	0
Escort	1. 6L	Zetec	1997 MY	HEC	•	•	•	•
Escort	1. 6L	Zetec	1997 MY	PATS	•	•	•	0
Escort	1. 6L	Zetec	1997 MY	PCM	•	•	•	•
Escort	1. 6L	Zetec	1997.75 MY	ABS	•	•	•	0
Escort	1. 6L	Zetec	1997.75 MY	ABS/TCS	•	•	•	•
Escort	1. 6L	Zetec	1997.75 MY	CSM	•	•	•	0
Escort	1. 6L	Zetec	1997.75 MY	HEC	•	•	•	•
Escort	1. 6L	Zetec	1997.75 MY	PATS	•	•	0	•
Escort	1. 6L	Zetec	1998 MY	ABS	•	•	•	0
Escort	1. 6L	Zetec	1998 MY	ABS/TCS	•	•	•	•
Escort	1. 6L	Zetec	1998 MY	CSM	•	•	•	0
Escort	1. 6L	Zetec	1998 MY	HEC	•	•	•	•
Escort	1. 6L	Zetec	1998 MY	PATS	•	•	•	0
Escort	1. 6L	Zetec	1998 MY	PCM	•	•	•	•
Escort	1. 6L	Zetec Rocam	2000.5 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Escort	1.6L	Zetec Rocam	2000.5 MY	CSM	•	•	•	0
Escort	1.6L	Zetec Rocam	2000.5 MY	HEC	•	•	•	•
Escort	1. 6L	Zetec Rocam	2000.5 MY	PATS	•	•	•	0
Escort	1.6L	Zetec Rocam	2000.5 MY	PATS	•	•	0	•
Escort	1.6L	Zetec Rocam	2000.5 MY	PCM	•	•	•	•
Escort	1.8L	Endura-DE	1996 MY	ABS/TCS	•	•	•	•
Escort	1.8L	Endura-DE	1996 MY	CSM	•	•	•	0
Escort	1.8L	Endura-DE	1996 MY	HEC	•	•	•	•
Escort	1.8L	Endura-DE	1996 MY	PATS	•	•	•	0
Escort	1.8L	Endura-DE	1996 MY	PATS	•	•	0	•
Escort	1.8L	Endura-DE	1996 MY	PCM	•	•	•	•
Escort	1.8L	Endura-DE	1996 MY	PCM	•	•	•	0
Escort	1.8L	Endura-DE	1997 MY	ABS/TCS	•	•	•	•
Escort	1.8L	Endura-DE	1997 MY	CSM	•	•	•	0
Escort	1.8L	Endura-DE	1997 MY	HEC	•	•	•	•
Escort	1.8L	Endura-DE	1997 MY	PATS	•	•	•	0
Escort	1.8L	Endura-DE	1997 MY	PATS	•	•	0	•
Escort	1.8L	Endura-DE	1997 MY	PCM	•	•	•	•
Escort	1.8L	Endura-DE	1997 MY	PCM	•	•	•	0
Escort	1.8L	Endura-DE	1997.5 MY	ABS	•	•	•	0
Escort	1.8L	Endura-DE	1997.5 MY	ABS/TCS	•	•	•	•
Escort	1.8L	Endura-DE	1997.5 MY	CSM	•	•	•	0
Escort	1.8L	Endura-DE	1997.5 MY	HEC	•	•	•	•
Escort	1.8L	Endura-DE	1997.5 MY	PATS	•	•	•	0
Escort	1.8L	Endura-DE	1997.5 MY	PATS	•	•	0	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Escort	1.8L	Endura-DE	1997.5 MY	PCM	•	•	•	•
Escort	1.8L	Endura-DE	1997.5 MY	PCM	•	•	•	0
Escort	1.8L	Endura-DE	Other	ABS/TCS	•	•	•	•
Escort	1.8L	Endura-DE	Other	CSM	•	•	•	0
Escort	1.8L	Endura-DE	Other	HEC	•	•	•	•
Escort	1.8L	Endura-DE	Other	PATS	•	•	•	0
Escort	1.8L	Endura-DE	Other	PATS	•	•	0	•
Escort	1.8L	Endura-DE	Other	PCM	•	•	•	•
Escort	1.8L	Endura-DE	Other	PCM	•	•	•	0
Escort	1.8L	Other	1996 MY	ABS/TCS	•	•	•	•
Escort	1.8L	Other	1996 MY	CSM	•	•	•	0
Escort	1.8L	Other	1996 MY	HEC	•	•	•	•
Escort	1.8L	Other	1996 MY	PATS	•	•	0	•
Escort	1.8L	Other	1996 MY	PCM	•	•	•	0
Escort	1.8L	Zetec	1992 MY	ABS/TCS	•	•	•	•
Escort	1.8L	Zetec	1992 MY	CSM	•	•	•	0
Escort	1.8L	Zetec	1992 MY	HEC	•	•	•	•
Escort	1.8L	Zetec	1992 MY	PATS	•	•	•	0
Escort	1.8L	Zetec	1992 MY	PATS	•	•	0	•
Escort	1.8L	Zetec	1992 MY	PCM	•	•	•	•
Escort	1.8L	Zetec	1994 MY	ABS/TCS	•	•	•	•
Escort	1.8L	Zetec	1994 MY	CSM	•	•	•	0
Escort	1.8L	Zetec	1994 MY	HEC	•	•	•	•
Escort	1.8L	Zetec	1994 MY	PATS	•	•	0	•
Escort	1.8L	Zetec	1995 MY	ABS	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Escort	1.8L	Zetec	1995 MY	ABS/TCS	•	•	•	•
Escort	1.8L	Zetec	1995 MY	CSM	•		•	0
Escort	1.8L	Zetec	1995 MY	HEC	•		•	•
Escort	1.8L	Zetec	1995 MY	PATS	•		0	•
Escort	1.8L	Zetec	1995.5 MY	ABS	•	•	•	0
Escort	1.8L	Zetec	1995.5 MY	ABS/TCS	•	•	•	•
Escort	1.8L	Zetec	1995.5 MY	CSM	•	•	•	0
Escort	1.8L	Zetec	1995.5 MY	HEC	•	•	•	•
Escort	1.8L	Zetec	1995.5 MY	PATS	•	•	0	•
Escort	1.8L	Zetec	1996 MY	ABS/TCS	•	•	•	•
Escort	1.8L	Zetec	1996 MY	CSM	•	•	•	0
Escort	1.8L	Zetec	1996 MY	HEC	•	•	•	•
Escort	1.8L	Zetec	1996 MY	PATS	•	•	•	0
Escort	1.8L	Zetec	1996 MY	PATS	•	•	0	•
Escort	1.8L	Zetec	1996 MY	PCM	•	•	•	•
Escort	1.8L	Zetec	1997 MY	ABS/TCS	•	•	•	•
Escort	1.8L	Zetec	1997 MY	CSM	•	•	•	0
Escort	1.8L	Zetec	1997 MY	HEC	•	•	•	•
Escort	1.8L	Zetec	1997 MY	PATS	•	•	•	0
Escort	1.8L	Zetec	1997 MY	PATS	•	•	0	•
Escort	1.8L	Zetec	1997 MY	PCM	•	•	•	•
Escort	1.8L	Zetec	1997.75 MY	ABS	•	•	•	0
Escort	1.8L	Zetec	1997.75 MY	ABS/TCS	•	•	•	•
Escort	1.8L	Zetec	1997.75 MY	CSM	•	•	•	0
Escort	1.8L	Zetec	1997.75 MY	HEC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Escort	1.8L	Zetec	1997.75 MY	PATS	•	•	•	0
Escort	1.8L	Zetec	1997.75 MY	PATS	•	•	0	•
Escort	1.8L	Zetec	1997.75 MY	PCM	•	•	•	•
Escort	1.8L	Zetec	1998 MY	ABS	•	•	•	0
Escort	1.8L	Zetec	1998 MY	ABS/TCS	•	•	•	•
Escort	1.8L	Zetec	1998 MY	CSM	•	•	•	0
Escort	1.8L	Zetec	1998 MY	HEC	•	•	•	•
Escort	1.8L	Zetec	1998 MY	PATS	•	•	•	0
Escort	1.8L	Zetec	1998 MY	PCM	•	•	•	•
Escort	1. 9L	Other	1996 MY	ABS/TCS	•	•	•	•
Escort	1. 9L	Other	1996 MY	PATS	•	•	0	•
Escort	1. 9L	Other	1996 MY	PCM	•	•	•	•
Escort	2. 0L	DOHC Cosworth	1994.75 MY	ABS/TCS	•	•	•	•
Escort	2. 0L	DOHC Cosworth	1994.75 MY	PATS	•	•	0	•
Escort	2. 0L	DOHC Cosworth	1994.75 MY	PCM	•	•	•	•
Escort	2. 0L	DOHC Cosworth	1995 MY	ABS	•	•	•	0
Escort	2. 0L	DOHC Cosworth	1995 MY	ABS/TCS	•	•	•	•
Escort	2. 0L	DOHC Cosworth	1995 MY	PATS	•	•	0	•
Escort	2. 0L	DOHC Cosworth	1995 MY	PCM	•	•	•	•
Escort	2. 0L	SPI	1997 MY	ABS/TCS	•	•	•	•
Escort	2. 0L	SPI	1997 MY	PATS	•	•	0	•
Escort	2. 0L	SPI	1997 MY	PCM	•	•	•	•
Escort	2. 0L	SPI	1997 MY	RAP	•	•	•	•
Escort	2. 0L	SPI	1998 MY	ABS	•	•	•	0
Escort	2. 0L	SPI	1998 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read			Active
P	0.01	CDI	1000 MV	ECC	Codes	Codes		
Escort	2. OL	SPI	1998 MY	ECS	•	•	•	0
Escort	2. 0L	SPI	1998 MY	PATS	•	•	•	0
Escort	2. OL	SPI	1998 MY	PCM	•	•	•	•
Escort	2. OL	SPI	1998 MY	RAP	•	•	•	•
Escort	2. 0L	SPI	1999 MY	ABS	•	•	•	0
Escort	2. 0L	SPI	1999 MY	ABS/TCS	•	•	•	
Escort	2. 0L	SPI	1999 MY	ECS	•	•	•	0
Escort	2. 0L	SPI	1999 MY	PATS	•	•	0	•
Escort	2. 0L	SPI	1999 MY	PCM	•	•	•	•
Escort	2. 0L	SPI	1999 MY	RAP	•	•	•	•
Escort	2. 0L	SPI	2000 MY	ABS/TCS	•	•	•	•
Escort	2. 0L	SPI	2000 MY	ECS	•	•	•	0
Escort	2. 0L	SPI	2000 MY	PATS	•	•	0	•
Escort	2. 0L	SPI	2000 MY	PCM	•	•	•	•
Escort	2. 0L	SPI	2000 MY	RAP	•	•	•	•
Escort	2. 0L	SPI	2002 MY	ABS/TCS	•	•	•	•
Escort	2. 0L	SPI	2002 MY	ECS	•	•	•	0
Escort	2. 0L	SPI	2002 MY	PATS	•	•	0	•
Escort	2. 0L	SPI	2002 MY	PCM	•	•	•	•
Escort	2. 0L	SPI	2002 MY	RAP	•	•	•	•
Escort	2. 0L	Zetec	1998 MY	ABS	•	•	•	0
Escort	2. 0L	Zetec	1998 MY	ABS/TCS	•	•	•	•
Escort	2. 0L	Zetec	1998 MY	ECS	•	•	•	0
Escort	2. 0L	Zetec	1998 MY	PATS	•	•	•	0
Escort	2. 0L	Zetec	1998 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Escort	2. 0L	Zetec	1998 MY	RAP	•	•	•	•
Escort	2. 0L	Zetec	1999 MY	ABS	•	•	•	0
Escort	2. 0L	Zetec	1999 MY	ABS/TCS	•	•	•	•
Escort	2. 0L	Zetec	1999 MY	ECS	•	•	•	0
Escort	2. 0L	Zetec	1999 MY	PATS	•	•	0	•
Escort	2. 0L	Zetec	1999 MY	PCM	•	•	•	•
Escort	2. 0L	Zetec	1999 MY	RAP	•	•	•	•
Escort	2. 0L	Zetec	2000 MY	ABS/TCS	•		•	•
Escort	2. 0L	Zetec	2000 MY	ECS	•		•	0
Escort	2. 0L	Zetec	2000 MY	PATS	•		0	•
Escort	2. 0L	Zetec	2000 MY	PCM	•		•	•
Escort	2. 0L	Zetec	2000 MY	RAP	•	•	•	•
Escort	2. 0L	Zetec	2002 MY	ABS/TCS	•	•	•	•
Escort	2. 0L	Zetec	2002 MY	ECS	•		•	0
Escort	2. 0L	Zetec	2002 MY	PATS	•		0	•
Escort	2. 0L	Zetec	2002 MY	PCM	•		•	•
Escort	2. 0L	Zetec	2002 MY	RAP	•		•	•
Escort	2. 0L	Zetec	2003 MY	ABS/TCS	•		•	•
Escort	2. 0L	Zetec	2003 MY	ECS	•	•	•	0
Escort	2. 0L	Zetec	2003 MY	PATS	•	•	0	•
Escort	2. 0L	Zetec	2003 MY	PCM	•	•	•	•
Escort	2. 0L	Zetec	2003 MY	RAP	•	•	•	•
Everest / Endeavour	2. 5L	WL_CD	2007 MY	ABS/TCS	•	•	•	•
Everest / Endeavour	2. 5L	WL_CD	2007 MY	PCM	•	•	•	•
Everest / Endeavour	2.5L	WL_CD	2007 MY	RCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Everest / Endeavour	2.5L	WL_CD	2007 MY	TCM	•	•	•	•
Everest / Endeavour	2.6L	G6	2007 MY	ABS/TCS	•	•	•	•
Everest / Endeavour	2.6L	G6	2007 MY	PCM	•	•	•	
Everest / Endeavour	2.6L	G6	2007 MY	RCM	•	•	•	0
Everest / Endeavour	3. 0L	WE-CD	2007 MY	ABS/TCS	•	•	•	•
Everest / Endeavour	3. 0L	WE-CD	2007 MY	PCM	•	•	•	•
Everest / Endeavour	3. 0L	WE-CD	2007 MY	RCM	•	•	•	0
Everest / Endeavour	3. 0L	WE-CD	2007 MY	TCM	•	•	•	•
Excursion	5. 4L	2V	2004 MY	ABS/TCS	•	•	•	•
Excursion	5.4L	2V	2004 MY	DSM	•	•	•	
Excursion	5.4L	2V	2004 MY	EATC	•	•	•	•
Excursion	5.4L	2V	2004 MY	ECS	•	•	•	
Excursion	5.4L	2V	2004 MY	GEM	•	•	•	•
Excursion	5.4L	2V	2004 MY	HEC	•	•	•	•
Excursion	5.4L	2V	2004 MY	OTC	•	•	•	0
Excursion	5.4L	2V	2004 MY	PAM	•	•	•	0
Excursion	5.4L	2V	2004 MY	PATS	•	•	•	•
Excursion	5.4L	2V	2004 MY	PCM	•	•	•	•
Excursion	5.4L	2V	2004 MY	VSM	•	•	•	•
Excursion	5.4L	2V	2005 MY	ABS/TCS	•	•	•	•
Excursion	5.4L	2V	2005 MY	DSM	•	•	•	•
Excursion	5.4L	2V	2005 MY	EATC	•	•	•	•
Excursion	5. 4L	2V	2005 MY	GEM	•	•	•	•
Excursion	5. 4L	2V	2005 MY	HEC	•	•	•	•
Excursion	5. 4L	2V	2005 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Excursion	5. 4L	2V	2005 MY	PATS	•	•	•	•
Excursion	5. 4L	2V	2005 MY	PCM	•	•	•	•
Excursion	5. 4L	2V	2005 MY	RCM	•	•	•	•
Excursion	5. 4L	2V	2005 MY	VSM	•	•	•	•
Excursion	5. 4L	Other	2000 MY	ABS/TCS	•	•		•
Excursion	5. 4L	Other	2000 MY	ECS	•	•	•	
Excursion	5. 4L	Other	2000 MY	GEM	•	•	•	•
Excursion	5. 4L	Other	2000 MY	MC	•	•		0
Excursion	5. 4L	Other	2000 MY	PAM	•	•	•	•
Excursion	5. 4L	Other	2000 MY	PATS	•	•		•
Excursion	5. 4L	Other	2000 MY	PCM	•	•		•
Excursion	5. 4L	Other	2002 MY	ABS/TCS	•	•		•
Excursion	5. 4L	Other	2002 MY	CSM	•	•	•	•
Excursion	5. 4L	Other	2002 MY	DSM	•	•	•	•
Excursion	5. 4L	Other	2002 MY	EATC	•	•		•
Excursion	5. 4L	Other	2002 MY	ECS	•	•	•	
Excursion	5. 4L	Other	2002 MY	GEM	•	•	•	
Excursion	5. 4L	Other	2002 MY	HEC	•	•	•	•
Excursion	5. 4L	Other	2002 MY	OTC	•	•	•	0
Excursion	5. 4L	Other	2002 MY	PAM	•	•	•	0
Excursion	5. 4L	Other	2002 MY	PATS	•	•	•	•
Excursion	5. 4L	Other	2002 MY	PCM	•	•	•	•
Excursion	5. 4L	Other	2003 MY	ABS/TCS	•	•	•	•
Excursion	5. 4L	Other	2003 MY	DSM	•	•	•	•
Excursion	5. 4L	Other	2003 MY	EATC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Excursion	5. 4L	Other	2003 MY	ECS	•	•	•	
Excursion	5. 4L	Other	2003 MY	GEM	•	•	•	•
Excursion	5. 4L	Other	2003 MY	HEC	•	•	•	•
Excursion	5. 4L	Other	2003 MY	OTC	•	•	•	0
Excursion	5. 4L	Other	2003 MY	PAM	•	•	•	0
Excursion	5. 4L	Other	2003 MY	PATS	•	•	•	•
Excursion	5. 4L	Other	2003 MY	PCM	•	•	•	•
Excursion	5.4L	Other	2003 MY	VSM	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2003 MY	ABS/TCS	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2003 MY	DSM	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2003 MY	EATC	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2003 MY	ECS	•	•	•	
Excursion	6. 0L	Direct Injection - Turbo	2003 MY	GEM	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2003 MY	HEC	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2003 MY	OTC	•	•	•	0
Excursion	6. 0L	Direct Injection - Turbo	2003 MY	PAM	•	•	•	0
Excursion	6. 0L	Direct Injection - Turbo	2003 MY	PATS	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2003 MY	PCM	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2003 MY	TCM	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2003 MY	VSM	•	•	•	
Excursion	6. 0L	Direct Injection - Turbo	2004 MY	ABS/TCS	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2004 MY	DSM	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2004 MY	EATC	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2004 MY	ECS	•	•	•	
Excursion	6. 0L	Direct Injection - Turbo	2004 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Excursion	6. 0L	Direct Injection - Turbo	2004 MY	HEC	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2004 MY	OTC	•	•	•	0
Excursion	6. 0L	Direct Injection - Turbo	2004 MY	PAM	•	•	•	0
Excursion	6. 0L	Direct Injection - Turbo	2004 MY	PATS	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2004 MY	PCM	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2004 MY	TCM	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2004 MY	VSM	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2005 MY	ABS/TCS	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2005 MY	DSM	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2005 MY	EATC	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2005 MY	GEM	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2005 MY	HEC	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2005 MY	PAM	•	•	•	
Excursion	6. 0L	Direct Injection - Turbo	2005 MY	PATS	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2005 MY	PCM	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2005 MY	RCM	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2005 MY	TCM	•	•	•	•
Excursion	6. 0L	Direct Injection - Turbo	2005 MY	VSM	•	•	•	
Excursion	6. 8L	2V	2004 MY	ABS/TCS	•	•	•	•
Excursion	6. 8L	2V	2004 MY	DSM	•	•	•	•
Excursion	6. 8L	2V	2004 MY	EATC	•	•	•	
Excursion	6. 8L	2V	2004 MY	ECS	•	•	•	
Excursion	6. 8L	2V	2004 MY	GEM	•	•	•	•
Excursion	6. 8L	2V	2004 MY	HEC	•	•	•	•
Excursion	6.8L	2V	2004 MY	OTC	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Excursion	6.8L	2V	2004 MY	PAM	•	•	•	0
Excursion	6.8L	2V	2004 MY	PATS	•	•	•	•
Excursion	6.8L	2V	2004 MY	PCM	•		•	•
Excursion	6. 8L	2V	2004 MY	VSM	•		•	•
Excursion	6.8L	2V	2005 MY	ABS/TCS	•		•	•
Excursion	6.8L	2V	2005 MY	DSM	•	•	•	•
Excursion	6.8L	2V	2005 MY	EATC	•	•	•	•
Excursion	6.8L	2V	2005 MY	GEM	•		•	•
Excursion	6.8L	2V	2005 MY	HEC	•	•	•	•
Excursion	6.8L	2V	2005 MY	PAM	•	•	•	•
Excursion	6.8L	2V	2005 MY	PATS	•		•	•
Excursion	6.8L	2V	2005 MY	PCM	•	•	•	•
Excursion	6.8L	2V	2005 MY	RCM	•	•	•	•
Excursion	6.8L	2V	2005 MY	VSM	•		•	•
Excursion	6.8L	Other	2000 MY	ABS/TCS	•		•	•
Excursion	6.8L	Other	2000 MY	ECS	•		•	
Excursion	6.8L	Other	2000 MY	GEM	•		•	•
Excursion	6.8L	Other	2000 MY	MC	•	•	•	0
Excursion	6.8L	Other	2000 MY	PAM	•		•	•
Excursion	6.8L	Other	2000 MY	PATS	•		•	•
Excursion	6.8L	Other	2000 MY	PCM	•		•	•
Excursion	6.8L	Other	2002 MY	ABS/TCS	•		•	•
Excursion	6.8L	0ther	2002 MY	CSM	•	•	•	•
Excursion	6.8L	0ther	2002 MY	DSM	•	•	•	•
Excursion	6.8L	0ther	2002 MY	EATC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Excursion	6. 8L	Other	2002 MY	ECS	•	•	•	
Excursion	6.8L	0ther	2002 MY	GEM	•		•	•
Excursion	6.8L	Other	2002 MY	HEC	•	•	•	•
Excursion	6.8L	Other	2002 MY	OTC	•	•	•	0
Excursion	6.8L	Other	2002 MY	PAM	•	•	•	0
Excursion	6.8L	Other	2002 MY	PATS	•	•	•	•
Excursion	6.8L	Other	2002 MY	PCM	•	•	•	•
Excursion	6.8L	Other	2003 MY	ABS/TCS	•	•	•	•
Excursion	6.8L	Other	2003 MY	DSM	•	•	•	•
Excursion	6.8L	Other	2003 MY	EATC	•	•	•	•
Excursion	6.8L	Other	2003 MY	ECS	•	•	•	
Excursion	6.8L	Other	2003 MY	GEM	•	•	•	•
Excursion	6.8L	Other	2003 MY	HEC	•	•	•	•
Excursion	6.8L	Other	2003 MY	OTC	•		•	0
Excursion	6.8L	Other	2003 MY	PAM	•		•	0
Excursion	6.8L	Other	2003 MY	PATS	•		•	•
Excursion	6.8L	Other	2003 MY	PCM	•		•	•
Excursion	6.8L	Other	2003 MY	VSM	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2000 MY	ABS/TCS	•		•	•
Excursion	7. 3L	Direct Injection - Turbo	2000 MY	ECS	•		•	
Excursion	7. 3L	Direct Injection - Turbo	2000 MY	GEM	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2000 MY	MC	•			0
Excursion	7. 3L	Direct Injection - Turbo	2000 MY	PAM	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2000 MY	PATS	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2000 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Excursion	7. 3L	Direct Injection - Turbo	2002 MY	ABS/TCS	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2002 MY	CSM	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2002 MY	DSM	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2002 MY	EATC	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2002 MY	ECS	•	•	•	
Excursion	7. 3L	Direct Injection - Turbo	2002 MY	GEM	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2002 MY	HEC	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2002 MY	OTC	•	•	•	0
Excursion	7. 3L	Direct Injection - Turbo	2002 MY	PAM	•	•	•	0
Excursion	7. 3L	Direct Injection - Turbo	2002 MY	PATS	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2002 MY	PCM	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2003 MY	ABS/TCS	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2003 MY	DSM	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2003 MY	EATC	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2003 MY	ECS	•	•	•	
Excursion	7. 3L	Direct Injection - Turbo	2003 MY	GEM	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2003 MY	HEC	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2003 MY	OTC	•	•	•	0
Excursion	7. 3L	Direct Injection - Turbo	2003 MY	PAM	•	•	•	0
Excursion	7. 3L	Direct Injection - Turbo	2003 MY	PATS	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2003 MY	PCM	•	•	•	•
Excursion	7. 3L	Direct Injection - Turbo	2003 MY	VSM	•	•	•	•
Expedition	4.6L	2V	2003 MY	4X4	•	•	•	•
Expedition	4. 6L	2V	2003 MY	ABS/TCS	•	•	•	•
Expedition	4. 6L	2V	2003 MY	DCSM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Expedition	4. 6L	2V	2003 MY	DSM	•	•	•	•
Expedition	4. 6L	2V	2003 MY	EATC	•		•	•
Expedition	4. 6L	2V	2003 MY	HEC	•	•	•	•
Expedition	4. 6L	2V	2003 MY	PAM	•	•	•	0
Expedition	4. 6L	2V	2003 MY	PCM	•	•	•	•
Expedition	4. 6L	2V	2003 MY	PCSM	•	•	•	•
Expedition	4. 6L	2V	2003 MY	RCM	•	•	•	•
Expedition	4. 6L	2V	2003 MY	TPM	•	•	•	•
Expedition	4. 6L	2V	2003 MY	VDM	•	•	•	•
Expedition	4. 6L	2V	2003 MY	VSM	•	•	•	•
Expedition	4. 6L	2V	2004 MY	4X4	•	•	•	•
Expedition	4. 6L	2V	2004 MY	ABS/TCS	•	•	•	•
Expedition	4. 6L	2V	2004 MY	DCSM	•	•	•	•
Expedition	4. 6L	2V	2004 MY	DSM	•		•	•
Expedition	4. 6L	2V	2004 MY	EATC	•			•
Expedition	4. 6L	2V	2004 MY	HEC	•			•
Expedition	4. 6L	2V	2004 MY	PAM	•			0
Expedition	4. 6L	2V	2004 MY	PCM	•	•	•	•
Expedition	4. 6L	2V	2004 MY	PCSM	•			•
Expedition	4. 6L	2V	2004 MY	RCM	•			•
Expedition	4. 6L	2V	2004 MY	TPM	•			•
Expedition	4. 6L	2V	2004 MY	VDM	•	•	•	•
Expedition	4. 6L	2V	2004 MY	VSM	•	•	•	•
Expedition	4. 6L	Other	1997 MY	4WAS	•	•	•	•
Expedition	4. 6L	Other	1997 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Expedition	4. 6L	0ther	1997 MY	GEM	•	•	•	•
Expedition	4. 6L	Other	1997 MY	IAB	•	•	•	•
Expedition	4. 6L	0ther	1997 MY	PATS	•	•	•	•
Expedition	4. 6L	0ther	1997 MY	PCM	•	•	•	•
Expedition	4. 6L	0ther	1997 MY	RAP	•	•	•	•
Expedition	4. 6L	0ther	1998 MY	4WAS	•	•	•	•
Expedition	4. 6L	0ther	1998 MY	ABS/TCS	•	•	•	•
Expedition	4. 6L	0ther	1998 MY	GEM	•	•	•	•
Expedition	4. 6L	0ther	1998 MY	IAB	•	•	•	•
Expedition	4. 6L	0ther	1998 MY	PATS	•	•	•	•
Expedition	4. 6L	0ther	1998 MY	PCM	•	•	•	•
Expedition	4. 6L	0ther	1998 MY	RAP	•	•	•	•
Expedition	4. 6L	0ther	1998 MY	RCC	•	•	•	0
Expedition	4. 6L	0ther	1999 MY	4WAS	•	•	•	•
Expedition	4. 6L	0ther	1999 MY	ABS/TCS	•	•	•	•
Expedition	4. 6L	0ther	1999 MY	EATC	•	•	•	0
Expedition	4. 6L	0ther	1999 MY	GEM	•	•	•	•
Expedition	4. 6L	0ther	1999 MY	HEC	•	•	•	•
Expedition	4. 6L	0ther	1999 MY	PCM	•	•	•	•
Expedition	4. 6L	0ther	1999 MY	RAP	•	•	•	•
Expedition	4. 6L	0ther	1999 MY	RCM	•	•	•	•
Expedition	4. 6L	0ther	2000 MY	4WAS	•	•	•	•
Expedition	4. 6L	0ther	2000 MY	ABS/TCS	•	•	•	•
Expedition	4. 6L	0ther	2000 MY	DSM	•	•	•	•
Expedition	4. 6L	0ther	2000 MY	EATC	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Expedition	4. 6L	0ther	2000 MY	GEM	•	•	•	•
Expedition	4.6L	0ther	2000 MY	HEC	•	•	•	•
Expedition	4. 6L	0ther	2000 MY	PAM	•	•	•	•
Expedition	4.6L	0ther	2000 MY	PCM	•	•	•	•
Expedition	4.6L	0ther	2000 MY	RAP	•	•	•	•
Expedition	4.6L	0ther	2000 MY	RCM	•	•	•	•
Expedition	5. 4L	2V	2003 MY	4X4	•	•	•	•
Expedition	5. 4L	2V	2003 MY	ABS/TCS	•	•	•	•
Expedition	5. 4L	2V	2003 MY	DCSM	•	•	•	•
Expedition	5. 4L	2V	2003 MY	DSM	•	•	•	•
Expedition	5. 4L	2V	2003 MY	EATC	•	•	•	•
Expedition	5. 4L	2V	2003 MY	HEC	•	•	•	•
Expedition	5. 4L	2V	2003 MY	PAM	•	•	•	0
Expedition	5. 4L	2V	2003 MY	PCM	•	•	•	•
Expedition	5. 4L	2V	2003 MY	PCSM	•	•	•	•
Expedition	5. 4L	2V	2003 MY	RCM	•	•	•	•
Expedition	5. 4L	2V	2003 MY	TPM	•	•	•	•
Expedition	5. 4L	2V	2003 MY	VDM	•	•	•	•
Expedition	5. 4L	2V	2003 MY	VSM	•	•	•	•
Expedition	5. 4L	2V	2004 MY	4X4	•	•	•	•
Expedition	5. 4L	2V	2004 MY	ABS/TCS	•	•	•	•
Expedition	5. 4L	2V	2004 MY	DCSM	•	•	•	•
Expedition	5. 4L	2V	2004 MY	DSM	•	•	•	•
Expedition	5. 4L	2V	2004 MY	EATC	•	•	•	•
Expedition	5. 4L	2V	2004 MY	HEC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Expedition	5. 4L	2V	2004 MY	PAM	•	•	•	0
Expedition	5. 4L	2V	2004 MY	PCM	•	•	•	•
Expedition	5. 4L	2V	2004 MY	PCSM	•	•	•	•
Expedition	5. 4L	2V	2004 MY	RCM	•	•	•	•
Expedition	5. 4L	2V	2004 MY	TPM	•	•	•	•
Expedition	5. 4L	2V	2004 MY	VDM	•	•	•	•
Expedition	5. 4L	2V	2004 MY	VSM	•	•	•	•
Expedition	5. 4L	3V	2005 MY	4X4	•	•	•	•
Expedition	5. 4L	3V	2005 MY	ABS	•	•	•	•
Expedition	5. 4L	3V	2005 MY	DCSM	•	•	•	•
Expedition	5. 4L	3V	2005 MY	DSM	•	•	•	•
Expedition	5. 4L	3V	2005 MY	EATC	•	•	•	•
Expedition	5. 4L	3V	2005 MY	IC	•	•	•	•
Expedition	5. 4L	3V	2005 MY	PAM	•	•	•	0
Expedition	5. 4L	3V	2005 MY	PCM	•	•	•	•
Expedition	5. 4L	3V	2005 MY	RCM	•	•	•	•
Expedition	5. 4L	3V	2005 MY	VDM	•	•	•	•
Expedition	5. 4L	3V	2005 MY	VSM	•	•	•	•
Expedition	5. 4L	3V	2006 MY	4X4	•	•	•	•
Expedition	5. 4L	3V	2006 MY	ABS	•	•	•	•
Expedition	5. 4L	3V	2006 MY	DCSM	•	•	•	•
Expedition	5. 4L	3V	2006 MY	DSM	•	•	•	•
Expedition	5. 4L	3V	2006 MY	EATC	•	•	•	•
Expedition	5. 4L	3V	2006 MY	IC	•	•	•	•
Expedition	5. 4L	3V	2006 MY	PAM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Expedition	5. 4L	3V	2006 MY	PCM	•	•	•	•
Expedition	5. 4L	3V	2006 MY	RCM	•	•	•	•
Expedition	5. 4L	3V	2006 MY	VDM	•	•	•	•
Expedition	5. 4L	3V	2006 MY	VSM	•	•	•	•
Expedition	5. 4L	3V	2007 MY	4X4	•	•	•	•
Expedition	5. 4L	3V	2007 MY	ABS	•	•	•	•
Expedition	5. 4L	3V	2007 MY	ACM	•	•	•	
Expedition	5. 4L	3V	2007 MY	DCSM	•	•	•	•
Expedition	5. 4L	3V	2007 MY	DSM	•	•	•	•
Expedition	5. 4L	3V	2007 MY	DSP	•	•	•	0
Expedition	5. 4L	3V	2007 MY	EATC	•	•	•	
Expedition	5. 4L	3V	2007 MY	GEM	•	•	•	
Expedition	5. 4L	3V	2007 MY	IC	•	•	•	•
Expedition	5. 4L	3V	2007 MY	LTM	•	•	•	0
Expedition	5. 4L	3V	2007 MY	PAM	•	•	•	0
Expedition	5. 4L	3V	2007 MY	PCM	•	•	•	•
Expedition	5. 4L	3V	2007 MY	RCM	•	•	•	•
Expedition	5. 4L	3V	2007 MY	RCU	•	•	•	0
Expedition	5. 4L	3V	2007 MY	RETM	•	•	•	0
Expedition	5. 4L	3V	2007 MY	SDARS	•	•	•	•
Expedition	5. 4L	3V	2007 MY	TCM	•	•	•	•
Expedition	5. 4L	3V	2007 MY	VDM	•	•	•	
Expedition	5. 4L	3V	2008 MY	4X4	•	•	•	•
Expedition	5. 4L	3V	2008 MY	ABS	•	•	•	•
Expedition	5. 4L	3V	2008 MY	ACM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Expedition	5. 4L	3V	2008 MY	DCSM	•	•	•	•
Expedition	5. 4L	3V	2008 MY	DSM	•	•	•	•
Expedition	5. 4L	3V	2008 MY	DSP	•	•	•	0
Expedition	5. 4L	3V	2008 MY	GEM / SJB	•	•	•	•
Expedition	5. 4L	3V	2008 MY	HVAC	•	•		•
Expedition	5.4L	3V	2008 MY	IC	•	•	•	•
Expedition	5.4L	3V	2008 MY	LTM	•	•	•	0
Expedition	5. 4L	3V	2008 MY	PAM	•	•		0
Expedition	5. 4L	3V	2008 MY	PCM	•	•	•	•
Expedition	5. 4L	3V	2008 MY	PRB	•	•		•
Expedition	5. 4L	3V	2008 MY	RCM	•	•		
Expedition	5. 4L	3V	2008 MY	RCU	•	•		•
Expedition	5. 4L	3V	2008 MY	RETM	•	•	•	0
Expedition	5. 4L	3V	2008 MY	SDARS	•	•	•	•
Expedition	5. 4L	3V	2008 MY	TCM	•	•		•
Expedition	5. 4L	3V	2008 MY	VDM	•	•		
Expedition	5. 4L	3V	2009 MY	4X4	•	•	•	•
Expedition	5. 4L	3V	2009 MY	ABS	•	•		•
Expedition	5. 4L	3V	2009 MY	ACM	•	•	•	•
Expedition	5. 4L	3V	2009 MY	ACM	•	•	•	0
Expedition	5. 4L	3V	2009 MY	APIM	•	•	•	0
Expedition	5. 4L	3V	2009 MY	DCSM	•	•	•	•
Expedition	5. 4L	3V	2009 MY	DSM	•	•	•	•
Expedition	5. 4L	3V	2009 MY	DSP	•	•	•	0
Expedition	5. 4L	3V	2009 MY	GEM / SJB	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Expedition	5. 4L	3V	2009 MY	HVAC	•	•	•	•
Expedition	5. 4L	3V	2009 MY	IC	•	•	•	•
Expedition	5. 4L	3V	2009 MY	LTM	•	•	•	0
Expedition	5. 4L	3V	2009 MY	PAM	•	•	•	0
Expedition	5. 4L	3V	2009 MY	PCM	•	•	•	•
Expedition	5. 4L	3V	2009 MY	PRB	•	•	•	•
Expedition	5. 4L	3V	2009 MY	RCM	•	•	•	
Expedition	5. 4L	3V	2009 MY	RCU	•	•	•	•
Expedition	5. 4L	3V	2009 MY	RETM	•	•	•	0
Expedition	5. 4L	3V	2009 MY	SDARS	•	•	•	•
Expedition	5. 4L	3V	2009 MY	TCM	•	•	•	•
Expedition	5. 4L	3V	2009 MY	VDM	•	•	•	
Expedition	5. 4L	3V	2010 MY	ABS	•	•	•	•
Expedition	5. 4L	3V	2010 MY	ACM	•	•	•	•
Expedition	5. 4L	3V	2010 MY	ACM	•	•	•	0
Expedition	5. 4L	3V	2010 MY	APIM	•	•	•	0
Expedition	5. 4L	3V	2010 MY	DCSM	•	•	•	•
Expedition	5. 4L	3V	2010 MY	DSM	•	•	•	•
Expedition	5. 4L	3V	2010 MY	DSP	•	•	•	0
Expedition	5. 4L	3V	2010 MY	GEM / SJB	•	•	•	•
Expedition	5. 4L	3V	2010 MY	GPSM	•	•	•	0
Expedition	5. 4L	3V	2010 MY	HVAC	•	•	•	•
Expedition	5. 4L	3V	2010 MY	IC	•	•	•	•
Expedition	5. 4L	3V	2010 MY	LTM	•	•	•	0
Expedition	5. 4L	3V	2010 MY	PAM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Expedition	5. 4L	3V	2010 MY	PCM	•	•	•	•
Expedition	5. 4L	3V	2010 MY	PRB	•	•	•	•
Expedition	5. 4L	3V	2010 MY	RCM	•	•	•	•
Expedition	5. 4L	3V	2010 MY	RCU	•	•	•	•
Expedition	5. 4L	3V	2010 MY	RETM	•	•	•	0
Expedition	5. 4L	3V	2010 MY	SDARS	•	•	•	•
Expedition	5. 4L	3V	2010 MY	TCCM	•	•	•	•
Expedition	5. 4L	3V	2010 MY	TCM	•	•	•	•
Expedition	5. 4L	3V	2010 MY	VDM	•	•	•	
Expedition	5. 4L	Other	1997 MY	4WAS	•	•	•	•
Expedition	5. 4L	Other	1997 MY	ABS/TCS	•	•	•	•
Expedition	5. 4L	Other	1997 MY	GEM	•	•	•	•
Expedition	5. 4L	Other	1997 MY	IAB	•	•	•	•
Expedition	5. 4L	Other	1997 MY	PATS	•	•	•	•
Expedition	5. 4L	Other	1997 MY	PCM	•	•	•	•
Expedition	5. 4L	Other	1997 MY	RAP	•	•	•	•
Expedition	5. 4L	Other	1998 MY	4WAS	•	•	•	•
Expedition	5. 4L	Other	1998 MY	ABS/TCS	•	•	•	•
Expedition	5. 4L	Other	1998 MY	GEM	•	•	•	•
Expedition	5. 4L	Other	1998 MY	IAB	•	•	•	•
Expedition	5. 4L	Other	1998 MY	PATS	•	•	•	•
Expedition	5. 4L	Other	1998 MY	PCM	•	•	•	•
Expedition	5. 4L	Other	1998 MY	RAP	•	•	•	•
Expedition	5. 4L	Other	1998 MY	RCC	•	•	•	0
Expedition	5. 4L	Other	1999 MY	4WAS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Expedition	5. 4L	0ther	1999 MY	ABS/TCS	•	•	•	•
Expedition	5. 4L	0ther	1999 MY	EATC	•	•	•	0
Expedition	5. 4L	0ther	1999 MY	GEM	•	•	•	•
Expedition	5. 4L	0ther	1999 MY	HEC	•	•	•	•
Expedition	5. 4L	0ther	1999 MY	PCM	•	•	•	•
Expedition	5. 4L	0ther	1999 MY	RAP	•	•	•	•
Expedition	5. 4L	0ther	1999 MY	RCM	•	•	•	•
Expedition	5. 4L	0ther	2000 MY	4WAS	•	•	•	•
Expedition	5. 4L	0ther	2000 MY	ABS/TCS	•	•	•	•
Expedition	5. 4L	0ther	2000 MY	DSM	•	•	•	•
Expedition	5. 4L	0ther	2000 MY	EATC	•	•	•	0
Expedition	5. 4L	0ther	2000 MY	GEM	•	•	•	•
Expedition	5. 4L	0ther	2000 MY	HEC	•	•	•	•
Expedition	5. 4L	0ther	2000 MY	PAM	•	•	•	•
Expedition	5. 4L	0ther	2000 MY	PCM	•	•	•	•
Expedition	5. 4L	0ther	2000 MY	RAP	•	•	•	•
Expedition	5. 4L	0ther	2000 MY	RCM	•	•	•	•
Expedition EL	5. 4L	3V	2007 MY	4X4	•	•	•	•
Expedition EL	5. 4L	3V	2007 MY	ABS	•	•	•	•
Expedition EL	5. 4L	3V	2007 MY	ACM	•	•	•	
Expedition EL	5. 4L	3V	2007 MY	DCSM	•	•	•	•
Expedition EL	5. 4L	3V	2007 MY	DSM	•	•	•	•
Expedition EL	5. 4L	3V	2007 MY	DSP	•	•	•	0
Expedition EL	5. 4L	3V	2007 MY	EATC	•	•	•	
Expedition EL	5. 4L	3V	2007 MY	GEM	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Expedition EL	5. 4L	3V	2007 MY	IC	•	•	•	•
Expedition EL	5. 4L	3V	2007 MY	LTM	•	•	•	0
Expedition EL	5. 4L	3V	2007 MY	PAM	•	•	•	0
Expedition EL	5. 4L	3V	2007 MY	PCM	•	•	•	•
Expedition EL	5. 4L	3V	2007 MY	RCM	•	•	•	•
Expedition EL	5. 4L	3V	2007 MY	RCU	•	•	•	0
Expedition EL	5. 4L	3V	2007 MY	RETM	•	•	•	0
Expedition EL	5. 4L	3V	2007 MY	SDARS	•	•	•	•
Expedition EL	5. 4L	3V	2007 MY	TCM	•	•	•	•
Expedition EL	5. 4L	3V	2007 MY	VDM	•	•	•	
Expedition EL	5. 4L	3V	2008 MY	4X4	•	•	•	
Expedition EL	5. 4L	3V	2008 MY	ABS	•	•	•	•
Expedition EL	5. 4L	3V	2008 MY	ACM	•	•	•	
Expedition EL	5. 4L	3V	2008 MY	DCSM	•	•	•	
Expedition EL	5. 4L	3V	2008 MY	DSM	•	•	•	
Expedition EL	5. 4L	3V	2008 MY	DSP	•	•	•	0
Expedition EL	5. 4L	3V	2008 MY	GEM / SJB	•	•	•	•
Expedition EL	5. 4L	3V	2008 MY	HVAC	•	•	•	
Expedition EL	5. 4L	3V	2008 MY	IC	•	•	•	•
Expedition EL	5. 4L	3V	2008 MY	LTM	•	•	•	0
Expedition EL	5. 4L	3V	2008 MY	PAM	•	•	•	0
Expedition EL	5. 4L	3V	2008 MY	PCM	•	•	•	•
Expedition EL	5. 4L	3V	2008 MY	PRB	•	•	•	•
Expedition EL	5. 4L	3V	2008 MY	RCM	•	•	•	
Expedition EL	5. 4L	3V	2008 MY	RCU	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Expedition EL	5. 4L	3V	2008 MY	RETM	•	•	•	0
Expedition EL	5. 4L	3V	2008 MY	SDARS	•	•	•	•
Expedition EL	5. 4L	3V	2008 MY	TCM	•	•	•	•
Expedition EL	5. 4L	3V	2008 MY	VDM	•	•	•	
Expedition EL	5. 4L	3V	2009 MY	4X4	•	•	•	•
Expedition EL	5. 4L	3V	2009 MY	ABS	•	•	•	•
Expedition EL	5.4L	3V	2009 MY	ACM	•	•	•	•
Expedition EL	5.4L	3V	2009 MY	ACM	•	•	•	0
Expedition EL	5.4L	3V	2009 MY	APIM	•	•	•	0
Expedition EL	5.4L	3V	2009 MY	DCSM	•	•	•	•
Expedition EL	5.4L	3V	2009 MY	DSM	•	•	•	•
Expedition EL	5. 4L	3V	2009 MY	DSP	•	•	•	0
Expedition EL	5. 4L	3V	2009 MY	GEM / SJB	•	•	•	•
Expedition EL	5.4L	3V	2009 MY	HVAC	•	•	•	•
Expedition EL	5.4L	3V	2009 MY	IC	•	•	•	•
Expedition EL	5.4L	3V	2009 MY	LTM	•	•	•	0
Expedition EL	5.4L	3V	2009 MY	PAM	•	•	•	0
Expedition EL	5. 4L	3V	2009 MY	PCM	•	•	•	•
Expedition EL	5.4L	3V	2009 MY	PRB	•	•	•	•
Expedition EL	5.4L	3V	2009 MY	RCM	•	•	•	
Expedition EL	5.4L	3V	2009 MY	RCU	•	•	•	•
Expedition EL	5. 4L	3V	2009 MY	RETM	•	•	•	0
Expedition EL	5. 4L	3V	2009 MY	SDARS	•	•	•	•
Expedition EL	5. 4L	3V	2009 MY	TCM	•	•	•	•
Expedition EL	5. 4L	3V	2009 MY	VDM	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Expedition EL	5. 4L	3V	2010 MY	ABS	•	•	•	•
Expedition EL	5. 4L	3V	2010 MY	ACM	•	•	•	•
Expedition EL	5. 4L	3V	2010 MY	ACM	•	•	•	0
Expedition EL	5. 4L	3V	2010 MY	APIM	•	•	•	0
Expedition EL	5. 4L	3V	2010 MY	DCSM	•	•	•	•
Expedition EL	5. 4L	3V	2010 MY	DSM	•	•	•	•
Expedition EL	5. 4L	3V	2010 MY	DSP	•	•	•	0
Expedition EL	5. 4L	3V	2010 MY	GEM / SJB	•	•	•	•
Expedition EL	5. 4L	3V	2010 MY	GPSM	•	•	•	0
Expedition EL	5. 4L	3V	2010 MY	HVAC	•	•	•	•
Expedition EL	5. 4L	3V	2010 MY	IC	•	•	•	•
Expedition EL	5. 4L	3V	2010 MY	LTM	•	•	•	0
Expedition EL	5. 4L	3V	2010 MY	PAM	•	•	•	0
Expedition EL	5. 4L	3V	2010 MY	PCM	•	•	•	•
Expedition EL	5. 4L	3V	2010 MY	PRB	•	•	•	•
Expedition EL	5. 4L	3V	2010 MY	RCM	•	•	•	•
Expedition EL	5. 4L	3V	2010 MY	RCU	•	•	•	•
Expedition EL	5. 4L	3V	2010 MY	RETM	•	•	•	0
Expedition EL	5. 4L	3V	2010 MY	SDARS	•	•	•	•
Expedition EL	5. 4L	3V	2010 MY	TCCM	•	•	•	•
Expedition EL	5. 4L	3V	2010 MY	TCM	•	•	•	•
Expedition EL	5. 4L	3V	2010 MY	VDM	•	•	•	
Explorer	4. 0L	2V	2006 MY	4X4	•	•	•	•
Explorer	4. 0L	2V	2006 MY	ABS	•	•	•	•
Explorer	4. 0L	2V	2006 MY	ACM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Explorer	4. 0L	2V	2006 MY	DSM	•	•	•	•
Explorer	4. 0L	2V	2006 MY	EATC	•	•	•	•
Explorer	4. 0L	2V	2006 MY	GEM	•	•	•	•
Explorer	4. 0L	2V	2006 MY	IC	•	•	•	•
Explorer	4. 0L	2V	2006 MY	OCSM	•	•	•	0
Explorer	4. 0L	2V	2006 MY	PAM	•	•	•	•
Explorer	4. 0L	2V	2006 MY	PCM	•	•	•	•
Explorer	4. 0L	2V	2006 MY	PRB	•	•	•	•
Explorer	4. 0L	2V	2006 MY	RCM	•	•	•	•
Explorer	4. 0L	2V	2006 MY	RETM	•	•	•	
Explorer	4. 0L	2V	2006 MY	SDARS	•	•	•	•
Explorer	4. 0L	2V	2007 MY	4X4	•	•	•	•
Explorer	4. 0L	2V	2007 MY	ABS	•			•
Explorer	4. 0L	2V	2007 MY	ACM	•	•	•	0
Explorer	4. 0L	2V	2007 MY	DSM	•	•	•	•
Explorer	4. 0L	2V	2007 MY	EATC	•	•	•	•
Explorer	4. 0L	2V	2007 MY	GEM	•	•	•	•
Explorer	4. 0L	2V	2007 MY	IC	•			•
Explorer	4. 0L	2V	2007 MY	OCSM	•	•	•	
Explorer	4. 0L	2V	2007 MY	PAM	•	•	•	0
Explorer	4. 0L	2V	2007 MY	PCM	•	•	•	•
Explorer	4. 0L	2V	2007 MY	PRB	•	•	•	•
Explorer	4. 0L	2V	2007 MY	RCM	•	•	•	•
Explorer	4. 0L	2V	2007 MY	RETM	•	•	•	0
Explorer	4. 0L	2V	2007 MY	SDARS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Explorer	4. 0L	2V	2008 MY	4X4	•	•	•	•
Explorer	4. 0L	2V	2008 MY	ABS	•	•	•	•
Explorer	4. 0L	2V	2008 MY	ACM	•	•	•	0
Explorer	4. 0L	2V	2008 MY	APIM	•	•	•	0
Explorer	4. 0L	2V	2008 MY	DSM	•	•	•	•
Explorer	4. 0L	2V	2008 MY	GEM / SJB	•	•	•	•
Explorer	4. 0L	2V	2008 MY	HVAC	•	•	•	•
Explorer	4. 0L	2V	2008 MY	IC	•	•	•	
Explorer	4. 0L	2V	2008 MY	OCSM	•	•	•	
Explorer	4. 0L	2V	2008 MY	PAM	•	•	•	0
Explorer	4. 0L	2V	2008 MY	PCM	•	•	•	•
Explorer	4. 0L	2V	2008 MY	PRB	•	•	•	•
Explorer	4. 0L	2V	2008 MY	RCM	•		•	
Explorer	4. 0L	2V	2008 MY	RETM	•	•	•	0
Explorer	4. 0L	2V	2008 MY	SDARS	•	•	•	•
Explorer	4. 0L	2V	2009 MY	4X4	•		•	•
Explorer	4. 0L	2V	2009 MY	ABS	•		•	•
Explorer	4. 0L	2V	2009 MY	ACM	•	•	•	•
Explorer	4. 0L	2V	2009 MY	ACM	•	•	•	0
Explorer	4. 0L	2V	2009 MY	APIM	•	•	•	0
Explorer	4. 0L	2V	2009 MY	DSM	•	•	•	•
Explorer	4. 0L	2V	2009 MY	GEM / SJB	•	•	•	•
Explorer	4. 0L	2V	2009 MY	HVAC	•	•	•	•
Explorer	4. 0L	2V	2009 MY	IC	•	•	•	
Explorer	4. 0L	2V	2009 MY	OCSM	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Explorer	4. 0L	2V	2009 MY	PAM	•	•	•	0
Explorer	4. 0L	2V	2009 MY	PCM	•	•	•	•
Explorer	4. 0L	2V	2009 MY	PRB	•	•	•	•
Explorer	4. 0L	2V	2009 MY	RCM	•	•	•	
Explorer	4. 0L	2V	2009 MY	RETM	•	•	•	0
Explorer	4. 0L	2V	2009 MY	SDARS	•	•	•	•
Explorer	4. 0L	2V	2010 MY	4X4	•	•	•	•
Explorer	4. 0L	2V	2010 MY	ABS	•	•	•	•
Explorer	4. 0L	2V	2010 MY	ACM	•	•	•	•
Explorer	4. 0L	2V	2010 MY	ACM	•	•	•	0
Explorer	4. 0L	2V	2010 MY	APIM	•	•	•	0
Explorer	4. 0L	2V	2010 MY	DSM	•	•	•	•
Explorer	4. 0L	2V	2010 MY	GEM / SJB	•	•	•	•
Explorer	4. 0L	2V	2010 MY	GPSM	•	•	•	0
Explorer	4. 0L	2V	2010 MY	HVAC	•	•	•	•
Explorer	4. 0L	2V	2010 MY	IC	•	•	•	•
Explorer	4. 0L	2V	2010 MY	OCSM	•	•	•	
Explorer	4. 0L	2V	2010 MY	PAM	•	•	•	0
Explorer	4. 0L	2V	2010 MY	PCM	•	•	•	•
Explorer	4. 0L	2V	2010 MY	PRB	•	•	•	•
Explorer	4. 0L	2V	2010 MY	RCM	•	•	•	•
Explorer	4. 0L	2V	2010 MY	RETM	•	•	•	0
Explorer	4. 0L	2V	2010 MY	SDARS	•	•	•	•
Explorer	4. 0L	Other	1996 MY	ABS/TCS	•	•	•	•
Explorer	4. 0L	Other	1996 MY	ARC	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Explorer	4. OL	Other	1996 MY	EATC	•	•	•	0
Explorer	4. 0L	0ther	1996 MY	GEM	•	•	•	•
Explorer	4. 0L	0ther	1996 MY	IAB	•	•	•	0
Explorer	4. 0L	0ther	1996 MY	PCM	•	•	•	•
Explorer	4. 0L	0ther	1996 MY	RAP	•	•	•	•
Explorer	4. 0L	Other	1997 MY	ABS/TCS	•	•	•	•
Explorer	4. 0L	Other	1997 MY	ARC	•	•	•	0
Explorer	4. 0L	0ther	1997 MY	EATC	•	•	•	0
Explorer	4. 0L	0ther	1997 MY	GEM	•	•	•	•
Explorer	4. 0L	0ther	1997 MY	IAB	•	•	•	0
Explorer	4. 0L	Other	1997 MY	PCM	•	•	•	•
Explorer	4. 0L	Other	1997 MY	RAP	•	•	•	•
Explorer	4. 0L	Other	1998 MY	ABS/TCS	•	•	•	•
Explorer	4. 0L	0ther	1998 MY	ARC	•	•	•	•
Explorer	4. 0L	0ther	1998 MY	DSM	•	•	•	•
Explorer	4. 0L	0ther	1998 MY	EATC	•	•	•	0
Explorer	4. 0L	0ther	1998 MY	GEM	•	•	•	•
Explorer	4. 0L	0ther	1998 MY	IAB	•	•	•	•
Explorer	4. 0L	0ther	1998 MY	PAM	•	•	•	•
Explorer	4. 0L	0ther	1998 MY	PATS	•	•	•	•
Explorer	4. 0L	0ther	1998 MY	PCM	•	•	•	•
Explorer	4. 0L	0ther	1998 MY	RAP	•	•	•	•
Explorer	4. 0L	0ther	1999 MY	ABS/TCS	•	•	•	•
Explorer	4. 0L	0ther	1999 MY	ARC	•	•	•	•
Explorer	4. 0L	0ther	1999 MY	DSM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Explorer	4. 0L	Other	1999 MY	EATC	•	•	•	0
Explorer	4. 0L	Other	1999 MY	GEM	•	•	•	•
Explorer	4. 0L	0ther	1999 MY	PAM	•	•	•	•
Explorer	4. 0L	0ther	1999 MY	PATS	•	•	•	•
Explorer	4. 0L	Other	1999 MY	PCM	•	•	•	•
Explorer	4. 0L	Other	1999 MY	RAP	•	•	•	
Explorer	4. 0L	Other	1999 MY	RCM	•	•	•	•
Explorer	4. 0L	Other	2000 MY	ABS/TCS	•	•	•	•
Explorer	4. 0L	Other	2000 MY	ARC	•	•	•	•
Explorer	4. 0L	Other	2000 MY	DSM	•	•	•	
Explorer	4. 0L	Other	2000 MY	EATC	•	•	•	0
Explorer	4. 0L	Other	2000 MY	GEM	•	•	•	
Explorer	4. 0L	Other	2000 MY	PAM	•	•	•	•
Explorer	4. 0L	Other	2000 MY	PATS	•	•	•	•
Explorer	4. 0L	Other	2000 MY	PCM	•	•	•	•
Explorer	4. 0L	Other	2000 MY	RAP	•	•	•	•
Explorer	4. 0L	Other	2000 MY	RCM	•	•	•	•
Explorer	4. 0L	V6 OHV	1996 MY	ABS/TCS	•	•	•	•
Explorer	4. 0L	V6 OHV	1996 MY	ARC	•	•	•	0
Explorer	4. 0L	V6 OHV	1996 MY	EATC	•	•	•	0
Explorer	4. 0L	V6 OHV	1996 MY	GEM	•	•	•	•
Explorer	4. 0L	V6 OHV	1996 MY	IAB	•	•	•	0
Explorer	4. 0L	V6 OHV	1996 MY	PCM	•	•	•	•
Explorer	4. 0L	V6 OHV	1996 MY	RAP	•	•	•	•
Explorer	4. 0L	V6 OHV	1997 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Explorer	4. 0L	V6 OHV	1997 MY	ARC	•	•	•	0
Explorer	4. 0L	V6 OHV	1997 MY	EATC	•	•	•	0
Explorer	4. 0L	V6 OHV	1997 MY	GEM	•	•	•	•
Explorer	4. 0L	V6 OHV	1997 MY	IAB	•	•	•	0
Explorer	4. 0L	V6 OHV	1997 MY	PCM	•	•	•	•
Explorer	4. 0L	V6 OHV	1997 MY	RAP	•	•	•	•
Explorer	4. 0L	V6 OHV	1998 MY	ABS/TCS	•	•	•	•
Explorer	4. 0L	V6 OHV	1998 MY	ARC	•	•	•	•
Explorer	4. 0L	V6 OHV	1998 MY	DSM	•	•	•	•
Explorer	4. 0L	V6 OHV	1998 MY	EATC	•	•	•	0
Explorer	4. 0L	V6 OHV	1998 MY	GEM	•	•	•	•
Explorer	4. 0L	V6 OHV	1998 MY	IAB	•	•	•	•
Explorer	4. 0L	V6 OHV	1998 MY	PAM	•	•	•	•
Explorer	4. 0L	V6 OHV	1998 MY	PATS	•	•	•	•
Explorer	4. 0L	V6 OHV	1998 MY	PCM	•	•	•	•
Explorer	4. 0L	V6 OHV	1998 MY	RAP	•	•	•	•
Explorer	4. 0L	V6 OHV	1999 MY	ABS/TCS	•	•	•	•
Explorer	4. 0L	V6 OHV	1999 MY	ARC	•	•	•	•
Explorer	4. 0L	V6 OHV	1999 MY	DSM	•	•	•	•
Explorer	4. 0L	V6 OHV	1999 MY	EATC	•	•	•	0
Explorer	4. 0L	V6 OHV	1999 MY	GEM	•	•	•	•
Explorer	4. 0L	V6 OHV	1999 MY	PAM	•	•	•	•
Explorer	4. 0L	V6 OHV	1999 MY	PATS	•	•	•	•
Explorer	4. 0L	V6 OHV	1999 MY	PCM	•	•	•	•
Explorer	4. 0L	V6 OHV	1999 MY	RAP	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Explorer	4. OL	V6 OHV	1999 MY	RCM	•	•	•	•
Explorer	4. 0L	V6 SOHC	1997 MY	ABS/TCS	•	•	•	•
Explorer	4. 0L	V6 SOHC	1997 MY	ARC	•	•	•	0
Explorer	4. 0L	V6 SOHC	1997 MY	EATC	•	•	•	0
Explorer	4. 0L	V6 SOHC	1997 MY	GEM	•	•	•	•
Explorer	4. 0L	V6 SOHC	1997 MY	IAB	•	•	•	0
Explorer	4. 0L	V6 SOHC	1997 MY	PCM	•	•	•	•
Explorer	4. 0L	V6 SOHC	1997 MY	RAP	•	•	•	•
Explorer	4. 0L	V6 SOHC	1998 MY	ABS/TCS	•	•	•	•
Explorer	4. 0L	V6 SOHC	1998 MY	ARC	•	•	•	•
Explorer	4. 0L	V6 SOHC	1998 MY	DSM	•	•	•	•
Explorer	4. 0L	V6 SOHC	1998 MY	EATC	•	•	•	0
Explorer	4. 0L	V6 SOHC	1998 MY	GEM	•	•	•	•
Explorer	4. 0L	V6 SOHC	1998 MY	IAB	•	•	•	•
Explorer	4. 0L	V6 SOHC	1998 MY	PAM	•	•	•	•
Explorer	4. 0L	V6 SOHC	1998 MY	PATS	•	•	•	•
Explorer	4. 0L	V6 SOHC	1998 MY	PCM	•	•	•	•
Explorer	4. 0L	V6 SOHC	1998 MY	RAP	•	•	•	•
Explorer	4. 0L	V6 SOHC	1999 MY	ABS/TCS	•	•	•	•
Explorer	4. 0L	V6 SOHC	1999 MY	ARC	•	•	•	•
Explorer	4. OL	V6 SOHC	1999 MY	DSM	•	•	•	•
Explorer	4. OL	V6 SOHC	1999 MY	EATC	•	•	•	0
Explorer	4. OL	V6 SOHC	1999 MY	GEM	•	•	•	•
Explorer	4. OL	V6 SOHC	1999 MY	MC	•	•	•	0
Explorer	4. 0L	V6 SOHC	1999 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Explorer	4. 0L	V6 SOHC	1999 MY	PATS	•	•	•	•
Explorer	4. 0L	V6 SOHC	1999 MY	PCM	•	•	•	•
Explorer	4. 0L	V6 SOHC	1999 MY	RAP	•	•	•	•
Explorer	4. 0L	V6 SOHC	1999 MY	RCM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2000 MY	ABS/TCS	•	•		•
Explorer	4. 0L	V6 SOHC	2000 MY	ARC	•	•	•	•
Explorer	4. 0L	V6 SOHC	2000 MY	DSM	•	•	•	
Explorer	4. 0L	V6 SOHC	2000 MY	EATC	•	•		0
Explorer	4. 0L	V6 SOHC	2000 MY	GEM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2000 MY	PAM	•	•		•
Explorer	4. 0L	V6 SOHC	2000 MY	PATS	•	•		•
Explorer	4. 0L	V6 SOHC	2000 MY	PCM	•	•		•
Explorer	4. 0L	V6 SOHC	2000 MY	RAP	•	•		•
Explorer	4. 0L	V6 SOHC	2000 MY	RCM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2002 MY	4X4	•	•	•	•
Explorer	4. 0L	V6 SOHC	2002 MY	ABS/TCS	•	•	•	•
Explorer	4. 0L	V6 SOHC	2002 MY	CSM	•	•	•	
Explorer	4. 0L	V6 SOHC	2002 MY	DSM	•	•		•
Explorer	4. 0L	V6 SOHC	2002 MY	EATC	•	•		•
Explorer	4. 0L	V6 SOHC	2002 MY	GEM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2002 MY	IC	•	•	•	•
Explorer	4. 0L	V6 SOHC	2002 MY	PAM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2002 MY	PCM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2002 MY	RCM	•	•	•	0
Explorer	4. 0L	V6 SOHC	2002.5 MY	4X4	•	•		

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Explorer	4. 0L	V6 SOHC	2002.5 MY	ABS/TCS	•	•	•	•
Explorer	4. 0L	V6 SOHC	2002.5 MY	CSM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2002.5 MY	DSM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2002.5 MY	EATC	•	•	•	•
Explorer	4. 0L	V6 SOHC	2002.5 MY	HEC	•	•		•
Explorer	4. 0L	V6 SOHC	2002.5 MY	PAM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2002.5 MY	PCM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2002.5 MY	RCM	•	•		•
Explorer	4. 0L	V6 SOHC	2002.5 MY	TPM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2003 MY	4X4	•	•		
Explorer	4. 0L	V6 SOHC	2003 MY	ABS/TCS	•	•		•
Explorer	4. 0L	V6 SOHC	2003 MY	DSM	•	•		•
Explorer	4. 0L	V6 SOHC	2003 MY	EATC	•	•		•
Explorer	4. 0L	V6 SOHC	2003 MY	HEC	•	•	•	•
Explorer	4. 0L	V6 SOHC	2003 MY	PAM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2003 MY	PCM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2003 MY	RCM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2003 MY	TPM	•	•		•
Explorer	4. 0L	V6 SOHC	2003 MY	VSM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2004 MY	4X4	•	•	•	•
Explorer	4. 0L	V6 SOHC	2004 MY	ABS	•	•	•	•
Explorer	4. 0L	V6 SOHC	2004 MY	DSM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2004 MY	EATC	•	•	•	•
Explorer	4. 0L	V6 SOHC	2004 MY	IC	•	•	•	•
Explorer	4. 0L	V6 SOHC	2004 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Explorer	4. OL	V6 SOHC	2004 MY	PCM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2004 MY	RCM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2004 MY	TPM	•	•	•	0
Explorer	4. 0L	V6 SOHC	2004 MY	VSM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2005 MY	4X4	•	•	•	•
Explorer	4. 0L	V6 SOHC	2005 MY	ABS	•	•	•	•
Explorer	4. 0L	V6 SOHC	2005 MY	DSM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2005 MY	EATC	•	•	•	•
Explorer	4. 0L	V6 SOHC	2005 MY	IC	•	•	•	•
Explorer	4. 0L	V6 SOHC	2005 MY	PAM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2005 MY	PCM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2005 MY	RCM	•	•	•	•
Explorer	4. 0L	V6 SOHC	2005 MY	TPM	•	•	•	
Explorer	4. 0L	V6 SOHC	2005 MY	VSM	•	•	•	•
Explorer	4. 6L	2V	2002 MY	4X4	•	•	•	•
Explorer	4. 6L	2V	2002 MY	ABS/TCS	•	•	•	•
Explorer	4. 6L	2V	2002 MY	CSM	•	•	•	•
Explorer	4. 6L	2V	2002 MY	DSM	•	•	•	•
Explorer	4. 6L	2V	2002 MY	EATC	•	•	•	•
Explorer	4. 6L	2V	2002 MY	GEM	•	•	•	•
Explorer	4. 6L	2V	2002 MY	IC	•	•	•	•
Explorer	4. 6L	2V	2002 MY	PAM	•	•	•	•
Explorer	4. 6L	2V	2002 MY	PCM	•	•	•	•
Explorer	4. 6L	2V	2002 MY	RCM	•	•	•	0
Explorer	4. 6L	2V	2002.5 MY	4X4	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Explorer	4. 6L	2V	2002.5 MY	ABS/TCS	•	•	•	•
Explorer	4. 6L	2V	2002.5 MY	CSM	•	•	•	•
Explorer	4. 6L	2V	2002.5 MY	DSM	•	•	•	•
Explorer	4. 6L	2V	2002.5 MY	EATC	•	•	•	•
Explorer	4. 6L	2V	2002.5 MY	HEC	•	•	•	•
Explorer	4. 6L	2V	2002.5 MY	PAM	•	•	•	•
Explorer	4. 6L	2V	2002.5 MY	PCM	•	•	•	•
Explorer	4. 6L	2V	2002.5 MY	RCM	•	•	•	•
Explorer	4. 6L	2V	2002.5 MY	TPM	•	•	•	•
Explorer	4. 6L	2V	2003 MY	4X4	•	•	•	
Explorer	4. 6L	2V	2003 MY	ABS/TCS	•	•	•	•
Explorer	4. 6L	2V	2003 MY	DSM	•	•	•	•
Explorer	4. 6L	2V	2003 MY	EATC	•	•	•	•
Explorer	4. 6L	2V	2003 MY	HEC	•	•	•	•
Explorer	4. 6L	2V	2003 MY	PAM	•	•	•	•
Explorer	4. 6L	2V	2003 MY	PCM	•	•	•	•
Explorer	4. 6L	2V	2003 MY	RCM	•	•	•	•
Explorer	4. 6L	2V	2003 MY	TPM	•	•	•	•
Explorer	4. 6L	2V	2003 MY	VSM	•	•	•	•
Explorer	4. 6L	2V	2004 MY	4X4	•	•	•	•
Explorer	4. 6L	2V	2004 MY	ABS	•	•	•	•
Explorer	4. 6L	2V	2004 MY	DSM	•	•	•	•
Explorer	4. 6L	2V	2004 MY	EATC	•	•	•	•
Explorer	4. 6L	2V	2004 MY	IC	•	•	•	•
Explorer	4. 6L	2V	2004 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Explorer	4. 6L	2V	2004 MY	PCM	•	•	•	•
Explorer	4. 6L	2V	2004 MY	RCM	•	•	•	•
Explorer	4. 6L	2V	2004 MY	TPM	•	•	•	0
Explorer	4. 6L	2V	2004 MY	VSM	•	•	•	•
Explorer	4.6L	2V	2005 MY	4X4	•	•	•	•
Explorer	4.6L	2V	2005 MY	ABS	•	•	•	•
Explorer	4. 6L	2V	2005 MY	DSM	•	•	•	•
Explorer	4. 6L	2V	2005 MY	EATC	•	•	•	•
Explorer	4.6L	2V	2005 MY	IC	•	•	•	•
Explorer	4.6L	2V	2005 MY	PAM	•	•	•	•
Explorer	4.6L	2V	2005 MY	PCM	•	•	•	•
Explorer	4.6L	2V	2005 MY	RCM	•	•	•	•
Explorer	4.6L	2V	2005 MY	TPM	•	•	•	
Explorer	4. 6L	2V	2005 MY	VSM	•	•	•	•
Explorer	4. 6L	3V	2006 MY	4X4	•	•	•	•
Explorer	4. 6L	3V	2006 MY	ABS	•	•	•	•
Explorer	4.6L	3V	2006 MY	ACM	•	•	•	0
Explorer	4.6L	3V	2006 MY	DSM	•	•	•	•
Explorer	4. 6L	3V	2006 MY	EATC	•	•	•	•
Explorer	4. 6L	3V	2006 MY	GEM	•	•	•	•
Explorer	4. 6L	3V	2006 MY	IC	•	•	•	
Explorer	4. 6L	3V	2006 MY	OCSM	•	•	•	0
Explorer	4. 6L	3V	2006 MY	PAM	•	•	•	•
Explorer	4. 6L	3V	2006 MY	PCM	•	•	•	•
Explorer	4. 6L	3V	2006 MY	PRB	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Explorer	4. 6L	3V	2006 MY	RCM	•	•	•	•
Explorer	4. 6L	3V	2006 MY	RETM	•	•	•	
Explorer	4. 6L	3V	2006 MY	SDARS	•	•	•	•
Explorer	4. 6L	3V	2006 MY	TCM	•	•	•	•
Explorer	4. 6L	3V	2007 MY	4X4	•	•	•	•
Explorer	4. 6L	3V	2007 MY	ABS	•	•	•	•
Explorer	4. 6L	3V	2007 MY	ACM	•	•	•	0
Explorer	4. 6L	3V	2007 MY	DSM	•	•	•	•
Explorer	4. 6L	3V	2007 MY	EATC	•	•	•	•
Explorer	4. 6L	3V	2007 MY	GEM	•	•	•	
Explorer	4. 6L	3V	2007 MY	IC	•	•	•	
Explorer	4. 6L	3V	2007 MY	OCSM	•	•	•	
Explorer	4.6L	3V	2007 MY	PAM	•	•	•	0
Explorer	4. 6L	3V	2007 MY	PCM	•	•	•	
Explorer	4. 6L	3V	2007 MY	PRB	•	•	•	
Explorer	4.6L	3V	2007 MY	RCM	•	•	•	•
Explorer	4.6L	3V	2007 MY	RETM	•	•	•	0
Explorer	4.6L	3V	2007 MY	SDARS	•	•	•	•
Explorer	4. 6L	3V	2007 MY	TCM	•	•	•	•
Explorer	4. 6L	3V	2008 MY	4X4	•	•	•	•
Explorer	4. 6L	3V	2008 MY	ABS	•	•		
Explorer	4.6L	3V	2008 MY	ACM	•	•	•	0
Explorer	4.6L	3V	2008 MY	APIM	•	•	•	0
Explorer	4. 6L	3V	2008 MY	DSM	•	•	•	•
Explorer	4. 6L	3V	2008 MY	GEM / SJB	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Explorer	4. 6L	3V	2008 MY	HVAC	•	•	•	•
Explorer	4. 6L	3V	2008 MY	IC	•	•	•	
Explorer	4. 6L	3V	2008 MY	OCSM	•	•	•	
Explorer	4. 6L	3V	2008 MY	PAM	•	•	•	0
Explorer	4. 6L	3V	2008 MY	PCM	•	•	•	•
Explorer	4. 6L	3V	2008 MY	PRB	•	•	•	•
Explorer	4.6L	3V	2008 MY	RCM	•	•	•	
Explorer	4.6L	3V	2008 MY	RETM	•	•	•	0
Explorer	4.6L	3V	2008 MY	SDARS	•	•	•	•
Explorer	4.6L	3V	2008 MY	TCM	•	•	•	•
Explorer	4. 6L	3V	2009 MY	4X4	•		•	•
Explorer	4. 6L	3V	2009 MY	ABS	•		•	•
Explorer	4.6L	3V	2009 MY	ACM	•	•	•	•
Explorer	4.6L	3V	2009 MY	ACM	•	•	•	0
Explorer	4. 6L	3V	2009 MY	APIM	•		•	0
Explorer	4. 6L	3V	2009 MY	DSM	•		•	•
Explorer	4.6L	3V	2009 MY	GEM / SJB	•		•	•
Explorer	4.6L	3V	2009 MY	HVAC	•	•	•	•
Explorer	4. 6L	3V	2009 MY	IC	•		•	
Explorer	4.6L	3V	2009 MY	OCSM	•	•	•	
Explorer	4. 6L	3V	2009 MY	PAM	•		•	0
Explorer	4.6L	3V	2009 MY	PCM	•	•	•	•
Explorer	4.6L	3V	2009 MY	PRB	•	•	•	•
Explorer	4.6L	3V	2009 MY	RCM	•	•	•	
Explorer	4. 6L	3V	2009 MY	RETM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Explorer	4. 6L	3V	2009 MY	SDARS	•	•	•	•
Explorer	4. 6L	3V	2009 MY	TCM	•	•	•	•
Explorer	4. 6L	3V	2010 MY	4X4	•	•	•	•
Explorer	4. 6L	3V	2010 MY	ABS	•	•	•	•
Explorer	4. 6L	3V	2010 MY	ACM	•	•	•	•
Explorer	4. 6L	3V	2010 MY	ACM	•	•	•	0
Explorer	4. 6L	3V	2010 MY	APIM	•	•	•	0
Explorer	4. 6L	3V	2010 MY	DSM	•	•	•	•
Explorer	4. 6L	3V	2010 MY	GEM / SJB	•	•	•	•
Explorer	4. 6L	3V	2010 MY	GPSM	•	•	•	0
Explorer	4. 6L	3V	2010 MY	HVAC	•	•	•	•
Explorer	4. 6L	3V	2010 MY	IC	•	•	•	•
Explorer	4. 6L	3V	2010 MY	OCSM	•	•	•	
Explorer	4. 6L	3V	2010 MY	PAM	•	•	•	0
Explorer	4. 6L	3V	2010 MY	PCM	•	•	•	•
Explorer	4. 6L	3V	2010 MY	PRB	•	•	•	•
Explorer	4. 6L	3V	2010 MY	RCM	•	•	•	•
Explorer	4. 6L	3V	2010 MY	RETM	•	•	•	0
Explorer	4. 6L	3V	2010 MY	SDARS	•	•	•	•
Explorer	4. 6L	3V	2010 MY	TCM	•	•	•	•
Explorer	5. 0L	0ther	1996 MY	ABS/TCS	•	•	•	•
Explorer	5. OL	0ther	1996 MY	EATC	•	•	•	0
Explorer	5. OL	0ther	1996 MY	GEM	•	•	•	•
Explorer	5. OL	0ther	1996 MY	IAB	•	•	•	0
Explorer	5. 0L	0ther	1996 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Explorer	5. 0L	Other	1996 MY	RAP	•	•	•	•
Explorer	5. 0L	Other	1997 MY	ABS/TCS	•	•	•	•
Explorer	5. 0L	Other	1997 MY	ARC	•	•	•	0
Explorer	5. 0L	Other	1997 MY	EATC	•	•	•	0
Explorer	5. 0L	Other	1997 MY	GEM	•	•	•	•
Explorer	5. 0L	Other	1997 MY	IAB	•	•	•	0
Explorer	5. 0L	Other	1997 MY	PCM	•	•	•	•
Explorer	5. 0L	Other	1997 MY	RAP	•	•	•	•
Explorer	5. 0L	Other	1998 MY	ABS/TCS	•	•	•	•
Explorer	5. 0L	Other	1998 MY	ARC	•	•	•	
Explorer	5. 0L	Other	1998 MY	DSM	•	•	•	•
Explorer	5. 0L	Other	1998 MY	EATC	•	•	•	0
Explorer	5. 0L	Other	1998 MY	GEM	•	•	•	•
Explorer	5. 0L	Other	1998 MY	IAB	•	•	•	•
Explorer	5. 0L	Other	1998 MY	PAM	•	•	•	•
Explorer	5. 0L	Other	1998 MY	PATS	•	•	•	•
Explorer	5. 0L	Other	1998 MY	PCM	•	•	•	•
Explorer	5. 0L	Other	1998 MY	RAP	•	•	•	•
Explorer	5. 0L	Other	1999 MY	ABS/TCS	•	•	•	•
Explorer	5. 0L	Other	1999 MY	ARC	•	•	•	•
Explorer	5. 0L	Other	1999 MY	DSM	•	•	•	•
Explorer	5. 0L	Other	1999 MY	EATC	•	•	•	0
Explorer	5. 0L	Other	1999 MY	GEM	•	•	•	•
Explorer	5. 0L	Other	1999 MY	PAM	•	•	•	•
Explorer	5. OL	Other	1999 MY	PATS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Explorer	5. 0L	Other	1999 MY	PCM	•	•	•	•
Explorer	5. 0L	Other	1999 MY	RAP	•	•	•	•
Explorer	5. 0L	Other	1999 MY	RCM	•	•	•	•
Explorer	5. 0L	Other	2000 MY	ABS/TCS	•	•	•	•
Explorer	5. 0L	Other	2000 MY	ARC	•	•		•
Explorer	5. 0L	Other	2000 MY	DSM	•	•	•	•
Explorer	5. 0L	Other	2000 MY	EATC	•	•	•	0
Explorer	5. 0L	Other	2000 MY	GEM	•	•		•
Explorer	5. 0L	Other	2000 MY	PAM	•	•	•	•
Explorer	5. 0L	Other	2000 MY	PATS	•	•		•
Explorer	5. 0L	Other	2000 MY	PCM	•	•		•
Explorer	5. 0L	Other	2000 MY	RAP	•	•		•
Explorer	5. 0L	Other	2000 MY	RCM	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2000.5 MY	4X4	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2000.5 MY	ABS/TCS	•	•		•
Explorer Sport	4. 0L	V6 SOHC	2000.5 MY	GEM	•	•		•
Explorer Sport	4. 0L	V6 SOHC	2000.5 MY	PATS	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2000.5 MY	PCM	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2000.5 MY	RAP	•	•		•
Explorer Sport	4. 0L	V6 SOHC	2000.5 MY	RCM	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2001 MY	4X4	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2001 MY	ABS/TCS	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2001 MY	GEM	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2001 MY	PCM	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2001 MY	RAP	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Explorer Sport	4. 0L	V6 SOHC	2001 MY	RCM	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2002 MY	4X4	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2002 MY	ABS/TCS	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2002 MY	GEM	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2002 MY	PCM	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2002 MY	RAP	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2002 MY	RCM	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2003 MY	4X4	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2003 MY	ABS/TCS	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2003 MY	GEM	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2003 MY	PCM	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2003 MY	RAP	•	•	•	•
Explorer Sport	4. 0L	V6 SOHC	2003 MY	RCM	•	•	•	•
Explorer SportTrac	4. 0L	2V	2007 MY	4X4	•	•	•	•
Explorer SportTrac	4. 0L	2V	2007 MY	ABS	•	•	•	•
Explorer SportTrac	4. 0L	2V	2007 MY	ACM	•	•	•	0
Explorer SportTrac	4. 0L	2V	2007 MY	EATC	•	•	•	•
Explorer SportTrac	4. 0L	2V	2007 MY	GEM	•	•	•	•
Explorer SportTrac	4. 0L	2V	2007 MY	IC	•	•	•	•
Explorer SportTrac	4. 0L	2V	2007 MY	OCSM	•	•	•	
Explorer SportTrac	4. 0L	2V	2007 MY	PAM	•	•		
Explorer SportTrac	4. 0L	2V	2007 MY	PCM	•	•	•	•
Explorer SportTrac	4. 0L	2V	2007 MY	RCM	•	•	•	•
Explorer SportTrac	4. 0L	2V	2007 MY	RETM	•	•	•	0
Explorer SportTrac	4. 0L	2V	2007 MY	SDARS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Explorer SportTrac	4. 0L	2V	2008 MY	4X4	•	•	•	•
Explorer SportTrac	4. 0L	2V	2008 MY	ABS	•	•	•	•
Explorer SportTrac	4. 0L	2V	2008 MY	ACM	•	•	•	0
Explorer SportTrac	4. 0L	2V	2008 MY	APIM	•	•	•	0
Explorer SportTrac	4. 0L	2V	2008 MY	GEM / SJB	•	•	•	•
Explorer SportTrac	4. 0L	2V	2008 MY	HVAC	•	•	•	•
Explorer SportTrac	4. 0L	2V	2008 MY	IC	•	•	•	
Explorer SportTrac	4. 0L	2V	2008 MY	OCSM	•	•	•	
Explorer SportTrac	4. 0L	2V	2008 MY	PAM	•	•	•	•
Explorer SportTrac	4. 0L	2V	2008 MY	PCM	•	•	•	•
Explorer SportTrac	4. 0L	2V	2008 MY	RCM	•	•	•	
Explorer SportTrac	4. 0L	2V	2008 MY	RETM	•	•	•	0
Explorer SportTrac	4. 0L	2V	2008 MY	SDARS	•	•	•	•
Explorer SportTrac	4. 0L	2V	2009 MY	4X4	•	•	•	•
Explorer SportTrac	4. 0L	2V	2009 MY	ABS	•	•	•	•
Explorer SportTrac	4. 0L	2V	2009 MY	ACM	•	•	•	•
Explorer SportTrac	4. 0L	2V	2009 MY	ACM	•	•	•	0
Explorer SportTrac	4. 0L	2V	2009 MY	APIM	•	•	•	0
Explorer SportTrac	4. 0L	2V	2009 MY	GEM / SJB	•	•	•	•
Explorer SportTrac	4. 0L	2V	2009 MY	HVAC	•	•	•	•
Explorer SportTrac	4. 0L	2V	2009 MY	IC	•	•	•	
Explorer SportTrac	4. 0L	2V	2009 MY	OCSM	•	•	•	
Explorer SportTrac	4. 0L	2V	2009 MY	PAM	•	•	•	•
Explorer SportTrac	4. 0L	2V	2009 MY	PCM	•	•	•	•
Explorer SportTrac	4. 0L	2V	2009 MY	RCM	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Explorer SportTrac	4. 0L	2V	2009 MY	RETM	•	•	•	0
Explorer SportTrac	4. 0L	2V	2009 MY	SDARS	•	•	•	•
Explorer SportTrac	4. 0L	2V	2010 MY	4X4	•	•	•	•
Explorer SportTrac	4. 0L	2V	2010 MY	ABS	•	•	•	•
Explorer SportTrac	4. 0L	2V	2010 MY	ACM	•	•	•	•
Explorer SportTrac	4. 0L	2V	2010 MY	ACM	•	•	•	0
Explorer SportTrac	4. 0L	2V	2010 MY	APIM	•	•	•	0
Explorer SportTrac	4. 0L	2V	2010 MY	GEM / SJB	•	•	•	•
Explorer SportTrac	4. 0L	2V	2010 MY	GPSM	•	•	•	0
Explorer SportTrac	4. 0L	2V	2010 MY	HVAC	•	•	•	•
Explorer SportTrac	4. 0L	2V	2010 MY	IC	•	•	•	•
Explorer SportTrac	4. 0L	2V	2010 MY	OCSM	•	•	•	
Explorer SportTrac	4. 0L	2V	2010 MY	PAM	•	•	•	•
Explorer SportTrac	4. 0L	2V	2010 MY	PCM	•	•	•	•
Explorer SportTrac	4. 0L	2V	2010 MY	RCM	•	•	•	•
Explorer SportTrac	4. 0L	2V	2010 MY	RETM	•	•	•	0
Explorer SportTrac	4. 0L	2V	2010 MY	SDARS	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2000.5 MY	4X4	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2000.5 MY	ABS/TCS	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2000.5 MY	GEM	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2000.5 MY	PCM	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2000.5 MY	RAP	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2000.5 MY	RCM	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2001 MY	4X4	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2001 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Explorer SportTrac	4. 0L	V6 SOHC	2001 MY	GEM	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2001 MY	PCM	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2001 MY	RAP	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2001 MY	RCM	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2002 MY	4X4	•	•		•
Explorer SportTrac	4. 0L	V6 SOHC	2002 MY	ABS/TCS	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2002 MY	GEM	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2002 MY	PCM	•	•		•
Explorer SportTrac	4. 0L	V6 SOHC	2002 MY	RAP	•	•		•
Explorer SportTrac	4. 0L	V6 SOHC	2002 MY	RCM	•	•		•
Explorer SportTrac	4. 0L	V6 SOHC	2003 MY	4X4	•	•		•
Explorer SportTrac	4. 0L	V6 SOHC	2003 MY	ABS/TCS	•	•		•
Explorer SportTrac	4. 0L	V6 SOHC	2003 MY	GEM	•	•		•
Explorer SportTrac	4. 0L	V6 SOHC	2003 MY	PCM	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2003 MY	RAP	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2003 MY	RCM	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2004 MY	4X4	•	•	•	
Explorer SportTrac	4. 0L	V6 SOHC	2004 MY	ABS/TCS	•	•		•
Explorer SportTrac	4. 0L	V6 SOHC	2004 MY	HEC	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2004 MY	PCM	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2004 MY	RAP	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2004 MY	RCM	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2005 MY	4X4	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2005 MY	ABS/TCS	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2005 MY	HEC	•	•		•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Explorer SportTrac	4. OL	V6 SOHC	2005 MY	PCM	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2005 MY	RAP	•	•	•	•
Explorer SportTrac	4. 0L	V6 SOHC	2005 MY	RCM	•	•	•	•
Explorer SportTrac	4.6L	3V	2007 MY	4X4	•	•	•	•
Explorer SportTrac	4.6L	3V	2007 MY	ABS	•	•		•
Explorer SportTrac	4.6L	3V	2007 MY	ACM	•	•	•	0
Explorer SportTrac	4.6L	3V	2007 MY	EATC	•	•	•	
Explorer SportTrac	4.6L	3V	2007 MY	GEM	•	•		
Explorer SportTrac	4.6L	3V	2007 MY	IC	•	•	•	
Explorer SportTrac	4.6L	3V	2007 MY	OCSM	•	•		
Explorer SportTrac	4.6L	3V	2007 MY	PAM	•	•		
Explorer SportTrac	4.6L	3V	2007 MY	PCM	•	•		
Explorer SportTrac	4.6L	3V	2007 MY	RCM	•	•	•	
Explorer SportTrac	4.6L	3V	2007 MY	RETM	•	•	•	0
Explorer SportTrac	4.6L	3V	2007 MY	SDARS	•	•	•	•
Explorer SportTrac	4.6L	3V	2007 MY	TCM	•	•	•	•
Explorer SportTrac	4.6L	3V	2008 MY	4X4	•	•	•	
Explorer SportTrac	4.6L	3V	2008 MY	ABS	•	•		
Explorer SportTrac	4.6L	3V	2008 MY	ACM	•	•	•	0
Explorer SportTrac	4.6L	3V	2008 MY	APIM	•	•	•	0
Explorer SportTrac	4.6L	3V	2008 MY	GEM / SJB	•	•	•	•
Explorer SportTrac	4.6L	3V	2008 MY	HVAC	•	•	•	•
Explorer SportTrac	4.6L	3V	2008 MY	IC	•	•	•	
Explorer SportTrac	4.6L	3V	2008 MY	OCSM	•	•	•	
Explorer SportTrac	4.6L	3V	2008 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Explorer SportTrac	4. 6L	3V	2008 MY	PCM	Oucs	• COUCS	Data	•
Explorer SportTrac	4.6L	3V	2008 MY	RCM	•	•	•	
Explorer SportTrac	4.6L	3V	2008 MY	RETM	•	•	•	0
Explorer SportTrac	4.6L	3V	2008 MY	SDARS	•	•	•	•
Explorer SportTrac	4.6L	3V	2008 MY	TCM	•	•	•	•
Explorer SportTrac	4.6L	3V	2009 MY	4X4	•	•	•	•
Explorer SportTrac	4.6L	3V	2009 MY	ABS	•	•	•	•
Explorer SportTrac	4.6L	3V	2009 MY	ACM	•	•	•	•
Explorer SportTrac	4.6L	3V	2009 MY	ACM	•	•	•	0
Explorer SportTrac	4.6L	3V	2009 MY	APIM	•	•	•	0
Explorer SportTrac	4.6L	3V	2009 MY	GEM / SJB	•	•	•	•
Explorer SportTrac	4.6L	3V	2009 MY	HVAC	•	•	•	•
Explorer SportTrac	4.6L	3V	2009 MY	IC	•	•	•	
Explorer SportTrac	4.6L	3V	2009 MY	OCSM	•	•	•	
Explorer SportTrac	4.6L	3V	2009 MY	PAM	•	•	•	•
Explorer SportTrac	4.6L	3V	2009 MY	PCM	•	•	•	•
Explorer SportTrac	4.6L	3V	2009 MY	RCM	•	•	•	
Explorer SportTrac	4.6L	3V	2009 MY	RETM	•	•	•	0
Explorer SportTrac	4.6L	3V	2009 MY	SDARS	•	•	•	•
Explorer SportTrac	4.6L	3V	2009 MY	TCM	•	•	•	•
Explorer SportTrac	4.6L	3V	2010 MY	4X4	•	•	•	•
Explorer SportTrac	4.6L	3V	2010 MY	ABS	•	•	•	•
Explorer SportTrac	4.6L	3V	2010 MY	ACM	•	•	•	•
Explorer SportTrac	4.6L	3V	2010 MY	ACM	•	•	•	0
Explorer SportTrac	4.6L	3V	2010 MY	APIM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Explorer SportTrac	4. 6L	3V	2010 MY	GEM / SJB	•	•	•	•
Explorer SportTrac	4. 6L	3V	2010 MY	GPSM	•	•	•	0
Explorer SportTrac	4. 6L	3V	2010 MY	HVAC	•	•	•	•
Explorer SportTrac	4.6L	3V	2010 MY	IC	•	•	•	•
Explorer SportTrac	4.6L	3V	2010 MY	OCSM	•	•	•	
Explorer SportTrac	4.6L	3V	2010 MY	PAM	•	•	•	•
Explorer SportTrac	4.6L	3V	2010 MY	PCM	•	•	•	•
Explorer SportTrac	4.6L	3V	2010 MY	RCM	•	•	•	•
Explorer SportTrac	4.6L	3V	2010 MY	RETM	•	•	•	0
Explorer SportTrac	4. 6L	3V	2010 MY	SDARS	•	•	•	•
Explorer SportTrac	4.6L	3V	2010 MY	TCM	•	•	•	•
F-150			2004 MY	4X4	•	•	•	•
F-150			2004 MY	ABS	•	•	•	•
F-150			2004 MY	DSM	•	•	•	•
F-150			2004 MY	EATC	•	•	•	•
F-150			2004 MY	IC	•	•	•	•
F-150			2004 MY	PAM	•	•	•	•
F-150			2004 MY	PCM	•	•	•	•
F-150			2004 MY	RCM	•	•	•	•
F-150			2004 MY	VSM	•	•	•	•
F-150	4. 2L	2V	2005 MY	4X4	•	•	•	•
F-150	4. 2L	2V	2005 MY	ABS	•	•	•	•
F-150	4. 2L	2V	2005 MY	DSM	•	•	•	•
F-150	4. 2L	2V	2005 MY	EATC	•	•	•	•
F-150	4. 2L	2V	2005 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-150	4. 2L	2V	2005 MY	PAM	•	•	•	•
F-150	4. 2L	2V	2005 MY	PCM	•	•	•	•
F-150	4. 2L	2V	2005 MY	RCM	•	•	•	•
F-150	4. 2L	2V	2005 MY	VSM	•	•	•	•
F-150	4. 2L	2V	2006 MY	4X4	•	•	•	•
F-150	4. 2L	2V	2006 MY	ABS	•	•	•	•
F-150	4. 2L	2V	2006 MY	DSM	•	•	•	•
F-150	4. 2L	2V	2006 MY	EATC	•	•	•	•
F-150	4. 2L	2V	2006 MY	IC	•	•	•	•
F-150	4. 2L	2V	2006 MY	PAM	•	•	•	•
F-150	4. 2L	2V	2006 MY	PCM	•	•	•	•
F-150	4. 2L	2V	2006 MY	RCM	•	•	•	•
F-150	4. 2L	2V	2006 MY	VSM	•	•	•	•
F-150	4. 2L	2V	2007 MY	4X4	•	•	•	•
F-150	4. 2L	2V	2007 MY	ABS	•	•	•	•
F-150	4. 2L	2V	2007 MY	DSM	•	•	•	•
F-150	4. 2L	2V	2007 MY	EATC	•	•	•	•
F-150	4. 2L	2V	2007 MY	IC	•	•	•	•
F-150	4. 2L	2V	2007 MY	PAM	•	•	•	•
F-150	4. 2L	2V	2007 MY	PCM	•	•	•	•
F-150	4. 2L	2V	2007 MY	RCM	•	•	•	•
F-150	4. 2L	2V	2007 MY	VSM	•	•	•	•
F-150	4. 2L	2V	2008 MY	4X4	•	•	•	•
F-150	4. 2L	2V	2008 MY	ABS	•	•	•	•
F-150	4. 2L	2V	2008 MY	DSM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
F-150	4. 2L	2V	2008 MY	HVAC	•	•	•	•
F-150	4. 2L	2V	2008 MY	IC	•	•	•	•
F-150	4. 2L	2V	2008 MY	PAM	•	•	•	•
F-150	4.2L	2V	2008 MY	PCM	•	•	•	•
F-150	4.2L	2V	2008 MY	RCM	•	•	•	•
F-150	4.2L	2V	2008 MY	VSM	•	•	•	•
F-150	4.2L	Other	1997 MY	ABS/TCS	•	•	•	•
F-150	4. 2L	Other	1997 MY	GEM	•	•	•	•
F-150	4.2L	Other	1997 MY	IAB	•	•	•	•
F-150	4.2L	Other	1997 MY	PCM	•	•	•	•
F-150	4.2L	Other	1997 MY	RAP	•	•	•	•
F-150	4.2L	Other	1998 MY	ABS/TCS	•	•	•	•
F-150	4.2L	Other	1998 MY	GEM	•	•	•	•
F-150	4. 2L	Other	1998 MY	IAB	•	•	•	•
F-150	4. 2L	Other	1998 MY	PCM	•	•	•	•
F-150	4. 2L	Other	1998 MY	RAP	•	•	•	•
F-150	4. 2L	Other	1999 MY	ABS/TCS	•	•	•	•
F-150	4.2L	Other	1999 MY	GEM	•	•	•	•
F-150	4. 2L	Other	1999 MY	IAB	•	•	•	•
F-150	4. 2L	Other	1999 MY	IC	•	•	•	•
F-150	4. 2L	Other	1999 MY	PCM	•	•	•	•
F-150	4. 2L	Other	1999 MY	RAP	•	•	•	•
F-150	4. 2L	Other	2000 MY	ABS/TCS	•	•	•	•
F-150	4.2L	Other	2000 MY	GEM	•	•	•	•
F-150	4. 2L	Other	2000 MY	IAB	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
F-150	4. 2L	Other	2000 MY	IC	•	•	•	•
F-150	4. 2L	Other	2000 MY	PCM	•	•	•	•
F-150	4. 2L	Other	2000 MY	RAP	•	•	•	•
F-150	4.2L	Other	2002 MY	ABS/TCS	•	•	•	•
F-150	4.2L	Other	2002 MY	GEM	•	•	•	•
F-150	4.2L	Other	2002 MY	IC	•	•	•	•
F-150	4.2L	Other	2002 MY	PCM	•	•	•	•
F-150	4.2L	Other	2002 MY	RAP	•	•	•	•
F-150	4.2L	Other	2002 MY	RCM	•	•	•	0
F-150	4.2L	Other	2003 MY	ABS/TCS	•	•	•	
F-150	4.2L	Other	2003 MY	GEM	•	•	•	•
F-150	4.2L	Other	2003 MY	IC	•	•	•	•
F-150	4.2L	Other	2003 MY	PCM	•	•	•	•
F-150	4.2L	Other	2003 MY	RAP	•	•	•	•
F-150	4.2L	Other	2003 MY	RCM	•	•	•	0
F-150	4.2L	Other	2004 MY	ABS/TCS	•	•	•	•
F-150	4.2L	Other	2004 MY	GEM	•	•	•	•
F-150	4.2L	Other	2004 MY	IC	•	•	•	•
F-150	4.2L	Other	2004 MY	PCM	•	•	•	•
F-150	4.2L	Other	2004 MY	RAP	•	•	•	•
F-150	4.2L	Other	2004 MY	RCM	•	•	•	0
F-150	4.2L	Other	2005 MY	ABS/TCS	•	•	•	•
F-150	4.2L	Other	2005 MY	GEM	•	•	•	•
F-150	4.2L	Other	2005 MY	IC	•	•	•	•
F-150	4. 2L	Other	2005 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-150	4. 2L	Other	2005 MY	RAP	•	•	•	•
F-150	4. 2L	Other	2005 MY	RCM	•	•	•	0
F-150	4. 2L	Other	2006 MY	ABS/TCS	•	•	•	•
F-150	4. 2L	Other	2006 MY	GEM		•	•	•
F-150	4. 2L	Other	2006 MY	IC		•	•	•
F-150	4. 2L	Other	2006 MY	PCM		•	•	•
F-150	4. 2L	Other	2006 MY	RAP	•	•	•	•
F-150	4. 2L	Other	2006 MY	RCM		•	•	0
F-150	4.6L	2V	2003 MY	ABS/TCS		•	•	•
F-150	4.6L	2V	2003 MY	GEM		•	•	•
F-150	4.6L	2V	2003 MY	IC		•	•	•
F-150	4.6L	2V	2003 MY	PCM		•	•	•
F-150	4.6L	2V	2003 MY	RAP		•	•	•
F-150	4.6L	2V	2003 MY	RCM		•	•	0
F-150	4.6L	2V	2004 MY	4X4		•	•	•
F-150	4.6L	2V	2004 MY	ABS		•	•	•
F-150	4.6L	2V	2004 MY	ABS/TCS	•	•	•	•
F-150	4.6L	2V	2004 MY	DSM	•	•	•	•
F-150	4.6L	2V	2004 MY	EATC	•	•	•	•
F-150	4.6L	2V	2004 MY	GEM	•	•	•	•
F-150	4.6L	2V	2004 MY	IC	•	•	•	•
F-150	4.6L	2V	2004 MY	PAM	•	•	•	•
F-150	4.6L	2V	2004 MY	PCM	•	•	•	•
F-150	4.6L	2V	2004 MY	RAP	•	•	•	•
F-150	4.6L	2V	2004 MY	RCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-150	4. 6L	2V	2004 MY	RCM	•	•	•	0
F-150	4. 6L	2V	2004 MY	VSM	•	•	•	•
F-150	4. 6L	2V	2005 MY	4X4	•	•	•	•
F-150	4. 6L	2V	2005 MY	ABS	•	•	•	•
F-150	4. 6L	2V	2005 MY	ABS/TCS	•	•	•	•
F-150	4. 6L	2V	2005 MY	DSM	•	•	•	•
F-150	4. 6L	2V	2005 MY	EATC	•	•	•	•
F-150	4. 6L	2V	2005 MY	GEM	•	•	•	•
F-150	4. 6L	2V	2005 MY	IC	•	•	•	•
F-150	4. 6L	2V	2005 MY	PAM	•	•	•	•
F-150	4. 6L	2V	2005 MY	PCM	•	•	•	•
F-150	4. 6L	2V	2005 MY	RAP	•	•	•	•
F-150	4. 6L	2V	2005 MY	RCM	•	•	•	•
F-150	4. 6L	2V	2005 MY	RCM	•	•	•	0
F-150	4. 6L	2V	2005 MY	VSM	•	•	•	•
F-150	4. 6L	2V	2006 MY	4X4	•	•	•	•
F-150	4. 6L	2V	2006 MY	ABS	•	•	•	•
F-150	4. 6L	2V	2006 MY	ABS/TCS	•	•	•	•
F-150	4. 6L	2V	2006 MY	DSM	•	•	•	•
F-150	4. 6L	2V	2006 MY	EATC	•	•	•	•
F-150	4. 6L	2V	2006 MY	GEM	•	•	•	•
F-150	4. 6L	2V	2006 MY	IC	•	•	•	•
F-150	4. 6L	2V	2006 MY	PAM	•	•	•	•
F-150	4. 6L	2V	2006 MY	PCM	•	•	•	•
F-150	4. 6L	2V	2006 MY	RAP	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-150	4. 6L	2V	2006 MY	RCM	•	•	•	•
F-150	4. 6L	2V	2006 MY	RCM	•	•	•	0
F-150	4. 6L	2V	2006 MY	VSM	•	•	•	•
F-150	4. 6L	2V	2007 MY	4X4	•	•	•	•
F-150	4. 6L	2V	2007 MY	ABS	•		•	•
F-150	4. 6L	2V	2007 MY	DSM	•	•	•	•
F-150	4. 6L	2V	2007 MY	EATC	•	•	•	•
F-150	4. 6L	2V	2007 MY	IC	•		•	•
F-150	4. 6L	2V	2007 MY	PAM	•		•	•
F-150	4. 6L	2V	2007 MY	PCM	•		•	•
F-150	4. 6L	2V	2007 MY	RCM	•		•	•
F-150	4. 6L	2V	2007 MY	VSM	•		•	•
F-150	4. 6L	2V	2008 MY	4X4	•	•	•	•
F-150	4. 6L	2V	2008 MY	ABS	•	•	•	•
F-150	4. 6L	2V	2008 MY	DSM	•	•	•	•
F-150	4. 6L	2V	2008 MY	HVAC	•	•	•	•
F-150	4. 6L	2V	2008 MY	IC	•		•	•
F-150	4. 6L	2V	2008 MY	PAM	•	•	•	•
F-150	4. 6L	2V	2008 MY	PCM	•	•	•	•
F-150	4. 6L	2V	2008 MY	RCM	•	•	•	•
F-150	4. 6L	2V	2008 MY	VSM	•	•	•	•
F-150	4. 6L	2V	2009 MY	ABS	•	•	•	
F-150	4. 6L	2V	2009 MY	ACM	•	•	•	0
F-150	4. 6L	2V	2009 MY	DCSM	•	•	•	•
F-150	4.6L	2V	2009 MY	DSM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
F-150	4. 6L	2V	2009 MY	DSP	•	•	•	0
F-150	4. 6L	2V	2009 MY	FCIM	•	•	•	•
F-150	4. 6L	2V	2009 MY	FDIM	•	•	•	•
F-150	4. 6L	2V	2009 MY	GEM / SJB	•	•	•	•
F-150	4.6L	2V	2009 MY	HVAC	•	•	•	
F-150	4.6L	2V	2009 MY	IC	•	•	•	•
F-150	4.6L	2V	2009 MY	OCSM	•	•	•	0
F-150	4.6L	2V	2009 MY	PAM	•	•	•	•
F-150	4.6L	2V	2009 MY	PCM	•	•	•	•
F-150	4.6L	2V	2009 MY	PRB	•	•	•	
F-150	4.6L	2V	2009 MY	RCM	•	•	•	0
F-150	4.6L	2V	2009 MY	TBC	•	•	•	0
F-150	4.6L	2V	2009 MY	TCCM	•	•	•	•
F-150	4.6L	2V	2010 MY	ABS	•	•	•	•
F-150	4.6L	2V	2010 MY	ACM	•	•	•	0
F-150	4.6L	2V	2010 MY	APIM	•	•	•	0
F-150	4.6L	2V	2010 MY	DCSM	•	•	•	•
F-150	4.6L	2V	2010 MY	DSM	•	•	•	•
F-150	4.6L	2V	2010 MY	DSP	•	•	•	0
F-150	4.6L	2V	2010 MY	FCIM	•	•	•	•
F-150	4. 6L	2V	2010 MY	FDIM	•	•	•	•
F-150	4.6L	2V	2010 MY	GEM / SJB	•	•	•	•
F-150	4. 6L	2V	2010 MY	GPSM	•	•	•	0
F-150	4. 6L	2V	2010 MY	HVAC	•	•	•	•
F-150	4. 6L	2V	2010 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-150	4.6L	2V	2010 MY	ILCM	•	•	•	•
F-150	4. 6L	2V	2010 MY	OCSM	•	•	•	0
F-150	4. 6L	2V	2010 MY	PAM	•	•	•	•
F-150	4. 6L	2V	2010 MY	PCM	•	•	•	•
F-150	4. 6L	2V	2010 MY	PRB	•	•	•	•
F-150	4.6L	2V	2010 MY	RCM	•	•	•	0
F-150	4.6L	2V	2010 MY	TBC	•	•	•	0
F-150	4. 6L	2V	2010 MY	TCCM	•	•	•	•
F-150	4. 6L	3V	2009 MY	ABS	•	•	•	
F-150	4. 6L	3V	2009 MY	ACM	•	•	•	0
F-150	4. 6L	3V	2009 MY	DCSM	•	•	•	•
F-150	4. 6L	3V	2009 MY	DSM	•	•	•	•
F-150	4. 6L	3V	2009 MY	DSP	•	•	•	0
F-150	4. 6L	3V	2009 MY	FCIM	•	•	•	•
F-150	4. 6L	3V	2009 MY	FDIM	•	•	•	•
F-150	4. 6L	3V	2009 MY	GEM / SJB	•	•	•	•
F-150	4. 6L	3V	2009 MY	HVAC	•	•	•	
F-150	4. 6L	3V	2009 MY	IC	•	•	•	•
F-150	4. 6L	3V	2009 MY	OCSM	•	•	•	0
F-150	4. 6L	3V	2009 MY	PAM	•	•	•	•
F-150	4. 6L	3V	2009 MY	PCM	•	•	•	•
F-150	4. 6L	3V	2009 MY	PRB	•	•	•	•
F-150	4. 6L	3V	2009 MY	RCM	•	•	•	0
F-150	4. 6L	3V	2009 MY	TBC	•	•	•	0
F-150	4.6L	3V	2009 MY	TCCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-150	4. 6L	3V	2009 MY	TCM	•	•	•	•
F-150	4. 6L	3V	2010 MY	ABS	•	•	•	•
F-150	4. 6L	3V	2010 MY	ACM	•	•	•	0
F-150	4. 6L	3V	2010 MY	APIM	•	•	•	0
F-150	4. 6L	3V	2010 MY	DCSM	•	•		•
F-150	4. 6L	3V	2010 MY	DSM	•	•	•	•
F-150	4. 6L	3V	2010 MY	DSP	•	•	•	0
F-150	4. 6L	3V	2010 MY	FCIM	•	•		•
F-150	4. 6L	3V	2010 MY	FDIM	•	•		•
F-150	4. 6L	3V	2010 MY	GEM / SJB	•	•		•
F-150	4. 6L	3V	2010 MY	GPSM	•	•		0
F-150	4. 6L	3V	2010 MY	HVAC	•	•	•	•
F-150	4. 6L	3V	2010 MY	IC	•	•	•	•
F-150	4. 6L	3V	2010 MY	ILCM	•	•		•
F-150	4. 6L	3V	2010 MY	OCSM	•	•		0
F-150	4. 6L	3V	2010 MY	PAM	•	•		•
F-150	4. 6L	3V	2010 MY	PCM	•	•		•
F-150	4. 6L	3V	2010 MY	PRB	•	•		•
F-150	4. 6L	3V	2010 MY	RCM	•	•		0
F-150	4. 6L	3V	2010 MY	TBC	•	•	•	0
F-150	4. 6L	3V	2010 MY	TCCM	•	•	•	•
F-150	4. 6L	3V	2010 MY	TCM	•	•	•	•
F-150	4. 6L	Other	1997 MY	ABS/TCS	•	•	•	•
F-150	4. 6L	Other	1997 MY	GEM	•	•	•	•
F-150	4. 6L	Other	1997 MY	IAB	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
F-150	4. 6L	0ther	1997 MY	PCM	•	•	•	•
F-150	4. 6L	Other	1997 MY	RAP	•	•	•	•
F-150	4. 6L	0ther	1998 MY	ABS/TCS	•	•	•	•
F-150	4. 6L	0ther	1998 MY	GEM	•	•	•	•
F-150	4. 6L	0ther	1998 MY	IAB	•	•	•	•
F-150	4. 6L	0ther	1998 MY	PCM	•	•	•	•
F-150	4. 6L	0ther	1998 MY	RAP	•	•	•	•
F-150	4. 6L	0ther	1999 MY	ABS/TCS	•	•	•	•
F-150	4. 6L	0ther	1999 MY	GEM	•	•	•	•
F-150	4. 6L	0ther	1999 MY	IAB	•	•	•	•
F-150	4. 6L	0ther	1999 MY	IC	•	•	•	•
F-150	4. 6L	0ther	1999 MY	PCM	•	•	•	•
F-150	4. 6L	0ther	1999 MY	RAP	•	•	•	•
F-150	4. 6L	0ther	2000 MY	ABS/TCS	•	•	•	•
F-150	4. 6L	0ther	2000 MY	GEM	•	•	•	•
F-150	4. 6L	0ther	2000 MY	IAB	•	•	•	•
F-150	4. 6L	0ther	2000 MY	IC	•	•	•	•
F-150	4. 6L	0ther	2000 MY	PCM	•	•	•	•
F-150	4. 6L	0ther	2000 MY	RAP	•	•	•	•
F-150	4. 6L	0ther	2002 MY	ABS/TCS	•	•	•	•
F-150	4. 6L	0ther	2002 MY	GEM	•	•	•	•
F-150	4. 6L	0ther	2002 MY	IC	•	•	•	•
F-150	4. 6L	0ther	2002 MY	PCM	•	•	•	•
F-150	4. 6L	0ther	2002 MY	RAP	•	•	•	•
F-150	4. 6L	0ther	2002 MY	RCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
F-150	5. 4L	2V	2004 MY	ABS/TCS	•	•	•	•
F-150	5. 4L	2V	2004 MY	AFCM	•	•	•	0
F-150	5. 4L	2V	2004 MY	FIM	•	•	•	0
F-150	5. 4L	2V	2004 MY	GEM	•	•	•	•
F-150	5. 4L	2V	2004 MY	IC	•	•	•	•
F-150	5. 4L	2V	2004 MY	PCM	•	•	•	•
F-150	5. 4L	2V	2004 MY	RAP	•	•	•	•
F-150	5. 4L	2V	2004 MY	RCM	•	•	•	0
F-150	5. 4L	3V	2004 MY	4X4	•	•	•	•
F-150	5. 4L	3V	2004 MY	ABS	•	•	•	•
F-150	5. 4L	3V	2004 MY	DSM	•	•	•	•
F-150	5. 4L	3V	2004 MY	EATC	•	•	•	•
F-150	5. 4L	3V	2004 MY	IC	•	•	•	•
F-150	5. 4L	3V	2004 MY	PAM	•	•	•	•
F-150	5. 4L	3V	2004 MY	PCM	•	•	•	•
F-150	5. 4L	3V	2004 MY	RCM	•	•	•	•
F-150	5. 4L	3V	2004 MY	VSM	•	•	•	•
F-150	5. 4L	3V	2005 MY	4X4	•	•	•	•
F-150	5. 4L	3V	2005 MY	ABS	•	•	•	•
F-150	5. 4L	3V	2005 MY	DSM	•	•	•	•
F-150	5. 4L	3V	2005 MY	EATC	•	•	•	•
F-150	5. 4L	3V	2005 MY	IC	•	•	•	•
F-150	5. 4L	3V	2005 MY	PAM	•	•	•	•
F-150	5. 4L	3V	2005 MY	PCM	•	•	•	
F-150	5. 4L	3V	2005 MY	RCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
F-150	5. 4L	3V	2005 MY	VSM	•	•	•	•
F-150	5. 4L	3V	2006 MY	4X4	•	•	•	•
F-150	5. 4L	3V	2006 MY	ABS	•	•	•	•
F-150	5. 4L	3V	2006 MY	DSM	•		•	•
F-150	5. 4L	3V	2006 MY	EATC	•		•	•
F-150	5. 4L	3V	2006 MY	IC	•		•	•
F-150	5. 4L	3V	2006 MY	PAM	•		•	•
F-150	5. 4L	3V	2006 MY	PCM	•		•	•
F-150	5. 4L	3V	2006 MY	RCM	•	•	•	•
F-150	5. 4L	3V	2006 MY	VSM	•		•	•
F-150	5. 4L	3V	2007 MY	4X4	•		•	•
F-150	5. 4L	3V	2007 MY	ABS	•		•	•
F-150	5. 4L	3V	2007 MY	DSM	•		•	•
F-150	5. 4L	3V	2007 MY	EATC	•		•	•
F-150	5. 4L	3V	2007 MY	IC	•		•	•
F-150	5. 4L	3V	2007 MY	PAM	•		•	•
F-150	5. 4L	3V	2007 MY	PCM	•		•	
F-150	5. 4L	3V	2007 MY	RCM	•		•	•
F-150	5. 4L	3V	2007 MY	VSM	•		•	•
F-150	5. 4L	3V	2008 MY	4X4	•		•	•
F-150	5. 4L	3V	2008 MY	ABS	•		•	•
F-150	5. 4L	3V	2008 MY	DSM	•		•	•
F-150	5. 4L	3V	2008 MY	HVAC	•		•	•
F-150	5. 4L	3V	2008 MY	IC	•		•	•
F-150	5. 4L	3V	2008 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-150	5. 4L	3V	2008 MY	PCM	•	•	•	•
F-150	5. 4L	3V	2008 MY	RCM	•	•	•	•
F-150	5. 4L	3V	2008 MY	VSM	•	•	•	•
F-150	5. 4L	3V	2009 MY	ABS	•	•	•	
F-150	5. 4L	3V	2009 MY	ACM	•	•	•	0
F-150	5. 4L	3V	2009 MY	DCSM	•	•	•	•
F-150	5. 4L	3V	2009 MY	DSM	•	•	•	•
F-150	5. 4L	3V	2009 MY	DSP	•	•	•	0
F-150	5. 4L	3V	2009 MY	FCIM	•	•	•	•
F-150	5. 4L	3V	2009 MY	FDIM	•	•	•	•
F-150	5. 4L	3V	2009 MY	GEM / SJB	•	•	•	•
F-150	5. 4L	3V	2009 MY	HVAC	•	•	•	
F-150	5. 4L	3V	2009 MY	IC	•	•	•	•
F-150	5. 4L	3V	2009 MY	OCSM	•	•	•	0
F-150	5. 4L	3V	2009 MY	PAM	•	•	•	•
F-150	5. 4L	3V	2009 MY	PCM	•	•	•	•
F-150	5. 4L	3V	2009 MY	PRB	•	•	•	•
F-150	5. 4L	3V	2009 MY	RCM	•	•	•	0
F-150	5. 4L	3V	2009 MY	TBC	•	•	•	0
F-150	5. 4L	3V	2009 MY	TCCM	•	•	•	•
F-150	5. 4L	3V	2009 MY	TCM	•	•	•	•
F-150	5. 4L	3V	2010 MY	ABS	•	•	•	•
F-150	5. 4L	3V	2010 MY	ACM	•	•	•	0
F-150	5. 4L	3V	2010 MY	APIM	•	•	•	0
F-150	5. 4L	3V	2010 MY	DCSM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
F-150	5. 4L	3V	2010 MY	DSM	•	•	•	•
F-150	5. 4L	3V	2010 MY	DSP	•	•	•	0
F-150	5. 4L	3V	2010 MY	FCIM	•	•	•	•
F-150	5. 4L	3V	2010 MY	FDIM	•	•	•	•
F-150	5. 4L	3V	2010 MY	GEM / SJB	•	•	•	•
F-150	5. 4L	3V	2010 MY	GPSM	•	•	•	0
F-150	5. 4L	3V	2010 MY	HVAC	•	•	•	•
F-150	5. 4L	3V	2010 MY	IC	•	•	•	•
F-150	5. 4L	3V	2010 MY	ILCM	•	•	•	•
F-150	5. 4L	3V	2010 MY	OCSM	•	•	•	0
F-150	5. 4L	3V	2010 MY	PAM	•	•	•	•
F-150	5. 4L	3V	2010 MY	PCM	•	•	•	•
F-150	5. 4L	3V	2010 MY	PRB	•	•	•	•
F-150	5. 4L	3V	2010 MY	RCM	•	•	•	0
F-150	5. 4L	3V	2010 MY	TBC	•	•	•	0
F-150	5. 4L	3V	2010 MY	TCCM	•	•	•	•
F-150	5. 4L	3V	2010 MY	TCM	•	•	•	•
F-150	5. 4L	BIF	1998 MY	ABS/TCS	•	•	•	•
F-150	5. 4L	BIF	1998 MY	AFCM	•	•	•	0
F-150	5. 4L	BIF	1998 MY	GEM	•	•	•	•
F-150	5. 4L	BIF	1998 MY	IAB	•	•	•	•
F-150	5. 4L	BIF	1998 MY	PCM	•	•	•	•
F-150	5. 4L	BIF	1998 MY	RAP	•	•	•	•
F-150	5. 4L	BIF	1999 MY	ABS/TCS	•	•	•	•
F-150	5. 4L	BIF	1999 MY	AFCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
F-150	5. 4L	BIF	1999 MY	GEM	•	•	•	•
F-150	5. 4L	BIF	1999 MY	IAB	•	•	•	•
F-150	5. 4L	BIF	1999 MY	IC	•	•	•	•
F-150	5. 4L	BIF	1999 MY	PCM	•	•	•	•
F-150	5.4L	BIF	1999 MY	RAP		•	•	•
F-150	5.4L	BIF	2000 MY	ABS/TCS	•	•	•	•
F-150	5.4L	BIF	2000 MY	AFCM	•	•	•	0
F-150	5.4L	BIF	2000 MY	GEM	•	•	•	•
F-150	5. 4L	BIF	2000 MY	IAB	•	•	•	•
F-150	5.4L	BIF	2000 MY	IC	•	•	•	•
F-150	5.4L	BIF	2000 MY	PCM	•	•	•	•
F-150	5. 4L	BIF	2000 MY	RAP	•	•	•	•
F-150	5.4L	NGV	2000 MY	ABS/TCS	•	•	•	•
F-150	5.4L	NGV	2000 MY	FIM	•	•	•	0
F-150	5. 4L	NGV	2000 MY	GEM	•	•	•	•
F-150	5.4L	NGV	2000 MY	IAB		•	•	•
F-150	5.4L	NGV	2000 MY	IC		•	•	•
F-150	5.4L	NGV	2000 MY	PCM	•	•	•	•
F-150	5.4L	NGV	2000 MY	RAP	•	•	•	•
F-150	5.4L	Other	1997 MY	ABS/TCS	•	•	•	•
F-150	5.4L	Other	1997 MY	GEM	•	•	•	•
F-150	5. 4L	Other	1997 MY	IAB	•	•	•	•
F-150	5.4L	Other	1997 MY	PCM	•	•	•	•
F-150	5.4L	Other	1997 MY	RAP	•	•	•	•
F-150	5. 4L	Other	1998 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-150	5. 4L	Other	1998 MY	GEM	•	•	•	•
F-150	5. 4L	0ther	1998 MY	IAB	•	•	•	•
F-150	5. 4L	Other	1998 MY	PCM	•	•	•	•
F-150	5. 4L	0ther	1998 MY	RAP	•	•	•	•
F-150	5. 4L	Other	1999 MY	ABS/TCS	•		•	•
F-150	5. 4L	Other	1999 MY	GEM	•	•	•	•
F-150	5. 4L	Other	1999 MY	IAB	•	•	•	•
F-150	5. 4L	Other	1999 MY	IC	•			•
F-150	5. 4L	Other	1999 MY	PCM	•			•
F-150	5. 4L	Other	1999 MY	RAP	•			•
F-150	5. 4L	Other	2000 MY	ABS/TCS	•			•
F-150	5. 4L	Other	2000 MY	GEM	•		•	•
F-150	5. 4L	Other	2000 MY	IAB	•	•	•	•
F-150	5. 4L	0ther	2000 MY	IC	•	•		•
F-150	5. 4L	Other	2000 MY	PCM	•			
F-150	5. 4L	0ther	2000 MY	RAP	•	•	•	•
F-150	5. 4L	0ther	2002 MY	ABS/TCS	•		•	
F-150	5. 4L	Other	2002 MY	AFCM	•			0
F-150	5. 4L	0ther	2002 MY	FIM	•	•		0
F-150	5. 4L	0ther	2002 MY	GEM	•	•	•	•
F-150	5. 4L	0ther	2002 MY	IC	•	•	•	•
F-150	5. 4L	Other	2002 MY	PCM	•	•	•	•
F-150	5. 4L	Other	2002 MY	RAP	•	•	•	•
F-150	5. 4L	0ther	2002 MY	RCM	•	•	•	0
F-150	5. 4L	Other	2003 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-150	5. 4L	Other	2003 MY	AFCM	•	•	•	0
F-150	5. 4L	Other	2003 MY	FIM	•	•	•	0
F-150	5. 4L	0ther	2003 MY	GEM	•	•	•	•
F-150	5. 4L	Other	2003 MY	IC	•	•	•	•
F-150	5. 4L	0ther	2003 MY	PCM	•	•	•	•
F-150	5. 4L	0ther	2003 MY	RAP	•	•	•	•
F-150	5. 4L	0ther	2003 MY	RCM	•	•	•	0
F-150	6. 2L	2V	2010 MY	ABS	•	•	•	•
F-150	6. 2L	2V	2010 MY	ACM	•	•	•	0
F-150	6. 2L	2V	2010 MY	APIM	•	•	•	0
F-150	6. 2L	2V	2010 MY	DCSM	•	•	•	•
F-150	6. 2L	2V	2010 MY	DSM	•	•	•	•
F-150	6. 2L	2V	2010 MY	DSP	•	•	•	0
F-150	6. 2L	2V	2010 MY	FCIM	•	•	•	•
F-150	6. 2L	2V	2010 MY	FDIM	•	•	•	•
F-150	6. 2L	2V	2010 MY	GEM / SJB	•	•	•	•
F-150	6. 2L	2V	2010 MY	GPSM	•	•	•	0
F-150	6. 2L	2V	2010 MY	HVAC	•	•	•	•
F-150	6. 2L	2V	2010 MY	IC	•	•	•	•
F-150	6. 2L	2V	2010 MY	ILCM	•	•	•	•
F-150	6. 2L	2V	2010 MY	OCSM	•	•	•	0
F-150	6. 2L	2V	2010 MY	PAM	•	•	•	•
F-150	6. 2L	2V	2010 MY	PCM	•	•	•	•
F-150	6. 2L	2V	2010 MY	PRB	•	•	•	•
F-150	6. 2L	2V	2010 MY	RCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-150	6. 2L	2V	2010 MY	TBC	•	•	•	0
F-150	6. 2L	2V	2010 MY	TCCM	•	•	•	•
F-150 SuperCrew (4 full size doors)	4.6L	2V	2003 MY	ABS/TCS	•	•	•	•
F-150 SuperCrew (4 full size doors)	4.6L	2V	2003 MY	EATC	•	•	•	0
F-150 SuperCrew (4 full size doors)	4.6L	2V	2003 MY	GEM	•	•	•	•
F-150 SuperCrew (4 full size doors)	4.6L	2V	2003 MY	HEC	•	•	•	
F-150 SuperCrew (4 full size doors)	4.6L	2V	2003 MY	PCM	•	•	•	•
F-150 SuperCrew (4 full size doors)	4.6L	2V	2003 MY	RAP	•	•	•	
F-150 SuperCrew (4 full size doors)	4.6L	2V	2003 MY	RCM	•	•	•	
F-150 SuperCrew (4 full size doors)	4.6L	Other	2001 MY	ABS/TCS	•	•	•	
F-150 SuperCrew (4 full size doors)	4.6L	Other	2001 MY	GEM	•	•	•	
F-150 SuperCrew (4 full size doors)	4.6L	Other	2001 MY	HEC	•	•	•	
F-150 SuperCrew (4 full size doors)	4.6L	Other	2001 MY	PCM	•	•	•	
F-150 SuperCrew (4 full size doors)	4.6L	Other	2001 MY	RAP	•	•	•	
F-150 SuperCrew (4 full size doors)	4.6L	Other	2001 MY	RCM	•	•	•	
F-150 SuperCrew (4 full size doors)	4.6L	Other	2002 MY	ABS/TCS	•	•	•	
F-150 SuperCrew (4 full size doors)	4.6L	Other	2002 MY	EATC	•	•	•	0
F-150 SuperCrew (4 full size doors)	4.6L	Other	2002 MY	GEM	•	•	•	
F-150 SuperCrew (4 full size doors)	4.6L	Other	2002 MY	HEC	•	•	•	
F-150 SuperCrew (4 full size doors)	4.6L	Other	2002 MY	PCM	•	•	•	
F-150 SuperCrew (4 full size doors)	4.6L	Other	2002 MY	RAP	•	•	•	•
F-150 SuperCrew (4 full size doors)	4.6L	Other	2002 MY	RCM	•	•	•	•
F-150 SuperCrew (4 full size doors)	5. 4L	2V	2003 MY	ABS/TCS	•	•	•	•
F-150 SuperCrew (4 full size doors)	5. 4L	2V	2003 MY	EATC	•	•	•	0
F-150 SuperCrew (4 full size doors)	5. 4L	2V	2003 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
F-150 SuperCrew (4 full size doors)	5. 4L	2V	2003 MY	HEC	•	•	•	•
F-150 SuperCrew (4 full size doors)	5. 4L	2V	2003 MY	PCM	•	•	•	•
F-150 SuperCrew (4 full size doors)	5. 4L	2V	2003 MY	RAP	•	•	•	•
F-150 SuperCrew (4 full size doors)	5. 4L	2V	2003 MY	RCM	•	•	•	•
F-150 SuperCrew (4 full size doors)	5. 4L	Other	2001 MY	ABS/TCS		•	•	•
F-150 SuperCrew (4 full size doors)	5. 4L	Other	2001 MY	GEM	•	•	•	
F-150 SuperCrew (4 full size doors)	5. 4L	Other	2001 MY	HEC	•	•	•	
F-150 SuperCrew (4 full size doors)	5. 4L	Other	2001 MY	PCM	•	•	•	•
F-150 SuperCrew (4 full size doors)	5. 4L	Other	2001 MY	RAP	•	•	•	•
F-150 SuperCrew (4 full size doors)	5. 4L	Other	2001 MY	RCM	•	•	•	
F-150 SuperCrew (4 full size doors)	5. 4L	Other	2002 MY	ABS/TCS	•	•	•	
F-150 SuperCrew (4 full size doors)	5. 4L	Other	2002 MY	EATC	•	•	•	0
F-150 SuperCrew (4 full size doors)	5. 4L	Other	2002 MY	GEM	•	•	•	•
F-150 SuperCrew (4 full size doors)	5. 4L	Other	2002 MY	HEC	•	•	•	
F-150 SuperCrew (4 full size doors)	5. 4L	Other	2002 MY	PCM	•	•	•	•
F-150 SuperCrew (4 full size doors)	5. 4L	Other	2002 MY	RAP	•	•	•	
F-150 SuperCrew (4 full size doors)	5. 4L	Other	2002 MY	RCM	•	•	•	
F-250	3. 9L	Cummins Diesel	2006 MY	4X4	•	•	•	
F-250	3. 9L	Cummins Diesel	2006 MY	ABS/TCS	•	•	•	
F-250	3. 9L	Cummins Diesel	2006 MY	GEM	•	•	•	
F-250	3. 9L	Cummins Diesel	2006 MY	HEC	•	•	•	
F-250	3. 9L	Cummins Diesel	2006 MY	PAM	•	•	•	0
F-250	3. 9L	Cummins Diesel	2006 MY	RCM	•	•	•	•
F-250 Light Duty	4. 2L	Other	1999 MY	ABS/TCS	•	•	•	•
F-250 Light Duty	4. 2L	Other	1999 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
F-250 Light Duty	4. 2L	0ther	1999 MY	IC	•	•	•	•
F-250 Light Duty	4. 2L	0ther	1999 MY	PCM	•	•	•	•
F-250 Light Duty	4. 2L	0ther	1999 MY	RAP	•	•	•	•
F-250 Light Duty	4. 2L	0ther	1999 MY	RCM	•	•	•	0
F-250 Light Duty	4. 6L	0ther	1997 MY	ABS/TCS	•	•	•	•
F-250 Light Duty	4.6L	Other	1997 MY	GEM	•	•	•	
F-250 Light Duty	4.6L	Other	1997 MY	IAB	•	•	•	
F-250 Light Duty	4.6L	Other	1997 MY	PCM	•	•	•	•
F-250 Light Duty	4.6L	Other	1997 MY	RAP	•	•	•	•
F-250 Light Duty	4.6L	Other	1998 MY	ABS/TCS	•	•	•	•
F-250 Light Duty	4.6L	Other	1998 MY	GEM	•	•	•	
F-250 Light Duty	4.6L	Other	1998 MY	IAB	•	•	•	
F-250 Light Duty	4.6L	Other	1998 MY	PCM	•	•	•	•
F-250 Light Duty	4.6L	Other	1998 MY	RAP	•	•	•	•
F-250 Light Duty	4.6L	Other	1999 MY	ABS/TCS	•	•	•	•
F-250 Light Duty	4.6L	Other	1999 MY	GEM	•	•	•	•
F-250 Light Duty	4.6L	Other	1999 MY	IC	•	•	•	•
F-250 Light Duty	4.6L	Other	1999 MY	PCM	•	•	•	•
F-250 Light Duty	4.6L	Other	1999 MY	RAP	•	•	•	•
F-250 Light Duty	4.6L	Other	1999 MY	RCM	•	•	•	•
F-250 Light Duty	4. 6L	0ther	2000 MY	ABS/TCS	•	•	•	•
F-250 Light Duty	4. 6L	0ther	2000 MY	GEM	•	•	•	•
F-250 Light Duty	4. 6L	0ther	2000 MY	IC	•	•	•	•
F-250 Light Duty	4. 6L	0ther	2000 MY	PCM	•	•	•	•
F-250 Light Duty	4. 6L	0ther	2000 MY	RAP	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-250 Light Duty	4. 6L	0ther	2000 MY	RCM	•	•	•	•
F-250 Light Duty	5. 4L	BIF	1998 MY	ABS/TCS	•	•	•	•
F-250 Light Duty	5. 4L	BIF	1998 MY	AFCM	•	•	•	0
F-250 Light Duty	5. 4L	BIF	1998 MY	GEM	•	•	•	•
F-250 Light Duty	5. 4L	BIF	1998 MY	IAB	•	•	•	•
F-250 Light Duty	5. 4L	BIF	1998 MY	PCM	•	•	•	•
F-250 Light Duty	5. 4L	BIF	1998 MY	RAP	•	•	•	•
F-250 Light Duty	5. 4L	BIF	1999 MY	ABS/TCS	•	•	•	•
F-250 Light Duty	5. 4L	BIF	1999 MY	AFCM	•	•	•	0
F-250 Light Duty	5. 4L	BIF	1999 MY	GEM	•	•	•	•
F-250 Light Duty	5. 4L	BIF	1999 MY	IC	•	•	•	•
F-250 Light Duty	5. 4L	BIF	1999 MY	PCM	•	•	•	•
F-250 Light Duty	5. 4L	BIF	1999 MY	RAP	•		•	
F-250 Light Duty	5. 4L	BIF	1999 MY	RCM	•	•	•	•
F-250 Light Duty	5. 4L	NGV	1997 MY	ABS/TCS	•	•	•	•
F-250 Light Duty	5. 4L	NGV	1997 MY	FIM	•	•	•	0
F-250 Light Duty	5. 4L	NGV	1997 MY	GEM	•	•	•	•
F-250 Light Duty	5. 4L	NGV	1997 MY	IAB	•	•	•	•
F-250 Light Duty	5. 4L	NGV	1997 MY	PCM	•	•	•	•
F-250 Light Duty	5. 4L	NGV	1997 MY	RAP	•	•	•	•
F-250 Light Duty	5. 4L	NGV	1998 MY	ABS/TCS	•	•	•	•
F-250 Light Duty	5. 4L	NGV	1998 MY	FIM	•	•	•	0
F-250 Light Duty	5. 4L	NGV	1998 MY	GEM	•	•	•	•
F-250 Light Duty	5. 4L	NGV	1998 MY	IAB	•	•	•	•
F-250 Light Duty	5. 4L	NGV	1998 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-250 Light Duty	5. 4L	NGV	1998 MY	RAP	•	•	•	•
F-250 Light Duty	5. 4L	NGV	1999 MY	ABS/TCS	•	•	•	•
F-250 Light Duty	5. 4L	NGV	1999 MY	FIM	•	•	•	0
F-250 Light Duty	5. 4L	NGV	1999 MY	GEM		•	•	•
F-250 Light Duty	5. 4L	NGV	1999 MY	IC		•	•	•
F-250 Light Duty	5. 4L	NGV	1999 MY	PCM		•	•	•
F-250 Light Duty	5. 4L	NGV	1999 MY	RAP		•	•	•
F-250 Light Duty	5. 4L	NGV	1999 MY	RCM		•	•	•
F-250 Light Duty	5. 4L	NGV	2000 MY	ABS/TCS		•	•	•
F-250 Light Duty	5. 4L	NGV	2000 MY	FIM		•	•	0
F-250 Light Duty	5. 4L	NGV	2000 MY	GEM		•	•	•
F-250 Light Duty	5. 4L	NGV	2000 MY	IC		•	•	•
F-250 Light Duty	5. 4L	NGV	2000 MY	PCM		•	•	•
F-250 Light Duty	5. 4L	NGV	2000 MY	RAP		•	•	•
F-250 Light Duty	5. 4L	NGV	2000 MY	RCM		•	•	•
F-250 Light Duty	5. 4L	Other	1997 MY	ABS/TCS		•	•	•
F-250 Light Duty	5. 4L	Other	1997 MY	GEM		•	•	
F-250 Light Duty	5. 4L	Other	1997 MY	IAB		•	•	•
F-250 Light Duty	5. 4L	Other	1997 MY	PCM		•	•	•
F-250 Light Duty	5. 4L	Other	1997 MY	RAP		•	•	•
F-250 Light Duty	5. 4L	Other	1998 MY	ABS/TCS		•	•	•
F-250 Light Duty	5. 4L	Other	1998 MY	GEM	•	•	•	•
F-250 Light Duty	5. 4L	Other	1998 MY	IAB	•	•	•	•
F-250 Light Duty	5. 4L	Other	1998 MY	PCM	•	•	•	•
F-250 Light Duty	5. 4L	Other	1998 MY	RAP	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-250 Light Duty	5. 4L	Other	1999 MY	ABS/TCS	•	•	•	•
F-250 Light Duty	5. 4L	Other	1999 MY	GEM	•	•	•	•
F-250 Light Duty	5. 4L	Other	1999 MY	IC	•	•	•	•
F-250 Light Duty	5. 4L	Other	1999 MY	PCM	•	•	•	•
F-250 Light Duty	5. 4L	Other	1999 MY	RAP	•	•	•	•
F-250 Light Duty	5. 4L	Other	1999 MY	RCM	•	•	•	•
F-250 Light Duty	5. 4L	Other	2000 MY	ABS/TCS	•	•	•	•
F-250 Light Duty	5. 4L	Other	2000 MY	GEM	•	•	•	•
F-250 Light Duty	5. 4L	Other	2000 MY	IC	•	•	•	•
F-250 Light Duty	5. 4L	Other	2000 MY	PCM	•	•	•	•
F-250 Light Duty	5. 4L	Other	2000 MY	RAP	•	•	•	•
F-250 Light Duty	5. 4L	Other	2000 MY	RCM	•	•	•	•
F-650 / F-750			2005 MY	ABS/TCS	•	•	•	
F-650 / F-750			2005 MY	GEM	•	•	•	•
F-650 / F-750			2006 MY	ABS/TCS	•	•	•	
F-650 / F-750			2006 MY	GEM	•	•	•	•
F-650 / F-750	5. 9L	Cummins Diesel	2000 MY	ABS/TCS	•	•	•	•
F-650 / F-750	5. 9L	Cummins Diesel	2000 MY	GEM	•	•	•	•
F-650 / F-750	5. 9L	Cummins Diesel	2002 MY	ABS/TCS	•	•	•	•
F-650 / F-750	5. 9L	Cummins Diesel	2002 MY	GEM	•	•	•	•
F-650 / F-750	5. 9L	Cummins Diesel	2003 MY	ABS/TCS	•	•	•	•
F-650 / F-750	5. 9L	Cummins Diesel	2003 MY	GEM	•	•	•	•
F-650 / F-750	5. 9L	Cummins Diesel	2004 MY	GEM	•	•	•	•
F-650 / F-750	5. 9L	Cummins Diesel	2005 MY	ABS/TCS	•	•	•	
F-650 / F-750	5. 9L	Cummins Diesel	2005 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
F-650 / F-750	5. 9L	Cummins Diesel	2006 MY	ABS/TCS	•	•	•	
F-650 / F-750	5.9L	Cummins Diesel	2006 MY	GEM	•	•	•	•
F-650 / F-750	5.9L	Cummins Diesel	2007 MY	ABS/TCS	•	•	•	
F-650 / F-750	5.9L	Cummins Diesel	2007 MY	GEM	•	•	•	•
F-650 / F-750	6. 0L	Direct Injection - Turbo	2004 MY	GEM	•	•	•	•
F-650 / F-750	6.0L	Direct Injection - Turbo	2005 MY	ABS/TCS	•	•	•	
F-650 / F-750	6.0L	Direct Injection - Turbo	2005 MY	GEM	•	•	•	•
F-650 / F-750	6. 0L	Direct Injection - Turbo	2006 MY	ABS/TCS	•	•	•	
F-650 / F-750	6. 0L	Direct Injection - Turbo	2006 MY	GEM	•	•	•	•
F-650 / F-750	6.0L	Direct Injection - Turbo	2007 MY	ABS/TCS	•	•	•	
F-650 / F-750	6.0L	Direct Injection - Turbo	2007 MY	GEM	•	•	•	•
F-650 / F-750	7. 2L	Caterpillar Diesel	2000 MY	ABS/TCS	•	•	•	•
F-650 / F-750	7. 2L	Caterpillar Diesel	2000 MY	GEM	•	•	•	•
F-650 / F-750	7. 2L	Caterpillar Diesel	2002 MY	ABS/TCS	•	•	•	•
F-650 / F-750	7. 2L	Caterpillar Diesel	2002 MY	GEM	•	•	•	•
F-650 / F-750	7. 2L	Caterpillar Diesel	2003 MY	ABS/TCS	•	•	•	•
F-650 / F-750	7. 2L	Caterpillar Diesel	2003 MY	GEM	•	•	•	•
F-650 / F-750	7. 2L	Caterpillar Diesel	2004 MY	GEM	•	•	•	•
F-650 / F-750	7. 2L	Caterpillar Diesel	2005 MY	ABS/TCS	•	•	•	
F-650 / F-750	7. 2L	Caterpillar Diesel	2005 MY	GEM		•	•	•
F-650 / F-750	7. 2L	Caterpillar Diesel	2006 MY	ABS/TCS		•	•	
F-650 / F-750	7. 2L	Caterpillar Diesel	2006 MY	GEM	•	•	•	•
F-650 / F-750	7. 2L	Caterpillar Diesel	2007 MY	ABS/TCS	•	•	•	
F-650 / F-750	7. 2L	Caterpillar Diesel	2007 MY	GEM	•	•	•	•
F-650 / F-750	7. 3L	Direct Injection - Turbo	2000 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
F-650 / F-750	7. 3L	Direct Injection - Turbo	2000 MY	GEM	•	•	•	•
F-650 / F-750	7. 3L	Direct Injection - Turbo	2000 MY	PCM	•	•	•	•
F-650 / F-750	7. 3L	Direct Injection - Turbo	2002 MY	ABS/TCS	•	•	•	•
F-650 / F-750	7. 3L	Direct Injection - Turbo	2002 MY	GEM	•	•	•	•
F-650 / F-750	7. 3L	Direct Injection - Turbo	2002 MY	PCM	•	•	•	•
F-650 / F-750	7. 3L	Direct Injection - Turbo	2003 MY	ABS/TCS	•	•	•	•
F-650 / F-750	7. 3L	Direct Injection - Turbo	2003 MY	GEM	•	•	•	•
F-650 / F-750	7. 3L	Direct Injection - Turbo	2003 MY	PCM	•	•	•	•
F-Series	4.9L	GFP	1996 MY	PCM	•	•	•	•
F-Series	4.9L	Other	1996 MY	PCM	•	•	•	•
F-Series	5. 0L	Other	1996 MY	PCM	•	•	•	•
F-Series	5.8L	Other	1996 MY	PCM	•	•	•	•
F-Series	5.8L	Other	1997 MY	PCM	•	•	•	•
F-Series	7. 3L	Direct Injection - Turbo	1994 MY	PCM	•	•	•	•
F-Series	7. 3L	Direct Injection - Turbo	1995 MY	PCM	•	•	•	•
F-Series	7. 3L	Direct Injection - Turbo	1996 MY	PCM	•	•	•	•
F-Series	7. 3L	Direct Injection - Turbo	1997 MY	PCM	•	•	•	•
F-Series	7.5L	Other	1996 MY	PCM	•	•	•	•
F-Series	7.5L	Other	1997 MY	PCM	•	•	•	•
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003 MY	FOH	•	•	•	
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003 MY	GEM	•			
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003 MY	HEC	•	•	0	•
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003 MY	OTC	•	•	•	0
F-Series Super Duty	4. 2L	Direct Injection - Turbo	2003 MY	PAM	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	4. 2L	Direct Injection - Turbo	2003 MY	PATS	•	•	•	•
F-Series Super Duty	4. 2L	Direct Injection - Turbo	2003 MY	PCM	•	•	•	
F-Series Super Duty	4. 2L	Direct Injection - Turbo	2003 MY	RCM	•	•	•	•
F-Series Super Duty	4. 2L	Direct Injection - Turbo	2003 MY	VSM	•	•	•	
F-Series Super Duty	4. 2L	Other	2001 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	4. 2L	Other	2001 MY	ECS	•	•	•	0
F-Series Super Duty	4. 2L	Other	2001 MY	GEM	•	•	•	•
F-Series Super Duty	4. 2L	Other	2001 MY	OTC	•	•	•	0
F-Series Super Duty	4. 2L	Other	2001 MY	PAM	•	•	•	•
F-Series Super Duty	4. 2L	Other	2001 MY	PCM	•	•	•	•
F-Series Super Duty	4. 2L	Other	2001 MY	RCM	•	•	•	0
F-Series Super Duty	5. 4L	2V	2004 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	5. 4L	2V	2004 MY	GEM	•	•	•	•
F-Series Super Duty	5. 4L	2V	2004 MY	HEC	•	•	•	•
F-Series Super Duty	5. 4L	2V	2004 MY	OTC	•	•	•	0
F-Series Super Duty	5. 4L	2V	2004 MY	PAM	•	•	•	•
F-Series Super Duty	5. 4L	2V	2004 MY	PATS	•	•	•	•
F-Series Super Duty	5. 4L	2V	2004 MY	PCM	•	•	•	•
F-Series Super Duty	5. 4L	2V	2004 MY	RCM	•	•	•	•
F-Series Super Duty	5. 4L	2V	2004 MY	VSM	•	•	•	•
F-Series Super Duty	5. 4L	2V	2005 MY	ABS	•	•	•	•
F-Series Super Duty	5. 4L	2V	2005 MY	EATC	•	•	•	•
F-Series Super Duty	5. 4L	2V	2005 MY	GEM	•	•	•	•
F-Series Super Duty	5. 4L	2V	2005 MY	IC	•	•	•	•
F-Series Super Duty	5. 4L	2V	2005 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	5. 4L	2V	2005 MY	PCM	•	•	•	•
F-Series Super Duty	5. 4L	2V	2005 MY	RCM	•	•	•	
F-Series Super Duty	5. 4L	2V	2005 MY	TBC	•	•	•	0
F-Series Super Duty	5. 4L	2V	2005 MY	VSM	•	•	•	•
F-Series Super Duty	5. 4L	2V	2006 MY	ABS	•	•	•	•
F-Series Super Duty	5. 4L	2V	2006 MY	EATC	•	•	•	•
F-Series Super Duty	5. 4L	2V	2006 MY	GEM	•	•	•	•
F-Series Super Duty	5. 4L	2V	2006 MY	IC	•	•	•	•
F-Series Super Duty	5. 4L	2V	2006 MY	PAM	•	•	•	•
F-Series Super Duty	5. 4L	2V	2006 MY	PCM	•	•	•	•
F-Series Super Duty	5. 4L	2V	2006 MY	RCM	•	•	•	•
F-Series Super Duty	5. 4L	2V	2006 MY	TBC	•	•	•	0
F-Series Super Duty	5. 4L	2V	2006 MY	VSM	•		•	•
F-Series Super Duty	5. 4L	2V	2008 MY	4X4	•	•	•	•
F-Series Super Duty	5. 4L	2V	2008 MY	ABS	•	•	•	•
F-Series Super Duty	5. 4L	2V	2008 MY	ACM	•	•	•	0
F-Series Super Duty	5. 4L	2V	2008 MY	DSM	•	•	•	•
F-Series Super Duty	5. 4L	2V	2008 MY	GEM / SJB	•		•	•
F-Series Super Duty	5. 4L	2V	2008 MY	HVAC	•	•	•	•
F-Series Super Duty	5. 4L	2V	2008 MY	IC	•	•	•	•
F-Series Super Duty	5. 4L	2V	2008 MY	PAM	•	•	•	•
F-Series Super Duty	5. 4L	2V	2008 MY	PCM	•	•	•	•
F-Series Super Duty	5. 4L	2V	2008 MY	RCM	•	•	•	•
F-Series Super Duty	5. 4L	2V	2008 MY	RETM	•	•	•	0
F-Series Super Duty	5. 4L	2V	2008 MY	SDARS	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	5. 4L	2V	2008 MY	TBC	•	•	•	0
F-Series Super Duty	5. 4L	3V	2005 MY	ABS	•	•	•	•
F-Series Super Duty	5. 4L	3V	2005 MY	EATC	•	•	•	•
F-Series Super Duty	5. 4L	3V	2005 MY	GEM	•	•	•	•
F-Series Super Duty	5. 4L	3V	2005 MY	IC	•	•	•	•
F-Series Super Duty	5. 4L	3V	2005 MY	PAM	•	•	•	•
F-Series Super Duty	5. 4L	3V	2005 MY	PCM	•	•	•	•
F-Series Super Duty	5. 4L	3V	2005 MY	RCM	•	•	•	
F-Series Super Duty	5. 4L	3V	2005 MY	TBC	•	•	•	0
F-Series Super Duty	5. 4L	3V	2005 MY	VSM	•	•	•	•
F-Series Super Duty	5. 4L	3V	2006 MY	ABS	•	•	•	•
F-Series Super Duty	5. 4L	3V	2006 MY	EATC	•	•	•	•
F-Series Super Duty	5. 4L	3V	2006 MY	GEM	•	•	•	•
F-Series Super Duty	5. 4L	3V	2006 MY	IC	•	•	•	•
F-Series Super Duty	5. 4L	3V	2006 MY	PAM	•	•	•	•
F-Series Super Duty	5. 4L	3V	2006 MY	PCM	•	•	•	•
F-Series Super Duty	5. 4L	3V	2006 MY	RCM	•	•	•	
F-Series Super Duty	5. 4L	3V	2006 MY	TBC	•	•	•	0
F-Series Super Duty	5. 4L	3V	2006 MY	VSM	•	•	•	•
F-Series Super Duty	5. 4L	3V	2007 MY	ABS	•	•	•	•
F-Series Super Duty	5. 4L	3V	2007 MY	EATC	•	•	•	•
F-Series Super Duty	5. 4L	3V	2007 MY	GEM	•	•	•	•
F-Series Super Duty	5. 4L	3V	2007 MY	IC	•	•	•	•
F-Series Super Duty	5. 4L	3V	2007 MY	PAM	•	•	•	•
F-Series Super Duty	5. 4L	3V	2007 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
F-Series Super Duty	5. 4L	3V	2007 MY	RCM	Codes	• Codes	Data	•
F-Series Super Duty	5. 4L	3V	2007 MY	TBC	•	•	•	0
F-Series Super Duty	5. 4L	3V	2007 MY	VSM	•	•	•	•
F-Series Super Duty	5. 4L	3V	2008 MY	4X4	•	•	•	•
F-Series Super Duty	5. 4L	3V	2008 MY	ABS	•	•	•	•
F-Series Super Duty	5. 4L	3V	2008 MY	ACM		•	•	0
F-Series Super Duty	5. 4L	3V	2008 MY	DSM	•	•	•	•
F-Series Super Duty	5. 4L	3V	2008 MY	GEM / SJB	•	•	•	•
F-Series Super Duty	5. 4L	3V	2008 MY	HVAC	•	•	•	•
F-Series Super Duty	5. 4L	3V	2008 MY	IC		•	•	•
F-Series Super Duty	5. 4L	3V	2008 MY	PAM		•	•	•
F-Series Super Duty	5. 4L	3V	2008 MY	PCM		•	•	•
F-Series Super Duty	5.4L	3V	2008 MY	RCM	•	•	•	•
F-Series Super Duty	5. 4L	3V	2008 MY	RETM	•	•	•	0
F-Series Super Duty	5. 4L	3V	2008 MY	SDARS	•	•	•	
F-Series Super Duty	5.4L	3V	2008 MY	TBC		•	•	0
F-Series Super Duty	5.4L	3V	2009 MY	4X4		•	•	•
F-Series Super Duty	5.4L	3V	2009 MY	ABS	•	•	•	•
F-Series Super Duty	5.4L	3V	2009 MY	ACM	•	•	•	•
F-Series Super Duty	5.4L	3V	2009 MY	APIM	•	•	•	0
F-Series Super Duty	5.4L	3V	2009 MY	DSM		•	•	•
F-Series Super Duty	5.4L	3V	2009 MY	GEM / SJB		•	•	•
F-Series Super Duty	5.4L	3V	2009 MY	HVAC	•	•	•	•
F-Series Super Duty	5.4L	3V	2009 MY	IC	•	•	•	•
F-Series Super Duty	5. 4L	3V	2009 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	5. 4L	3V	2009 MY	PCM	•	•	Data	•
F-Series Super Duty	5. 4L	3V	2009 MY	RCM	•	•	•	•
F-Series Super Duty	5. 4L	3V	2009 MY	RETM	•	•	•	0
F-Series Super Duty	5. 4L	3V	2009 MY	SDARS	•	•	•	
F-Series Super Duty	5. 4L	3V	2009 MY	TBC	•	•	•	0
F-Series Super Duty	5. 4L	3V	2010 MY	4X4	•	•	•	•
F-Series Super Duty	5. 4L	3V	2010 MY	ABS	•	•	•	
F-Series Super Duty	5. 4L	3V	2010 MY	ACM	•	•	•	•
F-Series Super Duty	5. 4L	3V	2010 MY	APIM	•	•		0
F-Series Super Duty	5. 4L	3V	2010 MY	DSM	•	•		•
F-Series Super Duty	5. 4L	3V	2010 MY	GEM / SJB	•	•		•
F-Series Super Duty	5. 4L	3V	2010 MY	GPSM	•	•	•	0
F-Series Super Duty	5. 4L	3V	2010 MY	HVAC	•	•	•	•
F-Series Super Duty	5. 4L	3V	2010 MY	IC	•	•		•
F-Series Super Duty	5. 4L	3V	2010 MY	PAM	•	•	•	•
F-Series Super Duty	5. 4L	3V	2010 MY	PCM	•	•		•
F-Series Super Duty	5. 4L	3V	2010 MY	RCM	•	•		•
F-Series Super Duty	5. 4L	3V	2010 MY	RETM	•	•	•	0
F-Series Super Duty	5. 4L	3V	2010 MY	SDARS	•	•		
F-Series Super Duty	5. 4L	3V	2010 MY	TBC	•	•		0
F-Series Super Duty	5. 4L	BIF	1999 MY	ABS/TCS	•	•		•
F-Series Super Duty	5. 4L	BIF	1999 MY	AFCM	•	•	•	0
F-Series Super Duty	5. 4L	BIF	1999 MY	ECS	•	•	•	0
F-Series Super Duty	5. 4L	BIF	1999 MY	GEM	•	•	•	•
F-Series Super Duty	5. 4L	BIF	1999 MY	OTC	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
F-Series Super Duty	5. 4L	BIF	1999 MY	PCM	•	•	•	•
F-Series Super Duty	5. 4L	Other	1999 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	5. 4L	0ther	1999 MY	ECS	•	•	•	0
F-Series Super Duty	5. 4L	0ther	1999 MY	GEM	•	•	•	•
F-Series Super Duty	5. 4L	0ther	1999 MY	OTC	•	•	•	0
F-Series Super Duty	5. 4L	0ther	1999 MY	PCM	•	•	•	•
F-Series Super Duty	5. 4L	0ther	2000 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	5. 4L	0ther	2000 MY	ECS	•	•	•	0
F-Series Super Duty	5. 4L	0ther	2000 MY	GEM	•	•	•	•
F-Series Super Duty	5. 4L	0ther	2000 MY	OTC	•	•	•	0
F-Series Super Duty	5. 4L	0ther	2000 MY	PATS	•	•	•	•
F-Series Super Duty	5. 4L	0ther	2000 MY	PCM	•	•	•	•
F-Series Super Duty	5. 4L	0ther	2001 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	5. 4L	0ther	2001 MY	ECS	•	•	•	0
F-Series Super Duty	5. 4L	0ther	2001 MY	GEM	•	•	•	•
F-Series Super Duty	5. 4L	0ther	2001 MY	OTC	•	•	•	0
F-Series Super Duty	5. 4L	0ther	2001 MY	PAM	•	•	•	•
F-Series Super Duty	5. 4L	Other	2001 MY	PCM	•	•	•	•
F-Series Super Duty	5. 4L	0ther	2001 MY	RCM	•	•	•	0
F-Series Super Duty	5. 4L	0ther	2002 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	5. 4L	0ther	2002 MY	CSM	•	•	•	•
F-Series Super Duty	5. 4L	0ther	2002 MY	GEM	•	•	•	•
F-Series Super Duty	5. 4L	0ther	2002 MY	HEC	•	•	•	•
F-Series Super Duty	5. 4L	0ther	2002 MY	OTC	•	•	•	0
F-Series Super Duty	5. 4L	Other	2002 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	5. 4L	Other	2002 MY	PATS	•	•	•	•
F-Series Super Duty	5. 4L	Other	2002 MY	PCM		•	•	•
F-Series Super Duty	5. 4L	Other	2002 MY	RCM		•	•	•
F-Series Super Duty	5. 4L	Other	2003 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	5. 4L	Other	2003 MY	FOH	•	•	•	
F-Series Super Duty	5.4L	Other	2003 MY	GEM	•	•	•	•
F-Series Super Duty	5.4L	Other	2003 MY	HEC	•	•	•	•
F-Series Super Duty	5.4L	Other	2003 MY	OTC	•	•	•	0
F-Series Super Duty	5.4L	Other	2003 MY	PAM	•	•	•	•
F-Series Super Duty	5.4L	Other	2003 MY	PATS	•	•	•	•
F-Series Super Duty	5.4L	Other	2003 MY	PCM		•	•	•
F-Series Super Duty	5. 4L	Other	2003 MY	RCM	•	•	•	•
F-Series Super Duty	5.4L	Other	2003 MY	VSM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2003 MY	ABS/TCS		•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2003 MY	FOH		•	•	
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2003 MY	GEM		•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2003 MY	HEC		•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2003 MY	OTC	•	•	•	0
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2003 MY	PAM		•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2003 MY	PATS		•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2003 MY	PCM		•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2003 MY	RCM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2003 MY	TCM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2003 MY	VSM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2004 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2004 MY	FOH	•	•	•	
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2004 MY	GEM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2004 MY	HEC	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2004 MY	OTC	•	•	•	0
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2004 MY	PAM		•	•	•
F-Series Super Duty	6.0L	Direct Injection - Turbo	2004 MY	PATS	•	•	•	•
F-Series Super Duty	6.0L	Direct Injection - Turbo	2004 MY	PCM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2004 MY	RCM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2004 MY	TCM	•	•	•	•
F-Series Super Duty	6.0L	Direct Injection - Turbo	2004 MY	VSM	•	•	•	•
F-Series Super Duty	6.0L	Direct Injection - Turbo	2005 MY	ABS	•	•	•	•
F-Series Super Duty	6.0L	Direct Injection - Turbo	2005 MY	EATC	•	•	•	•
F-Series Super Duty	6.0L	Direct Injection - Turbo	2005 MY	GEM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2005 MY	IC	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2005 MY	PAM	•	•	•	•
F-Series Super Duty	6.0L	Direct Injection - Turbo	2005 MY	PCM	•	•	•	•
F-Series Super Duty	6.0L	Direct Injection - Turbo	2005 MY	RCM	•	•	•	•
F-Series Super Duty	6.0L	Direct Injection - Turbo	2005 MY	TBC	•	•	•	0
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2005 MY	TCM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2005 MY	VSM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2006 MY	ABS	•	•	•	•
F-Series Super Duty	6.0L	Direct Injection - Turbo	2006 MY	EATC	•	•	•	•
F-Series Super Duty	6.0L	Direct Injection - Turbo	2006 MY	GEM	•	•	•	•
F-Series Super Duty	6.0L	Direct Injection - Turbo	2006 MY	IC	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2006 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2006 MY	PCM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2006 MY	RCM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2006 MY	TBC	•	•	•	0
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2006 MY	TCM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2006 MY	VSM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2007 MY	ABS	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2007 MY	EATC	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2007 MY	GEM	•	•	•	
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2007 MY	IC	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2007 MY	PAM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2007 MY	PCM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2007 MY	RCM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2007 MY	TBC	•	•	•	0
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2007 MY	TCM	•	•	•	•
F-Series Super Duty	6. 0L	Direct Injection - Turbo	2007 MY	VSM	•	•	•	•
F-Series Super Duty	6. 2L	2V	2011 MY	ABS	•	•	•	•
F-Series Super Duty	6. 2L	2V	2011 MY	ACM	•	•	•	•
F-Series Super Duty	6. 2L	2V	2011 MY	ACM	•	•	•	0
F-Series Super Duty	6. 2L	2V	2011 MY	APIM	•	•	•	0
F-Series Super Duty	6. 2L	2V	2011 MY	BCM#1	•	•	•	•
F-Series Super Duty	6. 2L	2V	2011 MY	DCSM	•	•	•	•
F-Series Super Duty	6. 2L	2V	2011 MY	DSM	•	•	•	•
F-Series Super Duty	6. 2L	2V	2011 MY	GPSM	•	•	•	0
F-Series Super Duty	6. 2L	2V	2011 MY	HVAC	•	•	•	•
F-Series Super Duty	6. 2L	2V	2011 MY	IPC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	6. 2L	2V	2011 MY	PAM	•	•	•	0
F-Series Super Duty	6. 2L	2V	2011 MY	PCM	•	•	•	•
F-Series Super Duty	6. 2L	2V	2011 MY	RCM	•	•	•	0
F-Series Super Duty	6. 2L	2V	2011 MY	SCCM	•	•	•	0
F-Series Super Duty	6. 2L	2V	2011 MY	SDARS	•	•	•	•
F-Series Super Duty	6. 2L	2V	2011 MY	TBC	•	•	•	0
F-Series Super Duty	6. 2L	2V	2011 MY	TCCM	•	•	•	•
F-Series Super Duty	6. 2L	2V	2011 MY	TPM	•	•	•	0
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2008 MY	4X4	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2008 MY	ABS	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2008 MY	ACM	•	•	•	0
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2008 MY	AHCM	•	•	•	0
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2008 MY	CDIM	•	•	•	0
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2008 MY	DSM	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2008 MY	GEM / SJB	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2008 MY	HVAC	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2008 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2008 MY	PAM	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2008 MY	PCM	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2008 MY	RCM	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2008 MY	RETM	•	•	•	0
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2008 MY	SDARS	•	•	•	
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2008 MY	TBC	•	•	•	0
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2008 MY	TCM	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	4X4	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	ABS	•	•	•	•
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	ACM	•	•	•	•
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	AHCM	•	•	•	0
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	APIM	•	•	•	0
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	CDIM	•	•	•	0
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	DSM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	GEM / SJB	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	HVAC	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	IC	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	PAM	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	PCM	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	RCM	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	RETM	•	•	•	0
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	SDARS	•	•	•	
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	TBC	•	•	•	0
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2009 MY	TCM	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	4X4	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	ABS	•	•	•	
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	ACM	•	•	•	
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	AHCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	APIM	•	•	•	0
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	CDIM	•	•	•	0
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	DSM	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	GEM / SJB	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	GPSM	•	•	•	0
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	HVAC	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	IC	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	PAM	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	PCM	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	RCM	•	•	•	•
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	RETM	•	•	•	0
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	SDARS	•	•	•	
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	TBC	•	•	•	0
F-Series Super Duty	6. 4L	Power Stroke - Direct Injection Turbo Diesel	2010 MY	TCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	ABS	•	•	•	•
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	ACM	•	•	•	•
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	ACM	•	•	•	0
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	AHCM	•	•	•	0
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	APIM	•	•	•	0
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	BCM#1	•	•	•	•
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	CDIM	•	•	•	0
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	DCSM	•	•	•	•
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	DSM	•	•	•	•
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	GPSM	•	•	•	0
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	HVAC	•	•	•	•
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	IPC	•	•	•	•
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	PAM	•	•	•	0
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	RCM	•	•	•	0
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	SCCM	•	•	•	0
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	SDARS	•	•	•	•
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	TBC	•	•	•	0
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	TCCM	•	•	•	•
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	TCM	•	•	•	•
F-Series Super Duty	6. 7L	Power Stroke - Direct Injection Turbo Diesel	2011 MY	TPM	•	•	•	0
F-Series Super Duty	6.8L	2V	2004 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	6.8L	2V	2004 MY	GEM	•	•	•	•
F-Series Super Duty	6.8L	2V	2004 MY	HEC	•	•	•	•
F-Series Super Duty	6.8L	2V	2004 MY	OTC	•	•	•	0
F-Series Super Duty	6.8L	2V	2004 MY	PAM	•	•	•	•
F-Series Super Duty	6.8L	2V	2004 MY	PATS	•	•	•	•
F-Series Super Duty	6.8L	2V	2004 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	2V	2004 MY	RCM	•	•	•	•
F-Series Super Duty	6.8L	2V	2004 MY	VSM	•	•	•	•
F-Series Super Duty	6.8L	2V	2005 MY	ABS	•	•	•	•
F-Series Super Duty	6.8L	2V	2005 MY	EATC	•	•	•	•
F-Series Super Duty	6.8L	2V	2005 MY	GEM	•	•	•	•
F-Series Super Duty	6.8L	2V	2005 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	6. 8L	2V	2005 MY	PAM	•	•	•	•
F-Series Super Duty	6.8L	2V	2005 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	2V	2005 MY	RCM	•	•	•	•
F-Series Super Duty	6.8L	2V	2005 MY	TBC	•	•	•	0
F-Series Super Duty	6.8L	2V	2005 MY	VSM	•	•	•	•
F-Series Super Duty	6.8L	2V	2006 MY	ABS	•	•	•	•
F-Series Super Duty	6.8L	2V	2006 MY	EATC	•		•	•
F-Series Super Duty	6.8L	2V	2006 MY	GEM	•	•	•	•
F-Series Super Duty	6.8L	2V	2006 MY	IC	•	•	•	•
F-Series Super Duty	6.8L	2V	2006 MY	PAM	•	•	•	•
F-Series Super Duty	6.8L	2V	2006 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	2V	2006 MY	RCM	•		•	
F-Series Super Duty	6.8L	2V	2006 MY	TBC	•		•	0
F-Series Super Duty	6.8L	2V	2006 MY	VSM	•		•	•
F-Series Super Duty	6.8L	2V	2007 MY	ABS	•		•	•
F-Series Super Duty	6.8L	2V	2007 MY	EATC	•		•	•
F-Series Super Duty	6.8L	2V	2007 MY	GEM	•	•	•	•
F-Series Super Duty	6.8L	2V	2007 MY	IC	•	•	•	•
F-Series Super Duty	6.8L	2V	2007 MY	PAM	•	•	•	•
F-Series Super Duty	6.8L	2V	2007 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	2V	2007 MY	RCM	•	•	•	•
F-Series Super Duty	6.8L	2V	2007 MY	TBC	•	•	•	0
F-Series Super Duty	6.8L	2V	2007 MY	VSM	•	•	•	•
F-Series Super Duty	6.8L	2V	2008 MY	4X4	•	•	•	•
F-Series Super Duty	6.8L	2V	2008 MY	ABS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
F-Series Super Duty	6. 8L	2V	2008 MY	ACM	•	•	•	0
F-Series Super Duty	6.8L	2V	2008 MY	DSM	•	•	•	•
F-Series Super Duty	6.8L	2V	2008 MY	GEM / SJB	•	•	•	•
F-Series Super Duty	6.8L	2V	2008 MY	HVAC	•	•	•	•
F-Series Super Duty	6.8L	2V	2008 MY	IC	•	•	•	•
F-Series Super Duty	6.8L	2V	2008 MY	PAM	•	•	•	•
F-Series Super Duty	6.8L	2V	2008 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	2V	2008 MY	RCM	•	•	•	•
F-Series Super Duty	6.8L	2V	2008 MY	RETM	•	•	•	0
F-Series Super Duty	6.8L	2V	2008 MY	SDARS	•	•	•	
F-Series Super Duty	6.8L	2V	2008 MY	TBC	•	•	•	0
F-Series Super Duty	6.8L	3V	2005 MY	ABS	•	•	•	•
F-Series Super Duty	6.8L	3V	2005 MY	EATC	•	•	•	•
F-Series Super Duty	6.8L	3V	2005 MY	GEM	•	•	•	•
F-Series Super Duty	6.8L	3V	2005 MY	IC	•	•	•	•
F-Series Super Duty	6.8L	3V	2005 MY	PAM	•	•	•	•
F-Series Super Duty	6.8L	3V	2005 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	3V	2005 MY	RCM	•	•	•	•
F-Series Super Duty	6.8L	3V	2005 MY	TBC	•	•	•	0
F-Series Super Duty	6.8L	3V	2005 MY	VSM	•	•	•	•
F-Series Super Duty	6.8L	3V	2006 MY	ABS	•	•	•	•
F-Series Super Duty	6.8L	3V	2006 MY	EATC	•	•	•	•
F-Series Super Duty	6.8L	3V	2006 MY	GEM	•	•	•	•
F-Series Super Duty	6.8L	3V	2006 MY	IC	•	•	•	•
F-Series Super Duty	6.8L	3V	2006 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	6. 8L	3V	2006 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	3V	2006 MY	RCM	•	•	•	
F-Series Super Duty	6.8L	3V	2006 MY	TBC	•	•	•	0
F-Series Super Duty	6.8L	3V	2006 MY	VSM	•	•	•	•
F-Series Super Duty	6.8L	3V	2007 MY	ABS	•	•	•	•
F-Series Super Duty	6.8L	3V	2007 MY	EATC	•	•	•	•
F-Series Super Duty	6.8L	3V	2007 MY	GEM	•	•	•	•
F-Series Super Duty	6. 8L	3V	2007 MY	IC	•	•	•	•
F-Series Super Duty	6.8L	3V	2007 MY	PAM	•	•	•	•
F-Series Super Duty	6.8L	3V	2007 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	3V	2007 MY	RCM	•	•	•	•
F-Series Super Duty	6.8L	3V	2007 MY	TBC	•	•	•	0
F-Series Super Duty	6.8L	3V	2007 MY	VSM	•	•	•	•
F-Series Super Duty	6.8L	3V	2008 MY	4X4	•	•	•	•
F-Series Super Duty	6.8L	3V	2008 MY	ABS	•	•	•	•
F-Series Super Duty	6.8L	3V	2008 MY	ACM	•	•	•	0
F-Series Super Duty	6.8L	3V	2008 MY	DSM	•	•	•	•
F-Series Super Duty	6.8L	3V	2008 MY	GEM / SJB	•	•	•	•
F-Series Super Duty	6.8L	3V	2008 MY	HVAC	•	•	•	•
F-Series Super Duty	6.8L	3V	2008 MY	IC	•	•	•	•
F-Series Super Duty	6.8L	3V	2008 MY	PAM	•	•	•	•
F-Series Super Duty	6.8L	3V	2008 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	3V	2008 MY	RCM	•	•	•	•
F-Series Super Duty	6.8L	3V	2008 MY	RETM	•	•	•	0
F-Series Super Duty	6. 8L	3V	2008 MY	SDARS	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	6.8L	3V	2008 MY	TBC	•	•	•	0
F-Series Super Duty	6. 8L	3V	2009 MY	4X4	•	•	•	•
F-Series Super Duty	6.8L	3V	2009 MY	ABS	•	•	•	•
F-Series Super Duty	6.8L	3V	2009 MY	ACM	•	•	•	•
F-Series Super Duty	6.8L	3V	2009 MY	APIM	•	•	•	0
F-Series Super Duty	6.8L	3V	2009 MY	DSM	•	•	•	•
F-Series Super Duty	6.8L	3V	2009 MY	GEM / SJB	•	•	•	•
F-Series Super Duty	6.8L	3V	2009 MY	HVAC	•	•	•	•
F-Series Super Duty	6.8L	3V	2009 MY	IC	•	•	•	•
F-Series Super Duty	6.8L	3V	2009 MY	PAM	•	•	•	•
F-Series Super Duty	6.8L	3V	2009 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	3V	2009 MY	RCM	•	•	•	•
F-Series Super Duty	6.8L	3V	2009 MY	RETM	•	•	•	0
F-Series Super Duty	6.8L	3V	2009 MY	SDARS	•	•	•	
F-Series Super Duty	6.8L	3V	2009 MY	TBC	•	•	•	0
F-Series Super Duty	6.8L	3V	2010 MY	4X4	•	•	•	•
F-Series Super Duty	6.8L	3V	2010 MY	ABS	•	•	•	
F-Series Super Duty	6.8L	3V	2010 MY	ACM	•	•	•	•
F-Series Super Duty	6.8L	3V	2010 MY	APIM	•	•	•	0
F-Series Super Duty	6.8L	3V	2010 MY	DSM	•	•	•	•
F-Series Super Duty	6.8L	3V	2010 MY	GEM / SJB	•	•	•	•
F-Series Super Duty	6. 8L	3V	2010 MY	GPSM	•	•	•	0
F-Series Super Duty	6. 8L	3V	2010 MY	HVAC	•	•	•	•
F-Series Super Duty	6. 8L	3V	2010 MY	IC	•	•	•	•
F-Series Super Duty	6.8L	3V	2010 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
F-Series Super Duty	6. 8L	3V	2010 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	3V	2010 MY	RCM	•	•	•	•
F-Series Super Duty	6.8L	3V	2010 MY	RETM	•	•	•	0
F-Series Super Duty	6.8L	3V	2010 MY	SDARS	•	•	•	
F-Series Super Duty	6.8L	3V	2010 MY	TBC	•	•	•	0
F-Series Super Duty	6.8L	3V	2011 MY	ABS	•		•	•
F-Series Super Duty	6.8L	3V	2011 MY	ACM	•		•	•
F-Series Super Duty	6.8L	3V	2011 MY	ACM	•	•	•	0
F-Series Super Duty	6.8L	3V	2011 MY	APIM	•	•	•	0
F-Series Super Duty	6.8L	3V	2011 MY	BCM#1	•	•	•	•
F-Series Super Duty	6.8L	3V	2011 MY	DCSM	•	•	•	•
F-Series Super Duty	6.8L	3V	2011 MY	DSM	•		•	•
F-Series Super Duty	6.8L	3V	2011 MY	GPSM	•		•	0
F-Series Super Duty	6.8L	3V	2011 MY	HVAC	•		•	•
F-Series Super Duty	6.8L	3V	2011 MY	IPC	•		•	•
F-Series Super Duty	6.8L	3V	2011 MY	PAM	•		•	0
F-Series Super Duty	6.8L	3V	2011 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	3V	2011 MY	RCM	•	•	•	0
F-Series Super Duty	6.8L	3V	2011 MY	SCCM	•	•	•	0
F-Series Super Duty	6.8L	3V	2011 MY	SDARS	•	•	•	•
F-Series Super Duty	6.8L	3V	2011 MY	TBC	•	•	•	0
F-Series Super Duty	6.8L	3V	2011 MY	TCCM	•	•	•	•
F-Series Super Duty	6.8L	3V	2011 MY	TPM	•	•	•	0
F-Series Super Duty	6.8L	Other	1999 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	6.8L	Other	1999 MY	ECS	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	6.8L	Other	1999 MY	GEM	•	•	•	•
F-Series Super Duty	6.8L	Other	1999 MY	OTC	•	•	•	0
F-Series Super Duty	6.8L	Other	1999 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	Other	2000 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	6.8L	Other	2000 MY	AFCM	•	•	•	0
F-Series Super Duty	6.8L	Other	2000 MY	ECS	•	•	•	0
F-Series Super Duty	6.8L	Other	2000 MY	GEM	•	•	•	
F-Series Super Duty	6.8L	Other	2000 MY	OTC	•	•	•	0
F-Series Super Duty	6.8L	Other	2000 MY	PATS	•	•	•	•
F-Series Super Duty	6.8L	Other	2000 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	Other	2001 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	6.8L	Other	2001 MY	AFCM	•	•	•	0
F-Series Super Duty	6.8L	Other	2001 MY	ECS	•	•	•	0
F-Series Super Duty	6.8L	Other	2001 MY	GEM	•	•	•	•
F-Series Super Duty	6.8L	Other	2001 MY	OTC	•	•	•	0
F-Series Super Duty	6.8L	Other	2001 MY	PAM	•	•	•	•
F-Series Super Duty	6.8L	Other	2001 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	Other	2001 MY	RCM	•	•	•	0
F-Series Super Duty	6.8L	Other	2002 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	6.8L	Other	2002 MY	CSM	•	•	•	•
F-Series Super Duty	6.8L	Other	2002 MY	GEM	•	•	•	•
F-Series Super Duty	6.8L	Other	2002 MY	HEC	•	•	•	•
F-Series Super Duty	6.8L	Other	2002 MY	OTC	•	•	•	0
F-Series Super Duty	6.8L	Other	2002 MY	PAM	•	•	•	•
F-Series Super Duty	6.8L	Other	2002 MY	PATS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F-Series Super Duty	6.8L	Other	2002 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	Other	2002 MY	RCM	•	•	•	•
F-Series Super Duty	6.8L	Other	2003 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	6.8L	Other	2003 MY	FOH	•	•	•	
F-Series Super Duty	6.8L	Other	2003 MY	GEM	•	•	•	•
F-Series Super Duty	6.8L	Other	2003 MY	HEC	•	•	•	•
F-Series Super Duty	6.8L	Other	2003 MY	OTC	•	•	•	0
F-Series Super Duty	6.8L	Other	2003 MY	PAM	•	•	•	•
F-Series Super Duty	6.8L	Other	2003 MY	PATS	•	•	•	•
F-Series Super Duty	6.8L	Other	2003 MY	PCM	•	•	•	•
F-Series Super Duty	6.8L	Other	2003 MY	RCM	•	•	•	•
F-Series Super Duty	6.8L	Other	2003 MY	VSM	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	1999 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	1999 MY	ECS	•	•	•	0
F-Series Super Duty	7. 3L	Direct Injection - Turbo	1999 MY	GEM	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	1999 MY	OTC	•	•	•	0
F-Series Super Duty	7. 3L	Direct Injection - Turbo	1999 MY	PCM	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2000 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2000 MY	ECS	•	•	•	0
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2000 MY	GEM	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2000 MY	OTC	•	•	•	0
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2000 MY	PATS	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2000 MY	PCM	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2001 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2001 MY	ECS	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2001 MY	GEM	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2001 MY	OTC	•	•	•	0
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2001 MY	PAM	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2001 MY	PCM	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2001 MY	RCM		•	•	0
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2002 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2002 MY	CSM	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2002 MY	GEM	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2002 MY	HEC	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2002 MY	OTC	•	•	•	0
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2002 MY	PAM	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2002 MY	PATS	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2002 MY	PCM	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2002 MY	RCM	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2003 MY	ABS/TCS	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2003 MY	FOH	•	•	•	
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2003 MY	GEM	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2003 MY	HEC	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2003 MY	OTC	•	•	•	0
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2003 MY	PAM		•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2003 MY	PATS		•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2003 MY	PCM	•		•	
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2003 MY	RCM	•	•	•	•
F-Series Super Duty	7. 3L	Direct Injection - Turbo	2003 MY	VSM	•	•	•	•
F350/4000	3. 9L	Cummins Diesel	2009 MY	4X4	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
F350/4000	3.9L	Cummins Diesel	2009 MY	GEM	•	•	•	
Fairlane / LTD	4. 0L	DOHC VCT	2003 MY	ABS/TCS	•	•	•	•
Fairlane / LTD	4. 0L	DOHC VCT	2003 MY	ACM	•	•	•	•
Fairlane / LTD	4. 0L	DOHC VCT	2003 MY	BEM	•	•	•	•
Fairlane / LTD	4. 0L	DOHC VCT	2003 MY	HIM	•	•	•	•
Fairlane / LTD	4. 0L	DOHC VCT	2003 MY	IC	•	•	•	•
Fairlane / LTD	4. 0L	DOHC VCT	2003 MY	PAM	•	•	•	•
Fairlane / LTD	4. 0L	DOHC VCT	2003 MY	PCM	•	•	•	0
Fairlane / LTD	4. 0L	DOHC VCT	2003 MY	RCM	•	•	•	•
Fairlane / LTD	4. 0L	DOHC VCT	2006 MY	ABS	•	•	•	•
Fairlane / LTD	4. 0L	DOHC VCT	2006 MY	ABS/TCS	•	•	•	
Fairlane / LTD	4. 0L	DOHC VCT	2006 MY	ACM	•	•	•	•
Fairlane / LTD	4. 0L	DOHC VCT	2006 MY	BEM	•	•	•	•
Fairlane / LTD	4. 0L	DOHC VCT	2006 MY	HIM	•	•	•	•
Fairlane / LTD	4. 0L	DOHC VCT	2006 MY	IC	•	•	•	•
Fairlane / LTD	4. 0L	DOHC VCT	2006 MY	PAM	•	•	•	•
Fairlane / LTD	4. 0L	DOHC VCT	2006 MY	PCM	•	•	•	0
Fairlane / LTD	4. 0L	DOHC VCT	2006 MY	RCM	•	•	•	•
Fairlane / LTD	4. 0L	DOHC VCT	2006 MY	TCM	•	•	•	0
Fairlane / LTD	4. 0L	Other	Other	ABS	•	•	•	•
Fairlane / LTD	4. OL	0ther	Other	ABS/TCS	•	•	•	•
Fairlane / LTD	4. OL	0ther	Other	ACM	•	•	•	•
Fairlane / LTD	4. OL	0ther	Other	BEM	•	•	•	•
Fairlane / LTD	4. OL	0ther	Other	IAB	•	•	•	•
Fairlane / LTD	4. OL	Other	Other	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fairlane / LTD	4. OL	Other	Other	PCM	•	•	•	•
Fairlane / LTD	4. 0L	Other	Other	RCM	•	•	•	•
Fairlane / LTD	5. 0L	Other	Other	ABS	•	•	•	•
Fairlane / LTD	5. 0L	Other	Other	ABS/TCS	•	•	•	•
Fairlane / LTD	5. OL	0ther	Other	ACM	•	•	•	•
Fairlane / LTD	5. 0L	Other	Other	BEM	•	•	•	•
Fairlane / LTD	5. 0L	Other	Other	IAB	•	•	•	•
Fairlane / LTD	5. OL	0ther	Other	IC	•	•	•	•
Fairlane / LTD	5. OL	0ther	Other	PCM	•	•	•	•
Fairlane / LTD	5. OL	0ther	Other	RCM	•	•	•	•
Fairlane / LTD	5. 4L	3V	2003 MY	ABS/TCS	•	•	•	•
Fairlane / LTD	5. 4L	3V	2003 MY	ACM	•	•	•	•
Fairlane / LTD	5. 4L	3V	2003 MY	BEM	•	•	•	•
Fairlane / LTD	5. 4L	3V	2003 MY	HIM	•	•	•	•
Fairlane / LTD	5. 4L	3V	2003 MY	IC	•	•	•	•
Fairlane / LTD	5. 4L	3V	2003 MY	PAM	•	•	•	•
Fairlane / LTD	5. 4L	3V	2003 MY	PCM	•	•	•	0
Fairlane / LTD	5. 4L	3V	2003 MY	RCM	•	•	•	•
Fairlane / LTD	5. 4L	3V	2006 MY	ABS	•	•	•	•
Fairlane / LTD	5. 4L	3V	2006 MY	ABS/TCS	•	•	•	0
Fairlane / LTD	5. 4L	3V	2006 MY	ACM	•	•	•	•
Fairlane / LTD	5. 4L	3V	2006 MY	BEM	•	•	•	•
Fairlane / LTD	5. 4L	3V	2006 MY	HIM	•	•	•	•
Fairlane / LTD	5. 4L	3V	2006 MY	IC	•	•	•	•
Fairlane / LTD	5. 4L	3V	2006 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fairlane / LTD	5. 4L	3V	2006 MY	PCM	•	•	•	0
Fairlane / LTD	5. 4L	3V	2006 MY	RCM	•	•	•	•
Fairlane / LTD	5. 4L	3V	2006 MY	TCM	•	•	•	0
Fairmont	4. 0L	DOHC VCT	2003 MY	ABS/TCS	•	•	•	•
Fairmont	4. 0L	DOHC VCT	2003 MY	ACM	•	•	•	•
Fairmont	4. 0L	DOHC VCT	2003 MY	BEM	•		•	•
Fairmont	4. 0L	DOHC VCT	2003 MY	HIM	•		•	•
Fairmont	4. 0L	DOHC VCT	2003 MY	IC	•	•	•	•
Fairmont	4. 0L	DOHC VCT	2003 MY	PAM	•	•	•	•
Fairmont	4. 0L	DOHC VCT	2003 MY	PCM	•	•	•	0
Fairmont	4. 0L	DOHC VCT	2003 MY	RCM	•		•	•
Fairmont	4. 0L	DOHC VCT	2006 MY	ABS	•		•	•
Fairmont	4. 0L	DOHC VCT	2006 MY	ABS/TCS	•		•	
Fairmont	4. 0L	DOHC VCT	2006 MY	ACM	•	•	•	•
Fairmont	4. 0L	DOHC VCT	2006 MY	BEM	•		•	•
Fairmont	4. 0L	DOHC VCT	2006 MY	HIM	•		•	•
Fairmont	4. 0L	DOHC VCT	2006 MY	IC	•	•	•	•
Fairmont	4. 0L	DOHC VCT	2006 MY	PAM	•		•	•
Fairmont	4. 0L	DOHC VCT	2006 MY	PCM	•	•	•	0
Fairmont	4. 0L	DOHC VCT	2006 MY	RCM	•	•	•	•
Fairmont	4. 0L	DOHC VCT	2006 MY	TCM	•	•	•	0
Fairmont	4. 0L	Other	Other	ABS	•	•	•	•
Fairmont	4. 0L	Other	Other	ABS/TCS	•	•	•	•
Fairmont	4. 0L	Other	Other	ACM	•	•	•	•
Fairmont	4. 0L	Other	Other	BEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fairmont	4. 0L	Other	Other	IAB	•	•	•	•
Fairmont	4. 0L	Other	Other	IC	•		•	•
Fairmont	4. 0L	Other	Other	PCM	•	•	•	•
Fairmont	4. 0L	Other	Other	RCM	•	•		•
Fairmont	5. 0L	Other	Other	ABS	•	•	•	•
Fairmont	5. 0L	Other	Other	ABS/TCS	•	•	•	•
Fairmont	5. 0L	Other	Other	ACM	•	•	•	•
Fairmont	5. 0L	Other	Other	BEM	•	•	•	•
Fairmont	5. 0L	Other	Other	IAB	•	•	•	•
Fairmont	5. 0L	Other	Other	IC	•			
Fairmont	5. 0L	Other	Other	PCM	•	•	•	•
Fairmont	5. 0L	Other	Other	RCM	•	•	•	•
Fairmont	5. 4L	3V	2003 MY	ABS/TCS	•	•	•	•
Fairmont	5. 4L	3V	2003 MY	ACM	•		•	•
Fairmont	5. 4L	3V	2003 MY	BEM	•			•
Fairmont	5. 4L	3V	2003 MY	HIM	•			•
Fairmont	5. 4L	3V	2003 MY	IC	•			•
Fairmont	5. 4L	3V	2003 MY	PAM	•	•	•	•
Fairmont	5. 4L	3V	2003 MY	PCM	•			0
Fairmont	5. 4L	3V	2003 MY	RCM	•			•
Fairmont	5. 4L	3V	2006 MY	ABS	•			•
Fairmont	5. 4L	3V	2006 MY	ABS/TCS	•	•	•	0
Fairmont	5. 4L	3V	2006 MY	ACM	•	•	•	•
Fairmont	5. 4L	3V	2006 MY	BEM	•	•	•	•
Fairmont	5. 4L	3V	2006 MY	HIM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fairmont	5. 4L	3V	2006 MY	IC	•	•	•	•
Fairmont	5. 4L	3V	2006 MY	PAM	•	•	•	•
Fairmont	5. 4L	3V	2006 MY	PCM	•	•	•	0
Fairmont	5. 4L	3V	2006 MY	RCM	•	•	•	•
Fairmont	5. 4L	3V	2006 MY	TCM	•	•	•	0
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2003 MY	ABS/TCS	•	•	•	
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2003 MY	ACM	•	•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2003 MY	BEM	•	•	•	
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2003 MY	HIM	•	•	•	
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2003 MY	IC		•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2003 MY	PAM		•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2003 MY	PCM		•	•	0
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2003 MY	RCM	•	•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2004 MY	ABS/TCS	•	•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2004 MY	ACM	•	•	•	
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2004 MY	BEM	•	•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2004 MY	HIM	•	•	•	
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2004 MY	IC	•	•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2004 MY	PAM	•	•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2004 MY	PCM	•	•	•	0
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2004 MY	RCM	•	•	•	
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2006 MY	ABS	•	•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2006 MY	ABS/TCS	•	•	•	
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2006 MY	ACM	•	•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2006 MY	BEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2006 MY	HIM	•	•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2006 MY	IC	•	•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2006 MY	PAM	•	•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2006 MY	PCM	•	•	•	0
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2006 MY	RCM		•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2006 MY	TCM	•	•	•	0
Falcon Forte S / Futura / XR / XT	4.0L	DOHC VCT	2008 MY	ABS	•	•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2008 MY	ACM		•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2008 MY	AIM		•	•	0
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2008 MY	BEM		•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2008 MY	BPM		•	•	0
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2008 MY	FDIM	•	•	•	•
Falcon Forte S / Futura / XR / XT	4.0L	DOHC VCT	2008 MY	HIM	•	•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2008 MY	IC		•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2008 MY	PAM		•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2008 MY	PCM		•	•	
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2008 MY	RCM		•	•	
Falcon Forte S / Futura / XR / XT	4. 0L	DOHC VCT	2008 MY	TCM		•	•	0
Falcon Forte S / Futura / XR / XT	4. 0L	Other	Other	ABS		•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	Other	Other	ABS/TCS		•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	Other	Other	ACM		•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	Other	Other	BEM	•	•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	Other	Other	IAB	•	•	•	•
Falcon Forte S / Futura / XR / XT	4.0L	Other	Other	IC	•	•	•	•
Falcon Forte S / Futura / XR / XT	4. 0L	Other	Other	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Falcon Forte S / Futura / XR / XT	4. 0L	Other	Other	RCM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 0L	4V	2010 MY	ABS	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 0L	4V	2010 MY	ACM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 0L	4V	2010 MY	AIM	•	•	•	0
Falcon Forte S / Futura / XR / XT	5. 0L	4V	2010 MY	BPM	•	•	•	0
Falcon Forte S / Futura / XR / XT	5. 0L	4V	2010 MY	FDIM	•	•	•	
Falcon Forte S / Futura / XR / XT	5. 0L	4V	2010 MY	HIM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 0L	4V	2010 MY	PAM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 0L	4V	2010 MY	PCM	•	•	•	
Falcon Forte S / Futura / XR / XT	5. 0L	4V	2010 MY	RCM	•	•	•	
Falcon Forte S / Futura / XR / XT	5. 0L	4V	2010 MY	TCM	•	•	•	0
Falcon Forte S / Futura / XR / XT	5. 0L	Other	Other	ABS	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 0L	Other	Other	ABS/TCS	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 0L	Other	0ther	ACM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 0L	Other	0ther	BEM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 0L	Other	Other	IAB	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 0L	Other	Other	IC	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 0L	Other	0ther	PCM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 0L	Other	Other	RCM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2003 MY	ABS/TCS	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2003 MY	ACM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2003 MY	BEM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2003 MY	HIM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2003 MY	IC	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2003 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2003 MY	PCM	•	•	•	0
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2003 MY	RCM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2006 MY	ABS	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2006 MY	ABS/TCS	•	•	•	0
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2006 MY	ACM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2006 MY	BEM	•	•	•	
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2006 MY	HIM	•	•	•	
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2006 MY	IC	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2006 MY	PAM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2006 MY	PCM	•	•	•	0
Falcon Forte S / Futura / XR / XT	5. 4L	3V	2006 MY	RCM	•	•	•	
Falcon Forte S / Futura / XR / XT	5.4L	3V	2006 MY	TCM	•	•	•	0
Falcon Forte S / Futura / XR / XT	5.4L	4V	2003 MY	ABS/TCS	•	•	•	
Falcon Forte S / Futura / XR / XT	5.4L	4V	2003 MY	ACM	•	•	•	
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2003 MY	BEM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5.4L	4V	2003 MY	HIM	•	•	•	
Falcon Forte S / Futura / XR / XT	5.4L	4V	2003 MY	IC	•	•	•	
Falcon Forte S / Futura / XR / XT	5.4L	4V	2003 MY	PAM	•	•	•	
Falcon Forte S / Futura / XR / XT	5.4L	4V	2003 MY	PCM	•	•	•	0
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2003 MY	RCM	•	•	•	
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2004 MY	ABS/TCS	•	•	•	
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2004 MY	ACM	•	•	•	
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2004 MY	BEM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2004 MY	HIM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2004 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2004 MY	PAM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2004 MY	PCM	•	•	•	0
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2004 MY	RCM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5.4L	4V	2006 MY	ABS	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2006 MY	ABS/TCS		•	•	0
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2006 MY	ACM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5.4L	4V	2006 MY	BEM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5.4L	4V	2006 MY	HIM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5.4L	4V	2006 MY	IC	•	•	•	•
Falcon Forte S / Futura / XR / XT	5.4L	4V	2006 MY	PAM		•	•	•
Falcon Forte S / Futura / XR / XT	5.4L	4V	2006 MY	PCM		•	•	0
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2006 MY	RCM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2006 MY	TCM	•	•	•	0
Falcon Forte S / Futura / XR / XT	5.4L	4V	2008 MY	ABS	•	•	•	•
Falcon Forte S / Futura / XR / XT	5.4L	4V	2008 MY	ACM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2008 MY	AIM	•	•	•	0
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2008 MY	BEM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5.4L	4V	2008 MY	BPM	•	•	•	0
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2008 MY	FDIM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2008 MY	HIM		•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2008 MY	IC		•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2008 MY	PAM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5.4L	4V	2008 MY	PCM	•	•	•	
Falcon Forte S / Futura / XR / XT	5.4L	4V	2008 MY	RCM	•	•	•	•
Falcon Forte S / Futura / XR / XT	5. 4L	4V	2008 MY	TCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
FAMILIA / LASER	1. 3L	В3	1998 MY	ABS	•	•	•	•
FAMILIA / LASER	1.5L	ZL	1998 MY	ABS	•	•	•	•
FAMILIA / LASER	1.5L	ZL	2000 MY	ABS	•	•	•	•
FAMILIA / LASER	1.5L	ZL	2000 MY	ABS/TCS	•	•	•	•
FAMILIA / LASER	1.5L	ZL	2000 MY	PCM	•	•	•	•
FAMILIA / LASER	1.5L	ZL	2002 MY	ABS/TCS	•	•	•	•
FAMILIA / LASER	1.5L	ZL	2002 MY	PCM	•	•	•	
FAMILIA / LASER	1.8L	FP	1998 MY	ABS		•	•	•
FAMILIA / LASER	2. 0L	FS	1999 MY	ABS		•	•	•
FAMILIA / LASER	2. 0L	FS	2000 MY	ABS		•	•	•
FAMILIA / LASER	2. 0L	FS	2002 MY	ABS/TCS		•	•	•
FAMILIA / LASER	2. 0L	FS	2002 MY	PCM				
FAMILIA / LASER	2. 0L	RF	1998 MY	ABS	•	•	•	•
Festiva	1.5L	Other	Other	PCM	•	•	•	•
Fiesta	1.3L	BZ	2008.75 MY	ABS		•	•	0
Fiesta	1.3L	BZ	2008.75 MY	ACM		•	•	0
Fiesta	1.3L	BZ	2008.75 MY	BCMii		•	•	0
Fiesta	1.3L	BZ	2008.75 MY	FCDIM		•	•	0
Fiesta	1.3L	BZ	2008.75 MY	HVAC		•	•	0
Fiesta	1.3L	BZ	2008.75 MY	IPC		•	•	•
Fiesta	1.3L	BZ	2008.75 MY	PCM		•	•	•
Fiesta	1.3L	BZ	2008.75 MY	PSCM		•	•	0
Fiesta	1.3L	BZ	2008.75 MY	RCM		•	•	0
Fiesta	1. 3L	BZ	2008.75 MY	RFA	•	•	•	0
Fiesta	1. 3L	BZ	2008.75 MY	SRM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fiesta	1. 3L	DURATEC 8V	2002 MY	ABS/TCS	•	•	•	•
Fiesta	1. 3L	DURATEC 8V	2002 MY	GEM	•	•	•	•
Fiesta	1. 3L	DURATEC 8V	2002 MY	IC	•	•	•	•
Fiesta	1. 3L	DURATEC 8V	2002 MY	PCM	•	•	•	•
Fiesta	1. 3L	DURATEC 8V	2002 MY	RCM	•	•		0
Fiesta	1. 3L	DURATEC 8V	2006 MY	ABS/TCS	•	•	•	•
Fiesta	1. 3L	DURATEC 8V	2006 MY	ACM	•	•	•	0
Fiesta	1. 3L	DURATEC 8V	2006 MY	EATC	•	•		•
Fiesta	1. 3L	DURATEC 8V	2006 MY	GEM	•	•	•	
Fiesta	1. 3L	DURATEC 8V	2006 MY	IC	•	•		
Fiesta	1. 3L	DURATEC 8V	2006 MY	PCM	•	•		•
Fiesta	1. 3L	DURATEC 8V	2006 MY	RCM	•	•	•	0
Fiesta	1. 3L	DURATEC 8V	2006 MY	SRM	•	•	•	0
Fiesta	1. 4L	DURATEC 16V	2002 MY	ABS/TCS	•	•	•	•
Fiesta	1. 4L	DURATEC 16V	2002 MY	GEM	•	•	•	•
Fiesta	1. 4L	DURATEC 16V	2002 MY	IC	•	•	•	•
Fiesta	1. 4L	DURATEC 16V	2002 MY	PCM	•	•		•
Fiesta	1. 4L	DURATEC 16V	2002 MY	RCM	•	•	•	0
Fiesta	1. 4L	DURATEC 16V	2002 MY	TCM	•	•		0
Fiesta	1. 4L	DURATEC 16V	2006 MY	ABS/TCS	•	•		•
Fiesta	1. 4L	DURATEC 16V	2006 MY	ACM	•	•		0
Fiesta	1. 4L	DURATEC 16V	2006 MY	EATC	•	•	•	•
Fiesta	1. 4L	DURATEC 16V	2006 MY	GEM	•	•	•	
Fiesta	1. 4L	DURATEC 16V	2006 MY	IC	•	•	•	
Fiesta	1. 4L	DURATEC 16V	2006 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Fiesta	1. 4L	DURATEC 16V	2006 MY	RCM	•	•	•	0
Fiesta	1. 4L	DURATEC 16V	2006 MY	SRM	•	•	•	0
Fiesta	1. 4L	DURATEC 16V	2006 MY	TCM	•	•	•	0
Fiesta	1. 4L	DURATEC 16V	2008.75 MY	ABS	•	•	•	0
Fiesta	1. 4L	DURATEC 16V	2008.75 MY	ACM	•	•	•	0
Fiesta	1. 4L	DURATEC 16V	2008.75 MY	BCMii	•	•	•	0
Fiesta	1. 4L	DURATEC 16V	2008.75 MY	FCDIM	•	•	•	0
Fiesta	1. 4L	DURATEC 16V	2008.75 MY	HVAC	•	•	•	0
Fiesta	1. 4L	DURATEC 16V	2008.75 MY	IPC	•	•	•	•
Fiesta	1. 4L	DURATEC 16V	2008.75 MY	PCM	•	•	•	0
Fiesta	1. 4L	DURATEC 16V	2008.75 MY	PSCM	•	•	•	0
Fiesta	1. 4L	DURATEC 16V	2008.75 MY	RCM	•	•	•	0
Fiesta	1. 4L	DURATEC 16V	2008.75 MY	RFA	•	•	•	0
Fiesta	1. 4L	DURATEC 16V	2008.75 MY	SRM	•	•	•	0
Fiesta	1. 4L	DURATEC 16V	2008.75 MY	TCM	•	•	•	0
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	ABS/TCS	•	•	•	•
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	GEM	•	•	•	•
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	IC	•	•	•	•
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	PCM	•	•	•	•
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	RCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	TCM	•	•	•	0
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	ABS/TCS	•	•	•	•
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	ACM	•	•	•	0
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	EATC	•	•	•	•
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	GEM	•	•	•	
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	IC	•	•	•	
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	PCM	•	•	•	•
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	RCM	•	•	•	0
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	SRM	•	•	•	0
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	TCM	•	•	•	0
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	ABS	•	•	•	0
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	ACM	•	•	•	0
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	BCMii	•	•	•	0
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	FCDIM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	HVAC	•	•	•	0
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	IPC	•	•	•	•
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	PCM	•	•	•	0
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	PSCM	•	•	•	0
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	RCM	•	•	•	0
Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	RFA	•	•	•	0
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	SRM	•	•	•	0
Fiesta	1. 5L	BZ	2008.75 MY	ABS	•	•	•	0
Fiesta	1. 5L	BZ	2008.75 MY	ACM	•	•	•	0
Fiesta	1. 5L	BZ	2008.75 MY	BCMii	•	•	•	0
Fiesta	1. 5L	BZ	2008.75 MY	FCDIM	•		•	0
Fiesta	1. 5L	BZ	2008.75 MY	HVAC	•	•	•	0
Fiesta	1. 5L	BZ	2008.75 MY	IPC	•		•	•
Fiesta	1. 5L	BZ	2008.75 MY	PCM	•		•	•
Fiesta	1. 5L	BZ	2008.75 MY	PSCM	•		•	0
Fiesta	1. 5L	BZ	2008.75 MY	RCM	•		•	0
Fiesta	1. 5L	BZ	2008.75 MY	RFA	•	•	•	0
Fiesta	1. 5L	BZ	2008.75 MY	SRM	•	•	•	0
Fiesta	1. 6L	DURATEC 16V	2002 MY	ABS/TCS	•	•	•	•
Fiesta	1.6L	DURATEC 16V	2002 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fiesta	1.6L	DURATEC 16V	2002 MY	IC	•	•	•	•
Fiesta	1.6L	DURATEC 16V	2002 MY	PCM	•	•	•	•
Fiesta	1.6L	DURATEC 16V	2002 MY	RCM	•	•	•	0
Fiesta	1.6L	DURATEC 16V	2002 MY	TCM	•	•	•	0
Fiesta	1.6L	DURATEC 16V	2006 MY	ABS/TCS	•	•	•	•
Fiesta	1.6L	DURATEC 16V	2006 MY	ACM	•	•	•	0
Fiesta	1.6L	DURATEC 16V	2006 MY	EATC	•	•	•	•
Fiesta	1.6L	DURATEC 16V	2006 MY	GEM	•	•	•	
Fiesta	1.6L	DURATEC 16V	2006 MY	IC	•	•	•	•
Fiesta	1.6L	DURATEC 16V	2006 MY	PCM	•	•	•	•
Fiesta	1.6L	DURATEC 16V	2006 MY	RCM	•	•	•	0
Fiesta	1.6L	DURATEC 16V	2006 MY	SRM	•	•	•	0
Fiesta	1.6L	DURATEC 16V	2006 MY	TCM	•	•	•	0
Fiesta	1.6L	DURATEC VCT	2008.75 MY	ABS	•	•	•	0
Fiesta	1.6L	DURATEC VCT	2008.75 MY	ACM	•	•	•	0
Fiesta	1. 6L	DURATEC VCT	2008.75 MY	BCMii	•	•	•	0
Fiesta	1.6L	DURATEC VCT	2008.75 MY	FCDIM	•	•	•	0
Fiesta	1.6L	DURATEC VCT	2008.75 MY	HVAC	•	•	•	0
Fiesta	1.6L	DURATEC VCT	2008.75 MY	IPC	•	•	•	•
Fiesta	1.6L	DURATEC VCT	2008.75 MY	PCM	•	•	•	0
Fiesta	1.6L	DURATEC VCT	2008.75 MY	PSCM	•	•	•	0
Fiesta	1. 6L	DURATEC VCT	2008.75 MY	RCM	•	•	•	0
Fiesta	1. 6L	DURATEC VCT	2008.75 MY	RFA	•	•	•	0
Fiesta	1. 6L	DURATEC VCT	2008.75 MY	SRM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	ABS/TCS	•	•	•	•
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	EPS	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	GEM	•	•	•	•
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	IC	•	•	•	•
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	PCM	•	•	•	•
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	RCM	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	ABS/TCS	•	•	•	•
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	ACM	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	EATC	•	•	•	•
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	EPS	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	GEM	•	•	•	
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	IC	•	•	•	
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	PCM	•	•	•	•
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	RCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	SRM	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	ABS	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	ACM	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	BCMii	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	FCDIM	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	HVAC	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	IPC	•	•	•	•
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	PCM	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	PSCM	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	RCM	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	RFA	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	SRM	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.75 MY	ABS	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 75 MY	ACM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.75 MY	BCMii	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.75 MY	FCDIM	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.75 MY	HVAC	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.75 MY	IPC	•	•	•	•
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.75 MY	PCM	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.75 MY	PSCM	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.75 MY	RCM	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.75 MY	RFA	•	•	•	0
Fiesta	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.75 MY	SRM	•	•	•	0
Fiesta	1.6L	TiVCT	2011 MY	ACM	•	•	•	0
Fiesta	1. 6L	TiVCT	2011 MY	APIM	•	•	•	0
Fiesta	1. 6L	TiVCT	2011 MY	FCDIM	•	•	•	
Fiesta	1. 6L	TiVCT	2011 MY	GPSM	•	•	•	0
Fiesta	1. 6L	TiVCT	2011 MY	IPC	•	•	•	
Fiesta	1. 6L	TiVCT	2011 MY	OCSM	•	•	•	0
Fiesta	1. 6L	TiVCT	2011 MY	PCM	•	•	•	
Fiesta	1.6L	TiVCT	2011 MY	RCM	•	•	•	0
Fiesta	1.6L	TiVCT	2011 MY	TCM	•	•		

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Fiesta	1_25L	DURATEC 16V	2002 MY	ABS/TCS	•	•	•	•
Fiesta	1_25L	DURATEC 16V	2002 MY	GEM	•	•	•	•
Fiesta	1_25L	DURATEC 16V	2002 MY	IC	•	•	•	•
Fiesta	1_25L	DURATEC 16V	2002 MY	PCM	•	•	•	•
Fiesta	1_25L	DURATEC 16V	2002 MY	RCM	•	•	•	0
Fiesta	1_25L	DURATEC 16V	2006 MY	ABS/TCS	•	•	•	•
Fiesta	1_25L	DURATEC 16V	2006 MY	ACM	•	•	•	0
Fiesta	1_25L	DURATEC 16V	2006 MY	EATC	•	•	•	•
Fiesta	1_25L	DURATEC 16V	2006 MY	GEM	•	•	•	
Fiesta	1_25L	DURATEC 16V	2006 MY	IC	•	•	•	
Fiesta	1_25L	DURATEC 16V	2006 MY	PCM	•	•	•	•
Fiesta	1_25L	DURATEC 16V	2006 MY	RCM	•	•	•	0
Fiesta	1_25L	DURATEC 16V	2006 MY	SRM	•	•	•	0
Fiesta	1_25L	DURATEC 16V	2008.75 MY	ABS	•	•	•	0
Fiesta	1_25L	DURATEC 16V	2008.75 MY	ACM	•	•	•	0
Fiesta	1_25L	DURATEC 16V	2008.75 MY	BCMii	•	•	•	0
Fiesta	1_25L	DURATEC 16V	2008.75 MY	FCDIM	•	•	•	0
Fiesta	1_25L	DURATEC 16V	2008.75 MY	HVAC	•	•	•	0
Fiesta	1_25L	DURATEC 16V	2008.75 MY	IPC	•	•	•	•
Fiesta	1_25L	DURATEC 16V	2008.75 MY	PCM	•	•	•	0
Fiesta	1_25L	DURATEC 16V	2008.75 MY	PSCM	•	•	•	0
Fiesta	1_25L	DURATEC 16V	2008.75 MY	RCM	•	•	•	0
Fiesta	1_25L	DURATEC 16V	2008.75 MY	RFA	•	•	•	0
Fiesta	1_25L	DURATEC 16V	2008.75 MY	SRM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fiesta / Ikon	1 4 DV4	Duratorq Turbo Diesel Common Rail Injection	2006. 25	ABS/TCS	•	•	•	•
Fiesta / Ikon	1 4 DV4	Duratorq Turbo Diesel Common Rail Injection	2006. 25	GEM	•	•	•	•
Fiesta / Ikon	1 4 DV4	Duratorq Turbo Diesel Common Rail Injection	2006. 25	IC	•	•	•	•
Fiesta / Ikon	1 4 DV4	Duratorq Turbo Diesel Common Rail Injection	2006. 25	PCM	•	•	•	•
Fiesta / Ikon	1 4 DV4	Duratorq Turbo Diesel Common Rail Injection	2006. 25	RCM	•	•	•	•
Fiesta / Ikon	1. 4L	DURATEC 16V	2006. 25	ABS/TCS	•	•	•	•
Fiesta / Ikon	1. 4L	DURATEC 16V	2006. 25	GEM	•	•	•	•
Fiesta / Ikon	1. 4L	DURATEC 16V	2006. 25	IC	•	•	•	
Fiesta / Ikon	1. 4L	DURATEC 16V	2006. 25	PCM	•	•	•	•
Fiesta / Ikon	1. 4L	DURATEC 16V	2006. 25	RCM	•	•	•	•
Fiesta / Ikon	1.6L	DURATEC 16V	2006. 25	ABS/TCS	•	•	•	•
Fiesta / Ikon	1.6L	DURATEC 16V	2006. 25	GEM	•	•	•	•
Fiesta / Ikon	1.6L	DURATEC 16V	2006. 25	IC	•	•	•	
Fiesta / Ikon	1.6L	DURATEC 16V	2006. 25	PCM	•	•	•	•
Fiesta / Ikon	1.6L	DURATEC 16V	2006. 25	RCM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1996.75 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1996.75 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1996.75 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1996.75 MY	PCM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1997.5 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1997.5 MY	CSM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1997.5 MY	HEC	•	•	Data	•
Fiesta / Mazda 121 / Bantam	1. 0L	HCS	1997.5 MY	PCM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1999 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1999 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1999 MY	ECS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1999 MY	HEC		•	•	•
Fiesta / Mazda_121 / Bantam	1. 0L	HCS	1999 MY	PCM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999 MY	ABS/TCS		•	•	0
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999 MY	CSM		•	•	0
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999 MY	ECS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999 MY	HEC	•	•	•	
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999 MY	PCM	•	•	•	
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999.75 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999.75 MY	CSM		•	•	0
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999.75 MY	ECS		•	•	0
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999.75 MY	GEM		•	•	•
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999.75 MY	HEC		•	•	•
Fiesta / Mazda_121 / Bantam	1. 0L	Zetec Rocam	1999.75 MY	PCM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1996 MY	ABS/TCS		•	•	0
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1996 MY	CSM		•	•	0
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1996 MY	HEC		•	•	•
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1996 MY	PCM		•	•	•
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1996.75 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1996.75 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 3L	Endura-E	1996.75 MY	HEC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Fiesta / Mazda_121 / Bantam	1. 3L	Endura-E	1996.75 MY	PCM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1997.5 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1997.5 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1997.5 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1997.5 MY	PCM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	19985 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	19985 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	19985 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	19985 MY	PCM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1999 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1999 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1999 MY	ECS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1999 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1999 MY	PCM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1999.5 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1999.5 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1999.5 MY	ECS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1999.5 MY	GEM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1999.5 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.3L	Endura-E	1999.5 MY	PCM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.4L	1.4 PT-E SFI	1994 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.4L	1.4 PT-E SFI	1994 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.4L	1.4 PT-E SFI	1994 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.4L	1.4 PT-E SFI	1994.5 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 4L	1.4 PT-E SFI	1994.5 MY	CSM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fiesta / Mazda_121 / Bantam	1. 4L	1.4 PT-E SFI	1994.5 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.4L	1.4 PT-E SFI	1996 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.4L	1.4 PT-E SFI	1996 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.4L	1.4 PT-E SFI	1996 MY	HEC		•	•	•
Fiesta / Mazda_121 / Bantam	1.4L	PT-E	2000 MY	ABS/TCS		•	•	0
Fiesta / Mazda_121 / Bantam	1.4L	PT-E	2000 MY	CSM		•	•	0
Fiesta / Mazda_121 / Bantam	1.4L	PT-E	2000 MY	ECS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.4L	PT-E	2000 MY	HEC		•	•	•
Fiesta / Mazda_121 / Bantam	1.4L	PT-E	2000 MY	PCM		•	•	0
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1996. 5 MY	ABS/TCS		•	•	0
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1996.5 MY	CSM		•	•	0
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1996.5 MY	HEC		•	•	•
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1996.5 MY	PCM		•	•	•
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1996.75 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1996. 75 MY	CSM		•	•	0
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1996. 75 MY	HEC		•	•	•
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1996. 75 MY	PCM		•	•	•
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1997 MY	ABS/TCS		•	•	0
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1997 MY	CSM		•	•	0
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1997 MY	HEC		•	•	•
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1997 MY	PCM		•	•	•
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1997.5 MY	ABS/TCS		•	•	0
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1997.5 MY	CSM		•	•	0
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1997.5 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.4L	Zetec-SE	1997.5 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	19985 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	19985 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 4L	Zetec-SE	19985 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1. 4L	Zetec-SE	19985 MY	PCM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1. 4L	Zetec-SE	1999.5 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 4L	Zetec-SE	1999.5 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 4L	Zetec-SE	1999.5 MY	ECS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 4L	Zetec-SE	1999.5 MY	GEM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1. 4L	Zetec-SE	1999.5 MY	HEC	•		•	
Fiesta / Mazda_121 / Bantam	1. 4L	Zetec-SE	1999.5 MY	PCM	•		•	
Fiesta / Mazda_121 / Bantam	1. 6L	Other	2001 MY	ABS/TCS	•		•	0
Fiesta / Mazda_121 / Bantam	1. 6L	Other	2001 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 6L	Other	2001 MY	GEM	•	•	•	
Fiesta / Mazda_121 / Bantam	1.6L	Other	2001 MY	HEC	•		•	
Fiesta / Mazda_121 / Bantam	1.6L	Other	2001 MY	PATS	•		•	
Fiesta / Mazda_121 / Bantam	1. 6L	Other	2001 MY	PCM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec Rocam	1999 MY	ABS/TCS	•		•	0
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec Rocam	1999 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.6L	Zetec Rocam	1999 MY	ECS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec Rocam	1999 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec Rocam	1999 MY	PCM	•	•	•	
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec Rocam	1999.75 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1. 6L	Zetec Rocam	1999.75 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.6L	Zetec Rocam	1999.75 MY	ECS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.6L	Zetec Rocam	1999.75 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999. 75 MY	HEC	Codes	Codes	Data	
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999. 75 MY	PCM	•	•	•	•
Fiesta / Mazda 121 / Bantam	1.6L	Zetec-SE	2000 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda 121 / Bantam	1.6L	Zetec-SE	2000 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.6L	Zetec-SE	2000 MY	ECS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.6L	Zetec-SE	2000 MY	GEM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.6L	Zetec-SE	2000 MY	HEC		•	•	•
Fiesta / Mazda_121 / Bantam	1.6L	Zetec-SE	2000 MY	PCM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.8L	Endura DI	2000 MY	ABS/TCS		•	•	0
Fiesta / Mazda_121 / Bantam	1.8L	Endura DI	2000 MY	CSM		•	•	0
Fiesta / Mazda_121 / Bantam	1.8L	Endura DI	2000 MY	ECS		•	•	0
Fiesta / Mazda_121 / Bantam	1.8L	Endura DI	2000 MY	FIP		•	•	0
Fiesta / Mazda_121 / Bantam	1.8L	Endura DI	2000 MY	GEM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.8L	Endura DI	2000 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.8L	Endura DI	2000 MY	PATS		•	•	
Fiesta / Mazda_121 / Bantam	1.8L	Endura DI	2000 MY	PCM		•	•	•
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	1996. 25 MY	ABS/TCS		•	•	0
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	1996. 25 MY	CSM		•	•	0
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	1996. 25 MY	ECS		•	•	0
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	1996.25 MY	HEC		•	•	•
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	1996. 25 MY	PATS		•	•	
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	1996. 25 MY	PCM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	Other	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	Other	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	Other	ECS	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fiesta / Mazda_121 / Bantam	1. 8L	Endura-DE	Other	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	Other	PATS	•	•	•	
Fiesta / Mazda_121 / Bantam	1.8L	Endura-DE	Other	PCM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.8L	Zetec	1992 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.8L	Zetec	1992 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.8L	Zetec	1992 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1.8L	Zetec	1994.5 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.8L	Zetec	1994.5 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1.8L	Zetec	1994.5 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1996 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1996 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1996 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1996 MY	PCM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1997.5 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1997.5 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1997.5 MY	HEC		•	•	•
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1997.5 MY	PCM		•	•	•
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	19985 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	19985 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	19985 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	19985 MY	PCM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1999 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1999 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1999 MY	ECS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1999 MY	HEC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1999 MY	PCM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1999.5 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1999.5 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1999.5 MY	ECS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1999.5 MY	GEM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1999.5 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	1999.5 MY	PCM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	2000 MY	ABS/TCS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	2000 MY	CSM	•	•	•	0
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	2000 MY	ECS	•	•	•	0
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	2000 MY	GEM	•	•	•	•
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	2000 MY	HEC	•	•	•	•
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	2000 MY	PATS	•	•	•	
Fiesta / Mazda_121 / Bantam	1_25L	Zetec-SE	2000 MY	PCM	•	•	•	•
Fiesta 3-Door	1. 3L	DURATEC 8V	2002 MY	ABS/TCS	•	•	•	•
Fiesta 3-Door	1.3L	DURATEC 8V	2002 MY	GEM	•	•	•	•
Fiesta 3-Door	1.3L	DURATEC 8V	2002 MY	IC	•	•	•	•
Fiesta 3-Door	1.3L	DURATEC 8V	2002 MY	PCM	•	•	•	•
Fiesta 3-Door	1. 3L	DURATEC 8V	2002 MY	RCM	•	•	•	
Fiesta 3-Door	1. 3L	DURATEC 8V	2006 MY	ABS/TCS	•	•	•	•
Fiesta 3-Door	1. 3L	DURATEC 8V	2006 MY	ACM	•	•	•	0
Fiesta 3-Door	1. 3L	DURATEC 8V	2006 MY	EATC	•		•	
Fiesta 3-Door	1. 3L	DURATEC 8V	2006 MY	GEM	•	•	•	•
Fiesta 3-Door	1. 3L	DURATEC 8V	2006 MY	IC	•	•	•	•
Fiesta 3-Door	1. 3L	DURATEC 8V	2006 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fiesta 3-Door	1. 3L	DURATEC 8V	2006 MY	RCM	•	•	•	0
Fiesta 3-Door	1. 3L	DURATEC 8V	2006 MY	SRM	•	•	•	0
Fiesta 3-Door	1.4L	DURATEC 16V	2002 MY	ABS/TCS	•	•	•	•
Fiesta 3-Door	1.4L	DURATEC 16V	2002 MY	GEM	•	•	•	•
Fiesta 3-Door	1.4L	DURATEC 16V	2002 MY	IC		•	•	•
Fiesta 3-Door	1.4L	DURATEC 16V	2002 MY	PCM		•	•	•
Fiesta 3-Door	1.4L	DURATEC 16V	2002 MY	RCM		•	•	
Fiesta 3-Door	1.4L	DURATEC 16V	2002 MY	TCM	•	•	•	0
Fiesta 3-Door	1.4L	DURATEC 16V	2006 MY	ABS/TCS		•	•	•
Fiesta 3-Door	1.4L	DURATEC 16V	2006 MY	ACM		•	•	0
Fiesta 3-Door	1.4L	DURATEC 16V	2006 MY	EATC		•	•	•
Fiesta 3-Door	1.4L	DURATEC 16V	2006 MY	GEM		•	•	
Fiesta 3-Door	1.4L	DURATEC 16V	2006 MY	IC		•	•	
Fiesta 3-Door	1.4L	DURATEC 16V	2006 MY	PCM		•	•	•
Fiesta 3-Door	1.4L	DURATEC 16V	2006 MY	RCM		•	•	0
Fiesta 3-Door	1.4L	DURATEC 16V	2006 MY	SRM		•	•	0
Fiesta 3-Door	1.4L	DURATEC 16V	2006 MY	TCM		•	•	0
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	ABS/TCS	•	•	•	•
Fiesta 3-Door	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	GEM	•	•	•	•
Fiesta 3-Door	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	IC	•	•	•	•
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Fiesta 3-Door	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	RCM	•	•	•	
Fiesta 3-Door	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	TCM	•	•	•	0
Fiesta 3-Door	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	ABS/TCS	•	•	•	•
Fiesta 3-Door	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	ACM	•	•	•	0
Fiesta 3-Door	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	EATC	•	•	•	•
Fiesta 3-Door	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	GEM	•	•	•	•
Fiesta 3-Door	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	IC	•	•	•	•
Fiesta 3-Door	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	PCM	•	•	•	•
Fiesta 3-Door	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	RCM	•	•	•	0
Fiesta 3-Door	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	SRM	•	•	•	0
Fiesta 3-Door	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	TCM	•	•	•	0
Fiesta 3-Door	1. 6L	DURATEC 16V	2002 MY	ABS/TCS	•	•	•	•
Fiesta 3-Door	1. 6L	DURATEC 16V	2002 MY	GEM	•	•	•	•
Fiesta 3-Door	1. 6L	DURATEC 16V	2002 MY	IC	•	•	•	•
Fiesta 3-Door	1. 6L	DURATEC 16V	2002 MY	PCM	•	•	•	•
Fiesta 3-Door	1. 6L	DURATEC 16V	2002 MY	RCM	•	•	•	
Fiesta 3-Door	1.6L	DURATEC 16V	2002 MY	TCM	•		•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fiesta 3-Door	1. 6L	DURATEC 16V	2006 MY	ABS/TCS	•	•	•	•
Fiesta 3-Door	1. 6L	DURATEC 16V	2006 MY	ACM	•	•	•	0
Fiesta 3-Door	1.6L	DURATEC 16V	2006 MY	EATC	•	•	•	•
Fiesta 3-Door	1.6L	DURATEC 16V	2006 MY	GEM	•	•	•	
Fiesta 3-Door	1.6L	DURATEC 16V	2006 MY	IC	•	•	•	
Fiesta 3-Door	1.6L	DURATEC 16V	2006 MY	PCM	•	•	•	•
Fiesta 3-Door	1.6L	DURATEC 16V	2006 MY	RCM	•	•	•	0
Fiesta 3-Door	1.6L	DURATEC 16V	2006 MY	SRM	•	•	•	0
Fiesta 3-Door	1.6L	DURATEC 16V	2006 MY	TCM	•	•	•	0
Fiesta 3-Door	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	ABS/TCS	•	•	•	•
Fiesta 3-Door	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	EPS	•	•	•	0
Fiesta 3-Door	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	GEM	•	•	•	•
Fiesta 3-Door	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	IC	•	•	•	•
Fiesta 3-Door	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	PCM	•	•	•	•
Fiesta 3-Door	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	RCM	•	•	•	
Fiesta 3-Door	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	ABS/TCS	•	•	•	•
Fiesta 3-Door	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	ACM	•	•	•	0
Fiesta 3-Door	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	EATC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Fiesta 3-Door	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	EPS	•	•	•	0
Fiesta 3-Door	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	GEM	•	•	•	•
Fiesta 3-Door	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	IC	•	•	•	
Fiesta 3-Door	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	PCM	•	•	•	•
Fiesta 3-Door	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	RCM	•	•	•	0
Fiesta 3-Door	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	SRM	•	•	•	0
Fiesta 3-Door	1_25L	DURATEC 16V	2002 MY	ABS/TCS	•	•	•	•
Fiesta 3-Door	1_25L	DURATEC 16V	2002 MY	GEM	•	•	•	•
Fiesta 3-Door	1_25L	DURATEC 16V	2002 MY	IC	•	•	•	•
Fiesta 3-Door	1_25L	DURATEC 16V	2002 MY	PCM	•	•	•	•
Fiesta 3-Door	1_25L	DURATEC 16V	2002 MY	RCM	•	•	•	
Fiesta 3-Door	1_25L	DURATEC 16V	2006 MY	ABS/TCS	•	•	•	•
Fiesta 3-Door	1_25L	DURATEC 16V	2006 MY	ACM	•	•	•	0
Fiesta 3-Door	1_25L	DURATEC 16V	2006 MY	EATC	•	•	•	•
Fiesta 3-Door	1_25L	DURATEC 16V	2006 MY	GEM	•	•	•	•
Fiesta 3-Door	1_25L	DURATEC 16V	2006 MY	IC	•	•	•	
Fiesta 3-Door	1_25L	DURATEC 16V	2006 MY	PCM	•	•	•	•
Fiesta 3-Door	1_25L	DURATEC 16V	2006 MY	RCM	•	•	•	0
Fiesta 3-Door	1_25L	DURATEC 16V	2006 MY	SRM	•	•	•	0
Fiesta 3-Door	2. 0L	DURATEC-HE / I4	2002 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fiesta 3-Door	2. OL	DURATEC-HE / I4	2002 MY	GEM	•	•	•	•
Fiesta 3-Door	2. OL	DURATEC-HE / I4	2002 MY	IC	•	•	•	•
Fiesta 3-Door	2. 0L	DURATEC-HE / I4	2002 MY	PCM	•	•	•	•
Fiesta 3-Door	2. 0L	DURATEC-HE / I4	2002 MY	RCM	•	•	•	
Fiesta 3-Door	2. 0L	DURATEC-HE / I4	2006 MY	ABS/TCS	•	•	•	•
Fiesta 3-Door	2. 0L	DURATEC-HE / I4	2006 MY	ACM	•		•	0
Fiesta 3-Door	2. 0L	DURATEC-HE / I4	2006 MY	EATC	•		•	•
Fiesta 3-Door	2. 0L	DURATEC-HE / I4	2006 MY	GEM	•	•	•	
Fiesta 3-Door	2. 0L	DURATEC-HE / I4	2006 MY	IC	•	•	•	
Fiesta 3-Door	2. 0L	DURATEC-HE / I4	2006 MY	PCM	•	•	•	•
Fiesta 3-Door	2. 0L	DURATEC-HE / I4	2006 MY	RCM	•		•	0
Fiesta 3-Door	2. 0L	DURATEC-HE / I4	2006 MY	SRM	•		•	0
FIGO			2010. 25 MY	ABS/TCS	•		•	•
FIGO			2010.25 MY	IC	•	•	•	
FIGO			2010.25 MY	TCM	•	•	•	0
Five Hundred	3. 0L	4V	2006 MY	4X4	•	•	•	•
Five Hundred	3. 0L	4V	2006 MY	ABS	•	•	•	•
Five Hundred	3. 0L	4V	2006 MY	ACM	•	•	•	•
Five Hundred	3. 0L	4V	2006 MY	DSM	•	•	•	•
Five Hundred	3. 0L	4V	2006 MY	EATC	•	•	•	•
Five Hundred	3. 0L	4V	2006 MY	GEM	•	•	•	•
Five Hundred	3. OL	4V	2006 MY	IC	•	•	•	•
Five Hundred	3. OL	4V	2006 MY	PAM	•	•	•	•
Five Hundred	3. OL	4V	2006 MY	PCM	•	•	•	•
Five Hundred	3. 0L	4V	2006 MY	RCM	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Five Hundred	3. 0L	4V	2006 MY	TCM	•	•	•	•
Five Hundred	3. 0L	4V	2007 MY	4X4	•	•	•	•
Five Hundred	3. 0L	4V	2007 MY	ABS	•	•	•	•
Five Hundred	3. 0L	4V	2007 MY	ACM	•	•	•	•
Five Hundred	3. 0L	4V	2007 MY	DSM	•	•	•	•
Five Hundred	3. OL	4V	2007 MY	EATC	•	•	•	•
Five Hundred	3. OL	4V	2007 MY	GEM	•	•	•	•
Five Hundred	3. OL	4V	2007 MY	IC	•	•	•	•
Five Hundred	3. 0L	4V	2007 MY	PAM	•	•	•	•
Five Hundred	3. OL	4V	2007 MY	PCM	•	•	•	•
Five Hundred	3. OL	4V	2007 MY	RCM	•	•	•	•
Five Hundred	3. 0L	4V	2007 MY	SDARS	•	•	•	•
Five Hundred	3. OL	4V	2007 MY	TCM	•	•	•	
Five Hundred (MYO5) / Montego (MYO5)	3. OL	4V	2005 MY	4X4	•	•	•	•
Five Hundred (MYO5) / Montego (MYO5)	3. 0L	4V	2005 MY	ABS	•	•	•	•
Five Hundred (MYO5) / Montego (MYO5)	3. OL	4V	2005 MY	ACM	•	•	•	•
Five Hundred (MYO5) / Montego (MYO5)	3. OL	4V	2005 MY	DSM	•	•	•	•
Five Hundred (MYO5) / Montego (MYO5)	3. OL	4V	2005 MY	EATC	•	•	•	•
Five Hundred (MYO5) / Montego (MYO5)	3. OL	4V	2005 MY	GEM	•	•	•	•
Five Hundred (MYO5) / Montego (MYO5)	3. 0L	4V	2005 MY	IC	•	•	•	•
Five Hundred (MYO5) / Montego (MYO5)	3. OL	4V	2005 MY	PAM	•	•	•	•
Five Hundred (MYO5) / Montego (MYO5)	3. 0L	4V	2005 MY	PCM	•	•	•	•
Five Hundred (MYO5) / Montego (MYO5)	3. 0L	4V	2005 MY	RCM	•	•	•	•
Five Hundred (MY05) / Montego (MY05)	3. 0L	4V	2005 MY	TCM	•	•	•	
Flex	3. 5L	4V	2009 MY	4X4	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Flex	3. 5L	4V	2009 MY	ABS	•	•	•	•
Flex	3. 5L	4V	2009 MY	ACM	•	•	•	•
Flex	3. 5L	4V	2009 MY	ACM	•	•	•	0
Flex	3. 5L	4V	2009 MY	APIM	•	•	•	0
Flex	3.5L	4V	2009 MY	DCSM	•	•	•	•
Flex	3.5L	4V	2009 MY	DSM	•	•	•	•
Flex	3.5L	4V	2009 MY	DSP	•	•	•	0
Flex	3.5L	4V	2009 MY	FCIM	•	•	•	•
Flex	3.5L	4V	2009 MY	FDIM	•	•	•	•
Flex	3.5L	4V	2009 MY	GEM / SJB	•	•	•	•
Flex	3.5L	4V	2009 MY	HVAC	•	•	•	•
Flex	3.5L	4V	2009 MY	IC	•	•	•	•
Flex	3.5L	4V	2009 MY	LTM	•	•	•	0
Flex	3.5L	4V	2009 MY	OCSM	•	•	•	
Flex	3.5L	4V	2009 MY	PAM	•	•	•	•
Flex	3.5L	4V	2009 MY	PCM	•	•	•	•
Flex	3. 5L	4V	2009 MY	RCM	•	•	•	•
Flex	3.5L	4V	2009 MY	RETM	•	•	•	0
Flex	3. 5L	4V	2010 MY	4X4	•	•	•	•
Flex	3. 5L	4V	2010 MY	ABS	•	•	•	•
Flex	3. 5L	4V	2010 MY	ACM	•	•	•	0
Flex	3. 5L	4V	2010 MY	APIM	•	•	•	0
Flex	3. 5L	4V	2010 MY	C-CM	•	•	•	0
Flex	3.5L	4V	2010 MY	DCSM	•	•	•	•
Flex	3. 5L	4V	2010 MY	DDM	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Flex	3. 5L	4V	2010 MY	DSM	•	•	•	•
Flex	3. 5L	4V	2010 MY	DSP	•	•	•	0
Flex	3. 5L	4V	2010 MY	FCIM	•	•	•	•
Flex	3. 5L	4V	2010 MY	FDIM	•	•	•	•
Flex	3. 5L	4V	2010 MY	GEM / SJB	•		•	•
Flex	3. 5L	4V	2010 MY	GPSM	•		•	0
Flex	3. 5L	4V	2010 MY	HCM	•		•	•
Flex	3. 5L	4V	2010 MY	HCM-2	•	•	•	0
Flex	3. 5L	4V	2010 MY	HUD	•	•	•	0
Flex	3. 5L	4V	2010 MY	HVAC	•	•	•	•
Flex	3. 5L	4V	2010 MY	IC	•		•	
Flex	3. 5L	4V	2010 MY	ILCM	•		•	•
Flex	3. 5L	4V	2010 MY	LTM	•		•	0
Flex	3. 5L	4V	2010 MY	OCSM	•	•	•	0
Flex	3. 5L	4V	2010 MY	PAM	•	•	•	0
Flex	3. 5L	4V	2010 MY	PCM	•		•	
Flex	3. 5L	4V	2010 MY	PSCM	•		•	0
Flex	3. 5L	4V	2010 MY	RCM	•		•	0
Flex	3. 5L	4V	2010 MY	RETM	•	•	•	0
Flex	3. 5L	4V	2010 MY	SASM	•	•	•	0
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	4X4	•	•	•	•
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	ABS	•	•	•	•
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	ACM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	APIM	•	•	•	0
Flex	3. 5L	Direct Injection	2010 MY	С-СМ	•	•	•	0
Flex	3. 5L	Direct Injection	2010 MY	DCSM	•	•	•	•
Flex	3. 5L	Direct Injection	2010 MY	DDM	•	•	•	
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	DSM	•	•	•	•
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	DSP	•	•	•	0
Flex	3. 5L	Direct Injection	2010 MY	FCIM	•	•	•	•
Flex	3. 5L	Direct Injection	2010 MY	FDIM	•	•	•	•
Flex	3. 5L	Direct Injection	2010 MY	GEM / SJB	•	•	•	•
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	GPSM	•	•	•	0
Flex	3. 5L	Direct Injection	2010 MY	HCM	•	•	•	•
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	HCM-2	•	•	•	0
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	HUD	•	•	•	0
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	HVAC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	IC	•	•	•	•
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	ILCM	•	•	•	•
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	LTM	•	•	•	0
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	OCSM	•	•	•	0
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	PAM	•	•	•	0
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	PCM	•	•	•	•
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	PSCM	•	•	•	0
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	RCM	•	•	•	0
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	RETM	•	•	•	0
Flex	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	SASM	•	•	•	0
Focus	1. 4L	DURATEC 16V	2003.25 MY	ABS	•	•	•	•
Focus	1.4L	DURATEC 16V	2003.25 MY	ACM	•			0
Focus	1.4L	DURATEC 16V	2003.25 MY	CDP	•			0
Focus	1. 4L	DURATEC 16V	2003.25 MY	D_DCU	•	•	•	•
Focus	1. 4L	DURATEC 16V	2003.25 MY	EATC	•	•	•	•
Focus	1.4L	DURATEC 16V	2003.25 MY	FFH	•	•	•	•
Focus	1.4L	DURATEC 16V	2003.25 MY	GDM	•			0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1. 4L	DURATEC 16V	2003.25 MY	GEM	•	•	•	•
Focus	1. 4L	DURATEC 16V	2003. 25 MY	HCM	•	•	•	0
Focus	1. 4L	DURATEC 16V	2003.25 MY	IC	•	•	•	•
Focus	1. 4L	DURATEC 16V	2003. 25 MY	NAV	•	•	•	0
Focus	1. 4L	DURATEC 16V	2003. 25 MY	P_DCU	•	•	•	•
Focus	1. 4L	DURATEC 16V	2003. 25 MY	PAM	•	•	•	0
Focus	1. 4L	DURATEC 16V	2003.25 MY	PCM	•	•	•	•
Focus	1. 4L	DURATEC 16V	2003. 25 MY	RETM	•	•	•	0
Focus	1. 4L	DURATEC 16V	2003.25 MY	RKE	•	•	•	0
Focus	1. 4L	DURATEC 16V	2003.25 MY	RL_DCU	•	•	•	•
Focus	1.4L	DURATEC 16V	2003.25 MY	RR_DCU	•	•	•	
Focus	1.4L	DURATEC 16V	2003.25 MY	SRM	•	•	•	0
Focus	1.4L	DURATEC 16V	2008. 25 MY	ABS	•	•	•	•
Focus	1. 4L	DURATEC 16V	2008. 25 MY	ACM	•	•	•	0
Focus	1. 4L	DURATEC 16V	2008. 25 MY	CDP	•	•	•	0
Focus	1. 4L	DURATEC 16V	2008. 25 MY	CMR	•	•	•	0
Focus	1. 4L	DURATEC 16V	2008. 25 MY	D_DCU	•	•	•	•
Focus	1.4L	DURATEC 16V	2008. 25 MY	EATC	•	•	•	•
Focus	1. 4L	DURATEC 16V	2008. 25 MY	EPS	•	•	•	0
Focus	1. 4L	DURATEC 16V	2008. 25 MY	FFH	•	•	•	•
Focus	1. 4L	DURATEC 16V	2008. 25 MY	GEM	•	•	•	•
Focus	1. 4L	DURATEC 16V	2008.25 MY	HCM	•	•	•	0
Focus	1. 4L	DURATEC 16V	2008.25 MY	IC	•	•	•	•
Focus	1. 4L	DURATEC 16V	2008.25 MY	P_DCU	•	•	•	•
Focus	1. 4L	DURATEC 16V	2008. 25 MY	PAM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1. 4L	DURATEC 16V	2008.25 MY	PCM	•	•	•	•
Focus	1. 4L	DURATEC 16V	2008.25 MY	RCM	•	•	•	0
Focus	1. 4L	DURATEC 16V	2008.25 MY	RETM	•	•	•	0
Focus	1. 4L	DURATEC 16V	2008.25 MY	RKE	•	•	•	0
Focus	1. 4L	DURATEC 16V	2008.25 MY	SRM	•	•	•	0
Focus	1. 4L	DURATEC 16V	MY07_5	ABS	•	•	•	•
Focus	1. 4L	DURATEC 16V	MY07_5	ACM	•	•	•	0
Focus	1. 4L	DURATEC 16V	MY07_5	CDP	•	•	•	0
Focus	1. 4L	DURATEC 16V	MY07_5	D_DCU	•	•	•	•
Focus	1. 4L	DURATEC 16V	MY07_5	EATC	•	•	•	•
Focus	1. 4L	DURATEC 16V	MY07_5	FFH	•	•	•	•
Focus	1. 4L	DURATEC 16V	MY07_5	GDM	•	•	•	0
Focus	1. 4L	DURATEC 16V	MY07_5	GEM	•	•	•	•
Focus	1. 4L	DURATEC 16V	MY07_5	HCM	•	•	•	0
Focus	1. 4L	DURATEC 16V	MY07_5	IC	•	•	•	•
Focus	1. 4L	DURATEC 16V	MY07_5	NAV	•	•	•	0
Focus	1. 4L	DURATEC 16V	MY07_5	P_DCU	•	•	•	•
Focus	1. 4L	DURATEC 16V	MY07_5	PAM	•	•	•	0
Focus	1. 4L	DURATEC 16V	MY07_5	PCM	•	•	•	•
Focus	1. 4L	DURATEC 16V	MY07_5	RETM	•	•	•	0
Focus	1. 4L	DURATEC 16V	MY07_5	RKE	•	•	•	0
Focus	1. 4L	DURATEC 16V	MY07_5	SRM	•	•	•	0
Focus	1. 4L	Zetec-SE	1999 MY	ABS/TCS	•	•	•	•
Focus	1. 4L	Zetec-SE	1999 MY	CSM	•	•	•	•
Focus	1. 4L	Zetec-SE	1999 MY	CTM	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	1. 4L	Zetec-SE	1999 MY	ECS	•	•	•	0
Focus	1. 4L	Zetec-SE	1999 MY	HEC	•	•	•	•
Focus	1.4L	Zetec-SE	1999 MY	MC	•	•	•	•
Focus	1.4L	Zetec-SE	1999 MY	PATS	•	•	•	0
Focus	1. 4L	Zetec-SE	1999 MY	PCM	•	•	•	•
Focus	1. 4L	Zetec-SE	2002 MY	ABS/TCS	•	•	•	•
Focus	1. 4L	Zetec-SE	2002 MY	EATC	•	•	•	•
Focus	1.4L	Zetec-SE	2002 MY	ECS	•	•	•	0
Focus	1.4L	Zetec-SE	2002 MY	GEM	•	•	•	•
Focus	1. 4L	Zetec-SE	2002 MY	HCM	•	•	•	0
Focus	1. 4L	Zetec-SE	2002 MY	HEC	•	•	•	•
Focus	1. 4L	Zetec-SE	2002 MY	MC	•	•	•	•
Focus	1. 4L	Zetec-SE	2002 MY	PATS	•		•	0
Focus	1. 4L	Zetec-SE	2002 MY	PCM	•	•	•	•
Focus	1. 4L	Zetec-SE	2002 MY	RCM	•	•	•	•
Focus	1. 6L	DURATEC 16V	2003. 25 MY	ABS	•	•	•	•
Focus	1. 6L	DURATEC 16V	2003. 25 MY	ACM	•	•	•	0
Focus	1. 6L	DURATEC 16V	2003. 25 MY	CDP	•	•	•	0
Focus	1. 6L	DURATEC 16V	2003.25 MY	D_DCU	•	•	•	•
Focus	1. 6L	DURATEC 16V	2003.25 MY	EATC	•	•	•	•
Focus	1. 6L	DURATEC 16V	2003.25 MY	FFH	•	•	•	•
Focus	1. 6L	DURATEC 16V	2003.25 MY	GDM	•	•	•	0
Focus	1. 6L	DURATEC 16V	2003.25 MY	GEM	•	•	•	•
Focus	1. 6L	DURATEC 16V	2003.25 MY	HCM	•	•	•	0
Focus	1.6L	DURATEC 16V	2003.25 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1.6L	DURATEC 16V	2003. 25 MY	NAV	•	•	•	0
Focus	1. 6L	DURATEC 16V	2003.25 MY	P_DCU	•	•	•	•
Focus	1.6L	DURATEC 16V	2003.25 MY	PAM	•	•	•	0
Focus	1.6L	DURATEC 16V	2003.25 MY	PCM	•	•	•	•
Focus	1.6L	DURATEC 16V	2003.25 MY	RETM	•		•	0
Focus	1.6L	DURATEC 16V	2003.25 MY	RKE	•	•	•	0
Focus	1.6L	DURATEC 16V	2003.25 MY	RL_DCU	•	•	•	•
Focus	1.6L	DURATEC 16V	2003.25 MY	RR_DCU	•		•	•
Focus	1.6L	DURATEC 16V	2003.25 MY	SRM	•		•	0
Focus	1.6L	DURATEC 16V	2003.25 MY	TCM	•		•	0
Focus	1.6L	DURATEC 16V	2008.25 MY	ABS	•	•	•	•
Focus	1.6L	DURATEC 16V	2008.25 MY	ACM	•	•	•	0
Focus	1.6L	DURATEC 16V	2008.25 MY	CDP	•	•	•	0
Focus	1.6L	DURATEC 16V	2008.25 MY	CMR	•		•	0
Focus	1.6L	DURATEC 16V	2008.25 MY	D_DCU	•		•	•
Focus	1.6L	DURATEC 16V	2008.25 MY	EATC	•	•	•	•
Focus	1.6L	DURATEC 16V	2008.25 MY	EPS	•		•	0
Focus	1.6L	DURATEC 16V	2008.25 MY	FFH	•	•	•	•
Focus	1.6L	DURATEC 16V	2008.25 MY	GEM	•		•	•
Focus	1.6L	DURATEC 16V	2008.25 MY	HCM	•		•	0
Focus	1.6L	DURATEC 16V	2008.25 MY	IC	•		•	
Focus	1.6L	DURATEC 16V	2008.25 MY	P_DCU	•	•	•	•
Focus	1.6L	DURATEC 16V	2008.25 MY	PAM	•	•	•	0
Focus	1.6L	DURATEC 16V	2008.25 MY	PCM	•	•	•	•
Focus	1.6L	DURATEC 16V	2008.25 MY	RCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	1.6L	DURATEC 16V	2008. 25 MY	RETM	•	•	•	0
Focus	1.6L	DURATEC 16V	2008.25 MY	RKE	•	•	•	0
Focus	1.6L	DURATEC 16V	2008.25 MY	SRM	•	•	•	0
Focus	1.6L	DURATEC 16V	2008.25 MY	TCM	•	•	•	0
Focus	1.6L	DURATEC 16V	MY07_5	ABS	•	•	•	•
Focus	1.6L	DURATEC 16V	MY07_5	ACM	•	•	•	0
Focus	1.6L	DURATEC 16V	MY07_5	CDP	•	•	•	0
Focus	1.6L	DURATEC 16V	MY07_5	D_DCU	•	•	•	•
Focus	1.6L	DURATEC 16V	MY07_5	EATC	•	•	•	•
Focus	1.6L	DURATEC 16V	MY07_5	FFH	•	•	•	•
Focus	1.6L	DURATEC 16V	MY07_5	GDM	•	•	•	0
Focus	1.6L	DURATEC 16V	MY07_5	GEM	•	•	•	•
Focus	1.6L	DURATEC 16V	MY07_5	HCM	•	•	•	0
Focus	1.6L	DURATEC 16V	MY07_5	IC	•	•	•	•
Focus	1.6L	DURATEC 16V	MY07_5	NAV	•	•	•	0
Focus	1.6L	DURATEC 16V	MY07_5	P_DCU	•	•	•	•
Focus	1.6L	DURATEC 16V	MY07_5	PAM	•	•	•	0
Focus	1.6L	DURATEC 16V	MY07_5	PCM	•	•	•	•
Focus	1.6L	DURATEC 16V	MY07_5	RETM	•	•	•	0
Focus	1.6L	DURATEC 16V	MY07_5	RKE	•	•	•	0
Focus	1.6L	DURATEC 16V	MY07_5	SRM	•	•	•	0
Focus	1.6L	DURATEC 16V	MY07_5	TCM	•	•	•	0
Focus	1.6L	DURATEC VCT	2003.25 MY	ABS	•	•	•	•
Focus	1.6L	DURATEC VCT	2003.25 MY	ACM	•	•	•	0
Focus	1.6L	DURATEC VCT	2003.25 MY	CDP	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1.6L	DURATEC VCT	2003.25 MY	D_DCU	•	•	•	•
Focus	1.6L	DURATEC VCT	2003.25 MY	EATC	•	•	•	•
Focus	1.6L	DURATEC VCT	2003.25 MY	FFH	•	•	•	•
Focus	1.6L	DURATEC VCT	2003.25 MY	GDM	•	•	•	0
Focus	1.6L	DURATEC VCT	2003.25 MY	GEM	•			•
Focus	1.6L	DURATEC VCT	2003.25 MY	HCM	•	•	•	0
Focus	1.6L	DURATEC VCT	2003.25 MY	IC	•	•	•	•
Focus	1.6L	DURATEC VCT	2003.25 MY	NAV	•			0
Focus	1.6L	DURATEC VCT	2003.25 MY	P_DCU	•		•	•
Focus	1.6L	DURATEC VCT	2003.25 MY	PAM	•			0
Focus	1.6L	DURATEC VCT	2003.25 MY	PCM	•	•	•	•
Focus	1.6L	DURATEC VCT	2003.25 MY	RETM	•	•	•	0
Focus	1.6L	DURATEC VCT	2003.25 MY	RKE	•	•	•	0
Focus	1.6L	DURATEC VCT	2003.25 MY	RL_DCU	•		•	•
Focus	1.6L	DURATEC VCT	2003.25 MY	RR_DCU	•			•
Focus	1.6L	DURATEC VCT	2003.25 MY	SRM	•	•	•	0
Focus	1.6L	DURATEC VCT	2008.25 MY	ABS	•	•	•	•
Focus	1.6L	DURATEC VCT	2008.25 MY	ACM	•	•	•	0
Focus	1.6L	DURATEC VCT	2008.25 MY	CDP	•			0
Focus	1.6L	DURATEC VCT	2008.25 MY	CMR	•			0
Focus	1.6L	DURATEC VCT	2008.25 MY	D_DCU	•			•
Focus	1.6L	DURATEC VCT	2008.25 MY	EATC	•	•	•	•
Focus	1.6L	DURATEC VCT	2008.25 MY	EPS	•	•	•	0
Focus	1.6L	DURATEC VCT	2008.25 MY	FFH	•	•	•	•
Focus	1.6L	DURATEC VCT	2008.25 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1.6L	DURATEC VCT	2008.25 MY	HCM	•	•	•	0
Focus	1. 6L	DURATEC VCT	2008. 25 MY	IC	•	•	•	•
Focus	1.6L	DURATEC VCT	2008.25 MY	P_DCU	•	•	•	•
Focus	1.6L	DURATEC VCT	2008.25 MY	PAM	•	•	•	0
Focus	1.6L	DURATEC VCT	2008.25 MY	PCM	•	•	•	•
Focus	1.6L	DURATEC VCT	2008.25 MY	RCM	•	•	•	0
Focus	1.6L	DURATEC VCT	2008.25 MY	RETM	•	•	•	0
Focus	1.6L	DURATEC VCT	2008.25 MY	RKE	•	•	•	0
Focus	1.6L	DURATEC VCT	2008.25 MY	SRM	•	•	•	0
Focus	1.6L	DURATEC VCT	MY07_5	ABS	•	•	•	•
Focus	1.6L	DURATEC VCT	MY07_5	ACM	•	•	•	0
Focus	1.6L	DURATEC VCT	MY07_5	CDP	•	•	•	0
Focus	1.6L	DURATEC VCT	MY07_5	D_DCU	•	•	•	•
Focus	1.6L	DURATEC VCT	MY07_5	EATC	•	•	•	•
Focus	1.6L	DURATEC VCT	MY07_5	FFH	•	•	•	•
Focus	1.6L	DURATEC VCT	MY07_5	GDM	•	•	•	0
Focus	1.6L	DURATEC VCT	MY07_5	GEM	•	•	•	•
Focus	1.6L	DURATEC VCT	MY07_5	HCM	•	•	•	0
Focus	1.6L	DURATEC VCT	MY07_5	IC	•	•	•	•
Focus	1.6L	DURATEC VCT	MY07_5	NAV	•	•	•	0
Focus	1.6L	DURATEC VCT	MY07_5	P_DCU	•	•	•	•
Focus	1.6L	DURATEC VCT	MY07_5	PAM	•	•	•	0
Focus	1.6L	DURATEC VCT	MY07_5	PCM	•	•	•	•
Focus	1.6L	DURATEC VCT	MY07_5	RETM	•	•	•	0
Focus	1.6L	DURATEC VCT	MY07_5	RKE	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1. 6L	DURATEC VCT	MY07_5	SRM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	ABS	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	ACM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	CDP	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	D_DCU	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	EATC	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	EPS	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	FACM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	FFH	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	GDM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	GEM	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	HCM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	IC	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	NAV	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	P_DCU	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	PAM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	PCM	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	RETM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	RKE	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	RL_DCU	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	RR_DCU	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	SRM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	TCM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	ABS	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	ACM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	CDP	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	CMR	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	D_DCU	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	EATC	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	EPS	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	FACM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	FFH	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	GEM	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	HCM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	IC	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	P_DCU	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	PAM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	PCM	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	RCM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	RETM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	RKE	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	SRM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	ABS	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	ACM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	CDP	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	D_DCU	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	EATC	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	EPS	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	FACM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	FFH	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	GDM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	GEM	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	НСМ	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	IC	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	NAV	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	P_DCU	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	PAM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	PCM	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	RETM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	RKE	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	SRM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	ABS	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	ACM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	CDP	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	CMR	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	D_DCU	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	EATC	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	EPS	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	FFH	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	НСМ	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	IC	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	P_DCU	•	•	•	•
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	PAM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.25 MY	PCM	•	•	•	
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	RCM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	RETM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	RKE	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	SRM	•	•	•	0
Focus	1. 6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 25 MY	TCM	•	•	•	0
Focus	1.6L	FFV	2007 MY	ABS/TCS	•	•	•	•
Focus	1.6L	FFV	2007 MY	GEM	•	•	•	•
Focus	1.6L	FFV	2007 MY	IC	•	•	•	•
Focus	1.6L	FFV	2007 MY	PCM	•	•	•	•
Focus	1.6L	FFV	2007 MY	RCM	•	•	•	•
Focus	1.6L	FFV	2009 MY	ABS/TCS	•	•	•	•
Focus	1.6L	FFV	2009 MY	EATC	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	1. 6L	FFV	2009 MY	GEM	•	•	•	•
Focus	1. 6L	FFV	2009 MY	HCM	•	•	•	0
Focus	1. 6L	FFV	2009 MY	IC	•	•	•	•
Focus	1. 6L	FFV	2009 MY	MC	•	•	•	
Focus	1. 6L	FFV	2009 MY	PCM	•	•	•	•
Focus	1. 6L	FFV	2009 MY	RCM	•	•	•	•
Focus	1. 6L	FFV	2010 MY	ABS	•	•	•	•
Focus	1. 6L	FFV	2010 MY	ACM	•	•	•	0
Focus	1. 6L	FFV	2010 MY	D_DCU	•	•	•	•
Focus	1. 6L	FFV	2010 MY	EATC	•	•	•	•
Focus	1. 6L	FFV	2010 MY	EPS	•	•	•	0
Focus	1. 6L	FFV	2010 MY	GEM	•	•	•	•
Focus	1.6L	FFV	2010 MY	HCM	•	•	•	0
Focus	1. 6L	FFV	2010 MY	IC	•	•	•	•
Focus	1. 6L	FFV	2010 MY	P_DCU	•	•	•	•
Focus	1. 6L	FFV	2010 MY	PAM	•	•	•	0
Focus	1. 6L	FFV	2010 MY	PCM	•	•	•	•
Focus	1. 6L	FFV	2010 MY	RCM	•	•	•	0
Focus	1. 6L	FFV	2010 MY	RKE	•	•	•	0
Focus	1. 6L	FFV	2010 MY	SRM	•	•	•	0
Focus	1. 6L	FFV	2010 MY	TCM	•	•	•	0
Focus	1. 6L	ОНС	2009 MY	ABS/TCS	•	•	•	•
Focus	1. 6L	ОНС	2009 MY	EATC	•	•	•	
Focus	1. 6L	ОНС	2009 MY	GEM	•	•	•	•
Focus	1. 6L	ОНС	2009 MY	HCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	1.6L	OHC	2009 MY	IC	•	•	•	•
Focus	1.6L	OHC	2009 MY	MC	•	•	•	
Focus	1.6L	OHC	2009 MY	PCM	•	•	•	•
Focus	1.6L	OHC	2009 MY	RCM	•	•	•	•
Focus	1.6L	Sigma	2010 MY	ABS	•	•	•	•
Focus	1.6L	Sigma	2010 MY	ACM	•	•	•	0
Focus	1.6L	Sigma	2010 MY	D_DCU	•	•	•	•
Focus	1.6L	Sigma	2010 MY	EATC	•	•	•	•
Focus	1.6L	Sigma	2010 MY	EPS	•	•	•	0
Focus	1.6L	Sigma	2010 MY	GEM	•	•	•	•
Focus	1.6L	Sigma	2010 MY	HCM	•	•	•	0
Focus	1.6L	Sigma	2010 MY	IC	•	•	•	•
Focus	1.6L	Sigma	2010 MY	P_DCU	•	•	•	•
Focus	1.6L	Sigma	2010 MY	PAM	•	•	•	0
Focus	1.6L	Sigma	2010 MY	PCM	•	•	•	•
Focus	1.6L	Sigma	2010 MY	RCM	•	•	•	0
Focus	1.6L	Sigma	2010 MY	RKE	•	•	•	0
Focus	1.6L	Sigma	2010 MY	SRM	•	•	•	0
Focus	1.6L	Sigma	2010 MY	TCM	•	•	•	0
Focus	1.6L	Zetec	1999 MY	ABS/TCS	•	•	•	•
Focus	1.6L	Zetec	1999 MY	CSM	•	•	•	•
Focus	1.6L	Zetec	1999 MY	CTM	•	•	•	
Focus	1.6L	Zetec	1999 MY	ECS	•	•	•	0
Focus	1.6L	Zetec	1999 MY	HEC	•	•	•	•
Focus	1. 6L	Zetec	1999 MY	PATS	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1.6L	Zetec	1999 MY	PCM	•	•	•	•
Focus	1.6L	Zetec	2002 MY	ABS/TCS	•	•	•	•
Focus	1.6L	Zetec	2002 MY	EATC	•	•	•	•
Focus	1.6L	Zetec	2002 MY	ECS	•	•	•	0
Focus	1. 6L	Zetec	2002 MY	GEM	•		•	•
Focus	1. 6L	Zetec	2002 MY	HCM	•	•	•	0
Focus	1. 6L	Zetec	2002 MY	HEC	•	•	•	•
Focus	1.6L	Zetec	2002 MY	MC	•		•	•
Focus	1.6L	Zetec	2002 MY	PCM	•		•	•
Focus	1.6L	Zetec	2002 MY	RCM	•		•	•
Focus	1.6L	Zetec Rocam	2002 MY	ABS/TCS	•		•	•
Focus	1. 6L	Zetec Rocam	2002 MY	EATC	•	•	•	•
Focus	1. 6L	Zetec Rocam	2002 MY	ECS	•	•	•	0
Focus	1.6L	Zetec Rocam	2002 MY	GEM	•		•	•
Focus	1. 6L	Zetec Rocam	2002 MY	HCM	•	•	•	0
Focus	1. 6L	Zetec Rocam	2002 MY	HEC	•	•	•	•
Focus	1.6L	Zetec Rocam	2002 MY	MC	•		•	•
Focus	1. 6L	Zetec Rocam	2002 MY	PCM	•	•	•	•
Focus	1.6L	Zetec Rocam	2002 MY	RCM	•		•	•
Focus	1.6L	Zetec-SE	1999 MY	ABS/TCS	•		•	
Focus	1.6L	Zetec-SE	1999 MY	CSM	•		•	
Focus	1. 6L	Zetec-SE	1999 MY	CTM	•	•	•	
Focus	1. 6L	Zetec-SE	1999 MY	ECS	•	•	•	0
Focus	1.6L	Zetec-SE	1999 MY	HEC	•	•	•	•
Focus	1.6L	Zetec-SE	1999 MY	MC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	1. 6L	Zetec-SE	1999 MY	PATS	•	•	•	0
Focus	1.6L	Zetec-SE	1999 MY	PCM	•	•	•	•
Focus	1.6L	Zetec-SE	2002 MY	ABS/TCS	•	•	•	•
Focus	1.6L	Zetec-SE	2002 MY	EATC	•	•	•	•
Focus	1.6L	Zetec-SE	2002 MY	ECS	•	•	•	0
Focus	1.6L	Zetec-SE	2002 MY	GEM	•	•	•	•
Focus	1.6L	Zetec-SE	2002 MY	HCM	•	•	•	0
Focus	1.6L	Zetec-SE	2002 MY	HEC	•	•	•	•
Focus	1.6L	Zetec-SE	2002 MY	MC	•	•	•	•
Focus	1.6L	Zetec-SE	2002 MY	PATS	•	•	•	0
Focus	1.6L	Zetec-SE	2002 MY	PCM	•	•	•	•
Focus	1.6L	Zetec-SE	2002 MY	RCM	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2003.25 MY	ABS	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2003. 25 MY	ACM	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2003. 25 MY	CDP	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2003.25 MY	D_DCU	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2003.25 MY	EATC	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2003.25 MY	EPS	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2003.25 MY	FFH	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2003.25 MY	GDM	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2003.25 MY	GEM	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2003.25 MY	HCM	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2003.25 MY	IC	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2003.25 MY	NAV	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2003.25 MY	P_DCU	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	1.8L	DURATEC-HE / I4	2003.25 MY	PAM	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2003. 25 MY	PCM	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2003. 25 MY	RETM	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2003. 25 MY	RKE	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2003. 25 MY	RL_DCU	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2003. 25 MY	RR_DCU	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2003.25 MY	SRM	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2003. 25 MY	TCM	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2008. 25 MY	ABS	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2008. 25 MY	ACM	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2008. 25 MY	CDP	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2008. 25 MY	CMR	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2008. 25 MY	D_DCU	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2008. 25 MY	EATC	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2008. 25 MY	EPS	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2008. 25 MY	FFH	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2008. 25 MY	GEM	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2008.25 MY	HCM	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2008. 25 MY	IC	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2008. 25 MY	P_DCU	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2008. 25 MY	PAM	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2008. 25 MY	PCM	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	2008. 25 MY	RCM	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2008. 25 MY	RETM	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	2008. 25 MY	RKE	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	1.8L	DURATEC-HE / I4	2008.25 MY	SRM	•	•	•	0
Focus	1. 8L	DURATEC-HE / I4	MY07_5	ABS	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	MY07_5	ACM	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	MY07_5	CDP	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	MY07_5	D_DCU	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	MY07_5	EATC	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	MY07_5	EPS	•	•	•	0
Focus	1. 8L	DURATEC-HE / I4	MY07_5	FFH	•	•	•	•
Focus	1. 8L	DURATEC-HE / I4	MY07_5	GDM	•	•	•	0
Focus	1. 8L	DURATEC-HE / I4	MY07_5	GEM	•	•	•	•
Focus	1. 8L	DURATEC-HE / I4	MY07_5	HCM	•	•	•	0
Focus	1. 8L	DURATEC-HE / I4	MY07_5	IC	•	•	•	•
Focus	1.8L	DURATEC-HE / I4	MY07_5	NAV	•	•	•	0
Focus	1. 8L	DURATEC-HE / I4	MY07_5	P_DCU	•	•	•	•
Focus	1. 8L	DURATEC-HE / I4	MY07_5	PAM	•	•	•	0
Focus	1. 8L	DURATEC-HE / I4	MY07_5	PCM	•	•	•	•
Focus	1. 8L	DURATEC-HE / I4	MY07_5	RETM	•	•	•	0
Focus	1.8L	DURATEC-HE / I4	MY07_5	RKE	•	•	•	0
Focus	1. 8L	DURATEC-HE / I4	MY07_5	SRM	•	•	•	0
Focus	1. 8L	DURATEC-HE / I4	MY07_5	TCM	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001.5 MY	ABS/TCS	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001.5 MY	CSM	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001.5 MY	CTM	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2001.5 MY	ECS	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001.5 MY	FFH	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001.5 MY	HEC	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001.5 MY	ICU	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001.5 MY	МС	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001.5 MY	PCM	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	ABS/TCS	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	EATC	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	ECS	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	FFH	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	GEM	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	HCM	•	•	•	0
Focus	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	НЕС	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	ICU	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	МС	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	PCM	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	RCM	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	ABS	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	ACM	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	CDP	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	D_DCU	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	EATC	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	EPS	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	FFH	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	GDM	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	GEM	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	HCM	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	NAV	•	•	•	0
Focus	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	P_DCU	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	PAM	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	PCM	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	RETM	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	RKE	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	RL_DCU	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	RR_DCU	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	SRM	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	ABS	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	ACM	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	CDP	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	CMR	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	D_DCU	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	EATC	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	EPS	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	FACM	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	FFH	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	GEM	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	HCM	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	IC	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	P_DCU	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	PAM	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	PCM	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	RCM	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	RETM	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	RKE	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	SRM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1. 8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	ABS	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	ACM	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	CDP	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	D_DCU	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	EATC	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	EPS	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	FFH	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	GDM	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	GEM	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	НСМ	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	IC	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	NAV	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	P_DCU	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	PAM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	PCM	•	•	•	•
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	RETM	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	RKE	•	•	•	0
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	SRM	•	•	•	0
Focus	1.8L	Endura DI	1999 MY	ABS/TCS	•	•	•	•
Focus	1.8L	Endura DI	1999 MY	CSM	•	•	•	
Focus	1.8L	Endura DI	1999 MY	CTM	•	•	•	
Focus	1.8L	Endura DI	1999 MY	ECS	•	•	•	0
Focus	1.8L	Endura DI	1999 MY	FFH	•	•	•	
Focus	1.8L	Endura DI	1999 MY	FIP	•	•	•	0
Focus	1.8L	Endura DI	1999 MY	HEC	•	•	•	•
Focus	1.8L	Endura DI	1999 MY	MC	•		•	
Focus	1.8L	Endura DI	1999 MY	PATS	•	•	•	0
Focus	1.8L	Endura DI	1999 MY	PCM	•	•	•	•
Focus	1.8L	Endura DI	2002 MY	ABS/TCS	•	•	•	•
Focus	1.8L	Endura DI	2002 MY	EATC	•	•	•	•
Focus	1.8L	Endura DI	2002 MY	ECS	•	•	•	0
Focus	1.8L	Endura DI	2002 MY	FFH	•	•	•	
Focus	1.8L	Endura DI	2002 MY	FIP	•	•	•	0
Focus	1.8L	Endura DI	2002 MY	GEM	•	•	•	•
Focus	1.8L	Endura DI	2002 MY	HCM	•	•	•	0
Focus	1.8L	Endura DI	2002 MY	HEC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	1.8L	Endura DI	2002 MY	MC	•	•	•	•
Focus	1.8L	Endura DI	2002 MY	PATS	•	•	•	0
Focus	1.8L	Endura DI	2002 MY	PCM	•	•	•	•
Focus	1.8L	Endura DI	2002 MY	RCM	•	•	•	•
Focus	1.8L	Zetec	1999 MY	ABS/TCS	•	•	•	•
Focus	1.8L	Zetec	1999 MY	AFCM	•	•	•	0
Focus	1.8L	Zetec	1999 MY	CSM	•	•	•	•
Focus	1.8L	Zetec	1999 MY	CTM	•	•	•	
Focus	1.8L	Zetec	1999 MY	ECS	•	•	•	0
Focus	1.8L	Zetec	1999 MY	HEC	•	•	•	•
Focus	1.8L	Zetec	1999 MY	MC	•	•	•	•
Focus	1.8L	Zetec	1999 MY	PATS	•	•	•	0
Focus	1.8L	Zetec	1999 MY	PCM	•	•	•	•
Focus	1.8L	Zetec	2002 MY	ABS/TCS	•	•	•	•
Focus	1.8L	Zetec	2002 MY	EATC	•	•	•	•
Focus	1.8L	Zetec	2002 MY	ECS	•	•	•	0
Focus	1.8L	Zetec	2002 MY	GEM	•	•	•	•
Focus	1.8L	Zetec	2002 MY	HCM	•	•	•	0
Focus	1.8L	Zetec	2002 MY	HEC	•	•	•	•
Focus	1.8L	Zetec	2002 MY	MC	•	•	•	•
Focus	1.8L	Zetec	2002 MY	PCM	•	•	•	•
Focus	1.8L	Zetec	2002 MY	RCM	•	•	•	•
Focus	2. 0L	DURATEC 16V	2005.5 MY	ABS/TCS	•	•	•	•
Focus	2. 0L	DURATEC 16V	2005.5 MY	EATC	•	•	•	•
Focus	2. OL	DURATEC 16V	2005.5 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	2.0L	DURATEC 16V	2005.5 MY	HCM	•	•	•	0
Focus	2. 0L	DURATEC 16V	2005.5 MY	IC	•	•	•	•
Focus	2. 0L	DURATEC 16V	2005.5 MY	MC	•	•	•	•
Focus	2. 0L	DURATEC 16V	2005.5 MY	PCM	•	•	•	•
Focus	2. 0L	DURATEC 16V	2005.5 MY	RCM	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2003.25 MY	ABS	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2003.25 MY	ACM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2003. 25 MY	CDP	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2003. 25 MY	D_DCU	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2003.25 MY	EATC	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2003.25 MY	EPS	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2003.25 MY	FFH	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2003.25 MY	GDM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2003. 25 MY	GEM	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2003. 25 MY	HCM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2003.25 MY	IC	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2003.25 MY	NAV	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2003.25 MY	P_DCU	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2003. 25 MY	PAM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2003. 25 MY	PCM	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2003. 25 MY	RETM		•	•	0
Focus	2. 0L	DURATEC-HE / I4	2003. 25 MY	RKE		•	•	0
Focus	2. 0L	DURATEC-HE / I4	2003. 25 MY	RL_DCU	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2003. 25 MY	RR_DCU	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2003. 25 MY	SRM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	2. 0L	DURATEC-HE / I4	2003.25 MY	TCM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2005 MY	ABS	•		•	
Focus	2. 0L	DURATEC-HE / I4	2005 MY	GEM	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2005 MY	IC	•	•	•	•
Focus	2.0L	DURATEC-HE / I4	2005 MY	PCM	•	•	•	•
Focus	2.0L	DURATEC-HE / I4	2005 MY	RCM	•	•	•	
Focus	2.0L	DURATEC-HE / I4	2006 MY	ABS	•	•	•	
Focus	2. 0L	DURATEC-HE / I4	2006 MY	GEM	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2006 MY	IC	•	•	•	•
Focus	2.0L	DURATEC-HE / I4	2006 MY	PCM	•	•	•	
Focus	2.0L	DURATEC-HE / I4	2006 MY	RCM	•	•	•	
Focus	2.0L	DURATEC-HE / I4	2007 MY	ABS	•	•	•	
Focus	2.0L	DURATEC-HE / I4	2007 MY	GEM	•	•	•	
Focus	2. 0L	DURATEC-HE / I4	2007 MY	IC	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2007 MY	PCM	•	•	•	•
Focus	2.0L	DURATEC-HE / I4	2007 MY	RCM	•	•	•	
Focus	2.0L	DURATEC-HE / I4	2008 MY	ABS	•	•	•	
Focus	2.0L	DURATEC-HE / I4	2008 MY	ACM	•	•	•	
Focus	2. 0L	DURATEC-HE / I4	2008 MY	APIM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2008 MY	FCIM	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2008 MY	FDIM	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2008 MY	GEM / SJB	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2008 MY	HVAC	•	•	•	•
Focus	2.0L	DURATEC-HE / I4	2008 MY	IC	•	•	•	
Focus	2. 0L	DURATEC-HE / I4	2008 MY	OCSM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	2. 0L	DURATEC-HE / I4	2008 MY	PCM	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2008 MY	RCM	•	•	•	
Focus	2. 0L	DURATEC-HE / I4	2008 MY	SDARS	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2008. 25 MY	ABS	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2008. 25 MY	ACM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2008.25 MY	CDP	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2008.25 MY	CMR	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2008. 25 MY	D_DCU	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2008. 25 MY	EATC	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2008.25 MY	EPS	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2008.25 MY	FFH	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2008. 25 MY	GEM	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2008.25 MY	HCM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2008. 25 MY	IC	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2008. 25 MY	P_DCU	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2008.25 MY	PAM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2008.25 MY	PCM	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2008.25 MY	RCM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2008. 25 MY	RETM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2008. 25 MY	RKE	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2008.25 MY	SRM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2008. 25 MY	TCM	•		•	0
Focus	2. 0L	DURATEC-HE / I4	2009 MY	ABS	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2009 MY	ACM	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2009 MY	APIM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	2. 0L	DURATEC-HE / I4	2009 MY	FCIM	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2009 MY	FDIM	•	•	•	•
Focus	2.0L	DURATEC-HE / I4	2009 MY	GEM / SJB		•	•	•
Focus	2.0L	DURATEC-HE / I4	2009 MY	HVAC	•	•	•	•
Focus	2.0L	DURATEC-HE / I4	2009 MY	IC		•	•	•
Focus	2.0L	DURATEC-HE / I4	2009 MY	OCSM	•	•	•	0
Focus	2.0L	DURATEC-HE / I4	2009 MY	PCM	•	•	•	•
Focus	2.0L	DURATEC-HE / I4	2009 MY	RCM		•	•	•
Focus	2. 0L	DURATEC-HE / I4	2010 MY	ABS	•	•	•	•
Focus	2.0L	DURATEC-HE / I4	2010 MY	ACM	•	•	•	•
Focus	2.0L	DURATEC-HE / I4	2010 MY	ACM	•	•	•	0
Focus	2.0L	DURATEC-HE / I4	2010 MY	APIM	•	•	•	0
Focus	2.0L	DURATEC-HE / I4	2010 MY	D_DCU	•	•	•	•
Focus	2.0L	DURATEC-HE / I4	2010 MY	EATC		•	•	•
Focus	2. 0L	DURATEC-HE / I4	2010 MY	EPS	•	•	•	0
Focus	2.0L	DURATEC-HE / I4	2010 MY	FCIM	•	•	•	•
Focus	2.0L	DURATEC-HE / I4	2010 MY	FDIM	•	•	•	•
Focus	2.0L	DURATEC-HE / I4	2010 MY	GEM	•	•	•	•
Focus	2.0L	DURATEC-HE / I4	2010 MY	GEM / SJB		•	•	•
Focus	2.0L	DURATEC-HE / I4	2010 MY	GPSM		•	•	0
Focus	2.0L	DURATEC-HE / I4	2010 MY	HCM		•	•	0
Focus	2.0L	DURATEC-HE / I4	2010 MY	HVAC		•	•	•
Focus	2.0L	DURATEC-HE / I4	2010 MY	IC	•	•	•	•
Focus	2.0L	DURATEC-HE / I4	2010 MY	OCSM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2010 MY	P_DCU	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	2.0L	DURATEC-HE / I4	2010 MY	PAM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2010 MY	PCM	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	2010 MY	PCM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2010 MY	RCM	•	•	•	
Focus	2. 0L	DURATEC-HE / I4	2010 MY	RCM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2010 MY	RKE	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2010 MY	SRM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	2010 MY	TCM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	MY07_5	ABS	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	MY07_5	ACM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	MY07_5	CDP	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	MY07_5	D_DCU	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	MY07_5	EATC	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	MY07_5	EPS	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	MY07_5	FFH	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	MY07_5	GDM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	MY07_5	GEM	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	MY07_5	HCM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	MY07_5	IC	•	•	•	
Focus	2. 0L	DURATEC-HE / I4	MY07_5	NAV	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	MY07_5	P_DCU	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	MY07_5	PAM	•		•	0
Focus	2. 0L	DURATEC-HE / I4	MY07_5	PCM	•	•	•	•
Focus	2. 0L	DURATEC-HE / I4	MY07_5	RETM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	MY07_5	RKE	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	2. 0L	DURATEC-HE / I4	MY07_5	SRM	•	•	•	0
Focus	2. 0L	DURATEC-HE / I4	MY07_5	TCM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	ABS	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	ACM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	CDP	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	D_DCU	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	EATC	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	EPS	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	FACM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	FFH	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	GDM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	GEM	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	HCM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	IC	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	NAV	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	P_DCU	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	PAM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	PCM	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003.25 MY	RETM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	RKE	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	RL_DCU	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	RR_DCU	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2003. 25 MY	SRM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	ABS	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	ACM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	CDP	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	CMR	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	D_DCU	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	EATC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	EPS	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	FACM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	FFH	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	GEM	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	HCM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	IC	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	P_DCU	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	PAM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	PCM	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	RCM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	RETM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	RKE	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	SRM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	TCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	ABS	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	ACM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	CDP	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	D_DCU	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	EATC	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	EPS	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	FACM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	FFH	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	GDM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	GEM	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	HCM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	IC	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	NAV	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	P_DCU	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	PAM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	PCM	•	•	•	•
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	RETM	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	RKE	•	•	•	0
Focus	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	SRM	•	•	•	0
Focus	2. 0L	FFV	2010 MY	ABS	•	•	•	•
Focus	2. 0L	FFV	2010 MY	ACM	•	•	•	0
Focus	2. 0L	FFV	2010 MY	D_DCU	•	•	•	•
Focus	2. 0L	FFV	2010 MY	EATC	•	•	•	•
Focus	2. 0L	FFV	2010 MY	EPS	•	•	•	0
Focus	2. 0L	FFV	2010 MY	GEM	•	•	•	•
Focus	2. 0L	FFV	2010 MY	HCM	•	•	•	0
Focus	2. 0L	FFV	2010 MY	IC	•	•	•	•
Focus	2. 0L	FFV	2010 MY	P_DCU	•	•	•	•
Focus	2. 0L	FFV	2010 MY	PAM	•	•	•	0
Focus	2. 0L	FFV	2010 MY	PCM	•	•	•	•
Focus	2. 0L	FFV	2010 MY	RCM	•	•	•	0
Focus	2. OL	FFV	2010 MY	RKE	•	•	•	0
Focus	2. OL	FFV	2010 MY	SRM	•	•	•	0
Focus	2. OL	FFV	2010 MY	TCM	•	•	•	0
Focus	2. 0L	SPI	2000 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	2. 0L	SPI	2000 MY	CSM	•	•	•	•
Focus	2. 0L	SPI	2000 MY	CTM	•	•	•	
Focus	2. 0L	SPI	2000 MY	ECS	•	•	•	0
Focus	2. 0L	SPI	2000 MY	HEC	•	•	•	•
Focus	2. 0L	SPI	2000 MY	PCM	•	•	•	•
Focus	2. 0L	SPI	2002 MY	ABS/TCS	•	•	•	•
Focus	2. 0L	SPI	2002 MY	EATC	•	•	•	•
Focus	2. 0L	SPI	2002 MY	ECS	•	•	•	0
Focus	2. 0L	SPI	2002 MY	GEM	•	•	•	•
Focus	2. 0L	SPI	2002 MY	HCM	•	•	•	0
Focus	2. 0L	SPI	2002 MY	HEC	•	•	•	•
Focus	2. 0L	SPI	2002 MY	MC	•	•	•	•
Focus	2. 0L	SPI	2002 MY	PCM	•	•	•	•
Focus	2. 0L	SPI	2002 MY	RCM	•	•	•	•
Focus	2. 0L	SPI	2003 MY	ABS/TCS	•	•	•	•
Focus	2. 0L	SPI	2003 MY	GEM	•	•	•	•
Focus	2. 0L	SPI	2003 MY	HEC	•	•	•	•
Focus	2. 0L	SPI	2003 MY	PCM	•	•	•	•
Focus	2. 0L	SPI	2003 MY	RCM	•	•	•	•
Focus	2. 0L	SPI	2004 MY	ABS/TCS	•	•	•	•
Focus	2. 0L	SPI	2004 MY	GEM	•	•	•	•
Focus	2. 0L	SPI	2004 MY	HEC	•	•	•	•
Focus	2. 0L	SPI	2004 MY	PCM	•	•	•	•
Focus	2. 0L	SPI	2004 MY	RCM	•	•	•	•
Focus	2. 0L	Zetec	1999 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	2. 0L	Zetec	1999 MY	CSM	•	•	•	•
Focus	2. 0L	Zetec	1999 MY	CTM	•	•	•	
Focus	2. 0L	Zetec	1999 MY	ECS	•	•	•	0
Focus	2. 0L	Zetec	1999 MY	HEC	•	•	•	•
Focus	2. 0L	Zetec	1999 MY	MC	•	•	•	•
Focus	2. 0L	Zetec	1999 MY	PATS	•	•	•	0
Focus	2. 0L	Zetec	1999 MY	PCM	•	•	•	•
Focus	2. 0L	Zetec	2000 MY	ABS/TCS	•	•	•	•
Focus	2. 0L	Zetec	2000 MY	CSM	•	•	•	•
Focus	2. 0L	Zetec	2000 MY	CTM	•	•	•	
Focus	2. 0L	Zetec	2000 MY	ECS	•	•	•	0
Focus	2. 0L	Zetec	2000 MY	HEC	•	•	•	•
Focus	2. 0L	Zetec	2000 MY	PCM	•	•	•	•
Focus	2. 0L	Zetec	2002 MY	ABS/TCS	•	•	•	•
Focus	2. 0L	Zetec	2002 MY	EATC	•	•	•	•
Focus	2. 0L	Zetec	2002 MY	ECS	•	•	•	0
Focus	2. 0L	Zetec	2002 MY	GEM	•	•	•	•
Focus	2. 0L	Zetec	2002 MY	HCM	•	•	•	0
Focus	2. 0L	Zetec	2002 MY	HEC	•	•	•	•
Focus	2. 0L	Zetec	2002 MY	MC	•	•	•	•
Focus	2. 0L	Zetec	2002 MY	PCM	•	•	•	•
Focus	2. 0L	Zetec	2002 MY	RCM	•	•	•	•
Focus	2. 0L	Zetec	2003 MY	ABS/TCS	•	•	•	•
Focus	2. 0L	Zetec	2003 MY	GEM	•	•	•	•
Focus	2. 0L	Zetec	2003 MY	HEC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	2. 0L	Zetec	2003 MY	PCM	•	•	•	•
Focus	2. 0L	Zetec	2003 MY	RCM	•	•	•	•
Focus	2. 0L	Zetec	2004 MY	ABS/TCS	•	•	•	•
Focus	2. 0L	Zetec	2004 MY	GEM	•	•	•	•
Focus	2. 0L	Zetec	2004 MY	HEC	•	•	•	•
Focus	2. 0L	Zetec	2004 MY	PCM	•	•	•	•
Focus	2. 0L	Zetec	2004 MY	RCM	•	•	•	•
Focus	2. 0L	ZETEC ST	2002 MY	ABS/TCS	•	•	•	•
Focus	2. 0L	ZETEC ST	2002 MY	EATC	•	•	•	•
Focus	2. 0L	ZETEC ST	2002 MY	ECS	•	•	•	0
Focus	2. 0L	ZETEC ST	2002 MY	GEM	•	•	•	•
Focus	2. 0L	ZETEC ST	2002 MY	HCM	•	•	•	0
Focus	2. 0L	ZETEC ST	2002 MY	HEC	•	•	•	•
Focus	2. 0L	ZETEC ST	2002 MY	MC	•	•	•	•
Focus	2. 0L	ZETEC ST	2002 MY	MC	•	•	•	0
Focus	2. 0L	ZETEC ST	2002 MY	PCM	•	•	•	•
Focus	2. 0L	ZETEC ST	2002 MY	RCM	•	•	•	•
Focus	2. 0L	ZETEC ST	2003 MY	ABS/TCS	•	•	•	•
Focus	2. 0L	ZETEC ST	2003 MY	GEM	•	•	•	•
Focus	2. 0L	ZETEC ST	2003 MY	HEC	•	•	•	•
Focus	2. 0L	ZETEC ST	2003 MY	PCM	•	•	•	•
Focus	2. 0L	ZETEC ST	2003 MY	RCM	•	•	•	•
Focus	2. 0L	ZETEC ST	2004 MY	ABS/TCS	•	•	•	•
Focus	2. 0L	ZETEC ST	2004 MY	GEM	•	•	•	•
Focus	2. 0L	ZETEC ST	2004 MY	HEC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	2. 0L	ZETEC ST	2004 MY	PCM	•	•	•	•
Focus	2. 0L	ZETEC ST	2004 MY	RCM	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2003.5 MY	ABS/TCS	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2003.5 MY	GEM	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2003.5 MY	IC		•	•	•
Focus	2. 3L	DURATEC-HE / I4	2003.5 MY	PCM	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2003.5 MY	RCM	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2004 MY	ABS/TCS	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2004 MY	GEM	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2004 MY	HEC	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2004 MY	IC	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2004 MY	PCM	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2004 MY	RCM	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2005 MY	ABS	•	•	•	
Focus	2. 3L	DURATEC-HE / I4	2005 MY	GEM	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2005 MY	IC	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2005 MY	PCM	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2005 MY	RCM	•	•	•	
Focus	2. 3L	DURATEC-HE / I4	2006 MY	ABS	•	•	•	
Focus	2. 3L	DURATEC-HE / I4	2006 MY	GEM	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2006 MY	IC		•	•	•
Focus	2. 3L	DURATEC-HE / I4	2006 MY	PCM	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2006 MY	RCM	•	•	•	
Focus	2. 3L	DURATEC-HE / I4	2007 MY	ABS	•	•	•	
Focus	2. 3L	DURATEC-HE / I4	2007 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus	2. 3L	DURATEC-HE / I4	2007 MY	IC	•	•	•	•
Focus	2. 3L	DURATEC-HE / I4	2007 MY	PCM	•	•	•	•
Focus	2. 3L	DURATEC-HE / 14	2007 MY	RCM	•		•	
Focus	2.5L	Duratec RS	2008. 25 MY	ABS	•	•	•	•
Focus	2.5L	Duratec RS	2008. 25 MY	ACM	•	•	•	0
Focus	2.5L	Duratec RS	2008. 25 MY	CDP	•	•	•	0
Focus	2.5L	Duratec RS	2008. 25 MY	CMR	•	•	•	0
Focus	2.5L	Duratec RS	2008. 25 MY	D_DCU	•	•	•	•
Focus	2.5L	Duratec RS	2008. 25 MY	EATC	•	•	•	•
Focus	2.5L	Duratec RS	2008. 25 MY	EPS	•	•	•	0
Focus	2.5L	Duratec RS	2008. 25 MY	FFH	•	•	•	•
Focus	2.5L	Duratec RS	2008. 25 MY	GEM	•	•	•	•
Focus	2.5L	Duratec RS	2008. 25 MY	HCM	•	•	•	0
Focus	2.5L	Duratec RS	2008. 25 MY	IC	•		•	•
Focus	2.5L	Duratec RS	2008. 25 MY	MC	•	•	•	0
Focus	2.5L	Duratec RS	2008. 25 MY	P_DCU	•	•	•	•
Focus	2.5L	Duratec RS	2008. 25 MY	PAM	•	•	•	0
Focus	2.5L	Duratec RS	2008. 25 MY	PCM	•	•	•	•
Focus	2.5L	Duratec RS	2008. 25 MY	RCM	•		•	0
Focus	2.5L	Duratec RS	2008. 25 MY	RETM	•		•	0
Focus	2.5L	Duratec RS	2008. 25 MY	RKE	•		•	0
Focus	2.5L	Duratec RS	2008. 25 MY	SRM	•			0
Focus	2.5L	15	2003. 25 MY	ABS	•	•	•	•
Focus	2.5L	15	2003. 25 MY	ACM	•	•	•	0
Focus	2. 5L	15	2003. 25 MY	CDP	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	2. 5L	15	2003.25 MY	D_DCU	•	•	•	•
Focus	2. 5L	I5	2003.25 MY	EATC	•	•	•	•
Focus	2. 5L	15	2003.25 MY	EPS	•	•	•	0
Focus	2. 5L	I5	2003.25 MY	FFH	•	•	•	•
Focus	2. 5L	I5	2003.25 MY	GDM	•	•	•	0
Focus	2. 5L	I5	2003.25 MY	GEM	•	•	•	•
Focus	2. 5L	I5	2003.25 MY	HCM	•	•	•	0
Focus	2. 5L	I5	2003.25 MY	IC	•	•	•	•
Focus	2. 5L	I5	2003.25 MY	MC	•	•	•	•
Focus	2. 5L	I5	2003.25 MY	NAV	•	•	•	0
Focus	2. 5L	15	2003.25 MY	P_DCU	•	•	•	
Focus	2. 5L	15	2003.25 MY	PAM	•	•	•	0
Focus	2. 5L	15	2003.25 MY	PCM	•	•	•	•
Focus	2. 5L	I5	2003.25 MY	RETM	•	•	•	0
Focus	2. 5L	I5	2003.25 MY	RKE	•	•	•	0
Focus	2. 5L	I5	2003.25 MY	RL_DCU	•	•	•	•
Focus	2. 5L	I5	2003.25 MY	RR_DCU	•	•	•	•
Focus	2. 5L	15	2003.25 MY	SRM	•	•	•	0
Focus	2. 5L	I5	2008.25 MY	ABS	•	•	•	•
Focus	2. 5L	I5	2008.25 MY	ACM	•	•	•	0
Focus	2. 5L	I5	2008.25 MY	CDP	•	•	•	0
Focus	2. 5L	I5	2008.25 MY	CMR	•	•	•	0
Focus	2. 5L	I5	2008.25 MY	D_DCU	•	•	•	•
Focus	2. 5L	I5	2008.25 MY	EATC	•	•	•	•
Focus	2. 5L	I5	2008.25 MY	EPS	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	2.5L	15	2008. 25 MY	FFH	•	•	•	•
Focus	2.5L	I5	2008.25 MY	GEM	•	•	•	•
Focus	2.5L	15	2008.25 MY	HCM	•	•	•	0
Focus	2.5L	15	2008.25 MY	IC	•	•	•	•
Focus	2.5L	15	2008.25 MY	MC	•			•
Focus	2.5L	15	2008.25 MY	P_DCU	•	•	•	•
Focus	2.5L	15	2008.25 MY	PAM	•	•	•	0
Focus	2.5L	15	2008.25 MY	PCM	•			•
Focus	2.5L	15	2008.25 MY	RCM	•		•	0
Focus	2.5L	15	2008.25 MY	RETM	•			0
Focus	2.5L	15	2008.25 MY	RKE	•			0
Focus	2.5L	15	2008.25 MY	SRM	•			0
Focus	2.5L	15	MY07_5	ABS	•	•	•	•
Focus	2.5L	15	MY07_5	ACM	•		•	0
Focus	2.5L	15	MY07_5	CDP	•			0
Focus	2.5L	15	MY07_5	D_DCU	•			•
Focus	2.5L	15	MY07_5	EATC	•			
Focus	2.5L	15	MY07_5	EPS	•			0
Focus	2.5L	15	MY07_5	FFH	•	•	•	•
Focus	2.5L	15	MY07_5	GDM	•	•	•	0
Focus	2.5L	15	MY07_5	GEM	•	•	•	•
Focus	2.5L	I5	MY07_5	HCM	•	•	•	0
Focus	2.5L	I5	MY07_5	IC	•	•	•	•
Focus	2.5L	15	MY07_5	MC	•	•	•	•
Focus	2.5L	I5	MY07_5	NAV	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus	2. 5L	I5	MY07_5	P_DCU	•	•	•	•
Focus	2.5L	I5	MY07_5	PAM	•	•	•	0
Focus	2.5L	I5	MY07_5	PCM	•	•	•	•
Focus	2. 5L	I5	MY07_5	RETM	•	•	•	0
Focus	2.5L	I5	MY07_5	RKE	•		•	0
Focus	2.5L	I5	MY07_5	SRM	•	•	•	0
Focus C-MAX	1.4L	DURATEC 16V	2002_75	ABS	•	•	•	•
Focus C-MAX	1. 4L	DURATEC 16V	2002_75	ACM	•		•	0
Focus C-MAX	1. 4L	DURATEC 16V	2002_75	CDP	•		•	0
Focus C-MAX	1. 4L	DURATEC 16V	2002_75	D_DCU	•		•	•
Focus C-MAX	1. 4L	DURATEC 16V	2002_75	EATC	•		•	•
Focus C-MAX	1.4L	DURATEC 16V	2002_75	EPB	•	•	•	0
Focus C-MAX	1.4L	DURATEC 16V	2002_75	FFH	•	•	•	•
Focus C-MAX	1. 4L	DURATEC 16V	2002_75	GDM	•		•	0
Focus C-MAX	1.4L	DURATEC 16V	2002_75	GEM	•	•	•	•
Focus C-MAX	1.4L	DURATEC 16V	2002_75	HCM	•	•	•	0
Focus C-MAX	1. 4L	DURATEC 16V	2002_75	IC	•		•	•
Focus C-MAX	1.4L	DURATEC 16V	2002_75	NAV	•	•	•	0
Focus C-MAX	1. 4L	DURATEC 16V	2002_75	P_DCU	•		•	•
Focus C-MAX	1. 4L	DURATEC 16V	2002_75	PAM	•		•	0
Focus C-MAX	1. 4L	DURATEC 16V	2002_75	PCM	•		•	•
Focus C-MAX	1.4L	DURATEC 16V	2002_75	RETM	•	•	•	0
Focus C-MAX	1.4L	DURATEC 16V	2002_75	RKE	•	•	•	0
Focus C-MAX	1.4L	DURATEC 16V	2002_75	RL_DCU	•	•	•	•
Focus C-MAX	1.4L	DURATEC 16V	2002_75	RR_DCU	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	1. 4L	DURATEC 16V	2002_75	SRM	•	•	•	0
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	ABS	•	•	•	•
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	ACM	•	•	•	0
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	CDP	•	•	•	0
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	D_DCU	•	•	•	•
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	EATC	•		•	•
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	EPB	•		•	0
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	FFH	•	•	•	•
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	GDM	•	•	•	0
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	GEM	•	•	•	•
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	HCM	•		•	0
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	IC	•		•	•
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	NAV	•		•	0
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	P_DCU	•	•	•	•
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	PAM	•		•	0
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	PCM	•		•	•
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	RETM	•		•	0
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	RKE	•		•	0
Focus C-MAX	1. 4L	DURATEC 16V	MY07_5	SRM	•	•	•	0
Focus C-MAX	1. 6L	DURATEC 16V	2002_75	ABS	•	•	•	•
Focus C-MAX	1. 6L	DURATEC 16V	2002_75	ACM	•	•	•	0
Focus C-MAX	1.6L	DURATEC 16V	2002_75	CDP	•	•	•	0
Focus C-MAX	1.6L	DURATEC 16V	2002_75	D_DCU	•	•	•	•
Focus C-MAX	1. 6L	DURATEC 16V	2002_75	EATC	•	•	•	•
Focus C-MAX	1. 6L	DURATEC 16V	2002_75	EPB	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	1.6L	DURATEC 16V	2002_75	FFH	•	•	•	•
Focus C-MAX	1.6L	DURATEC 16V	2002_75	GDM	•	•	•	0
Focus C-MAX	1.6L	DURATEC 16V	2002_75	GEM	•	•	•	•
Focus C-MAX	1.6L	DURATEC 16V	2002_75	HCM	•	•	•	0
Focus C-MAX	1.6L	DURATEC 16V	2002_75	IC	•	•	•	•
Focus C-MAX	1.6L	DURATEC 16V	2002_75	NAV	•	•	•	0
Focus C-MAX	1.6L	DURATEC 16V	2002_75	P_DCU	•	•	•	•
Focus C-MAX	1.6L	DURATEC 16V	2002_75	PAM	•	•	•	0
Focus C-MAX	1.6L	DURATEC 16V	2002_75	PCM	•	•	•	•
Focus C-MAX	1.6L	DURATEC 16V	2002_75	RETM	•	•	•	0
Focus C-MAX	1.6L	DURATEC 16V	2002_75	RKE	•	•	•	0
Focus C-MAX	1.6L	DURATEC 16V	2002_75	RL_DCU	•	•	•	•
Focus C-MAX	1.6L	DURATEC 16V	2002_75	RR_DCU	•	•	•	•
Focus C-MAX	1.6L	DURATEC 16V	2002_75	SRM	•	•	•	0
Focus C-MAX	1.6L	DURATEC 16V	2008. 25 MY	ABS	•	•	•	•
Focus C-MAX	1.6L	DURATEC 16V	2008.25 MY	ACM	•	•	•	0
Focus C-MAX	1.6L	DURATEC 16V	2008.25 MY	CDP	•	•	•	0
Focus C-MAX	1.6L	DURATEC 16V	2008. 25 MY	CMR	•	•	•	0
Focus C-MAX	1.6L	DURATEC 16V	2008.25 MY	D_DCU	•	•	•	•
Focus C-MAX	1.6L	DURATEC 16V	2008.25 MY	EATC	•	•	•	
Focus C-MAX	1.6L	DURATEC 16V	2008.25 MY	EPS	•	•	•	0
Focus C-MAX	1.6L	DURATEC 16V	2008. 25 MY	FFH	•	•	•	•
Focus C-MAX	1.6L	DURATEC 16V	2008. 25 MY	GEM	•	•	•	•
Focus C-MAX	1.6L	DURATEC 16V	2008. 25 MY	HCM	•	•	•	0
Focus C-MAX	1.6L	DURATEC 16V	2008.25 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	1. 6L	DURATEC 16V	2008.25 MY	P_DCU	•	•	•	•
Focus C-MAX	1. 6L	DURATEC 16V	2008.25 MY	PAM	•	•	•	0
Focus C-MAX	1. 6L	DURATEC 16V	2008. 25 MY	PCM	•	•	•	•
Focus C-MAX	1. 6L	DURATEC 16V	2008. 25 MY	RCM	•	•	•	0
Focus C-MAX	1. 6L	DURATEC 16V	2008. 25 MY	RETM	•	•	•	0
Focus C-MAX	1. 6L	DURATEC 16V	2008. 25 MY	RKE	•	•	•	0
Focus C-MAX	1. 6L	DURATEC 16V	2008. 25 MY	SRM	•	•	•	0
Focus C-MAX	1. 6L	DURATEC 16V	2008.25 MY	TCM	•	•	•	0
Focus C-MAX	1. 6L	DURATEC 16V	MY07_5	ABS	•	•	•	•
Focus C-MAX	1. 6L	DURATEC 16V	MY07_5	ACM	•	•	•	0
Focus C-MAX	1. 6L	DURATEC 16V	MY07_5	CDP	•	•	•	0
Focus C-MAX	1. 6L	DURATEC 16V	MY07_5	D_DCU	•	•	•	•
Focus C-MAX	1. 6L	DURATEC 16V	MY07_5	EATC	•		•	•
Focus C-MAX	1. 6L	DURATEC 16V	MY07_5	EPB	•	•	•	0
Focus C-MAX	1. 6L	DURATEC 16V	MY07_5	FFH	•	•	•	•
Focus C-MAX	1. 6L	DURATEC 16V	MY07_5	GDM	•		•	0
Focus C-MAX	1. 6L	DURATEC 16V	MY07_5	GEM	•		•	•
Focus C-MAX	1.6L	DURATEC 16V	MY07_5	HCM	•	•	•	0
Focus C-MAX	1.6L	DURATEC 16V	MY07_5	IC	•		•	•
Focus C-MAX	1.6L	DURATEC 16V	MY07_5	NAV	•		•	0
Focus C-MAX	1. 6L	DURATEC 16V	MY07_5	P_DCU	•		•	
Focus C-MAX	1. 6L	DURATEC 16V	MY07_5	PAM	•		•	0
Focus C-MAX	1.6L	DURATEC 16V	MY07_5	PCM	•	•	•	•
Focus C-MAX	1.6L	DURATEC 16V	MY07_5	RETM	•	•	•	0
Focus C-MAX	1. 6L	DURATEC 16V	MY07_5	RKE	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus C-MAX	1.6L	DURATEC 16V	MY07_5	SRM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2002_75	ABS	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	2002_75	ACM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2002_75	CDP	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2002_75	D_DCU	•	•	•	
Focus C-MAX	1.6L	DURATEC VCT	2002_75	EATC	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	2002_75	EPB	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2002_75	FFH	•	•	•	
Focus C-MAX	1.6L	DURATEC VCT	2002_75	GDM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2002_75	GEM	•	•	•	
Focus C-MAX	1.6L	DURATEC VCT	2002_75	HCM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2002_75	IC	•	•	•	
Focus C-MAX	1.6L	DURATEC VCT	2002_75	NAV	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2002_75	P_DCU	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	2002_75	PAM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2002_75	PCM	•	•	•	
Focus C-MAX	1.6L	DURATEC VCT	2002_75	RETM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2002_75	RKE	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2002_75	RL_DCU	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	2002_75	RR_DCU	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	2002_75	SRM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	ABS	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	ACM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	CDP	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	CMR	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	D_DCU	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	EATC	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	EPS	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	FFH	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	GEM	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	HCM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	IC	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	P_DCU	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	PAM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	PCM	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	RCM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	RETM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	RKE	•	•		0
Focus C-MAX	1.6L	DURATEC VCT	2008.25 MY	SRM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	ABS	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	ACM	•	•		0
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	CDP	•	•		0
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	D_DCU	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	EATC	•	•		•
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	EPB	•	•		0
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	FFH	•			
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	GDM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	GEM	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	HCM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	NAV	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	P_DCU	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	PAM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	PCM	•	•	•	•
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	RETM	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	RKE	•	•	•	0
Focus C-MAX	1.6L	DURATEC VCT	MY07_5	SRM	•	•	•	0
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	ABS	•	•	•	•
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	ACM	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	CDP	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	D_DCU	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	EATC	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	ЕРВ	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	EPS	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	FACM	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	FFH	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	GDM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	GEM	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	HCM	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	IC	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	NAV	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	P_DCU	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	PAM	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	PCM	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	RETM	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	RKE	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	RL_DCU	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	RR_DCU	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	SRM	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002_75	TCM	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	ABS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	ACM	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	CDP	•	•	•	0
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	CMR	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	D_DCU	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	EATC	•	•	•	•
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	EPS	•	•	•	0
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	FACM	•	•	•	0
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	FFH	•	•	•	•
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	GEM	•	•	•	•
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	HCM	•	•	•	0
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	IC	•	•	•	•
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	P_DCU	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	PAM	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	RCM	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	RETM	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	RKE	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	SRM	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	ABS	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	ACM	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	CDP	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	D_DCU	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	EATC	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	EPB	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	EPS	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	FACM	•	•	•	0
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	FFH	•	•	•	•
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	GDM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	GEM	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	HCM	•	•	•	0
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	IC	•	•	•	•
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	NAV	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	P_DCU	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	PAM	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	PCM	•	•	•	•
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	RETM	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	RKE	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	SRM	•	•	•	0
Focus C-MAX	1. 6L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	TCM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	ABS	•		•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	ACM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	CDP	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	D_DCU	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	EATC	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	EPB	•		•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	EPS	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	FFH	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	GDM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	GEM		•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	HCM	•	•		0
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	IC	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	NAV	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	P_DCU	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	PAM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	PCM	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	RETM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	RKE	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	RL_DCU	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	RR_DCU	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	SRM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2002_75	TCM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2008. 25 MY	ABS		•		•
Focus C-MAX	1.8L	DURATEC-HE / I4	2008. 25 MY	ACM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2008. 25 MY	CDP	•	•		0
Focus C-MAX	1.8L	DURATEC-HE / I4	2008. 25 MY	CMR		•		0
Focus C-MAX	1.8L	DURATEC-HE / I4	2008. 25 MY	D_DCU		•		•
Focus C-MAX	1.8L	DURATEC-HE / I4	2008. 25 MY	EATC	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	2008. 25 MY	EPS	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2008. 25 MY	FFH	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	2008. 25 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	1.8L	DURATEC-HE / I4	2008. 25 MY	HCM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2008.25 MY	IC	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	2008.25 MY	P_DCU	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	2008. 25 MY	PAM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2008. 25 MY	PCM	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	2008. 25 MY	RCM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2008.25 MY	RETM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2008. 25 MY	RKE	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	2008. 25 MY	SRM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	ABS	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	ACM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	CDP	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	D_DCU	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	EATC	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	EPB	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	EPS	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	FFH	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	GDM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	GEM	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	HCM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	IC	•	•	•	
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	NAV	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	P_DCU	•	•	•	•
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	PAM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	RETM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	RKE	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	SRM	•	•	•	0
Focus C-MAX	1.8L	DURATEC-HE / I4	MY07_5	TCM	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	ABS	•	•	•	•
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	ACM	•	•	•	0
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	CDP	•	•	•	0
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	D_DCU	•	•	•	•
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	EATC	•	•	•	•
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	EPB	•	•	•	0
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	EPS	•	•	•	0
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	FFH	•	•	•	•
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	GDM	•	•	•	0
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	GEM	•	•	•	•
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	HCM	•	•	•	0
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	NAV	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	P_DCU	•	•	•	•
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	PAM	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	PCM	•	•	•	•
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	RETM	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	RKE	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	RL_DCU	•	•	•	•
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	RR_DCU	•	•	•	•
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002_75	SRM	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	ABS	•	•	•	•
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	ACM	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	CDP	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	CMR	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	D_DCU	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	EATC	•	•	•	•
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	EPS	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	FACM	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	FFH	•	•	•	•
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	GEM	•	•	•	•
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	HCM	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	IC	•	•	•	•
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	P_DCU	•	•	•	•
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	PAM	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	PCM	•	•	•	•
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	RCM	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	RETM	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	RKE	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	SRM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	ABS	•	•	•	•
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	ACM	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	CDP	•	•	•	0
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	D_DCU	•	•	•	•
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	EATC	•	•	•	•
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	ЕРВ	•	•	•	0
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	EPS	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	FFH	•	•	•	•
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	GDM	•	•	•	0
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	GEM	•	•	•	•
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	HCM	•	•	•	0
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	IC	•	•	•	•
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	NAV	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	P_DCU	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	1. 8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	PAM	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	PCM	•	•	•	•
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	RETM	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	RKE	•	•	•	0
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	SRM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	ABS	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	ACM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	CDP	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	D_DCU	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	EATC	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	EPB	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	EPS	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	FFH	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	GDM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	GEM	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	HCM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	IC	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	NAV	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	P_DCU	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	PAM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / 14	2002_75	PCM	•	•		

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	RETM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	RKE	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	RL_DCU	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	RR_DCU	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	SRM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2002_75	TCM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008. 25 MY	ABS	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008. 25 MY	ACM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008. 25 MY	CDP	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008. 25 MY	CMR	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008. 25 MY	D_DCU	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008. 25 MY	EATC	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008. 25 MY	EPS	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008. 25 MY	FFH	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008. 25 MY	GEM	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008. 25 MY	HCM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008. 25 MY	IC	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008. 25 MY	P_DCU	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008. 25 MY	PAM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008. 25 MY	PCM	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008. 25 MY	RCM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008.25 MY	RETM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008.25 MY	RKE	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008.25 MY	SRM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	2008.25 MY	TCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	ABS	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	ACM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	CDP	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	D_DCU	•	•		•
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	EATC	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	EPB	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	EPS	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	FFH	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	GDM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	GEM	•	•		•
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	HCM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	IC	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	NAV	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	P_DCU	•	•	•	•
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	PAM	•	•		0
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	PCM	•	•		•
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	RETM	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	RKE	•	•	•	0
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	SRM	•	•		0
Focus C-MAX	2. 0L	DURATEC-HE / I4	MY07_5	TCM	•	•		0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	ABS	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	ACM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	CDP	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	D_DCU	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	EATC	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	ЕРВ	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	EPS	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	FACM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	FFH	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	GDM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	GEM	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	HCM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	IC	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	NAV	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	P_DCU	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	PAM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	RETM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	RKE	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	RL_DCU	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	RR_DCU	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2002_75	SRM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	ABS	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	ACM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	CDP	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	CMR	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	D_DCU	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	EATC	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	EPS	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	FACM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	FFH	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	GEM	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	HCM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	IC	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	P_DCU	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	PAM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	PCM	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	RCM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	RETM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	RKE	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	SRM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	TCM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	ABS	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	ACM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	CDP	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	D_DCU	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	EATC	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	EPB	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	EPS	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	FACM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	FFH	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	GDM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	GEM	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	HCM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	IC	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	NAV	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	P_DCU	•	•	•	•
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	PAM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	RETM	•	•	•	0
Focus C-MAX	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07_5	RKE	•	•	•	0
Focus C-MAX	2. OL	Duratorq Turbo Diesel Common Rail Injection	MY07_5	SRM	•	•	•	0
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	ABS	•	•	•	
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	ACM	•	•	•	0
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	CDP	•	•	•	0
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	D_DCU	•	•	•	•
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	EATC	•	•	•	
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	EPS	•		•	0
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	FFH	•	•	•	•
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	FTCM	•	•	•	0
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	GEM	•		•	•
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	HCM	•		•	0
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	IC	•		•	•
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	P_DCU	•	•	•	•
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	PAM	•		•	0
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	PCM	•	•	•	•
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	RCM	•	•	•	0
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	RKE	•	•	•	0
Focus Cabriolet	1.6L	DURATEC 16V	2008.25 MY	SRM	•		•	0
Focus Cabriolet	1.6L	DURATEC 16V	MY06.75	ABS	•	•	•	•
Focus Cabriolet	1.6L	DURATEC 16V	MY06.75	ACM	•	•	•	0
Focus Cabriolet	1.6L	DURATEC 16V	MY06.75	CDP	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus Cabriolet	1.6L	DURATEC 16V	MY06.75	D DCU	•	•	•	•
Focus Cabriolet	1. 6L	DURATEC 16V	MY06.75	EATC	•	•	•	
Focus Cabriolet	1. 6L	DURATEC 16V	MY06.75	FFH	•	•	•	•
Focus Cabriolet	1. 6L	DURATEC 16V	MY06.75	FTCM	•	•	•	0
Focus Cabriolet	1. 6L	DURATEC 16V	MY06.75	GDM	•	•	•	0
Focus Cabriolet	1. 6L	DURATEC 16V	MY06.75	GEM	•	•	•	•
Focus Cabriolet	1.6L	DURATEC 16V	MY06.75	HCM	•	•	•	0
Focus Cabriolet	1. 6L	DURATEC 16V	MY06.75	IC	•	•	•	•
Focus Cabriolet	1. 6L	DURATEC 16V	MY06.75	NAV	•	•	•	0
Focus Cabriolet	1. 6L	DURATEC 16V	MY06.75	P_DCU	•	•	•	•
Focus Cabriolet	1. 6L	DURATEC 16V	MY06.75	PAM	•	•	•	0
Focus Cabriolet	1.6L	DURATEC 16V	MY06.75	PCM	•	•	•	•
Focus Cabriolet	1.6L	DURATEC 16V	MY06.75	RKE	•	•	•	0
Focus Cabriolet	1. 6L	DURATEC 16V	MY06.75	SRM	•	•	•	0
Focus Cabriolet	1.6L	DURATEC VCT	2008.25 MY	ABS	•	•	•	
Focus Cabriolet	1.6L	DURATEC VCT	2008.25 MY	ACM	•	•	•	0
Focus Cabriolet	1.6L	DURATEC VCT	2008.25 MY	CDP	•	•	•	0
Focus Cabriolet	1.6L	DURATEC VCT	2008.25 MY	D_DCU	•	•	•	•
Focus Cabriolet	1. 6L	DURATEC VCT	2008.25 MY	EATC	•	•	•	
Focus Cabriolet	1. 6L	DURATEC VCT	2008.25 MY	EPS	•	•	•	0
Focus Cabriolet	1. 6L	DURATEC VCT	2008.25 MY	FFH	•	•	•	•
Focus Cabriolet	1. 6L	DURATEC VCT	2008.25 MY	FTCM	•	•	•	0
Focus Cabriolet	1. 6L	DURATEC VCT	2008.25 MY	GEM	•	•	•	•
Focus Cabriolet	1.6L	DURATEC VCT	2008.25 MY	HCM	•	•	•	0
Focus Cabriolet	1. 6L	DURATEC VCT	2008.25 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus Cabriolet	1.6L	DURATEC VCT	2008.25 MY	P_DCU	•	•	•	•
Focus Cabriolet	1.6L	DURATEC VCT	2008. 25 MY	PAM	•	•	•	0
Focus Cabriolet	1.6L	DURATEC VCT	2008. 25 MY	RCM	•	•	•	0
Focus Cabriolet	1.6L	DURATEC VCT	2008. 25 MY	RKE	•	•	•	0
Focus Cabriolet	1.6L	DURATEC VCT	2008. 25 MY	SRM	•	•	•	0
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008. 25 MY	ABS	•	•	•	
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008. 25 MY	ACM	•	•	•	0
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008. 25 MY	CDP	•	•	•	0
Focus Cabriolet	2. 0L	DURATEC-HE / I4	2008. 25 MY	D_DCU	•	•	•	•
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008. 25 MY	EATC	•	•	•	
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008. 25 MY	EPS	•	•	•	0
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008. 25 MY	FFH	•	•	•	•
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008.25 MY	FTCM	•	•	•	0
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008. 25 MY	GEM	•	•	•	•
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008. 25 MY	HCM	•	•	•	0
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008. 25 MY	IC	•	•	•	•
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008. 25 MY	P_DCU	•	•	•	•
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008. 25 MY	PAM	•	•	•	0
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008. 25 MY	PCM	•	•	•	•
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008. 25 MY	RCM	•	•	•	0
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008. 25 MY	RKE	•	•	•	0
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008. 25 MY	SRM	•	•	•	0
Focus Cabriolet	2.0L	DURATEC-HE / I4	2008. 25 MY	TCM	•	•	•	0
Focus Cabriolet	2.0L	DURATEC-HE / I4	MY06.75	ABS	•	•	•	•
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	ACM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	CDP	•	•	•	0
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	D_DCU	•	•	•	•
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	EATC	•	•	•	
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	EPS	•	•	•	0
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	FFH	•	•	•	•
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	FTCM	•	•	•	0
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	GDM	•	•	•	0
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	GEM	•	•	•	•
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	HCM	•	•	•	0
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	IC	•	•	•	•
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	NAV	•	•	•	0
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	P_DCU	•	•	•	•
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	PAM	•	•	•	0
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	PCM	•	•	•	•
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	RKE	•	•	•	0
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	SRM	•	•	•	0
Focus Cabriolet	2. 0L	DURATEC-HE / I4	MY06.75	TCM	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	ABS	•	•	•	
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.25 MY	ACM	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	CDP	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	D_DCU	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	EATC	•	•	•	
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	EPS	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	FACM	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	FFH	•	•	•	•
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	FTCM	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	GEM	•	•	•	•
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	HCM	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	IC	•	•	•	•
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	P_DCU	•	•	•	•
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	PAM	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	PCM	•	•	•	•
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	RCM	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	RKE	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 25 MY	SRM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	ABS	•	•	•	•
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	ACM	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	CDP	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	D_DCU	•	•	•	•
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	EATC	•	•	•	
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	EPS	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	FACM	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	FFH	•	•	•	•
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	FTCM	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	GDM	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	GEM	•	•	•	•
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	HCM	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	IC	•	•	•	•
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	NAV	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	P_DCU	•	•	•	•
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	PAM	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	PCM	•	•	•	•
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	RKE	•	•	•	0
Focus Cabriolet	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY06.75	SRM	•	•	•	0
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1. 6L	BZ	2005 MY	ABS	•	•	•	
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1. 6L	BZ	2005 MY	D_DCU	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.6L	BZ	2005 MY	EATC	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.6L	BZ	2005 MY	GEM	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.6L	BZ	2005 MY	HCM	•	•	•	0
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.6L	BZ	2005 MY	IC	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.6L	BZ	2005 MY	P_DCU	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.6L	BZ	2005 MY	PCM	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.6L	BZ	2005 MY	RCM	•	•	•	0
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.6L	BZ	2005 MY	RL_DCU	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1. 6L	BZ	2005 MY	RR_DCU	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.8L	DURATEC-HE / I4	2005 MY	ABS	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.8L	DURATEC-HE / I4	2005 MY	D_DCU	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.8L	DURATEC-HE / I4	2005 MY	EATC	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.8L	DURATEC-HE / I4	2005 MY	EPS	•	•	•	0
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.8L	DURATEC-HE / I4	2005 MY	GEM	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.8L	DURATEC-HE / I4	2005 MY	HCM	•	•	•	0
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.8L	DURATEC-HE / I4	2005 MY	IC		•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.8L	DURATEC-HE / I4		P_DCU	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.8L	DURATEC-HE / I4	2005 MY	PCM	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.8L	DURATEC-HE / I4	2005 MY	RCM	•	•	•	0
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.8L	DURATEC-HE / I4	2005 MY	RL_DCU	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.8L	DURATEC-HE / I4	2005 MY	RR_DCU	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	1.8L	DURATEC-HE / I4	2005 MY	TCM	•	•	•	0
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	DURATEC-HE / I4	2005 MY	ABS	•	•	•	
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	DURATEC-HE / I4	2005 MY	D_DCU	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	DURATEC-HE / I4	2005 MY	EATC	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2.0L	DURATEC-HE / I4	2005 MY	EPS	•	•	•	0
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2.0L	DURATEC-HE / I4	2005 MY	GEM	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	DURATEC-HE / I4	2005 MY	HCM	•	•	•	0
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2.0L	DURATEC-HE / I4	2005 MY	IC	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2.0L	DURATEC-HE / I4	2005 MY	P_DCU	•	•	•	
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	DURATEC-HE / I4	2005 MY	PCM	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2.0L	DURATEC-HE / I4	2005 MY	RCM	•	•	•	0
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	DURATEC-HE / I4	2005 MY	RL_DCU	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	DURATEC-HE / I4	2005 MY	RR_DCU		•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	DURATEC-HE / I4	2005 MY	TCM		•	•	0
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2005 MY	ABS	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2005 MY	D_DCU	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2005 MY	EATC	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2005 MY	EPS	•	•	•	0
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2005 MY	FACM	•	•	•	0
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2005 MY	GEM	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2005 MY	НСМ	•	•	•	0
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2005 MY	IC	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2005 MY	P_DCU	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2005 MY	PCM	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2005 MY	RCM	•	•	•	0
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2005 MY	RL_DCU	•	•	•	•
Focus VIN = LFA / LVS / AFA / PE1 / FFJ	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2005 MY	RR_DCU	•	•	•	•
FORD GT	5. 4L	4V	2005 MY	ABS/TCS	•	•	•	•
FORD GT	5. 4L	4V	2005 MY	GEM	•	•	•	
FORD GT	5. 4L	4V	2005 MY	IC	•	•	•	•
FORD GT	5. 4L	4V	2005 MY	PATS	•	•	•	
FORD GT	5. 4L	4V	2005 MY	PCM	•	•	•	•
FORD GT	5.4L	4V	2005 MY	RCM	•		•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
FORD GT	5. 4L	4V	2006 MY	ABS/TCS	•	•	•	•
FORD GT	5. 4L	4V	2006 MY	GEM	•	•	•	•
FORD GT	5. 4L	4V	2006 MY	IC	•	•	•	•
FORD GT	5. 4L	4V	2006 MY	PATS	•	•	•	•
FORD GT	5. 4L	4V	2006 MY	PCM	•	•	•	•
FORD GT	5. 4L	4V	2006 MY	RCM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2004 MY	ABS/TCS	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2004 MY	DCSM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2004 MY	DSM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2004 MY	EATC	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2004 MY	GEM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2004 MY	IC	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2004 MY	LPSDM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2004 MY	LTM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2004 MY	NGSC	•	•	•	0
Freestar / Monterey	3. 9L	V6 OHV	2004 MY	PAM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2004 MY	PCM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2004 MY	PCSM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2004 MY	RCM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2004 MY	RPSDM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2005 MY	ABS/TCS	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2005 MY	DCSM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2005 MY	DSM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2005 MY	EATC	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2005 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Freestar / Monterey	3. 9L	V6 OHV	2005 MY	IC	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2005 MY	LPSDM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2005 MY	LTM	•	•	•	0
Freestar / Monterey	3. 9L	V6 OHV	2005 MY	NGSC	•	•	•	0
Freestar / Monterey	3.9L	V6 OHV	2005 MY	PAM	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2005 MY	PCM	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2005 MY	PCSM	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2005 MY	RCM	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2005 MY	RPSDM	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2005 MY	TPM	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2006 MY	ABS	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2006 MY	DCSM	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2006 MY	DSM	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2006 MY	EATC	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2006 MY	GEM	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2006 MY	IC	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2006 MY	LPSDM	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2006 MY	LTM	•	•	•	0
Freestar / Monterey	3.9L	V6 OHV	2006 MY	NGSC	•	•	•	0
Freestar / Monterey	3.9L	V6 OHV	2006 MY	PAM	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2006 MY	PCM	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2006 MY	PCSM	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2006 MY	RCM	•	•	•	•
Freestar / Monterey	3.9L	V6 OHV	2006 MY	RPSDM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2007 MY	ABS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Freestar / Monterey	3. 9L	V6 OHV	2007 MY	DCSM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2007 MY	DSM	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2007 MY	EATC	•	•	•	•
Freestar / Monterey	3. 9L	V6 OHV	2007 MY	GEM	•		•	•
Freestar / Monterey	3. 9L	V6 OHV	2007 MY	IC	•		•	•
Freestar / Monterey	3. 9L	V6 OHV	2007 MY	LPSDM	•		•	•
Freestar / Monterey	3. 9L	V6 OHV	2007 MY	LTM	•		•	0
Freestar / Monterey	3. 9L	V6 OHV	2007 MY	NGSC	•		•	0
Freestar / Monterey	3. 9L	V6 OHV	2007 MY	PAM	•		•	•
Freestar / Monterey	3. 9L	V6 OHV	2007 MY	PCM	•		•	•
Freestar / Monterey	3. 9L	V6 OHV	2007 MY	PCSM	•		•	•
Freestar / Monterey	3. 9L	V6 OHV	2007 MY	RCM	•		•	•
Freestar / Monterey	3. 9L	V6 OHV	2007 MY	RPSDM	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2004 MY	ABS/TCS	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2004 MY	DCSM	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2004 MY	DSM	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2004 MY	EATC	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2004 MY	GEM	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2004 MY	IC	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2004 MY	LPSDM	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2004 MY	LTM	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2004 MY	NGSC	•		•	0
Freestar / Monterey	4. 2L	V6 OHV	2004 MY	PAM	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2004 MY	PCM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2004 MY	PCSM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Freestar / Monterey	4. 2L	V6 OHV	2004 MY	RCM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2004 MY	RPSDM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2005 MY	ABS/TCS	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2005 MY	DCSM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2005 MY	DSM	•	•		•
Freestar / Monterey	4. 2L	V6 OHV	2005 MY	EATC	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2005 MY	GEM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2005 MY	IC	•	•		•
Freestar / Monterey	4. 2L	V6 OHV	2005 MY	LPSDM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2005 MY	LTM	•	•		0
Freestar / Monterey	4. 2L	V6 OHV	2005 MY	NGSC	•	•		0
Freestar / Monterey	4. 2L	V6 OHV	2005 MY	PAM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2005 MY	PCM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2005 MY	PCSM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2005 MY	RCM	•	•		•
Freestar / Monterey	4. 2L	V6 OHV	2005 MY	RPSDM	•	•		•
Freestar / Monterey	4. 2L	V6 OHV	2005 MY	TPM	•	•		•
Freestar / Monterey	4. 2L	V6 OHV	2006 MY	ABS	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2006 MY	DCSM	•	•		•
Freestar / Monterey	4. 2L	V6 OHV	2006 MY	DSM	•	•		•
Freestar / Monterey	4. 2L	V6 OHV	2006 MY	EATC	•	•		•
Freestar / Monterey	4. 2L	V6 OHV	2006 MY	GEM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2006 MY	IC	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2006 MY	LPSDM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2006 MY	LTM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Freestar / Monterey	4. 2L	V6 OHV	2006 MY	NGSC	•	•	•	0
Freestar / Monterey	4. 2L	V6 OHV	2006 MY	PAM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2006 MY	PCM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2006 MY	PCSM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2006 MY	RCM	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2006 MY	RPSDM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2007 MY	ABS	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2007 MY	DCSM	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2007 MY	DSM	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2007 MY	EATC	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2007 MY	GEM	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2007 MY	IC	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2007 MY	LPSDM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2007 MY	LTM	•		•	0
Freestar / Monterey	4. 2L	V6 OHV	2007 MY	NGSC	•		•	0
Freestar / Monterey	4. 2L	V6 OHV	2007 MY	PAM	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2007 MY	PCM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2007 MY	PCSM	•		•	•
Freestar / Monterey	4. 2L	V6 OHV	2007 MY	RCM	•	•	•	•
Freestar / Monterey	4. 2L	V6 OHV	2007 MY	RPSDM	•	•	•	•
Freestyle	3. 0L	4V	2005 MY	4X4	•	•	•	•
Freestyle	3. 0L	4V	2005 MY	ABS	•	•	•	•
Freestyle	3. 0L	4V	2005 MY	ACM	•	•	•	•
Freestyle	3. 0L	4V	2005 MY	DSM	•	•	•	•
Freestyle	3. 0L	4V	2005 MY	EATC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Freestyle	3. 0L	4V	2005 MY	GEM	•	•	•	•
Freestyle	3. OL	4V	2005 MY	IC	•	•	•	•
Freestyle	3. 0L	4V	2005 MY	PAM	•	•	•	•
Freestyle	3. 0L	4V	2005 MY	PCM	•	•	•	•
Freestyle	3. 0L	4V	2005 MY	RCM	•	•		•
Freestyle	3. OL	4V	2005 MY	TCM	•	•	•	0
Freestyle	3. OL	4V	2006 MY	4X4	•	•	•	•
Freestyle	3. 0L	4V	2006 MY	ABS	•	•		•
Freestyle	3. 0L	4V	2006 MY	ACM	•	•	•	•
Freestyle	3. 0L	4V	2006 MY	DSM	•	•		•
Freestyle	3. 0L	4V	2006 MY	EATC	•	•		•
Freestyle	3. 0L	4V	2006 MY	GEM	•	•		•
Freestyle	3. 0L	4V	2006 MY	IC	•	•	•	•
Freestyle	3. 0L	4V	2006 MY	PAM	•	•	•	•
Freestyle	3. 0L	4V	2006 MY	PCM	•	•	•	•
Freestyle	3. 0L	4V	2006 MY	RCM	•	•	•	
Freestyle	3. 0L	4V	2006 MY	TCM	•	•	•	0
Freestyle	3. 0L	4V	2007 MY	4X4	•	•		•
Freestyle	3. 0L	4V	2007 MY	ABS	•	•	•	•
Freestyle	3. 0L	4V	2007 MY	ACM	•	•	•	•
Freestyle	3. 0L	4V	2007 MY	DSM	•	•	•	•
Freestyle	3. OL	4V	2007 MY	EATC	•	•	•	•
Freestyle	3. OL	4V	2007 MY	GEM	•	•	•	•
Freestyle	3. 0L	4V	2007 MY	IC	•	•	•	•
Freestyle	3. OL	4V	2007 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Freestyle	3. 0L	4V	2007 MY	PCM	•	•	•	•
Freestyle	3. 0L	4V	2007 MY	RCM	•	•	•	•
Freestyle	3. 0L	4V	2007 MY	SDARS	•	•	•	•
Freestyle	3. 0L	4V	2007 MY	TCM	•		•	0
FRIENDEE / FREDA / BONGO FRIENDEE	2. 0L	FE	2002 MY	PCM	•	•	•	
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	2002 MY	TCM	•	•	•	•
Fusion	1.4L	DURATEC 16V	2002 MY	ABS/TCS	•	•	•	•
Fusion	1.4L	DURATEC 16V	2002 MY	GEM	•	•	•	•
Fusion	1.4L	DURATEC 16V	2002 MY	IC	•	•	•	•
Fusion	1.4L	DURATEC 16V	2002 MY	PCM	•	•	•	•
Fusion	1.4L	DURATEC 16V	2002 MY	RCM	•	•	•	
Fusion	1.4L	DURATEC 16V	2002 MY	TCM	•	•	•	0
Fusion	1.4L	DURATEC 16V	2006 MY	ABS/TCS	•	•	•	•
Fusion	1.4L	DURATEC 16V	2006 MY	ACM	•	•	•	0
Fusion	1.4L	DURATEC 16V	2006 MY	EATC	•	•	•	•
Fusion	1.4L	DURATEC 16V	2006 MY	GEM	•	•	•	
Fusion	1.4L	DURATEC 16V	2006 MY	IC	•	•	•	•
Fusion	1.4L	DURATEC 16V	2006 MY	PCM	•	•	•	•
Fusion	1. 4L	DURATEC 16V	2006 MY	RCM	•		•	0
Fusion	1. 4L	DURATEC 16V	2006 MY	SRM	•		•	0
Fusion	1. 4L	DURATEC 16V	2006 MY	TCM	•		•	0
Fusion	1.4L	DURATEC 16V	2008.75 MY	ABS	•	•	•	0
Fusion	1.4L	DURATEC 16V	2008.75 MY	ACM	•	•	•	0
Fusion	1.4L	DURATEC 16V	2008.75 MY	BCMii	•	•	•	0
Fusion	1.4L	DURATEC 16V	2008.75 MY	FCDIM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Fusion	1. 4L	DURATEC 16V	2008.75 MY	HVAC	•	•	•	0
Fusion	1. 4L	DURATEC 16V	2008.75 MY	IPC	•	•	•	
Fusion	1. 4L	DURATEC 16V	2008.75 MY	PCM	•	•	•	0
Fusion	1. 4L	DURATEC 16V	2008.75 MY	PSCM	•		•	0
Fusion	1. 4L	DURATEC 16V	2008.75 MY	RCM	•		•	0
Fusion	1.4L	DURATEC 16V	2008.75 MY	RFA	•	•	•	0
Fusion	1. 4L	DURATEC 16V	2008.75 MY	SRM	•	•	•	0
Fusion	1.4L	DURATEC 16V	2008.75 MY	TCM	•	•	•	0
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	ABS/TCS	•	•	•	•
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	GEM	•	•	•	•
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	IC	•	•	•	•
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	PCM	•	•	•	•
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	RCM	•	•	•	
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	TCM	•	•	•	0
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	ABS/TCS	•	•	•	•
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	ACM	•	•	•	0
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	EATC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	GEM	•	•	•	
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	IC	•	•	•	•
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	PCM	•	•	•	•
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	RCM	•	•	•	0
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	SRM	•	•	•	0
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	TCM	•	•	•	0
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	ABS	•	•	•	0
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	ACM	•	•	•	0
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	BCMii	•	•	•	0
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	FCDIM	•	•	•	0
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	HVAC	•	•	•	0
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	IPC	•	•	•	
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	PCM	•	•	•	0
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	PSCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	RCM	•	•	•	0
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	RFA	•	•	•	0
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	SRM	•	•	•	0
Fusion	1. 6L	DURATEC 16V	2002 MY	ABS/TCS	•	•	•	•
Fusion	1. 6L	DURATEC 16V	2002 MY	GEM	•	•	•	•
Fusion	1. 6L	DURATEC 16V	2002 MY	IC	•	•	•	•
Fusion	1. 6L	DURATEC 16V	2002 MY	PCM	•	•	•	•
Fusion	1. 6L	DURATEC 16V	2002 MY	RCM	•	•	•	
Fusion	1. 6L	DURATEC 16V	2002 MY	TCM	•		•	0
Fusion	1.6L	DURATEC 16V	2006 MY	ABS/TCS	•	•	•	•
Fusion	1. 6L	DURATEC 16V	2006 MY	ACM	•	•	•	0
Fusion	1. 6L	DURATEC 16V	2006 MY	EATC	•		•	•
Fusion	1. 6L	DURATEC 16V	2006 MY	GEM	•	•	•	
Fusion	1. 6L	DURATEC 16V	2006 MY	IC	•	•	•	
Fusion	1.6L	DURATEC 16V	2006 MY	PCM	•	•	•	•
Fusion	1.6L	DURATEC 16V	2006 MY	RCM	•		•	0
Fusion	1.6L	DURATEC 16V	2006 MY	SRM	•	•	•	0
Fusion	1.6L	DURATEC 16V	2006 MY	TCM	•	•	•	0
Fusion	1. 6L	DURATEC VCT	2008.75 MY	ABS	•	•	•	0
Fusion	1. 6L	DURATEC VCT	2008.75 MY	ACM	•	•	•	0
Fusion	1. 6L	DURATEC VCT	2008.75 MY	BCMii	•	•	•	0
Fusion	1. 6L	DURATEC VCT	2008.75 MY	FCDIM	•	•	•	0
Fusion	1.6L	DURATEC VCT	2008.75 MY	HVAC	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fusion	1. 6L	DURATEC VCT	2008.75 MY	IPC	•	•	•	
Fusion	1. 6L	DURATEC VCT	2008.75 MY	PCM	•	•	•	0
Fusion	1. 6L	DURATEC VCT	2008.75 MY	PSCM	•	•	•	0
Fusion	1.6L	DURATEC VCT	2008.75 MY	RCM	•		•	0
Fusion	1.6L	DURATEC VCT	2008.75 MY	RFA	•	•	•	0
Fusion	1. 6L	DURATEC VCT	2008.75 MY	SRM	•	•	•	0
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	ABS/TCS	•	•	•	•
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	EPS	•	•	•	0
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	GEM	•	•	•	•
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	IC	•	•	•	•
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	PCM	•	•	•	•
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 MY	RCM	•	•	•	
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	ABS/TCS	•	•	•	•
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	ACM	•	•	•	0
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	EATC	•	•	•	•
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	EPS	•	•	•	0
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	GEM	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	IC	•	•	•	•
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	PCM	•	•	•	•
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	RCM	•	•	•	0
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2006 MY	SRM	•	•	•	0
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	ABS	•	•	•	0
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	ACM	•	•	•	0
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	BCMii	•	•	•	0
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	FCDIM	•	•	•	0
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	HVAC	•	•	•	0
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	IPC	•	•	•	
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	PCM	•	•	•	0
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	PSCM	•	•	•	0
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	RCM	•	•	•	0
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	RFA	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Fusion	1. 6L	Duratorq Turbo Diesel Common Rail Injection	2008.75 MY	SRM	•	•	•	0
Fusion	1_25L	DURATEC 16V	2002 MY	ABS/TCS	•	•	•	•
Fusion	1_25L	DURATEC 16V	2002 MY	GEM	•	•	•	•
Fusion	1_25L	DURATEC 16V	2002 MY	IC	•	•	•	•
Fusion	1_25L	DURATEC 16V	2002 MY	PCM	•	•	•	•
Fusion	1_25L	DURATEC 16V	2002 MY	RCM	•	•	•	
Fusion	1_25L	DURATEC 16V	2006 MY	ABS/TCS	•	•	•	•
Fusion	1_25L	DURATEC 16V	2006 MY	ACM	•	•	•	0
Fusion	1_25L	DURATEC 16V	2006 MY	EATC	•	•	•	•
Fusion	1_25L	DURATEC 16V	2006 MY	GEM	•	•	•	
Fusion	1_25L	DURATEC 16V	2006 MY	IC	•	•	•	
Fusion	1_25L	DURATEC 16V	2006 MY	PCM	•	•	•	•
Fusion	1_25L	DURATEC 16V	2006 MY	RCM	•	•	•	0
Fusion	1_25L	DURATEC 16V	2006 MY	SRM	•	•	•	0
Fusion	1_25L	DURATEC 16V	2008.75 MY	ABS	•	•	•	0
Fusion	1_25L	DURATEC 16V	2008.75 MY	ACM	•	•	•	0
Fusion	1_25L	DURATEC 16V	2008.75 MY	BCMii	•	•	•	0
Fusion	1_25L	DURATEC 16V	2008.75 MY	FCDIM	•	•	•	0
Fusion	1_25L	DURATEC 16V	2008.75 MY	HVAC	•	•	•	0
Fusion	1_25L	DURATEC 16V	2008.75 MY	IPC	•	•	•	
Fusion	1_25L	DURATEC 16V	2008.75 MY	PCM	•	•	•	0
Fusion	1_25L	DURATEC 16V	2008.75 MY	PSCM	•	•	•	0
Fusion	1_25L	DURATEC 16V	2008.75 MY	RCM	•	•	•	0
Fusion	1_25L	DURATEC 16V	2008.75 MY	RFA	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Fusion	1_25L	DURATEC 16V	2008.75 MY	SRM	•	•	•	0
Fusion	2. 3L	DURATEC-HE / I4	2006 MY	ABS	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2006 MY	ACM	•	•	•	0
Fusion	2. 3L	DURATEC-HE / I4	2006 MY	EATC	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2006 MY	GEM	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2006 MY	IC	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2006 MY	OCSM	•	•	•	0
Fusion	2. 3L	DURATEC-HE / I4	2006 MY	PCM	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2006 MY	RCM	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2006 MY	TCM	•	•	•	
Fusion	2. 3L	DURATEC-HE / I4	2007 MY	4X4	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2007 MY	ABS	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2007 MY	ACM	•	•	•	0
Fusion	2. 3L	DURATEC-HE / I4	2007 MY	EATC	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2007 MY	GEM	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2007 MY	IC	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2007 MY	OCSM	•	•	•	0
Fusion	2. 3L	DURATEC-HE / I4	2007 MY	PCM	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2007 MY	RCM	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2007 MY	SDARS	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2007 MY	TCM	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2008 MY	4X4		•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2008 MY	ABS	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2008 MY	ACM	•	•	•	0
Fusion	2. 3L	DURATEC-HE / I4	2008 MY	APIM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Fusion	2. 3L	DURATEC-HE / I4	2008 MY	GEM / SJB	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2008 MY	HVAC	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2008 MY	IC	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2008 MY	OCSM	•	•	•	0
Fusion	2. 3L	DURATEC-HE / I4	2008 MY	PAM	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2008 MY	PCM	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2008 MY	RCM	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2008 MY	SDARS	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2008 MY	TCM	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2009 MY	4X4	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2009 MY	ABS	•	•	•	
Fusion	2. 3L	DURATEC-HE / I4	2009 MY	ACM	•	•	•	0
Fusion	2. 3L	DURATEC-HE / I4	2009 MY	APIM	•	•	•	0
Fusion	2. 3L	DURATEC-HE / I4	2009 MY	GEM / SJB	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2009 MY	HVAC	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2009 MY	IC	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2009 MY	OCSM	•	•	•	0
Fusion	2. 3L	DURATEC-HE / I4	2009 MY	PAM	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2009 MY	PCM	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2009 MY	RCM	•	•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2009 MY	SDARS		•	•	•
Fusion	2. 3L	DURATEC-HE / I4	2009 MY	TCM		•	•	•
Fusion	2.5L	DURATEC-HE / I4	2010 MY	4X4	•	•	•	•
Fusion	2.5L	DURATEC-HE / I4	2010 MY	ABS	•	•	•	•
Fusion	2.5L	DURATEC-HE / I4	2010 MY	ACM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read	Erase		Active
Venitere	Capacity	Linginerype	rear	Module	Codes	Codes	Data	Test
Fusion	2.5L	DURATEC-HE / I4	2010 MY	APIM	•	•	•	0
Fusion	2.5L	DURATEC-HE / I4	2010 MY	DSP	•	•	•	0
Fusion	2.5L	DURATEC-HE / I4	2010 MY	FCIM	•	•	•	•
Fusion	2.5L	DURATEC-HE / I4	2010 MY	FCIM	•	•	•	0
Fusion	2.5L	DURATEC-HE / I4	2010 MY	FDIM	•	•	•	•
Fusion	2.5L	DURATEC-HE / I4	2010 MY	GEM / SJB	•	•	•	•
Fusion	2.5L	DURATEC-HE / I4	2010 MY	GPSM	•	•	•	0
Fusion	2. 5L	DURATEC-HE / I4	2010 MY	HVAC		•	•	•
Fusion	2. 5L	DURATEC-HE / I4	2010 MY	IPC		•	•	
Fusion	2. 5L	DURATEC-HE / I4	2010 MY	OCSM		•	•	0
Fusion	2. 5L	DURATEC-HE / I4	2010 MY	PAM		•	•	•
Fusion	2. 5L	DURATEC-HE / I4	2010 MY	PCM	•	•	•	•
Fusion	2. 5L	DURATEC-HE / I4	2010 MY	PSCM	•	•	•	0
Fusion	2.5L	DURATEC-HE / I4	2010 MY	RCM	•	•	•	0
Fusion	2. 5L	DURATEC-HE / I4	2010 MY	SOD-L	•	•	•	•
Fusion	2. 5L	DURATEC-HE / I4	2010 MY	SOD-R		•	•	•
Fusion	2. 5L	HEV / ATKINSON 4V	2010 MY	4X4		•	•	•
Fusion	2.5L	HEV / ATKINSON 4V	2010 MY	ABS	•	•	•	•
Fusion	2.5L	HEV / ATKINSON 4V	2010 MY	ACCM#2	•	•	•	0
Fusion	2.5L	HEV / ATKINSON 4V	2010 MY	ACM	•	•	•	0
Fusion	2. 5L	HEV / ATKINSON 4V	2010 MY	APIM		•	•	0
Fusion	2. 5L	HEV / ATKINSON 4V	2010 MY	BECM	•	•	•	•
Fusion	2. 5L	HEV / ATKINSON 4V	2010 MY	DCDC		•	•	0
Fusion	2.5L	HEV / ATKINSON 4V	2010 MY	DSP	•	•	•	0
Fusion	2.5L	HEV / ATKINSON 4V	2010 MY	FCIM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Fusion	2. 5L	HEV / ATKINSON 4V	2010 MY	FCIM	•	•	•	0
Fusion	2. 5L	HEV / ATKINSON 4V	2010 MY	FDIM	•	•	•	•
Fusion	2. 5L	HEV / ATKINSON 4V	2010 MY	GEM / SJB	•	•	•	•
Fusion	2. 5L	HEV / ATKINSON 4V	2010 MY	GPSM	•	•	•	0
Fusion	2. 5L	HEV / ATKINSON 4V	2010 MY	HVAC	•	•	•	•
Fusion	2. 5L	HEV / ATKINSON 4V	2010 MY	IPC	•	•	•	•
Fusion	2. 5L	HEV / ATKINSON 4V	2010 MY	OCSM	•	•	•	0
Fusion	2.5L	HEV / ATKINSON 4V	2010 MY	PAM	•	•	•	•
Fusion	2.5L	HEV / ATKINSON 4V	2010 MY	PCM	•	•	•	
Fusion	2.5L	HEV / ATKINSON 4V	2010 MY	PSCM	•	•	•	0
Fusion	2.5L	HEV / ATKINSON 4V	2010 MY	RCM	•	•	•	0
Fusion	2.5L	HEV / ATKINSON 4V	2010 MY	SOD-L	•	•	•	•
Fusion	2. 5L	HEV / ATKINSON 4V	2010 MY	SOD-R	•	•	•	•
Fusion	2.5L	HEV / ATKINSON 4V	2010 MY	TCM	•	•	•	0
Fusion	3. OL	4V	2006 MY	ABS	•	•	•	•
Fusion	3. OL	4V	2006 MY	ACM	•	•	•	0
Fusion	3. OL	4V	2006 MY	EATC	•	•	•	•
Fusion	3. OL	4V	2006 MY	GEM	•	•	•	•
Fusion	3. OL	4V	2006 MY	IC	•	•	•	•
Fusion	3. OL	4V	2006 MY	OCSM	•	•	•	0
Fusion	3. OL	4V	2006 MY	PCM	•	•	•	•
Fusion	3. OL	4V	2006 MY	RCM	•	•	•	•
Fusion	3. OL	4V	2006 MY	TCM	•	•	•	•
Fusion	3. OL	4V	2007 MY	4X4	•	•	•	•
Fusion	3. OL	4V	2007 MY	ABS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fusion	3. OL	4V	2007 MY	ACM	•	•	•	0
Fusion	3. 0L	4V	2007 MY	EATC	•	•	•	•
Fusion	3. 0L	4V	2007 MY	GEM	•	•	•	•
Fusion	3. 0L	4V	2007 MY	IC	•	•	•	•
Fusion	3. 0L	4V	2007 MY	OCSM	•	•	•	0
Fusion	3. 0L	4V	2007 MY	PCM	•	•	•	•
Fusion	3. 0L	4V	2007 MY	RCM	•	•	•	•
Fusion	3. 0L	4V	2007 MY	SDARS	•	•	•	•
Fusion	3. 0L	4V	2007 MY	TCM	•	•	•	•
Fusion	3. 0L	4V	2008 MY	4X4	•	•	•	•
Fusion	3. 0L	4V	2008 MY	ABS	•	•	•	•
Fusion	3. 0L	4V	2008 MY	ACM	•	•	•	0
Fusion	3. 0L	4V	2008 MY	APIM	•	•	•	0
Fusion	3. 0L	4V	2008 MY	GEM / SJB	•	•	•	•
Fusion	3. 0L	4V	2008 MY	HVAC	•	•	•	•
Fusion	3. 0L	4V	2008 MY	IC	•	•	•	•
Fusion	3. 0L	4V	2008 MY	OCSM	•	•	•	0
Fusion	3. 0L	4V	2008 MY	PAM	•	•	•	•
Fusion	3. 0L	4V	2008 MY	PCM	•	•	•	•
Fusion	3. 0L	4V	2008 MY	RCM	•	•	•	•
Fusion	3. 0L	4V	2008 MY	SDARS	•	•	•	•
Fusion	3. 0L	4V	2008 MY	TCM	•	•	•	•
Fusion	3. 0L	4V	2009 MY	4X4	•	•	•	•
Fusion	3. 0L	4V	2009 MY	ABS	•	•	•	•
Fusion	3. 0L	4V	2009 MY	ACM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Fusion	3. OL	4V	2009 MY	APIM	•	•	•	0
Fusion	3. 0L	4V	2009 MY	GEM / SJB	•	•	•	•
Fusion	3. 0L	4V	2009 MY	HVAC	•	•	•	•
Fusion	3. 0L	4V	2009 MY	IC	•	•	•	•
Fusion	3. 0L	4V	2009 MY	OCSM	•	•	•	0
Fusion	3. 0L	4V	2009 MY	PAM	•	•	•	•
Fusion	3. 0L	4V	2009 MY	PCM	•	•	•	•
Fusion	3. 0L	4V	2009 MY	RCM	•	•	•	•
Fusion	3. 0L	4V	2009 MY	SDARS	•	•	•	•
Fusion	3. 0L	4V	2009 MY	TCM	•	•	•	•
Fusion	3. 0L	4V	2010 MY	4X4	•	•	•	•
Fusion	3. 0L	4V	2010 MY	ABS	•	•	•	•
Fusion	3. 0L	4V	2010 MY	ACM	•	•	•	0
Fusion	3. 0L	4V	2010 MY	APIM	•	•	•	0
Fusion	3. 0L	4V	2010 MY	DSP	•	•	•	0
Fusion	3. 0L	4V	2010 MY	FCIM	•	•	•	•
Fusion	3. 0L	4V	2010 MY	FCIM	•	•	•	0
Fusion	3. 0L	4V	2010 MY	FDIM	•	•	•	•
Fusion	3. 0L	4V	2010 MY	GEM / SJB	•	•	•	•
Fusion	3. 0L	4V	2010 MY	GPSM	•	•	•	0
Fusion	3. 0L	4V	2010 MY	HVAC	•	•	•	•
Fusion	3. 0L	4V	2010 MY	IPC	•	•	•	
Fusion	3. 0L	4V	2010 MY	OCSM	•	•	•	0
Fusion	3. 0L	4V	2010 MY	PAM	•	•	•	•
Fusion	3. 0L	4V	2010 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Fusion	3. 0L	4V	2010 MY	PSCM	•	•	•	0
Fusion	3. 0L	4V	2010 MY	RCM	•	•	•	0
Fusion	3. 0L	4V	2010 MY	SOD-L	•	•	•	•
Fusion	3. 0L	4V	2010 MY	SOD-R	•	•	•	•
Fusion	3.5L	4V	2010 MY	4X4	•	•	•	•
Fusion	3. 5L	4V	2010 MY	ABS	•	•	•	•
Fusion	3.5L	4V	2010 MY	ACM	•	•	•	0
Fusion	3. 5L	4V	2010 MY	APIM	•	•	•	0
Fusion	3. 5L	4V	2010 MY	DSP	•	•	•	0
Fusion	3. 5L	4V	2010 MY	FCIM	•	•	•	•
Fusion	3. 5L	4V	2010 MY	FCIM	•	•	•	0
Fusion	3.5L	4V	2010 MY	FDIM	•	•	•	•
Fusion	3. 5L	4V	2010 MY	GEM / SJB	•	•	•	•
Fusion	3. 5L	4V	2010 MY	GPSM	•	•	•	0
Fusion	3. 5L	4V	2010 MY	HVAC	•	•	•	•
Fusion	3. 5L	4V	2010 MY	IPC	•	•	•	
Fusion	3. 5L	4V	2010 MY	OCSM	•	•	•	0
Fusion	3. 5L	4V	2010 MY	PAM	•	•	•	•
Fusion	3. 5L	4V	2010 MY	PCM	•	•	•	•
Fusion	3. 5L	4V	2010 MY	RCM	•	•	•	0
Fusion	3. 5L	4V	2010 MY	SOD-L	•	•	•	•
Fusion	3.5L	4V	2010 MY	SOD-R	•	•	•	•
Fusion	3.5L	4V	2010 MY	TCM	•	•	•	
Galaxy	1.9L	EDC 1.9	2001 MY	ABS	•	•	•	0
Galaxy	1.9L	EDC 1.9	2001 MY	СЈВ	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Galaxy	1.9L	EDC 1.9	2001 MY	IC	•	•	•	0
Galaxy	1.9L	EDC 1.9	2001 MY	LHID	•	•	•	0
Galaxy	1.9L	EDC 1.9	2001 MY	MFSW	•	•	•	0
Galaxy	1.9L	EDC 1.9	2001 MY	PAM	•	•	•	0
Galaxy	1.9L	EDC 1.9	2001 MY	PATS	•	•	•	0
Galaxy	1.9L	EDC 1.9	2001 MY	PCM	•	•	•	0
Galaxy	1.9L	EDC 1.9	2001 MY	RADIO	•	•	•	0
Galaxy	1.9L	EDC 1.9	2001 MY	RCC	•	•	•	0
Galaxy	1.9L	EDC 1.9	2001 MY	RHID	•	•	•	0
Galaxy	1.9L	EDC 1.9	2001 MY	RNS	•	•	•	0
Galaxy	1.9L	EDC 1.9	Other	ABS	•	•	•	0
Galaxy	1.9L	EDC 1.9	Other	СЈВ	•	•	•	0
Galaxy	1.9L	EDC 1.9	Other	PCM	•	•	•	•
Galaxy	1.9L	EDC 1.9	Other	TCM	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1995.5 MY	ABS	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1995.5 MY	СЈВ	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1995.5 MY	PATS	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1995.5 MY	PCM	•	•	•	•
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1995.5 MY	TCM	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1997 MY	ABS	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1997 MY	СЈВ	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1997 MY	PATS	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1997 MY	PCM	•	•	•	•
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1997 MY	TCM	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1998 MY	ABS	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Galaxy	2. OL	2.0 DOHC SFI (8V)	1998 MY	СЈВ	•	•	•	0
Galaxy	2.0L	2.0 DOHC SFI (8V)	1998 MY	PATS	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1998 MY	PCM	•	•	•	•
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1998 MY	TCM	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1998.75 MY	ABS	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1998.75 MY	СЈВ	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1998.75 MY	PATS	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1998.75 MY	PCM	•	•	•	•
Galaxy	2. 0L	2.0 DOHC SFI (8V)	1998.75 MY	TCM	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	2000.75 MY	ABS	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	2000.75 MY	СЈВ	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	2000.75 MY	IC	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	2000.75 MY	LHID	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	2000.75 MY	MFSW	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	2000.75 MY	PAM	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	2000.75 MY	PATS	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	2000.75 MY	PCM	•	•	•	•
Galaxy	2. 0L	2.0 DOHC SFI (8V)	2000.75 MY	RADIO	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	2000.75 MY	RCC	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	2000.75 MY	RHID	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	2000.75 MY	RNS	•	•	•	0
Galaxy	2. 0L	2.0 DOHC SFI (8V)	2000.75 MY	TCM			•	0
Galaxy	2. 3L	DOHC SFI (16V)	1997 MY	ABS	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	1997 MY	СЈВ	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	1997 MY	PATS	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Galaxy	2. 3L	DOHC SFI (16V)	1997 MY	PCM	•	•	•	•
Galaxy	2. 3L	DOHC SFI (16V)	1997 MY	TCM	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	1998 MY	ABS	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	1998 MY	СЈВ	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	1998 MY	PATS	•	•	•	0
Galaxy	2.3L	DOHC SFI (16V)	1998 MY	PCM	•	•	•	•
Galaxy	2.3L	DOHC SFI (16V)	1998 MY	TCM	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	1998.75 MY	ABS	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	1998.75 MY	СЈВ	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	1998.75 MY	PATS	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	1998.75 MY	PCM	•	•	•	•
Galaxy	2. 3L	DOHC SFI (16V)	1998.75 MY	TCM	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	2000.75 MY	ABS	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	2000.75 MY	СЈВ	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	2000.75 MY	IC	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	2000.75 MY	LHID	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	2000.75 MY	MFSW	•	•	•	0
Galaxy	2.3L	DOHC SFI (16V)	2000.75 MY	PAM	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	2000.75 MY	PATS	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	2000.75 MY	PCM	•	•	•	•
Galaxy	2. 3L	DOHC SFI (16V)	2000.75 MY	RADIO	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	2000.75 MY	RCC	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	2000.75 MY	RHID	•	•	•	0
Galaxy	2.3L	DOHC SFI (16V)	2000.75 MY	RNS	•	•	•	0
Galaxy	2. 3L	DOHC SFI (16V)	2000.75 MY	TCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Galaxy	2.8L	2.8 CD-V6	2001 MY	ABS	•	•	•	0
Galaxy	2. 8L	2.8 CD-V6	2001 MY	СЈВ	•	•	•	0
Galaxy	2. 8L	2.8 CD-V6	2001 MY	IC	•	•	•	0
Galaxy	2. 8L	2.8 CD-V6	2001 MY	LHID	•	•	•	0
Galaxy	2.8L	2.8 CD-V6	2001 MY	MFSW	•	•	•	0
Galaxy	2. 8L	2.8 CD-V6	2001 MY	PAM	•	•	•	0
Galaxy	2.8L	2.8 CD-V6	2001 MY	PATS	•	•	•	0
Galaxy	2. 8L	2.8 CD-V6	2001 MY	PCM	•	•	•	0
Galaxy	2.8L	2.8 CD-V6	2001 MY	RADIO	•	•	•	0
Galaxy	2.8L	2.8 CD-V6	2001 MY	RCC	•	•	•	0
Galaxy	2.8L	2.8 CD-V6	2001 MY	RHID	•	•	•	0
Galaxy	2. 8L	2.8 CD-V6	2001 MY	RNS	•	•	•	0
Galaxy	2. 8L	2.8 CD-V6	Other	ABS	•	•	•	0
Galaxy	2. 8L	2.8 CD-V6	0ther	СЈВ	•	•	•	0
Galaxy	2. 8L	2.8 CD-V6	0ther	PCM	•	•	•	•
Galaxy	2. 8L	2.8 CD-V6	Other	TCM	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	ABS	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	ACM	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	AHCM	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	BCMii	•	•	•	•
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	CCMii	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	DDM	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	НСМ	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	HVAC	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	IPC	•	•	•	•
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	NAV	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PAM	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PBM	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PCM	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PDM	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PSCM	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	RCM	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	RFA	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	RGTM	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	RHVAC	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	SASM	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	SRM	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	TRM	•	•	•	0
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	VDM	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	ABS	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	ACM	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	AHCM	•		•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	BCMii	•		•	
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	CCMii	•	•	•	
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	DDM	•		•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	HCM	•		•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	HVAC	•		•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	IPC	•		•	•
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	NAV	•		•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	PAM	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	PBM	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	PCM	•	•	•	•
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	PDM	•			0
GALAXY\S-Max	2. OL	DURATEC-HE / I4	2006. 5	PSCM	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	RCM	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	RFA	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	RGTM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	RHVAC	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	SASM	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	SRM	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	TRM	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2006. 5	VDM	•			0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	ABS	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	ACM	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	AHCM	•			0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	BCMii	•		•	•
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	CMR	•			0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	DDM	•			0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	DSM	•	•	•	
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	HCM	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	HVAC	•		•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	IPC	•	•	•	•
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	PAM	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	PBM	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	PCM	•	•	•	•
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	PDM	•			0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	RCM	•			0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	RFA	•			0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	RHVAC	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	SASM	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	SOD-L	•	•	•	0
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	SOD-R	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
GALAXY\S-Max	2. 0L	DURATEC-HE / I4	2010.5 MY	SRM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	ABS	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	ACM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	AHCM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	BCMii	•	•	•	•
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	CCMii	•	•	•	•
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	DDM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	НСМ	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	HVAC	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	IPC	•	•	•	•
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	NAV	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PAM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PBM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PDM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PSCM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	RCM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	RFA	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	RGTM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	RHVAC	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	SASM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	SRM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	TCM	•	•	•	
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	TRM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	VDM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	ABS	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	ACM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	АНСМ	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	BCMii	•	•	•	•
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	CMR	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	DDM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	DSM	•	•	•	
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	HCM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	HVAC	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	IPC	•	•	•	•
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	PAM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	PBM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	PCM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	PDM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	PSCM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	RCM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	RFA	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	RHVAC	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	SASM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	SOD-L	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	SOD-R	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	SRM	•	•	•	0
GALAXY\S-Max	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010.5 MY	TCM	•	•	•	0
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	ABS	•	•	•	0
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	ACM	•	•	•	0
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	AHCM	•	•	•	0
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	BCMii	•	•	•	•
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	CMR	•	•	•	0
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	DDM	•	•	•	0
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	DSM	•	•	•	
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	HCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	HVAC	•	•	•	0
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	IPC	•	•	•	•
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	PAM	•	•	•	0
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	PBM	•	•	•	0
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	PCM	•	•	•	0
GALAXY\S-Max	2. OL	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	PDM	•	•	•	0
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	RCM	•	•	•	0
GALAXY\S-Max	2. OL	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	RFA	•	•	•	0
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	RHVAC	•	•	•	0
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	SASM	•	•	•	0
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	SOD-L	•	•	•	0
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	SOD-R	•	•	•	0
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	SRM	•	•	•	0
GALAXY\S-Max	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	2010.5 MY	TCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	ABS	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	ACM	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	AHCM	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	BCMii	•	•	•	•
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	CCMii	•	•	•	•
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	DDM	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	HCM	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	HVAC	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	IPC	•	•	•	•
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	NAV	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PAM	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PBM	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PCM	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PDM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PSCM	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	RCM	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	RFA	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	RGTM	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	RHVAC	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	SASM	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	SRM	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	TRM	•	•	•	0
GALAXY\S-Max	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	VDM	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	ABS	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	ACM	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	AHCM	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	BCMii	•	•	•	•
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006. 5	CCMii	•	•	•	•
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	DDM	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	HCM	•	•	•	0
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006. 5	HVAC	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006.5	IPC	•		•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	NAV	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	PAM	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	PBM	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	PCM	•	•	•	•
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	PDM	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	PSCM	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	RCM	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	RFA	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	RGTM	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	RHVAC	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	SASM	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	SRM	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	TCM	•	•	•	
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	TRM	•	•	•	0
GALAXY\S-Max	2. 3L	DURATEC-HE / I4	2006. 5	VDM	•	•	•	0
GALAXY\S-Max	2.5L	15	2006. 5	ABS	•	•	•	0
GALAXY\S-Max	2.5L	15	2006. 5	ACM	•	•	•	0
GALAXY\S-Max	2.5L	15	2006. 5	AHCM	•	•	•	0
GALAXY\S-Max	2.5L	15	2006. 5	BCMii	•	•	•	•
GALAXY\S-Max	2.5L	15	2006. 5	CCMii	•	•	•	•
GALAXY\S-Max	2.5L	15	2006. 5	DDM	•	•	•	0
GALAXY\S-Max	2. 5L	15	2006. 5	HCM	•		•	0
GALAXY\S-Max	2. 5L	15	2006. 5	HVAC	•	•	•	0
GALAXY\S-Max	2.5L	15	2006. 5	IPC	•	•	•	•
GALAXY\S-Max	2. 5L	15	2006. 5	NAV	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
GALAXY\S-Max	2. 5L	I5	2006. 5	PAM	•	•	•	0
GALAXY\S-Max	2.5L	15	2006. 5	PBM	•	•	•	0
GALAXY\S-Max	2.5L	I5	2006. 5	PCM	•	•	•	0
GALAXY\S-Max	2.5L	15	2006. 5	PDM	•	•	•	0
GALAXY\S-Max	2.5L	15	2006. 5	PSCM	•	•	•	0
GALAXY\S-Max	2.5L	15	2006. 5	RCM	•	•	•	0
GALAXY\S-Max	2.5L	15	2006. 5	RFA	•	•	•	0
GALAXY\S-Max	2.5L	15	2006. 5	RGTM	•	•	•	0
GALAXY\S-Max	2.5L	15	2006. 5	RHVAC	•	•	•	0
GALAXY\S-Max	2.5L	15	2006. 5	SASM	•	•	•	0
GALAXY\S-Max	2.5L	15	2006. 5	SRM	•	•	•	0
GALAXY\S-Max	2.5L	15	2006. 5	TRM	•	•	•	0
GALAXY\S-Max	2.5L	15	2006. 5	VDM	•	•	•	0
Granada / Scorpio	2. 0L	2.0 DOHC SFI (8V)	1995.25 MY	ABS/TCS	•	•	•	•
Granada / Scorpio	2. 0L	2.0 DOHC SFI (8V)	1995.25 MY	GEM	•	•	•	0
Granada / Scorpio	2. 0L	2.0 DOHC SFI (8V)	1995.25 MY	PATS	•	•	•	0
Granada / Scorpio	2. 0L	2.0 DOHC SFI (8V)	1995.25 MY	PCM	•	•	•	•
Granada / Scorpio	2. 0L	2.0 DOHC SFI (8V)	1995.25 MY	RCM	•	•	•	0
Granada / Scorpio	2. 0L	2.0 DOHC SFI (8V)	1997 MY	ABS/TCS	•	•	•	•
Granada / Scorpio	2. 0L	2.0 DOHC SFI (8V)	1997 MY	GEM	•	•	•	0
Granada / Scorpio	2. 0L	2.0 DOHC SFI (8V)	1997 MY	PATS	•	•	•	0
Granada / Scorpio	2. 0L	2.0 DOHC SFI (8V)	1997 MY	PCM	•	•	•	•
Granada / Scorpio	2. 0L	2.0 DOHC SFI (8V)	1997 MY	RCM	•	•	•	0
Granada / Scorpio	2. 0L	DOHC SFI (16V)	1995.25 MY	ABS/TCS	•	•	•	•
Granada / Scorpio	2. 0L	DOHC SFI (16V)	1995.25 MY	GEM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Granada / Scorpio	2. 0L	DOHC SFI (16V)	1995. 25 MY	PATS	Codes	Codes	Data	0
Granada / Scorpio	2. 0L	DOHC SFI (16V)	1995. 25 MY	PATS	•	•	0	•
Granada / Scorpio	2. 0L	DOHC SFI (16V)	1995. 25 MY	PCM	•	•	•	•
Granada / Scorpio	2. 0L	DOHC SFI (16V)	1995. 25 MY	RCM	•	•	•	0
Granada / Scorpio	2. 0L	Other	1995 MY	ABS/TCS	•	•	•	•
Granada / Scorpio	2. 0L	Other	1995 MY	GEM	•	•	•	0
Granada / Scorpio	2. 0L	Other	1995 MY	PATS	•	•	•	0
Granada / Scorpio	2. 0L	Other	1995 MY	PATS		•	0	
Granada / Scorpio	2. 0L	Other	1995 MY	PCM		•	•	
Granada / Scorpio	2. 0L	Other	1995 MY	RCM		•	•	0
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1996.75 MY	ABS/TCS		•	•	•
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1996. 75 MY	GEM		•	•	0
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1996.75 MY	PATS	•	•	•	0
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1996. 75 MY	PATS	•	•	0	
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1996. 75 MY	PCM		•	•	
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1996. 75 MY	PCM		•	•	0
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1996. 75 MY	RCM		•	•	0
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1998 MY	ABS/TCS	•	•	•	
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1998 MY	GEM	•	•	•	0
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1998 MY	PATS		•	•	0
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1998 MY	PATS		•	0	
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1998 MY	PCM		•	•	
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1998 MY	PCM	•	•	•	0
Granada / Scorpio	2.3L	DOHC SFI (16V)	1998 MY	RCM	•	•	•	0
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1998. 25 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1998.25 MY	GEM	•	•	•	0
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1998.25 MY	PATS	•	•	0	•
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1998.25 MY	PCM	•	•	•	•
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1998.25 MY	PCM	•	•	•	0
Granada / Scorpio	2. 3L	DOHC SFI (16V)	1998.25 MY	RCM	•	•	•	0
Granada / Scorpio	2. 5L	Other	Other	ABS/TCS	•	•	•	•
Granada / Scorpio	2. 5L	Other	Other	GEM	•	•	•	0
Granada / Scorpio	2. 5L	Other	Other	PATS	•	•	•	0
Granada / Scorpio	2. 5L	Other	Other	PATS	•	•	0	•
Granada / Scorpio	2. 5L	Other	Other	PCM	•	•	•	•
Granada / Scorpio	2. 5L	Other	Other	RCM	•	•	•	0
Granada / Scorpio	2.9L	2. 9 V6 24V	1991 5 MY	ABS/TCS	•	•	•	•
Granada / Scorpio	2.9L	2. 9 V6 24V	1991 5 MY	GEM	•	•	•	0
Granada / Scorpio	2.9L	2.9 V6 24V	1991 5 MY	PATS	•	•	0	•
Granada / Scorpio	2.9L	2.9 V6 24V	1991 5 MY	PCM	•	•	•	•
Granada / Scorpio	2.9L	2.9 V6 24V	1991 5 MY	PCM	•	•	•	0
Granada / Scorpio	2.9L	2.9 V6 24V	1991 5 MY	RCM	•	•	•	0
Granada / Scorpio	2.9L	2. 9 V6 24V	1993.75 MY	ABS/TCS	•	•	•	•
Granada / Scorpio	2.9L	2.9 V6 24V	1993.75 MY	GEM	•	•	•	0
Granada / Scorpio	2.9L	2.9 V6 24V	1993.75 MY	PATS	•	•	0	•
Granada / Scorpio	2.9L	2. 9 V6 24V	1993.75 MY	PCM	•	•	•	•
Granada / Scorpio	2.9L	2. 9 V6 24V	1993.75 MY	PCM	•		•	0
Granada / Scorpio	2. 9L	2.9 V6 24V	1993.75 MY	RCM	•	•	•	0
Granada / Scorpio	2. 9L	2.9 V6 24V	1995 MY	ABS/TCS	•	•	•	•
Granada / Scorpio	2. 9L	2.9 V6 24V	1995 MY	GEM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Granada / Scorpio	2. 9L	2.9 V6 24V	1995 MY	PATS	•	•	0	•
Granada / Scorpio	2.9L	2. 9 V6 24V	1995 MY	PCM	•	•	•	•
Granada / Scorpio	2.9L	2. 9 V6 24V	1995 MY	PCM	•	•	•	0
Granada / Scorpio	2.9L	2. 9 V6 24V	1995 MY	RCM	•	•	•	0
Granada / Scorpio	2.9L	2.9 V6 24V	1995.25 MY	ABS/TCS	•	•	•	•
Granada / Scorpio	2.9L	2.9 V6 24V	1995.25 MY	GEM	•	•	•	0
Granada / Scorpio	2.9L	2.9 V6 24V	1995.25 MY	PATS	•	•	0	•
Granada / Scorpio	2.9L	2.9 V6 24V	1995.25 MY	PCM	•	•	•	•
Granada / Scorpio	2.9L	2.9 V6 24V	1995.25 MY	PCM	•	•	•	0
Granada / Scorpio	2.9L	2.9 V6 24V	1995.25 MY	RCM	•	•	•	0
Granada / Scorpio	2.9L	2. 9 V6 24V	1997 MY	ABS/TCS	•	•	•	•
Granada / Scorpio	2.9L	2.9 V6 24V	1997 MY	GEM	•	•	•	0
Granada / Scorpio	2.9L	2.9 V6 24V	1997 MY	PATS	•	•	0	•
Granada / Scorpio	2.9L	2.9 V6 24V	1997 MY	PCM	•	•	•	•
Granada / Scorpio	2.9L	2.9 V6 24V	1997 MY	PCM	•	•	•	0
Granada / Scorpio	2.9L	2.9 V6 24V	1997 MY	RCM	•	•	•	0
Granada / Scorpio	2.9L	2.9 V6 24V	1998 MY	ABS/TCS	•	•	•	•
Granada / Scorpio	2.9L	2.9 V6 24V	1998 MY	GEM	•	•	•	0
Granada / Scorpio	2.9L	2.9 V6 24V	1998 MY	PATS	•	•	0	•
Granada / Scorpio	2.9L	2.9 V6 24V	1998 MY	PCM	•	•	•	•
Granada / Scorpio	2.9L	2.9 V6 24V	1998 MY	PCM	•	•	•	0
Granada / Scorpio	2.9L	2.9 V6 24V	1998 MY	RCM	•		•	0
Granada / Scorpio	2.9L	2. 9 V6 24V	1998.25 MY	ABS/TCS	•	•	•	•
Granada / Scorpio	2.9L	2. 9 V6 24V	1998.25 MY	GEM	•	•	•	0
Granada / Scorpio	2.9L	2. 9 V6 24V	1998.25 MY	PATS	•	•	0	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Granada / Scorpio	2.9L	2.9 V6 24V	1998.25 MY	PCM	•	•	•	•
Granada / Scorpio	2.9L	2.9 V6 24V	1998.25 MY	PCM	•	•	•	0
Granada / Scorpio	2.9L	2.9 V6 24V	1998.25 MY	RCM	•	•	•	0
Ikon	1.3L	HCS	2000.5 MY	PCM	•	•	•	•
Ikon	1. 3L	Zetec Rocam	2003 MY	PCM	•	•	•	
Ikon	1. 3L	Zetec Rocam	2003. 25 MY	ABS/TCS	•	•	•	•
Ikon	1. 3L	Zetec Rocam	2003. 25 MY	CSM	•	•	•	0
Ikon	1. 3L	Zetec Rocam	2003. 25 MY	GEM	•	•	•	•
Ikon	1.3L	Zetec Rocam	2003. 25 MY	PCM	•	•	•	•
Ikon	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2009. 25 MY	IC	•	•	•	
Ikon	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2009. 25 MY	PCM	•	•	•	
Ikon	1.6L	Other	2001 MY	HEC	•	•	•	•
Ikon	1.6L	Other	2001 MY	PCM	•	•	•	0
Ikon	1.6L	Zetec Rocam	1999.75 MY	HEC	•	•	•	•
Ikon	1.6L	Zetec Rocam	1999.75 MY	PCM	•	•	•	•
Ikon	1.6L	Zetec Rocam	2003 MY	HEC	•	•	•	•
Ikon	1.6L	Zetec Rocam	2003 MY	PCM	•	•	•	•
Ikon	1.6L	Zetec Rocam	2003. 25 MY	ABS/TCS	•	•	•	•
Ikon	1.6L	Zetec Rocam	2003. 25 MY	CSM	•	•	•	0
Ikon	1.6L	Zetec Rocam	2003. 25 MY	GEM	•	•	•	•
Ikon	1.6L	Zetec Rocam	2003.25 MY	HEC	•	•	•	•
Ikon	1.6L	Zetec Rocam	2003. 25 MY	PCM	•	•	•	
Ikon	1.6L	Zetec Rocam	2003.25 MY	TCM	•	•	•	0
Ikon	1.8L	Endura-DE	2000. 25 MY	PCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Ка	1. 0L	HCS	1997.5 MY	ABS/TCS	•	•	•	•
Ka	1. 0L	HCS	1997.5 MY	CSM	•	•	•	0
Ka	1. 0L	HCS	1997.5 MY	PATS	•	•	•	0
Ka	1. 0L	HCS	1997.5 MY	PCM	•		•	•
Ka	1. 0L	HCS	1999 MY	ABS/TCS	•	•	•	•
Ka	1. 0L	HCS	1999 MY	CSM	•	•	•	0
Ka	1. 0L	HCS	1999 MY	ECS	•	•	•	0
Ka	1. 0L	HCS	1999 MY	PCM	•	•	•	•
Ka	1. 0L	Zetec Rocam	1999.75 MY	ABS/TCS	•	•	•	•
Ka	1. 0L	Zetec Rocam	1999.75 MY	CSM	•	•	•	0
Ka	1. 0L	Zetec Rocam	1999.75 MY	PCM	•	•	•	•
KA	1. 2L	DURATEC 8V	2009 MY	ABS	•	•	•	
KA	1. 2L	DURATEC 8V	2009 MY	BCMii	•	•	•	
KA	1. 2L	DURATEC 8V	2009 MY	EPS	•	•	•	0
KA	1. 2L	DURATEC 8V	2009 MY	PAM	•	•	•	0
Ka	1. 3L	DURATEC 8V	2000 MY	ABS/TCS	•	•	•	•
Ka	1. 3L	DURATEC 8V	2000 MY	CSM	•	•	•	0
Ka	1. 3L	DURATEC 8V	2000 MY	ECS	•	•	•	0
Ka	1. 3L	DURATEC 8V	2000 MY	GEM	•		•	•
Ka	1. 3L	DURATEC 8V	2000 MY	PCM	•	•	•	•
KA	1. 3L	Duratorq-Turbo Diesel Common Rail Injection	2009 MY	ABS	•	•	•	
KA	1. 3L	Duratorq-Turbo Diesel Common Rail Injection	2009 MY	BCMii	•	•	•	
KA	1. 3L	Duratorq-Turbo Diesel Common Rail Injection	2009 MY	EPS	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
KA	1. 3L	Duratorq-Turbo Diesel Common Rail Injection	2009 MY	PAM	•	•	•	0
Ка	1. 3L	Endura-E	1997 MY	ABS/TCS	•	•	•	•
Ка	1. 3L	Endura-E	1997 MY	CSM	•	•	•	0
Ka	1.3L	Endura-E	1997 MY	PATS	•	•	•	0
Ka	1. 3L	Endura-E	1997 MY	PCM	•	•	•	•
Ka	1. 3L	Endura-E	1997.5 MY	ABS/TCS	•	•	•	•
Ka	1. 3L	Endura-E	1997.5 MY	CSM	•	•	•	0
Ка	1. 3L	Endura-E	1997.5 MY	PATS	•	•	•	0
Ка	1. 3L	Endura-E	1997.5 MY	PCM	•	•	•	•
Ка	1. 3L	Endura-E	19985 MY	ABS/TCS	•	•	•	•
Ка	1. 3L	Endura-E	19985 MY	CSM	•	•	•	0
Ка	1. 3L	Endura-E	19985 MY	PATS	•	•	•	0
Ка	1. 3L	Endura-E	19985 MY	PCM	•	•	•	•
Ка	1. 3L	Endura-E	1999 MY	ABS/TCS	•	•	•	•
Ка	1. 3L	Endura-E	1999 MY	CSM	•			0
Ка	1. 3L	Endura-E	1999 MY	ECS	•	•	•	0
Ка	1. 3L	Endura-E	1999 MY	PCM	•	•	•	•
Ка	1. 3L	Endura-E	2000 MY	ABS/TCS	•	•	•	•
Ка	1. 3L	Endura-E	2000 MY	CSM	•	•	•	0
Ка	1. 3L	Endura-E	2000 MY	ECS	•	•	•	0
Ка	1. 3L	Endura-E	2000 MY	GEM	•	•	•	•
Ка	1. 3L	Endura-E	2000 MY	PCM	•	•	•	•
Ка	1.6L	DURATEC 8V	2000 MY	ABS/TCS	•	•	•	•
Ка	1.6L	DURATEC 8V	2000 MY	CSM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Ka	1.6L	DURATEC 8V	2000 MY	ECS	•	•	•	0
Ка	1.6L	DURATEC 8V	2000 MY	GEM	•	•	•	•
Ka	1.6L	DURATEC 8V	2000 MY	PCM	•	•	•	•
Ka	1.6L	Zetec Rocam	2001.5 MY	ABS/TCS	•	•	•	•
Ka	1.6L	Zetec Rocam	2001.5 MY	CSM	•	•	•	0
Ка	1.6L	Zetec Rocam	2001.5 MY	ECS	•	•	•	0
Ka	1.6L	Zetec Rocam	2001.5 MY	PCM	•	•	•	•
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.5 MY	ABS	•	•	•	0
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.5 MY	ACM	•	•	•	0
Kuga	2. OL	Duratorq Turbo Diesel Common Rail Injection	2008.5 MY	AWD	•	•	•	0
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.5 MY	CMR	•	•	•	0
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.5 MY	D_DCU	•	•	•	•
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.5 MY	EATC	•	•	•	•
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.5 MY	EPS	•	•	•	0
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.5 MY	FFH	•	•	•	•
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.5 MY	GEM	•	•	•	•
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.5 MY	НСМ	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 5 MY	IC	•	•	•	•
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.5 MY	P_DCU	•	•	•	•
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.5 MY	PAM	•	•	•	0
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008.5 MY	PCM	•	•	•	
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 5 MY	RCM	•	•	•	0
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 5 MY	RETM	•	•	•	0
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 5 MY	RKE	•	•	•	0
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2008. 5 MY	SRM	•	•	•	0
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	ABS	•	•	•	0
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	ACM	•	•	•	0
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	AWD	•	•	•	0
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	CMR	•	•	•	0
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 5 MY	D_DCU	•	•	•	•
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008. 5 MY	EATC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	EPS	•	•	•	0
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	FFH	•	•	•	•
Kuga	2. OL	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	GEM	•	•	•	•
Kuga	2. OL	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	HCM	•	•	•	0
Kuga	2. OL	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	IC	•	•	•	•
Kuga	2. OL	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	P_DCU	•	•	•	•
Kuga	2. OL	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	PAM	•	•	•	0
Kuga	2. OL	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	PCM	•	•	•	0
Kuga	2. OL	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	RCM	•	•	•	0
Kuga	2. OL	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	RETM	•	•	•	0
Kuga	2. OL	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	RKE	•	•	•	0
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	SRM	•	•	•	0
Kuga	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008.5 MY	TCM	•	•	•	0
Kuga	2. 5L	I5	2008.5 MY	ABS	•	•	•	0
Kuga	2.5L	15	2008.5 MY	ACM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Kuga	2. 5L	I5	2008.5 MY	AWD	•	•	•	0
Kuga	2.5L	I5	2008.5 MY	CMR	•	•	•	0
Kuga	2.5L	I5	2008.5 MY	D_DCU	•		•	•
Kuga	2.5L	15	2008.5 MY	EATC	•	•	•	•
Kuga	2.5L	I5	2008.5 MY	EPS	•	•	•	0
Kuga	2.5L	I5	2008.5 MY	FFH	•	•	•	•
Kuga	2.5L	I5	2008.5 MY	GEM	•	•	•	•
Kuga	2.5L	I5	2008.5 MY	HCM	•	•	•	0
Kuga	2.5L	15	2008.5 MY	IC	•	•	•	•
Kuga	2.5L	15	2008.5 MY	P_DCU	•	•	•	•
Kuga	2.5L	15	2008.5 MY	PAM	•	•	•	0
Kuga	2.5L	I5	2008.5 MY	PCM	•	•	•	0
Kuga	2.5L	I5	2008.5 MY	RCM	•	•	•	0
Kuga	2.5L	I5	2008.5 MY	RETM	•	•	•	0
Kuga	2.5L	15	2008.5 MY	RKE	•	•	•	0
Kuga	2.5L	15	2008.5 MY	SRM	•	•	•	0
Kuga	2.5L	15	2008.5 MY	TCM	•	•	•	0
LASER / 323 / TIERRA	1.3L	В3		ABS	•	•	•	•
LASER / 323 / TIERRA	1.3L	В3	1996 MY	ABS	•		•	•
LASER / 323 / TIERRA	1.3L	В3	1998 MY	ABS	•		•	•
LASER / 323 / TIERRA	1. 3L	В3	2000 MY	ABS	•		•	•
LASER / 323 / TIERRA	1. 3L	В3	2000 MY	ABS/TCS	•		•	
LASER / 323 / TIERRA	1. 3L	В3	2000 MY	PCM	•		•	•
LASER / 323 / TIERRA	1. 3L	В3	2001 MY	ABS	•		•	•
LASER / 323 / TIERRA	1.5L	Z5		ABS	•		•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
LASER / 323 / TIERRA	1. 5L	Z5	1996 MY	ABS	Oues	• Codes	Data	
LASER / 323 / TIERRA	1. 5L	ZL	1000	ABS	•	•	•	•
LASER / 323 / TIERRA	1.5L	ZL	1998 MY	ABS	•	•	•	•
LASER / 323 / TIERRA	1.6L	В6		ABS	•	•	•	0
LASER / 323 / TIERRA	1.6L	В6	1996 MY	ABS	•	•	•	0
LASER / 323 / TIERRA	1.6L	ZM		ABS	•	•	•	•
LASER / 323 / TIERRA	1.6L	ZM	1998 MY	ABS	•	•	•	•
LASER / 323 / TIERRA	1.6L	ZM	2000 MY	ABS	•	•	•	•
LASER / 323 / TIERRA	1.6L	ZM	2000 MY	ABS/TCS	•	•	•	•
LASER / 323 / TIERRA	1.6L	ZM	2000 MY	PCM	•	•	•	•
LASER / 323 / TIERRA	1.8L	BP		ABS	•	•	•	0
LASER / 323 / TIERRA	1.8L	BP	1996 MY	ABS	•	•	•	0
LASER / 323 / TIERRA	1.8L	FP		ABS	•	•	•	•
LASER / 323 / TIERRA	1.8L	FP	1998 MY	ABS	•	•	•	•
LASER / 323 / TIERRA	1.8L	FP	2000 MY	ABS	•	•	•	•
LASER / 323 / TIERRA	2. 0L	FS	2000 MY	ABS	•	•	•	•
LASER / 323 / TIERRA	2. 0L	FS	2000 MY	ABS/TCS	•	•	•	•
LASER / 323 / TIERRA	2. 0L	FS	2000 MY	PCM	•	•	•	•
LASER / 323 / TIERRA	2. 0L	FS	2001 MY	ABS	•	•	•	•
LASER / 323 / TIERRA	2. 0L	RF		ABS	•	•	•	•
LASER / 323 / TIERRA	2. 0L	RF	1998 MY	ABS	•	•	•	•
LASER / 323 / TIERRA	2. 0L	RF-T	2000 MY	ABS	•	•	•	•
LS	3. 0L	Other	2000 MY	ABS/TCS	•	•	•	•
LS	3. 0L	Other	2000 MY	ACM	•	•	•	•
LS	3. 0L	Other	2000 MY	CPM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
LS	3. 0L	0ther	2000 MY	DDM	•	•	•	•
LS	3. 0L	0ther	2000 MY	DSM	•	•	•	•
LS	3. 0L	0ther	2000 MY	EATC	•	•	•	•
LS	3. 0L	0ther	2000 MY	GEM	•	•	•	•
LS	3. 0L	0ther	2000 MY	HEC	•	•	•	•
LS	3. 0L	0ther	2000 MY	MC	•	•	•	•
LS	3. 0L	0ther	2000 MY	PCM	•	•	•	•
LS	3. 0L	0ther	2000 MY	RCM	•	•	•	•
LS	3. 0L	0ther	2000 MY	REM	•	•	•	•
LS	3. 0L	0ther	2000 MY	RESCU	•	•	•	0
LS	3. 0L	0ther	2000 MY	SCLM	•	•	•	
LS	3. 0L	0ther	2002 MY	ABS/TCS	•	•	•	•
LS	3. 0L	0ther	2002 MY	ACM	•	•	•	•
LS	3. 0L	0ther	2002 MY	CPM	•	•	•	•
LS	3. 0L	0ther	2002 MY	DDM	•	•	•	•
LS	3. 0L	0ther	2002 MY	DSM	•	•	•	•
LS	3. 0L	Other	2002 MY	EATC	•	•	•	•
LS	3. 0L	0ther	2002 MY	GEM	•	•	•	•
LS	3. 0L	0ther	2002 MY	HEC	•	•	•	•
LS	3. 0L	0ther	2002 MY	MC	•	•	•	•
LS	3. 0L	0ther	2002 MY	PCM	•	•	•	•
LS	3. 0L	0ther	2002 MY	RCM	•	•	•	•
LS	3. 0L	0ther	2002 MY	REM	•	•	•	•
LS	3. 0L	0ther	2002 MY	RESCU	•	•	•	0
LS	3. 0L	Other	2002 MY	SCLM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
LS	3. OL	Other	2003 MY	ABS/TCS	•	•	•	•
LS	3. 0L	Other	2003 MY	ACM	•	•	•	•
LS	3. 0L	0ther	2003 MY	DCSM	•	•	•	•
LS	3. 0L	0ther	2003 MY	DDM	•	•	•	•
LS	3. 0L	Other	2003 MY	DSM	•	•		•
LS	3. 0L	Other	2003 MY	EATC	•	•	•	•
LS	3. 0L	Other	2003 MY	EPB	•	•	•	•
LS	3. 0L	Other	2003 MY	GEM	•			•
LS	3. 0L	Other	2003 MY	HEC	•		•	•
LS	3. 0L	Other	2003 MY	MC	•			•
LS	3. 0L	Other	2003 MY	NAV	•			0
LS	3. 0L	Other	2003 MY	PAM	•	•	•	0
LS	3. 0L	Other	2003 MY	PCM	•	•	•	•
LS	3. 0L	Other	2003 MY	PCSM	•		•	•
LS	3. 0L	Other	2003 MY	RCM	•			
LS	3. 0L	Other	2003 MY	REM	•			
LS	3. 0L	Other	2003 MY	SCLM	•			0
LS	3. 0L	Other	2003 MY	VEMS	•	•	•	•
LS	3. 0L	Other	2004 MY	ABS/TCS	•			•
LS	3. 0L	Other	2004 MY	ACM	•			
LS	3. 0L	Other	2004 MY	DCSM	•			
LS	3. 0L	0ther	2004 MY	DDM	•	•	•	•
LS	3. 0L	0ther	2004 MY	DSM	•	•	•	•
LS	3. 0L	0ther	2004 MY	EATC	•	•	•	•
LS	3. 0L	0ther	2004 MY	EPB	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
LS	3. OL	Other	2004 MY	GEM	•	•	•	•
LS	3. 0L	0ther	2004 MY	HEC	•	•	•	•
LS	3. 0L	0ther	2004 MY	MC	•	•	•	•
LS	3. 0L	0ther	2004 MY	NAV	•	•	•	0
LS	3. 0L	0ther	2004 MY	PAM	•	•	•	0
LS	3. 0L	0ther	2004 MY	PCM	•	•	•	•
LS	3. 0L	0ther	2004 MY	PCSM	•	•	•	•
LS	3. 0L	0ther	2004 MY	RCM	•	•	•	•
LS	3. 0L	0ther	2004 MY	REM	•	•	•	•
LS	3. 0L	Other	2004 MY	SCLM	•	•	•	0
LS	3. 0L	0ther	2005 MY	ABS/TCS	•	•	•	•
LS	3. 0L	0ther	2005 MY	ACM	•	•	•	•
LS	3. 0L	0ther	2005 MY	DCSM	•	•	•	•
LS	3. 0L	0ther	2005 MY	DDM	•	•	•	•
LS	3. 0L	0ther	2005 MY	DSM	•	•	•	•
LS	3. 0L	0ther	2005 MY	EATC	•	•	•	•
LS	3. 0L	Other	2005 MY	EPB	•	•	•	•
LS	3. 0L	0ther	2005 MY	GEM	•	•	•	•
LS	3. 0L	0ther	2005 MY	HEC	•	•	•	•
LS	3. 0L	0ther	2005 MY	MC	•	•	•	•
LS	3. 0L	0ther	2005 MY	NAV	•	•	•	0
LS	3. 0L	0ther	2005 MY	PAM	•	•	•	0
LS	3. 0L	0ther	2005 MY	PCM	•	•	•	•
LS	3. 0L	0ther	2005 MY	PCSM	•	•	•	•
LS	3. 0L	Other	2005 MY	RCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
LS	3. OL	0ther	2005 MY	REM	•	•	•	•
LS	3. 0L	Other	2005 MY	SCLM	•	•	•	0
LS	3. 9L	4V	2003 MY	ABS/TCS	•	•	•	•
LS	3. 9L	4V	2003 MY	ACM	•	•	•	•
LS	3. 9L	4V	2003 MY	DCSM	•	•	•	•
LS	3. 9L	4V	2003 MY	DDM	•	•	•	•
LS	3. 9L	4V	2003 MY	DSM	•	•	•	•
LS	3. 9L	4V	2003 MY	EATC	•	•	•	•
LS	3. 9L	4V	2003 MY	EPB	•	•	•	•
LS	3. 9L	4V	2003 MY	GEM	•	•	•	•
LS	3. 9L	4V	2003 MY	HEC	•	•	•	•
LS	3. 9L	4V	2003 MY	MC	•	•	•	•
LS	3. 9L	4V	2003 MY	NAV	•	•	•	0
LS	3. 9L	4V	2003 MY	PAM	•	•	•	0
LS	3. 9L	4V	2003 MY	PCM	•	•	•	•
LS	3. 9L	4V	2003 MY	PCSM	•	•	•	•
LS	3. 9L	4V	2003 MY	RCM	•	•	•	•
LS	3. 9L	4V	2003 MY	REM	•	•	•	•
LS	3. 9L	4V	2003 MY	SCLM	•	•	•	0
LS	3. 9L	4V	2003 MY	VEMS	•	•	•	•
LS	3. 9L	4V	2004 MY	ABS/TCS	•	•	•	•
LS	3. 9L	4V	2004 MY	ACM	•	•	•	•
LS	3. 9L	4V	2004 MY	DCSM	•	•	•	•
LS	3. 9L	4V	2004 MY	DDM	•	•	•	•
LS	3. 9L	4V	2004 MY	DSM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
LS	3. 9L	4V	2004 MY	EATC	•	•	•	•
LS	3. 9L	4V	2004 MY	EPB	•	•	•	•
LS	3. 9L	4V	2004 MY	GEM	•	•	•	•
LS	3. 9L	4V	2004 MY	HEC	•	•	•	•
LS	3. 9L	4V	2004 MY	MC	•	•	•	•
LS	3. 9L	4V	2004 MY	NAV	•	•	•	0
LS	3. 9L	4V	2004 MY	PAM	•	•	•	0
LS	3. 9L	4V	2004 MY	PCM	•	•	•	•
LS	3. 9L	4V	2004 MY	PCSM	•	•	•	•
LS	3. 9L	4V	2004 MY	RCM	•	•	•	•
LS	3. 9L	4V	2004 MY	REM	•	•	•	•
LS	3. 9L	4V	2004 MY	SCLM	•	•	•	0
LS	3. 9L	4V	2005 MY	ABS/TCS	•	•	•	•
LS	3. 9L	4V	2005 MY	ACM	•	•	•	•
LS	3. 9L	4V	2005 MY	DCSM	•	•	•	•
LS	3. 9L	4V	2005 MY	DDM	•	•	•	•
LS	3. 9L	4V	2005 MY	DSM	•	•	•	•
LS	3. 9L	4V	2005 MY	EATC	•	•	•	•
LS	3. 9L	4V	2005 MY	EPB	•	•	•	•
LS	3. 9L	4V	2005 MY	GEM	•	•	•	•
LS	3. 9L	4V	2005 MY	HEC	•	•	•	•
LS	3. 9L	4V	2005 MY	MC	•	•	•	•
LS	3. 9L	4V	2005 MY	NAV	•	•	•	0
LS	3. 9L	4V	2005 MY	PAM	•	•	•	0
LS	3. 9L	4V	2005 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
LS	3.9L	4V	2005 MY	PCSM	•	•	•	•
LS	3. 9L	4V	2005 MY	RCM	•	•	•	•
LS	3. 9L	4V	2005 MY	REM	•		•	•
LS	3. 9L	4V	2005 MY	SCLM	•		•	0
LS	3. 9L	4V	2006 MY	ABS/TCS	•	•		•
LS	3. 9L	4V	2006 MY	ACM	•	•	•	•
LS	3. 9L	4V	2006 MY	DCSM	•	•	•	•
LS	3. 9L	4V	2006 MY	DDM	•			•
LS	3. 9L	4V	2006 MY	DSM	•			•
LS	3. 9L	4V	2006 MY	EATC	•			•
LS	3. 9L	4V	2006 MY	EPB	•			•
LS	3. 9L	4V	2006 MY	GEM	•	•	•	•
LS	3. 9L	4V	2006 MY	HEC	•	•	•	•
LS	3. 9L	4V	2006 MY	MC	•		•	•
LS	3. 9L	4V	2006 MY	NAV	•			0
LS	3. 9L	4V	2006 MY	PAM	•			0
LS	3. 9L	4V	2006 MY	PCM	•			•
LS	3. 9L	4V	2006 MY	PCSM	•	•	•	•
LS	3. 9L	4V	2006 MY	RCM	•			•
LS	3. 9L	4V	2006 MY	REM	•			•
LS	3. 9L	4V	2006 MY	SCLM	•			0
LS	3. 9L	Other	2000 MY	ABS/TCS	•	•	•	•
LS	3. 9L	Other	2000 MY	ACM	•	•	•	•
LS	3. 9L	Other	2000 MY	CPM	•	•	•	•
LS	3. 9L	Other	2000 MY	DDM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
LS	3. 9L	Other	2000 MY	DSM	•	•	•	•
LS	3. 9L	0ther	2000 MY	EATC	•	•	•	•
LS	3. 9L	0ther	2000 MY	GEM	•	•	•	•
LS	3. 9L	0ther	2000 MY	HEC	•	•	•	•
LS	3. 9L	0ther	2000 MY	MC	•	•	•	•
LS	3. 9L	0ther	2000 MY	PCM	•	•	•	•
LS	3. 9L	0ther	2000 MY	RCM	•	•	•	•
LS	3. 9L	Other	2000 MY	REM	•	•	•	•
LS	3. 9L	0ther	2000 MY	RESCU	•	•	•	0
LS	3. 9L	0ther	2002 MY	ABS/TCS	•	•	•	•
LS	3. 9L	0ther	2002 MY	ACM	•	•	•	•
LS	3. 9L	0ther	2002 MY	CPM	•	•	•	•
LS	3. 9L	0ther	2002 MY	DDM	•	•	•	•
LS	3. 9L	0ther	2002 MY	DSM	•	•	•	•
LS	3. 9L	0ther	2002 MY	EATC	•	•	•	•
LS	3. 9L	0ther	2002 MY	GEM	•	•	•	•
LS	3. 9L	0ther	2002 MY	HEC	•	•	•	•
LS	3. 9L	0ther	2002 MY	MC	•	•	•	•
LS	3. 9L	0ther	2002 MY	PCM	•	•	•	•
LS	3. 9L	0ther	2002 MY	RCM	•	•	•	•
LS	3. 9L	0ther	2002 MY	REM	•	•	•	•
LS	3. 9L	0ther	2002 MY	RESCU	•	•	•	0
Mark LT	5. 4L	3V	2006 MY	4X4	•	•	•	•
Mark LT	5. 4L	3V	2006 MY	ABS	•	•	•	•
Mark LT	5. 4L	3V	2006 MY	DSM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Mark LT	5. 4L	3V	2006 MY	EATC	•	•	•	•
Mark LT	5. 4L	3V	2006 MY	IC	•	•	•	•
Mark LT	5. 4L	3V	2006 MY	PAM	•	•	•	•
Mark LT	5. 4L	3V	2006 MY	PCM	•	•	•	•
Mark LT	5. 4L	3V	2006 MY	RCM	•	•	•	•
Mark LT	5. 4L	3V	2006 MY	VSM	•	•	•	•
Mark LT	5. 4L	3V	2007 MY	4X4	•	•	•	•
Mark LT	5. 4L	3V	2007 MY	ABS	•	•	•	•
Mark LT	5. 4L	3V	2007 MY	DSM	•	•	•	•
Mark LT	5. 4L	3V	2007 MY	EATC	•	•	•	•
Mark LT	5. 4L	3V	2007 MY	IC	•	•	•	•
Mark LT	5. 4L	3V	2007 MY	PAM	•	•	•	•
Mark LT	5. 4L	3V	2007 MY	PCM	•	•	•	•
Mark LT	5. 4L	3V	2007 MY	RCM	•	•	•	•
Mark LT	5. 4L	3V	2007 MY	VSM	•	•	•	•
Mark LT	5. 4L	3V	2008 MY	4X4	•	•	•	•
Mark LT	5. 4L	3V	2008 MY	ABS	•	•	•	•
Mark LT	5. 4L	3V	2008 MY	DSM	•	•	•	•
Mark LT	5. 4L	3V	2008 MY	HVAC	•	•	•	•
Mark LT	5. 4L	3V	2008 MY	IC	•	•	•	•
Mark LT	5. 4L	3V	2008 MY	PAM	•	•	•	•
Mark LT	5. 4L	3V	2008 MY	PCM	•	•	•	•
Mark LT	5. 4L	3V	2008 MY	RCM	•	•	•	•
Mark LT	5. 4L	3V	2008 MY	VSM	•	•	•	•
Mark VIII	4. 6L	4V	1996 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Mark VIII	4.6L	4V	1996 MY	CPM	•	•	0	•
Mark VIII	4.6L	4V	1996 MY	DDM	•	•	0	•
Mark VIII	4.6L	4V	1996 MY	DSM	•	•	0	•
Mark VIII	4.6L	4V	1996 MY	HEC	•	•	•	•
Mark VIII	4.6L	4V	1996 MY	PCM	•	•	•	•
Mark VIII	4.6L	4V	1996 MY	PSM	•	•	0	•
Mark VIII	4.6L	4V	1996 MY	SCIL	•	•	0	•
Mark VIII	4.6L	4V	1997 MY	ABS/TCS	•	•	•	•
Mark VIII	4.6L	4V	1997 MY	CPM	•	•	•	•
Mark VIII	4.6L	4V	1997 MY	DDM	•	•	•	•
Mark VIII	4.6L	4V	1997 MY	DSM	•	•	•	•
Mark VIII	4.6L	4V	1997 MY	EATC	•	•	•	0
Mark VIII	4.6L	4V	1997 MY	HEC	•	•	•	•
Mark VIII	4.6L	4V	1997 MY	MC	•	•	•	•
Mark VIII	4.6L	4V	1997 MY	PCM	•	•	•	•
Mark VIII	4.6L	4V	1997 MY	PSM	•	•	•	•
Mark VIII	4.6L	4V	1997 MY	SCIL	•	•	•	•
Mark VIII	4.6L	4V	1998 MY	ABS/TCS	•	•	•	•
Mark VIII	4.6L	4V	1998 MY	CPM	•	•	•	•
Mark VIII	4.6L	4V	1998 MY	DDM	•	•	•	•
Mark VIII	4.6L	4V	1998 MY	DSM	•	•	•	•
Mark VIII	4.6L	4V	1998 MY	EATC	•	•	•	0
Mark VIII	4.6L	4V	1998 MY	HEC	•	•	•	•
Mark VIII	4.6L	4V	1998 MY	MC	•	•	•	•
Mark VIII	4.6L	4V	1998 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Mark VIII	4. 6L	4V	1998 MY	PSM	•	•	•	•
Mark VIII	4.6L	4V	1998 MY	SCIL	•	•	•	•
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	4X4	•	•	•	•
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	ABS	•	•	•	•
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	ACM	•	•	•	0
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	APIM	•	•	•	0
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	C-CM	•	•	•	0
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	DCSM	•	•	•	•
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	DDM	•	•	•	•
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	DSM	•	•	•	•
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	DSP	•	•	•	0
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	FCIM	•	•	•	•
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	FDIM	•	•	•	•
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	GEM / SJB	•	•	•	•
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	GPSM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	НСМ	•	•	•	•
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	НСМ-2	•	•	•	0
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	HD_LVL	•	•	•	0
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	HUD	•	•	•	0
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	HVAC	•	•	•	•
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	ILCM	•	•	•	•
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	IPC	•	•	•	•
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	OCSM	•	•	•	0
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	PAM	•	•	•	0
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	PCM	•	•	•	•
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	PSCM	•	•	•	0
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	RCM	•	•	•	0
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	RFA	•	•	•	•
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	SASM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	SOD-L	•	•	•	•
MKS	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	SOD-R	•	•	•	•
MKS	3. 7L	4V	2009 MY	4X4	•		•	•
MKS	3. 7L	4V	2009 MY	ABS	•			•
MKS	3. 7L	4V	2009 MY	ACM	•			0
MKS	3. 7L	4V	2009 MY	APIM	•	•	•	0
MKS	3. 7L	4V	2009 MY	C-CM	•	•	•	•
MKS	3. 7L	4V	2009 MY	DCSM	•	•	•	•
MKS	3. 7L	4V	2009 MY	DDM	•	•	•	•
MKS	3. 7L	4V	2009 MY	DSM	•	•	•	•
MKS	3. 7L	4V	2009 MY	DSP	•	•	•	0
MKS	3. 7L	4V	2009 MY	FCIM	•	•	•	•
MKS	3. 7L	4V	2009 MY	FDIM	•	•	•	•
MKS	3. 7L	4V	2009 MY	GEM / SJB	•			•
MKS	3. 7L	4V	2009 MY	HCM	•			•
MKS	3. 7L	4V	2009 MY	HCM-2	•			0
MKS	3. 7L	4V	2009 MY	HD_LVL	•	•	•	0
MKS	3. 7L	4V	2009 MY	HVAC	•	•	•	•
MKS	3. 7L	4V	2009 MY	IPC	•	•	•	•
MKS	3. 7L	4V	2009 MY	OCSM	•	•	•	
MKS	3. 7L	4V	2009 MY	PAM	•	•	•	•
MKS	3. 7L	4V	2009 MY	PCM	•	•	•	
MKS	3. 7L	4V	2009 MY	RCM	•	•	•	•
MKS	3. 7L	4V	2009 MY	RFA	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
MKS	3. 7L	4V	2010 MY	4X4	•	•	•	•
MKS	3. 7L	4V	2010 MY	ABS	•	•	•	•
MKS	3. 7L	4V	2010 MY	ACM	•	•	•	0
MKS	3. 7L	4V	2010 MY	APIM	•	•	•	0
MKS	3. 7L	4V	2010 MY	C-CM	•	•	•	0
MKS	3. 7L	4V	2010 MY	DCSM	•	•	•	•
MKS	3.7L	4V	2010 MY	DDM	•	•	•	•
MKS	3. 7L	4V	2010 MY	DSM	•	•	•	•
MKS	3. 7L	4V	2010 MY	DSP	•	•	•	0
MKS	3. 7L	4V	2010 MY	FCIM	•	•	•	•
MKS	3.7L	4V	2010 MY	FDIM	•	•	•	•
MKS	3.7L	4V	2010 MY	GEM / SJB	•	•	•	•
MKS	3. 7L	4V	2010 MY	GPSM	•	•	•	0
MKS	3.7L	4V	2010 MY	HCM	•	•	•	•
MKS	3.7L	4V	2010 MY	HCM-2	•	•	•	0
MKS	3.7L	4V	2010 MY	HD_LVL	•	•	•	0
MKS	3. 7L	4V	2010 MY	HUD	•	•	•	0
MKS	3. 7L	4V	2010 MY	HVAC	•		•	•
MKS	3.7L	4V	2010 MY	ILCM	•	•	•	•
MKS	3. 7L	4V	2010 MY	IPC	•	•	•	•
MKS	3.7L	4V	2010 MY	OCSM	•	•	•	0
MKS	3. 7L	4V	2010 MY	PAM	•	•	•	0
MKS	3. 7L	4V	2010 MY	PCM	•	•	•	
MKS	3. 7L	4V	2010 MY	PSCM	•	•	•	0
MKS	3. 7L	4V	2010 MY	RCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
MKS	3.7L	4V	2010 MY	RFA	•	•	•	•
MKS	3.7L	4V	2010 MY	SASM	•	•	•	0
MKS	3.7L	4V	2010 MY	SOD-L	•	•	•	•
MKS	3.7L	4V	2010 MY	SOD-R	•	•	•	•
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	4X4	•	•	•	•
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	ABS	•	•	•	•
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	ACM	•	•	•	0
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	APIM	•	•	•	0
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	C-CM	•	•	•	0
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	DCSM	•	•	•	•
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	DDM	•	•	•	•
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	DSM	•	•	•	•
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	DSP	•	•	•	0
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	FCIM	•	•	•	•
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	FDIM	•	•	•	•
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	GEM / SJB	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	GPSM	•	•	•	0
MKT	3. 5L	Direct Injection	2010 MY	HCM	•	•	•	•
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	HCM-2	•	•	•	0
MKT	3. 5L	Direct Injection	2010 MY	HUD	•	•	•	0
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	HVAC	•	•	•	•
MKT	3. 5L	Direct Injection	2010 MY	ILCM	•	•	•	•
MKT	3. 5L	Direct Injection	2010 MY	IPC	•	•	•	•
MKT	3. 5L	Direct Injection	2010 MY	LTM	•	•	•	0
MKT	3. 5L	Direct Injection	2010 MY	OCSM	•	•	•	0
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	PAM	•	•	•	0
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	PCM	•	•	•	•
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	PCSM-2	•	•	•	0
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	PSCM	•	•	•	0
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	RCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	RETM	•	•	•	0
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	RFA	•	•	•	•
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	RHVAC	•	•	•	•
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	SASM	•	•	•	0
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	SOD-L	•	•	•	•
MKT	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	SOD-R	•	•	•	•
MKT	3. 7L	4V	2010 MY	4X4	•	•	•	•
MKT	3. 7L	4V	2010 MY	ABS	•	•	•	•
MKT	3. 7L	4V	2010 MY	ACM	•	•	•	0
MKT	3. 7L	4V	2010 MY	APIM	•	•	•	0
MKT	3. 7L	4V	2010 MY	C-CM	•		•	0
MKT	3. 7L	4V	2010 MY	DCSM	•		•	•
MKT	3. 7L	4V	2010 MY	DDM	•	•	•	•
MKT	3. 7L	4V	2010 MY	DSM	•	•	•	•
MKT	3. 7L	4V	2010 MY	DSP	•		•	0
MKT	3. 7L	4V	2010 MY	FCIM	•	•	•	•
MKT	3. 7L	4V	2010 MY	FDIM	•	•	•	•
MKT	3. 7L	4V	2010 MY	GEM / SJB	•	•	•	•
MKT	3. 7L	4V	2010 MY	GPSM	•	•	•	0
MKT	3. 7L	4V	2010 MY	HCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
MKT	3. 7L	4V	2010 MY	HCM-2	•	•	•	0
MKT	3.7L	4V	2010 MY	HUD	•	•	•	0
MKT	3.7L	4V	2010 MY	HVAC	•	•	•	•
MKT	3.7L	4V	2010 MY	ILCM	•	•	•	•
MKT	3.7L	4V	2010 MY	IPC	•	•	•	•
MKT	3. 7L	4V	2010 MY	LTM	•	•	•	0
MKT	3. 7L	4V	2010 MY	OCSM	•	•	•	0
MKT	3.7L	4V	2010 MY	PAM	•	•	•	0
MKT	3.7L	4V	2010 MY	PCM	•	•	•	
MKT	3. 7L	4V	2010 MY	PCSM-2	•	•	•	0
MKT	3. 7L	4V	2010 MY	PSCM	•	•	•	0
MKT	3.7L	4V	2010 MY	RCM	•	•	•	0
MKT	3. 7L	4V	2010 MY	RETM	•	•	•	0
MKT	3. 7L	4V	2010 MY	RFA	•	•	•	•
MKT	3.7L	4V	2010 MY	RHVAC	•	•	•	•
MKT	3. 7L	4V	2010 MY	SASM	•	•	•	0
MKT	3. 7L	4V	2010 MY	SOD-L	•	•	•	•
MKT	3. 7L	4V	2010 MY	SOD-R	•	•	•	•
MKX	3.5L	4V	2007 MY	4X4	•	•	•	•
MKX	3.5L	4V	2007 MY	ABS	•	•	•	
MKX	3.5L	4V	2007 MY	ACM	•	•	•	•
MKX	3.5L	4V	2007 MY	DCSM	•	•	•	•
MKX	3.5L	4V	2007 MY	DSM	•	•	•	•
MKX	3.5L	4V	2007 MY	DSP	•	•	•	0
MKX	3. 5L	4V	2007 MY	EATC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
MKX	3. 5L	4V	2007 MY	GEM	•	•	•	
MKX	3. 5L	4V	2007 MY	HCM	•	•	•	
MKX	3. 5L	4V	2007 MY	IC	•	•	•	
MKX	3. 5L	4V	2007 MY	LTM	•	•	•	0
MKX	3.5L	4V	2007 MY	OCSM	•	•	•	
MKX	3. 5L	4V	2007 MY	PAM	•	•	•	•
MKX	3. 5L	4V	2007 MY	PCM	•	•	•	•
MKX	3.5L	4V	2007 MY	RCM	•	•	•	
MKX	3.5L	4V	2007 MY	RETM	•	•	•	0
MKX	3.5L	4V	2007 MY	SASM	•	•	•	0
MKX	3. 5L	4V	2007 MY	SDARS	•	•	•	•
MKX	3. 5L	4V	2008 MY	4X4	•	•	•	•
MKX	3. 5L	4V	2008 MY	ABS	•	•	•	•
MKX	3. 5L	4V	2008 MY	ACM	•	•	•	•
MKX	3. 5L	4V	2008 MY	APIM	•	•	•	0
MKX	3. 5L	4V	2008 MY	DCSM	•	•	•	•
MKX	3. 5L	4V	2008 MY	DSM	•	•	•	•
MKX	3. 5L	4V	2008 MY	DSP	•	•	•	0
MKX	3. 5L	4V	2008 MY	GEM / SJB	•	•	•	•
MKX	3. 5L	4V	2008 MY	HCM	•	•	•	
MKX	3. 5L	4V	2008 MY	HVAC	•	•	•	•
MKX	3. 5L	4V	2008 MY	IC	•	•	•	•
MKX	3. 5L	4V	2008 MY	LTM	•	•	•	0
MKX	3. 5L	4V	2008 MY	OCSM	•	•	•	
MKX	3. 5L	4V	2008 MY	PAM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
MKX	3. 5L	4V	2008 MY	PCM	•	•	•	•
MKX	3. 5L	4V	2008 MY	RCM	•	•	•	
MKX	3. 5L	4V	2008 MY	RETM	•	•	•	0
MKX	3. 5L	4V	2008 MY	SASM	•	•	•	0
MKX	3. 5L	4V	2008 MY	SDARS	•	•	•	•
MKX	3. 5L	4V	2009 MY	4X4	•	•	•	•
MKX	3. 5L	4V	2009 MY	ABS	•	•	•	•
MKX	3. 5L	4V	2009 MY	ACM	•	•	•	
MKX	3. 5L	4V	2009 MY	ACM	•	•	•	0
MKX	3. 5L	4V	2009 MY	APIM	•	•	•	0
MKX	3. 5L	4V	2009 MY	DCSM	•	•	•	•
MKX	3. 5L	4V	2009 MY	DSM	•	•	•	•
MKX	3. 5L	4V	2009 MY	DSP	•	•	•	0
MKX	3. 5L	4V	2009 MY	GEM / SJB	•	•	•	•
MKX	3. 5L	4V	2009 MY	HVAC	•	•	•	•
MKX	3. 5L	4V	2009 MY	IC	•	•	•	•
MKX	3. 5L	4V	2009 MY	LTM	•	•	•	0
MKX	3. 5L	4V	2009 MY	OCSM	•	•	•	
MKX	3. 5L	4V	2009 MY	PAM	•	•	•	•
MKX	3. 5L	4V	2009 MY	PCM	•	•	•	•
MKX	3. 5L	4V	2009 MY	RCM	•	•	•	
MKX	3. 5L	4V	2009 MY	RETM	•	•	•	0
MKX	3. 5L	4V	2009 MY	SASM	•	•	•	0
MKX	3. 5L	4V	2009 MY	SDARS	•	•	•	•
MKX	3. 5L	4V	2010 MY	4X4	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
MKX	3. 5L	4V	2010 MY	ABS	•	•	•	•
MKX	3.5L	4V	2010 MY	ACM	•	•	•	•
MKX	3.5L	4V	2010 MY	ACM	•	•	•	0
MKX	3. 5L	4V	2010 MY	APIM	•	•	•	0
MKX	3. 5L	4V	2010 MY	DCSM	•	•	•	•
MKX	3.5L	4V	2010 MY	DSM	•	•	•	•
MKX	3.5L	4V	2010 MY	DSP	•	•	•	0
MKX	3. 5L	4V	2010 MY	GEM / SJB	•	•	•	•
MKX	3. 5L	4V	2010 MY	GPSM	•	•	•	0
MKX	3.5L	4V	2010 MY	HCM	•	•	•	
MKX	3.5L	4V	2010 MY	HVAC	•	•	•	•
MKX	3.5L	4V	2010 MY	IC	•	•	•	
MKX	3.5L	4V	2010 MY	LTM	•	•	•	0
MKX	3.5L	4V	2010 MY	OCSM	•	•	•	0
MKX	3.5L	4V	2010 MY	PAM	•	•	•	•
MKX	3.5L	4V	2010 MY	PCM	•	•	•	
MKX	3.5L	4V	2010 MY	RCM	•	•	•	
MKX	3.5L	4V	2010 MY	RETM	•	•	•	0
MKX	3.5L	4V	2010 MY	SASM	•	•	•	0
MKX	3.5L	4V	2010 MY	SDARS	•	•	•	•
MKX	3.7L	4V	2011 MY	ACM	•	•	•	0
MKX	3.7L	4V	2011 MY	APIM	•	•	•	0
MKX	3.7L	4V	2011 MY	DSM	•	•	•	•
MKX	3.7L	4V	2011 MY	DSP	•	•	•	0
MKX	3. 7L	4V	2011 MY	FCDIM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
MKX	3. 7L	4V	2011 MY	FCIM	•	•	•	•
MKX	3. 7L	4V	2011 MY	GPSM	•	•	•	0
MKX	3. 7L	4V	2011 MY	HUD	•	•	•	0
MKX	3. 7L	4V	2011 MY	IPC	•	•	•	•
MKX	3. 7L	4V	2011 MY	OCSM	•		•	0
MKX	3. 7L	4V	2011 MY	PCM	•	•	•	•
MKX	3. 7L	4V	2011 MY	RCM	•	•	•	0
MKX	3. 7L	4V	2011 MY	RFA	•		•	•
MKX	3. 7L	4V	2011 MY	SCCM	•		•	0
MONDEO	1.6L	DURATEC VCT	MY07.25	ABS	•		•	0
MONDEO	1.6L	DURATEC VCT	MY07.25	ACM	•		•	0
MONDEO	1.6L	DURATEC VCT	MY07.25	AHCM	•	•	•	0
MONDEO	1.6L	DURATEC VCT	MY07.25	BCMii	•	•	•	•
MONDEO	1.6L	DURATEC VCT	MY07.25	CCMii	•		•	•
MONDEO	1.6L	DURATEC VCT	MY07.25	CMR	•	•	•	0
MONDEO	1.6L	DURATEC VCT	MY07.25	DDM	•	•	•	0
MONDEO	1.6L	DURATEC VCT	MY07.25	DSM	•		•	•
MONDEO	1.6L	DURATEC VCT	MY07.25	HCM	•	•	•	0
MONDEO	1.6L	DURATEC VCT	MY07.25	HVAC	•		•	0
MONDEO	1.6L	DURATEC VCT	MY07.25	IPC	•		•	•
MONDEO	1.6L	DURATEC VCT	MY07.25	PAM	•		•	0
MONDEO	1.6L	DURATEC VCT	MY07.25	PBM	•	•	•	0
MONDEO	1.6L	DURATEC VCT	MY07.25	PCM	•	•	•	0
MONDEO	1.6L	DURATEC VCT	MY07.25	PDM	•	•	•	0
MONDEO	1.6L	DURATEC VCT	MY07.25	PSCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
MONDEO	1. 6L	DURATEC VCT	MY07.25	RCM	•	•	•	0
MONDEO	1.6L	DURATEC VCT	MY07.25	RFA	•	•	•	0
MONDEO	1. 6L	DURATEC VCT	MY07.25	SASM	•	•	•	0
MONDEO	1.6L	DURATEC VCT	MY07.25	SRM	•	•	•	0
MONDEO	1.6L	DURATEC VCT	MY07.25	TRM	•	•	•	0
MONDEO	1.6L	DURATEC VCT	MY07.25	VDM	•		•	0
Mondeo	1.6L	Zetec	1993.5 MY	ABS	•	•	•	0
Mondeo	1.6L	Zetec	1993.5 MY	CSM	•		•	0
Mondeo	1.6L	Zetec	1993.5 MY	PATS	•		•	0
Mondeo	1.6L	Zetec	1995 MY	ABS	•		•	0
Mondeo	1.6L	Zetec	1995 MY	CSM	•	•	•	0
Mondeo	1.6L	Zetec	1995 MY	PATS	•	•	•	0
Mondeo	1.6L	Zetec	1997 MY	ABS	•	•	•	0
Mondeo	1.6L	Zetec	1997 MY	CSM	•		•	0
Mondeo	1.6L	Zetec	1997 MY	FFH	•		•	0
Mondeo	1.6L	Zetec	1997 MY	PATS	•		•	0
Mondeo	1.6L	Zetec	1997 MY	PCM	•	•	•	•
Mondeo	1.6L	Zetec	1998.75 MY	ABS	•	•	•	0
Mondeo	1.6L	Zetec	1998.75 MY	ABS/TCS	•		•	•
Mondeo	1.6L	Zetec	1998.75 MY	CSM	•		•	0
Mondeo	1.6L	Zetec	1998.75 MY	CSM	•		0	
Mondeo	1. 6L	Zetec	1998.75 MY	FFH	•	•	•	0
Mondeo	1. 6L	Zetec	1998.75 MY	PCM	•	•	•	•
Mondeo	1.6L	Zetec	1999 MY	ABS	•	•	•	0
Mondeo	1. 6L	Zetec	1999 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mondeo	1. 6L	Zetec	1999 MY	CSM	•	•	•	0
Mondeo	1. 6L	Zetec	1999 MY	CSM	•	•	0	
Mondeo	1.6L	Zetec	1999 MY	FFH	•	•	•	0
Mondeo	1.6L	Zetec	1999 MY	PCM	•	•	•	•
Mondeo	1.8L	DURATEC-HE / I4	2001 MY	ABS	•	•	•	0
Mondeo	1.8L	DURATEC-HE / I4	2001 MY	ABS/TCS	•	•	•	•
Mondeo	1.8L	DURATEC-HE / I4	2001 MY	ACM	•	•	•	0
Mondeo	1.8L	DURATEC-HE / I4	2001 MY	CDP	•	•	•	0
Mondeo	1.8L	DURATEC-HE / I4	2001 MY	CSM	•	•	•	0
Mondeo	1.8L	DURATEC-HE / I4	2001 MY	EATC	•	•	•	•
Mondeo	1.8L	DURATEC-HE / I4	2001 MY	GDM	•	•	•	0
Mondeo	1.8L	DURATEC-HE / I4	2001 MY	GEM	•	•	•	•
Mondeo	1.8L	DURATEC-HE / I4	2001 MY	HEC	•	•	•	•
Mondeo	1.8L	DURATEC-HE / I4	2001 MY	LHID	•	•	•	•
Mondeo	1.8L	DURATEC-HE / I4	2001 MY	NAV	•	•	•	0
Mondeo	1.8L	DURATEC-HE / I4	2001 MY	PCM	•	•	•	•
Mondeo	1.8L	DURATEC-HE / I4	2001 MY	RCM	•	•	•	0
Mondeo	1.8L	DURATEC-HE / I4	2001 MY	RETM	•	•	•	0
Mondeo	1.8L	DURATEC-HE / I4	2001 MY	RHID	•	•	•	0
Mondeo	1.8L	DURATEC-HE / I4	2001 MY	SRM	•	•	•	0
Mondeo	1.8L	DURATEC-SCi	2001 MY	ABS	•	•	•	0
Mondeo	1.8L	DURATEC-SCi	2001 MY	ABS/TCS	•	•	•	•
Mondeo	1.8L	DURATEC-SCi	2001 MY	ACM	•	•	•	0
Mondeo	1.8L	DURATEC-SCi	2001 MY	CDP	•	•	•	0
Mondeo	1.8L	DURATEC-SCi	2001 MY	CSM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Mondeo	1.8L	DURATEC-SCi	2001 MY	EATC	•	•	•	•
Mondeo	1.8L	DURATEC-SCi	2001 MY	GDM	•	•	•	0
Mondeo	1.8L	DURATEC-SCi	2001 MY	GEM	•	•	•	•
Mondeo	1.8L	DURATEC-SCi	2001 MY	HEC	•	•	•	•
Mondeo	1.8L	DURATEC-SCi	2001 MY	LHID	•	•	•	•
Mondeo	1.8L	DURATEC-SCi	2001 MY	NAV	•	•	•	0
Mondeo	1.8L	DURATEC-SCi	2001 MY	PCM	•	•	•	0
Mondeo	1.8L	DURATEC-SCi	2001 MY	RCM	•	•	•	0
Mondeo	1.8L	DURATEC-SCi	2001 MY	RETM	•		•	0
Mondeo	1.8L	DURATEC-SCi	2001 MY	RHID	•		•	0
Mondeo	1.8L	DURATEC-SCi	2001 MY	SRM	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	ABS	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	ACM	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	AHCM	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	BCMii	•	•	•	•
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	CCMii	•	•	•	•
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07. 25	CMR	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07. 25	DDM	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	DSM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
MONDEO	1. 8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	НСМ	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	HVAC	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	IPC	•	•	•	•
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	PAM	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	PBM	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	PCM	•	•	•	•
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	PDM	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	PSCM	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	RCM	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	RFA	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	SASM	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	SRM	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	TRM	•	•	•	0
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	VDM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Mondeo	1.8L	Endura-DE		ABS	•	•	•	0
Mondeo	1.8L	Endura-DE		CSM	•	•	•	0
Mondeo	1.8L	Endura-DE		PATS	•	•	•	0
Mondeo	1.8L	Endura-DE	1997 MY	ABS	•	•	•	0
Mondeo	1.8L	Endura-DE	1997 MY	CSM	•	•	•	0
Mondeo	1.8L	Endura-DE	1997 MY	FFH	•	•	•	0
Mondeo	1.8L	Endura-DE	1997 MY	PATS	•	•	•	0
Mondeo	1.8L	Endura-DE	1997 MY	PCM	•	•	•	0
Mondeo	1.8L	Endura-DE	Other	ABS	•	•	•	0
Mondeo	1.8L	Endura-DE	Other	CSM	•	•	•	0
Mondeo	1.8L	Endura-DE	Other	PATS	•	•	•	0
Mondeo	1.8L	Zetec	1993.5 MY	ABS	•	•	•	0
Mondeo	1.8L	Zetec	1993.5 MY	CSM	•	•	•	0
Mondeo	1.8L	Zetec	1993.5 MY	PATS	•	•	•	0
Mondeo	1.8L	Zetec	1993.75 MY	ABS	•	•	•	0
Mondeo	1.8L	Zetec	1993.75 MY	CSM	•	•	•	0
Mondeo	1.8L	Zetec	1993.75 MY	PATS	•	•	•	0
Mondeo	1.8L	Zetec	1994.5 MY	ABS	•	•	•	0
Mondeo	1.8L	Zetec	1994.5 MY	CSM	•	•	•	0
Mondeo	1.8L	Zetec	1994.5 MY	PATS	•	•	•	0
Mondeo	1.8L	Zetec	1995 MY	ABS	•	•	•	0
Mondeo	1.8L	Zetec	1995 MY	CSM	•	•	•	0
Mondeo	1.8L	Zetec	1995 MY	PATS	•	•	•	0
Mondeo	1.8L	Zetec	1996 MY	ABS	•	•	•	0
Mondeo	1.8L	Zetec	1996 MY	CSM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Mondeo	1.8L	Zetec	1996 MY	PATS	•	•	•	0
Mondeo	1.8L	Zetec	1997 MY	ABS	•	•	•	0
Mondeo	1.8L	Zetec	1997 MY	CSM	•	•	•	0
Mondeo	1.8L	Zetec	1997 MY	FFH	•	•	•	0
Mondeo	1.8L	Zetec	1997 MY	PATS	•	•	•	0
Mondeo	1.8L	Zetec	1997 MY	PCM	•	•	•	•
Mondeo	1.8L	Zetec	1997 MY	PCM	•	•	•	0
Mondeo	1.8L	Zetec	1998 MY	ABS	•	•	•	0
Mondeo	1.8L	Zetec	1998 MY	ABS/TCS	•	•	•	•
Mondeo	1.8L	Zetec	1998 MY	CSM	•	•	•	0
Mondeo	1.8L	Zetec	1998 MY	CSM	•	•	0	
Mondeo	1.8L	Zetec	1998 MY	FFH	•	•	•	0
Mondeo	1.8L	Zetec	1998 MY	PATS	•	•	0	•
Mondeo	1.8L	Zetec	1998 MY	PCM	•	•	•	•
Mondeo	1.8L	Zetec	1998.75 MY	ABS	•	•	•	0
Mondeo	1.8L	Zetec	1998.75 MY	ABS/TCS	•	•	•	•
Mondeo	1.8L	Zetec	1998.75 MY	CSM	•	•	•	0
Mondeo	1.8L	Zetec	1998.75 MY	CSM	•	•	0	
Mondeo	1.8L	Zetec	1998.75 MY	FFH	•	•	•	0
Mondeo	1.8L	Zetec	1998.75 MY	PCM	•	•	•	•
Mondeo	1.8L	Zetec	19985 MY	ABS	•	•	•	0
Mondeo	1.8L	Zetec	19985 MY	ABS/TCS	•	•		
Mondeo	1.8L	Zetec	19985 MY	CSM	•	•	•	0
Mondeo	1.8L	Zetec	19985 MY	CSM	•	•	0	
Mondeo	1.8L	Zetec	19985 MY	FFH	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Mondeo	1.8L	Zetec	19985 MY	PATS	•	•	0	•
Mondeo	1.8L	Zetec	19985 MY	PCM	•	•	•	•
Mondeo	1.8L	Zetec	1999 MY	ABS	•	•	•	0
Mondeo	1.8L	Zetec	1999 MY	ABS/TCS	•		•	•
Mondeo	1.8L	Zetec	1999 MY	CSM	•	•	•	0
Mondeo	1.8L	Zetec	1999 MY	CSM	•	•	0	
Mondeo	1.8L	Zetec	1999 MY	FFH	•	•	•	0
Mondeo	1.8L	Zetec	1999 MY	PCM	•	•	•	•
Mondeo	1.8L	Zetec	2000.25 MY	ABS	•	•	•	0
Mondeo	1.8L	Zetec	2000.25 MY	ABS/TCS	•	•	•	0
Mondeo	1.8L	Zetec	2000.25 MY	AFCM	•	•	•	0
Mondeo	1.8L	Zetec	2000.25 MY	CSM	•		•	0
Mondeo	1.8L	Zetec	2000.25 MY	PCM	•	•	•	•
Mondeo	2. 0L	DURATEC-HE / I4	2001 MY	ABS	•	•	•	0
Mondeo	2. 0L	DURATEC-HE / I4	2001 MY	ABS/TCS	•	•	•	•
Mondeo	2. 0L	DURATEC-HE / I4	2001 MY	ACM	•	•	•	0
Mondeo	2. 0L	DURATEC-HE / I4	2001 MY	CDP	•	•	•	0
Mondeo	2. 0L	DURATEC-HE / I4	2001 MY	CSM	•	•	•	0
Mondeo	2. 0L	DURATEC-HE / I4	2001 MY	EATC	•	•	•	•
Mondeo	2. 0L	DURATEC-HE / I4	2001 MY	GDM	•	•	•	0
Mondeo	2. 0L	DURATEC-HE / I4	2001 MY	GEM	•	•	•	•
Mondeo	2. 0L	DURATEC-HE / I4	2001 MY	HEC	•	•	•	•
Mondeo	2. 0L	DURATEC-HE / I4	2001 MY	LHID	•	•	•	•
Mondeo	2. 0L	DURATEC-HE / I4	2001 MY	NAV	•	•	•	0
Mondeo	2. 0L	DURATEC-HE / I4	2001 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Mondeo	2. OL	DURATEC-HE / I4	2001 MY	RCM	•	•	•	0
Mondeo	2. 0L	DURATEC-HE / I4	2001 MY	RETM	•	•	•	0
Mondeo	2. 0L	DURATEC-HE / I4	2001 MY	RHID	•	•	•	0
Mondeo	2. 0L	DURATEC-HE / I4	2001 MY	SRM	•	•	•	0
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	ABS	•	•	•	0
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	ACM	•	•	•	0
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	AHCM	•	•	•	0
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	BCMii	•	•	•	•
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	CCMii	•	•	•	•
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	CMR	•	•	•	0
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	DDM	•	•	•	0
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	DSM	•	•	•	•
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	HCM	•	•	•	0
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	HVAC	•	•	•	0
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	IPC	•	•	•	•
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	PAM	•	•	•	0
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	PBM	•	•	•	0
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	PCM	•	•	•	•
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	PDM	•	•	•	0
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	PSCM	•	•	•	0
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	RCM	•	•	•	0
MONDEO	2. OL	DURATEC-HE / I4	MY07.25	RFA	•	•	•	0
MONDEO	2. OL	DURATEC-HE / I4	MY07.25	SASM	•	•	•	0
MONDEO	2. OL	DURATEC-HE / I4	MY07.25	SRM	•	•	•	0
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	TRM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
MONDEO	2. 0L	DURATEC-HE / I4	MY07.25	VDM	•	•	•	0
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	ABS	•	•	•	0
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	ABS/TCS	•	•	•	•
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	ACM	•	•	•	0
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	CDP	•	•	•	0
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	CSM	•	•	•	0
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	EATC	•	•	•	•
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	FFH	•	•	•	•
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	GDM	•	•	•	0
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	GEM	•	•	•	•
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	НЕС	•	•	•	•
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	ICU	•	•	•	0
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	LHID	•	•	•	•
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	NAV	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mondeo	2. OL	Duratorq Turbo Diesel Common Rail Injection	2001 MY	PCM	•	•	•	•
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	RCM	•	•	•	0
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	RETM	•	•	•	0
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	RHID	•	•	•	0
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	SRM	•	•	•	0
Mondeo	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	TCM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	ABS	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	ACM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	AHCM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	BCMii	•	•	•	•
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	CCMii	•	•	•	•
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	CMR	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	DDM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	DSM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	НСМ	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	HVAC	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	IPC	•	•	•	•
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	PAM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	PBM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	PCM	•	•	•	•
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	PDM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	PSCM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	RCM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	RFA	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	SASM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	SRM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	TCM	•	•	•	
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	TRM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
MONDEO	2. OL	Duratorq Turbo Diesel Common Rail Injection	MY07.25	VDM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	ABS	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	ACM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	AHCM	•	•	•	0
MONDEO	2. OL	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	BCMii	•	•	•	•
MONDEO	2. OL	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	CCMii	•	•	•	•
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	CMR	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	DDM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	DSM	•	•	•	•
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	HCM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	HVAC	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	IPC	•	•	•	•
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	PAM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	PBM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	PCM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	PDM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	PSCM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	RCM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	RFA	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	SASM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	SRM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	TCM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	TRM	•	•	•	0
MONDEO	2. 0L	Duratorq Turbo Diesel Common Rail Injection StgV	MY07.25	VDM	•	•	•	0
Mondeo	2. 0L	DURATORQ_DI	2001 MY	ABS	•	•	•	0
Mondeo	2. 0L	DURATORQ_DI	2001 MY	ABS/TCS	•	•	•	•
Mondeo	2. 0L	DURATORQ_DI	2001 MY	ACM	•	•	•	0
Mondeo	2. 0L	DURATORQ_DI	2001 MY	CDP	•	•	•	0
Mondeo	2. 0L	DURATORQ_DI	2001 MY	CSM	•	•	•	0
Mondeo	2. 0L	DURATORQ_DI	2001 MY	EATC	•	•	•	•
Mondeo	2. 0L	DURATORQ_DI	2001 MY	FFH	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mondeo	2. 0L	DURATORQ_DI	2001 MY	FIP	•	•	•	0
Mondeo	2. 0L	DURATORQ_DI	2001 MY	GDM	•	•	•	0
Mondeo	2. 0L	DURATORQ_DI	2001 MY	GEM	•	•	•	•
Mondeo	2. 0L	DURATORQ_DI	2001 MY	HEC	•	•	•	•
Mondeo	2. 0L	DURATORQ_DI	2001 MY	LHID	•		•	•
Mondeo	2. 0L	DURATORQ_DI	2001 MY	NAV	•	•	•	0
Mondeo	2. 0L	DURATORQ_DI	2001 MY	PCM	•	•	•	•
Mondeo	2. 0L	DURATORQ_DI	2001 MY	RCM	•		•	0
Mondeo	2. 0L	DURATORQ_DI	2001 MY	RETM	•		•	0
Mondeo	2. 0L	DURATORQ_DI	2001 MY	RHID	•		•	0
Mondeo	2. 0L	DURATORQ_DI	2001 MY	SRM	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	ABS	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	ACM	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	AHCM	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	BCMii	•	•	•	•
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	CCMii	•	•	•	•
MONDEO	2. OL	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	CMR	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	DDM	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	DSM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	НСМ	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	HVAC	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	IPC	•	•	•	•
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	PAM	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	PBM	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	PCM	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	PDM	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	PSCM	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	RCM	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	RFA	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	SASM	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	SRM	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	TRM	•	•	•	0
MONDEO	2. 0L	EcoBoost - Gas Turbocharged Direct Injection	MY07.25	VDM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mondeo	2. 0L	Zetec	1993.5 MY	ABS	Codes	Codes	Data	O
Mondeo	2. OL	Zetec	1993. 5 MY	CSM	•	•	•	0
Mondeo	2. OL	Zetec	1993.5 MY	PATS	•	•	•	0
Mondeo	2. 0L	Zetec	1993.75 MY	ABS	•	•	•	0
Mondeo	2. 0L	Zetec	1993.75 MY	CSM	•	•	•	0
Mondeo	2. 0L	Zetec	1993.75 MY	PATS	•	•	•	0
Mondeo	2. 0L	Zetec	1995 MY	ABS	•	•	•	0
Mondeo	2. 0L	Zetec	1995 MY	CSM	•	•	•	0
Mondeo	2. 0L	Zetec	1995 MY	PATS	•	•	•	0
Mondeo	2. 0L	Zetec	1996 MY	ABS	•	•	•	0
Mondeo	2. 0L	Zetec	1996 MY	CSM	•	•	•	0
Mondeo	2. 0L	Zetec	1996 MY	PATS	•		•	0
Mondeo	2. 0L	Zetec	1997 MY	ABS	•		•	0
Mondeo	2. 0L	Zetec	1997 MY	CSM	•	•	•	0
Mondeo	2. 0L	Zetec	1997 MY	FFH	•	•	•	0
Mondeo	2. 0L	Zetec	1997 MY	PATS	•	•	•	0
Mondeo	2. 0L	Zetec	1997 MY	PCM	•		•	•
Mondeo	2. 0L	Zetec	1997 MY	PCM	•		•	0
Mondeo	2. 0L	Zetec	1998 MY	ABS	•	•	•	0
Mondeo	2. 0L	Zetec	1998 MY	ABS/TCS	•	•	•	•
Mondeo	2. 0L	Zetec	1998 MY	CSM	•	•	•	0
Mondeo	2. 0L	Zetec	1998 MY	CSM	•	•	0	
Mondeo	2. 0L	Zetec	1998 MY	FFH	•	•	•	0
Mondeo	2. 0L	Zetec	1998 MY	PATS	•	•	0	•
Mondeo	2. 0L	Zetec	1998 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mondeo	2. 0L	Zetec	1998 MY	PCM	•	•	•	0
Mondeo	2. 0L	Zetec	1998.75 MY	ABS	•	•	•	0
Mondeo	2. 0L	Zetec	1998.75 MY	ABS/TCS	•	•	•	•
Mondeo	2. 0L	Zetec	1998.75 MY	CSM	•	•	•	0
Mondeo	2. 0L	Zetec	1998.75 MY	CSM	•		0	
Mondeo	2. 0L	Zetec	1998.75 MY	FFH	•		•	0
Mondeo	2. 0L	Zetec	1998.75 MY	PATS	•	•	•	0
Mondeo	2. 0L	Zetec	1998.75 MY	PCM	•		•	•
Mondeo	2. 0L	Zetec	1998.75 MY	PCM	•		•	0
Mondeo	2. 0L	Zetec	19985 MY	ABS	•		•	0
Mondeo	2. 0L	Zetec	19985 MY	ABS/TCS	•	•	•	•
Mondeo	2. 0L	Zetec	19985 MY	CSM	•	•	•	0
Mondeo	2. 0L	Zetec	19985 MY	CSM	•	•	0	
Mondeo	2. 0L	Zetec	19985 MY	FFH	•		•	0
Mondeo	2. 0L	Zetec	19985 MY	PATS	•		0	•
Mondeo	2. 0L	Zetec	19985 MY	PCM	•	•	•	•
Mondeo	2. 0L	Zetec	1999 MY	ABS	•	•	•	0
Mondeo	2. 0L	Zetec	1999 MY	ABS/TCS	•	•	•	•
Mondeo	2. 0L	Zetec	1999 MY	CSM	•		•	0
Mondeo	2. 0L	Zetec	1999 MY	CSM	•		0	
Mondeo	2. 0L	Zetec	1999 MY	FFH	•		•	0
Mondeo	2. 0L	Zetec	1999 MY	PCM	•	•	•	•
Mondeo	2. 0L	Zetec	1999 MY	PCM	•	•	•	0
Mondeo	2. 0L	Zetec	2000.5 MY	ABS	•	•	•	0
Mondeo	2. 0L	Zetec	2000.5 MY	ABS/TCS	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mondeo	2. 0L	Zetec	2000.5 MY	CSM	•	•	•	0
Mondeo	2. 0L	Zetec	2000.5 MY	CSM	•	•	0	
Mondeo	2. 0L	Zetec	2000.5 MY	PCM	•	•	•	•
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	ABS	•	•	•	0
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	ABS/TCS	•	•	•	•
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	ACM	•	•	•	0
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	CDP	•	•	•	0
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	CSM	•	•	•	0
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	EATC	•	•	•	•
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	FFH	•	•	•	•
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	GDM	•	•	•	0
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	GEM	•	•	•	•
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	HEC	•	•	•	•
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	ICU	•	•	•	0
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	LHID	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	NAV	•	•	•	0
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	PCM	•	•	•	•
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	RCM	•	•	•	0
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	RETM	•	•	•	0
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	RHID	•	•	•	0
Mondeo	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	SRM	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	ABS	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	ACM	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	AHCM	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	BCMii	•	•	•	•
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	CCMii	•	•	•	•
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	CMR	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	DDM	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	DSM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	НСМ	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	HVAC	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	IPC	•	•	•	•
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	PAM	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	PBM	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	PCM	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	PDM	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	PSCM	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	RCM	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	RFA	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	SASM	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	SRM	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	TRM	•	•	•	0
MONDEO	2. 2L	Duratorq Turbo Diesel Common Rail Injection	MY07.25	VDM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	ABS	•	•	•	0
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	ACM	•	•	•	0
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	AHCM	•	•	•	0
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	BCMii	•	•	•	•
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	CCMii	•	•	•	•
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	CMR	•	•	•	0
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	DDM	•	•	•	0
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	DSM	•	•	•	•
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	HCM	•	•	•	0
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	HVAC	•	•	•	0
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	IPC	•	•	•	•
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	PAM	•	•	•	0
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	PBM	•	•	•	0
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	PCM	•	•	•	•
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	PDM	•	•	•	0
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	PSCM	•	•	•	0
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	RCM	•	•	•	0
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	RFA	•	•	•	0
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	SASM	•	•	•	0
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	SRM	•	•	•	0
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	TCM	•	•	•	
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	TRM	•	•	•	0
MONDEO	2. 3L	DURATEC-HE / I4	MY07.25	VDM	•	•	•	0
Mondeo	2. 5L	Duratec-VE	1994.75 MY	ABS	•	•	•	0
Mondeo	2. 5L	Duratec-VE	1994.75 MY	CSM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Mondeo	2.5L	Duratec-VE	1994.75 MY	PATS	•	•	•	0
Mondeo	2.5L	Duratec-VE	1995 MY	ABS	•		•	0
Mondeo	2.5L	Duratec-VE	1995 MY	CSM	•	•	•	0
Mondeo	2.5L	Duratec-VE	1995 MY	PATS	•		•	0
Mondeo	2.5L	Duratec-VE	1996 MY	ABS	•	•	•	0
Mondeo	2.5L	Duratec-VE	1996 MY	CSM	•	•	•	0
Mondeo	2.5L	Duratec-VE	1996 MY	PATS	•	•	•	0
Mondeo	2.5L	Duratec-VE	1997 MY	ABS	•	•	•	0
Mondeo	2.5L	Duratec-VE	1997 MY	CSM	•	•	•	0
Mondeo	2.5L	Duratec-VE	1997 MY	FFH	•	•	•	0
Mondeo	2.5L	Duratec-VE	1997 MY	PATS	•	•	•	0
Mondeo	2.5L	Duratec-VE	1997 MY	PCM	•	•	•	•
Mondeo	2.5L	Duratec-VE	1997 MY	PCM	•	•	•	0
Mondeo	2.5L	Duratec-VE	1998 MY	ABS	•	•	•	0
Mondeo	2.5L	Duratec-VE	1998 MY	ABS/TCS	•	•	•	•
Mondeo	2.5L	Duratec-VE	1998 MY	CSM	•	•	•	0
Mondeo	2.5L	Duratec-VE	1998 MY	CSM	•	•	0	
Mondeo	2.5L	Duratec-VE	1998 MY	FFH	•	•	•	0
Mondeo	2.5L	Duratec-VE	1998 MY	PATS	•	•	0	•
Mondeo	2.5L	Duratec-VE	1998 MY	PCM	•	•	•	•
Mondeo	2.5L	Duratec-VE	1998 MY	PCM	•	•	•	0
Mondeo	2.5L	Duratec-VE	19985 MY	ABS	•	•	•	0
Mondeo	2.5L	Duratec-VE	19985 MY	ABS/TCS	•	•	•	•
Mondeo	2.5L	Duratec-VE	19985 MY	CSM	•	•	•	0
Mondeo	2.5L	Duratec-VE	19985 MY	CSM	•	•	0	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mondeo	2. 5L	Duratec-VE	19985 MY	FFH	•	•	•	0
Mondeo	2. 5L	Duratec-VE	19985 MY	PATS	•	•	0	•
Mondeo	2. 5L	Duratec-VE	19985 MY	PCM	•	•	•	•
Mondeo	2. 5L	Duratec-VE	19985 MY	PCM	•	•	•	0
Mondeo	2. 5L	Duratec-VE	1999 MY	ABS	•	•	•	0
Mondeo	2. 5L	Duratec-VE	1999 MY	ABS/TCS	•	•	•	•
Mondeo	2. 5L	Duratec-VE	1999 MY	CSM	•	•	•	0
Mondeo	2. 5L	Duratec-VE	1999 MY	CSM	•	•	0	
Mondeo	2. 5L	Duratec-VE	1999 MY	FFH	•	•	•	0
Mondeo	2. 5L	Duratec-VE	1999 MY	PCM	•	•	•	•
Mondeo	2. 5L	Duratec-VE	1999 MY	PCM	•	•	•	0
Mondeo	2. 5L	Duratec-VE	1999.75 MY	ABS	•	•	•	0
Mondeo	2. 5L	Duratec-VE	1999.75 MY	ABS/TCS	•	•	•	•
Mondeo	2. 5L	Duratec-VE	1999.75 MY	CSM	•	•	•	0
Mondeo	2. 5L	Duratec-VE	1999.75 MY	CSM	•	•	0	
Mondeo	2. 5L	Duratec-VE	1999.75 MY	FFH	•	•	•	0
Mondeo	2. 5L	Duratec-VE	1999.75 MY	PCM	•	•	•	•
Mondeo	2. 5L	Duratec-VE	2000.5 MY	ABS	•	•	•	0
Mondeo	2. 5L	Duratec-VE	2000.5 MY	ABS/TCS	•	•	•	0
Mondeo	2. 5L	Duratec-VE	2000.5 MY	CSM	•	•	•	0
Mondeo	2. 5L	Duratec-VE	2000.5 MY	CSM	•	•	0	
Mondeo	2. 5L	Duratec-VE	2000.5 MY	PCM	•	•	•	•
Mondeo	2. 5L	Duratec-VE	2001 MY	ABS	•	•	•	0
Mondeo	2. 5L	Duratec-VE	2001 MY	ABS/TCS	•	•	•	•
Mondeo	2. 5L	Duratec-VE	2001 MY	ACM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Mondeo	2.5L	Duratec-VE	2001 MY	CDP	•	•	•	0
Mondeo	2.5L	Duratec-VE	2001 MY	CSM	•	•	•	0
Mondeo	2.5L	Duratec-VE	2001 MY	EATC	•	•	•	•
Mondeo	2.5L	Duratec-VE	2001 MY	GDM	•	•	•	0
Mondeo	2.5L	Duratec-VE	2001 MY	GEM	•	•	•	•
Mondeo	2. 5L	Duratec-VE	2001 MY	HEC	•	•	•	•
Mondeo	2. 5L	Duratec-VE	2001 MY	LHID	•	•	•	•
Mondeo	2.5L	Duratec-VE	2001 MY	NAV	•	•	•	0
Mondeo	2.5L	Duratec-VE	2001 MY	PCM	•	•	•	•
Mondeo	2. 5L	Duratec-VE	2001 MY	RCM	•	•	•	0
Mondeo	2. 5L	Duratec-VE	2001 MY	RETM	•	•	•	0
Mondeo	2.5L	Duratec-VE	2001 MY	RHID	•	•	•	0
Mondeo	2. 5L	Duratec-VE	2001 MY	SRM	•	•	•	0
Mondeo	2. 5L	Duratec-VE	2001 MY	TCM	•	•	•	0
MONDEO	2. 5L	I5	MY07.25	ABS	•	•	•	0
MONDEO	2. 5L	I5	MY07.25	ACM	•	•	•	0
MONDEO	2. 5L	I5	MY07.25	AHCM	•	•	•	0
MONDEO	2. 5L	I5	MY07.25	BCMii	•	•	•	•
MONDEO	2. 5L	I5	MY07.25	CCMii	•	•	•	•
MONDEO	2. 5L	I5	MY07.25	CMR	•	•	•	0
MONDEO	2. 5L	I5	MY07.25	DDM	•	•	•	0
MONDEO	2. 5L	I5	MY07.25	DSM	•	•	•	•
MONDEO	2.5L	I5	MY07.25	HCM	•	•	•	0
MONDEO	2.5L	I5	MY07.25	HVAC	•	•	•	0
MONDEO	2.5L	I5	MY07.25	IPC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
MONDEO	2.5L	I5	MY07.25	PAM	•	•	•	0
MONDEO	2.5L	I5	MY07.25	PBM	•	•	•	0
MONDEO	2. 5L	I5	MY07.25	PCM	•	•	•	0
MONDEO	2. 5L	I5	MY07.25	PDM	•	•	•	0
MONDEO	2. 5L	15	MY07.25	PSCM	•		•	0
MONDEO	2. 5L	I5	MY07.25	RCM	•	•	•	0
MONDEO	2. 5L	I5	MY07.25	RFA	•	•	•	0
MONDEO	2.5L	I5	MY07.25	SASM	•	•	•	0
MONDEO	2.5L	I5	MY07.25	SRM	•	•	•	0
MONDEO	2.5L	I5	MY07.25	TRM	•	•	•	0
MONDEO	2.5L	I5	MY07.25	VDM	•	•	•	0
Mondeo	3. 0L	Duratec SE	2001 MY	ABS	•	•	•	0
Mondeo	3. 0L	Duratec SE	2001 MY	ABS/TCS	•	•	•	•
Mondeo	3. OL	Duratec SE	2001 MY	ACM	•	•	•	0
Mondeo	3. OL	Duratec SE	2001 MY	CDP	•	•	•	0
Mondeo	3. OL	Duratec SE	2001 MY	CSM	•	•	•	0
Mondeo	3. OL	Duratec SE	2001 MY	EATC	•	•	•	•
Mondeo	3. OL	Duratec SE	2001 MY	GDM	•	•	•	0
Mondeo	3. OL	Duratec SE	2001 MY	GEM	•	•	•	•
Mondeo	3. OL	Duratec SE	2001 MY	HEC	•	•	•	•
Mondeo	3. OL	Duratec SE	2001 MY	LHID	•	•	•	•
Mondeo	3. OL	Duratec SE	2001 MY	NAV	•	•	•	0
Mondeo	3. 0L	Duratec SE	2001 MY	PCM	•	•	•	•
Mondeo	3. 0L	Duratec SE	2001 MY	RCM	•	•	•	0
Mondeo	3. 0L	Duratec SE	2001 MY	RETM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mondeo	3. OL	Duratec SE	2001 MY	RHID	Codes	Codes	Data	O
Mondeo	3. 0L	Duratec SE	2001 MY	SRM	•	•	•	0
Mondeo	3. 0L	Duratec-ST	2001 MY	ABS	•	•	•	0
Mondeo	3. 0L	Duratec-ST	2001 MY	ABS/TCS	•	•	•	•
Mondeo	3. 0L	Duratec-ST	2001 MY	ACM	•	•	•	0
Mondeo	3. 0L	Duratec-ST	2001 MY	CDP	•	•	•	0
Mondeo	3. OL	Duratec-ST	2001 MY	CSM	•	•	•	0
Mondeo	3. 0L	Duratec-ST	2001 MY	EATC	•	•	•	•
Mondeo	3. OL	Duratec-ST	2001 MY	GDM	•		•	0
Mondeo	3. OL	Duratec-ST	2001 MY	GEM	•		•	•
Mondeo	3. OL	Duratec-ST	2001 MY	HEC	•		•	•
Mondeo	3. OL	Duratec-ST	2001 MY	LHID	•	•	•	•
Mondeo	3. 0L	Duratec-ST	2001 MY	NAV	•	•	•	0
Mondeo	3. OL	Duratec-ST	2001 MY	PCM	•	•	•	•
Mondeo	3. 0L	Duratec-ST	2001 MY	RCM	•	•	•	0
Mondeo	3. OL	Duratec-ST	2001 MY	RETM	•	•	•	0
Mondeo	3. OL	Duratec-ST	2001 MY	RHID	•		•	0
Mondeo	3. 0L	Duratec-ST	2001 MY	SRM	•	•	•	0
Motorhome / Stripped_Chassis / Step_Van	6.8L	2V	2004 MY	ABS/TCS	•		•	0
Motorhome / Stripped_Chassis / Step_Van	6.8L	2V	2004 MY	PCM	•		•	•
Motorhome / Stripped_Chassis / Step_Van	6.8L	3V	2006 MY	ABS/TCS	•		•	•
Motorhome / Stripped_Chassis / Step_Van	6.8L	3V	2006 MY	IC	•		•	•
Motorhome / Stripped_Chassis / Step_Van	6.8L	3V	2006 MY	PCM	•	•	•	•
Motorhome / Stripped_Chassis / Step_Van	6.8L	3V	2007 MY	ABS/TCS	•	•	•	•
Motorhome / Stripped_Chassis / Step_Van	6.8L	3V	2007 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Motorhome / Stripped_Chassis / Step_Van	6.8L	3V	2007 MY	PCM	•	•	•	•
Motorhome / Stripped_Chassis / Step_Van	6.8L	3V	2008 MY	ABS/TCS	•	•	•	•
Motorhome / Stripped_Chassis / Step_Van	6.8L	3V	2008 MY	IC	•	•	•	•
Motorhome / Stripped_Chassis / Step_Van	6.8L	3V	2008 MY	PCM	•	•	•	•
Motorhome / Stripped_Chassis / Step_Van	6.8L	3V	2009 MY	ABS/TCS	•	•	•	•
Motorhome / Stripped_Chassis / Step_Van	6.8L	3V	2009 MY	IC	•	•	•	•
Motorhome / Stripped_Chassis / Step_Van	6.8L	3V	2009 MY	PCM	•	•	•	•
Motorhome / Stripped_Chassis / Step_Van	6.8L	3V	2011 MY	ABS/TCS	•	•	•	•
Motorhome / Stripped_Chassis / Step_Van	6.8L	3V	2011 MY	IC	•	•	•	•
Motorhome / Stripped_Chassis / Step_Van	6.8L	3V	2011 MY	PCM	•	•	•	•
Mustang	3.7L	4V	2011 MY	ABS	•	•	•	•
Mustang	3.7L	4V	2011 MY	ACM	•	•	•	0
Mustang	3.7L	4V	2011 MY	APIM	•	•	•	0
Mustang	3.7L	4V	2011 MY	BCM-B	•	•	•	•
Mustang	3.7L	4V	2011 MY	FCIM	•	•	•	0
Mustang	3.7L	4V	2011 MY	FDIM	•	•	•	•
Mustang	3.7L	4V	2011 MY	GEM / SJB	•	•	•	•
Mustang	3.7L	4V	2011 MY	GPSM	•	•	•	0
Mustang	3.7L	4V	2011 MY	HVAC	•	•	•	•
Mustang	3.7L	4V	2011 MY	IPC	•	•	•	•
Mustang	3.7L	4V	2011 MY	OCSM	•	•	•	0
Mustang	3. 7L	4V	2011 MY	PCM	•	•	•	•
Mustang	3. 7L	4V	2011 MY	RCM	•	•	•	0
Mustang	3.8L	Other	1994 MY	ABS/TCS	•	•	•	•
Mustang	3.8L	Other	1994 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mustang	3. 8L	Other	1995 MY	ABS/TCS	•	•	•	•
Mustang	3.8L	Other	1995 MY	PCM	•	•	•	•
Mustang	3.8L	0ther	1996 MY	ABS/TCS	•	•	•	•
Mustang	3. 8L	Other	1996 MY	IAB	•	•	•	•
Mustang	3.8L	Other	1996 MY	PCM	•	•	•	•
Mustang	3.8L	Other	1997 MY	ABS/TCS	•	•	•	•
Mustang	3.8L	Other	1997 MY	IAB	•	•	•	•
Mustang	3. 8L	Other	1997 MY	PATS	•	•	•	•
Mustang	3. 8L	Other	1997 MY	PCM	•	•	•	•
Mustang	3. 8L	Other	1998 MY	ABS/TCS	•	•	•	•
Mustang	3. 8L	Other	1998 MY	IAB	•	•	•	•
Mustang	3.8L	Other	1998 MY	PATS	•	•	•	•
Mustang	3. 8L	Other	1998 MY	PCM	•	•	•	•
Mustang	3. 8L	Other	1999 MY	ABS/TCS	•	•	•	•
Mustang	3. 8L	Other	1999 MY	GEM	•	•	•	•
Mustang	3.8L	0ther	1999 MY	HEC	•	•	•	•
Mustang	3.8L	0ther	1999 MY	PCM	•	•	•	•
Mustang	3. 8L	Other	1999 MY	RCM	•	•	•	•
Mustang	3.8L	0ther	2000 MY	ABS/TCS	•	•	•	•
Mustang	3.8L	0ther	2000 MY	GEM	•	•	•	•
Mustang	3.8L	0ther	2000 MY	HEC	•	•	•	•
Mustang	3.8L	Other	2000 MY	PCM	•	•	•	•
Mustang	3.8L	Other	2000 MY	RCM	•	•	•	•
Mustang	3. 8L	0ther	2002 MY	ABS/TCS	•	•	•	•
Mustang	3. 8L	0ther	2002 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Mustang	3. 8L	0ther	2002 MY	HEC	•	•	•	•
Mustang	3.8L	0ther	2002 MY	PCM	•	•	•	•
Mustang	3.8L	0ther	2002 MY	RCM	•	•	•	•
Mustang	3. 8L	0ther	2003 MY	ABS/TCS	•	•	•	•
Mustang	3. 8L	Other	2003 MY	GEM	•	•	•	•
Mustang	3.8L	Other	2003 MY	HEC	•	•	•	•
Mustang	3.8L	Other	2003 MY	PCM	•	•	•	•
Mustang	3. 8L	Other	2003 MY	RCM	•	•	•	•
Mustang	3.8L	Other	2004 MY	ABS/TCS	•	•	•	•
Mustang	3. 8L	Other	2004 MY	GEM	•	•	•	•
Mustang	3.8L	Other	2004 MY	HEC	•	•	•	•
Mustang	3.8L	Other	2004 MY	PCM	•	•	•	•
Mustang	3.8L	Other	2004 MY	RCM	•	•	•	•
Mustang	3. 9L	Other	2004 MY	ABS/TCS	•	•	•	•
Mustang	3. 9L	Other	2004 MY	GEM	•	•	•	•
Mustang	3. 9L	Other	2004 MY	HEC	•	•	•	•
Mustang	3. 9L	Other	2004 MY	PCM	•	•	•	•
Mustang	3. 9L	Other	2004 MY	RCM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2005 MY	ABS	•	•	•	•
Mustang	4. 0L	V6 SOHC	2005 MY	ACM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2005 MY	GEM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2005 MY	IC	•	•	•	•
Mustang	4. 0L	V6 SOHC	2005 MY	PCM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2005 MY	RCM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2006 MY	ABS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mustang	4. 0L	V6 SOHC	2006 MY	ACM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2006 MY	GEM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2006 MY	IC	•	•	•	•
Mustang	4. 0L	V6 SOHC	2006 MY	PCM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2006 MY	RCM	•	•		•
Mustang	4. 0L	V6 SOHC	2007 MY	ABS	•	•	•	•
Mustang	4. 0L	V6 SOHC	2007 MY	ACM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2007 MY	GEM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2007 MY	IC	•	•	•	•
Mustang	4. 0L	V6 SOHC	2007 MY	PCM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2007 MY	RCM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2007 MY	SDARS	•	•	•	•
Mustang	4. 0L	V6 SOHC	2008 MY	ABS	•	•	•	•
Mustang	4. 0L	V6 SOHC	2008 MY	ACM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2008 MY	GEM / SJB	•			•
Mustang	4. 0L	V6 SOHC	2008 MY	IC	•			•
Mustang	4. 0L	V6 SOHC	2008 MY	PCM	•			•
Mustang	4. 0L	V6 SOHC	2008 MY	RCM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2008 MY	SDARS	•			•
Mustang	4. 0L	V6 SOHC	2009 MY	ABS	•			•
Mustang	4. 0L	V6 SOHC	2009 MY	ACM	•			•
Mustang	4. 0L	V6 SOHC	2009 MY	APIM	•	•	•	0
Mustang	4. 0L	V6 SOHC	2009 MY	GEM / SJB	•	•	•	•
Mustang	4. 0L	V6 SOHC	2009 MY	IC	•	•	•	•
Mustang	4. 0L	V6 SOHC	2009 MY	PCM	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mustang	4. 0L	V6 SOHC	2009 MY	RCM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2009 MY	SDARS	•	•	•	•
Mustang	4. 0L	V6 SOHC	2010 MY	ABS	•	•	•	•
Mustang	4. 0L	V6 SOHC	2010 MY	ACM	•	•	•	0
Mustang	4. 0L	V6 SOHC	2010 MY	APIM	•	•	•	0
Mustang	4. 0L	V6 SOHC	2010 MY	BCM-B	•	•	•	•
Mustang	4. 0L	V6 SOHC	2010 MY	FCIM	•	•	•	0
Mustang	4. 0L	V6 SOHC	2010 MY	FDIM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2010 MY	GEM / SJB	•	•	•	•
Mustang	4. 0L	V6 SOHC	2010 MY	GPSM	•	•	•	0
Mustang	4. 0L	V6 SOHC	2010 MY	HVAC	•	•	•	•
Mustang	4. 0L	V6 SOHC	2010 MY	IPC	•	•	•	•
Mustang	4. 0L	V6 SOHC	2010 MY	OCSM	•	•	•	0
Mustang	4. 0L	V6 SOHC	2010 MY	PCM	•	•	•	•
Mustang	4. 0L	V6 SOHC	2010 MY	RCM	•	•	•	0
Mustang	4. 6L	2V	1996 MY	ABS/TCS	•	•	•	•
Mustang	4. 6L	2V	1996 MY	IAB	•	•	•	•
Mustang	4. 6L	2V	1996 MY	PATS	•	•	•	•
Mustang	4. 6L	2V	1996 MY	PCM	•	•	•	•
Mustang	4. 6L	2V	1997 MY	ABS/TCS	•	•	•	•
Mustang	4. 6L	2V	1997 MY	IAB	•	•	•	•
Mustang	4. 6L	2V	1997 MY	PATS	•	•	•	•
Mustang	4. 6L	2V	1997 MY	PCM	•	•	•	•
Mustang	4. 6L	2V	1998 MY	ABS/TCS	•	•	•	•
Mustang	4. 6L	2V	1998 MY	IAB	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Mustang	4. 6L	2V	1998 MY	PATS	•	•	•	•
Mustang	4. 6L	2V	1998 MY	PCM	•	•	•	•
Mustang	4. 6L	2V	1999 MY	ABS/TCS	•	•	•	•
Mustang	4. 6L	2V	1999 MY	GEM	•	•	•	•
Mustang	4.6L	2V	1999 MY	HEC	•	•	•	•
Mustang	4.6L	2V	1999 MY	PCM	•	•	•	•
Mustang	4.6L	2V	1999 MY	RCM	•	•	•	•
Mustang	4. 6L	2V	2000 MY	ABS/TCS	•	•	•	•
Mustang	4. 6L	2V	2000 MY	GEM	•	•	•	•
Mustang	4. 6L	2V	2000 MY	HEC	•	•	•	•
Mustang	4.6L	2V	2000 MY	PCM	•	•	•	•
Mustang	4.6L	2V	2000 MY	RCM	•	•	•	•
Mustang	4.6L	2V	2002 MY	ABS/TCS	•	•	•	•
Mustang	4. 6L	2V	2002 MY	GEM	•	•	•	•
Mustang	4. 6L	2V	2002 MY	HEC	•	•	•	•
Mustang	4. 6L	2V	2002 MY	PCM	•	•	•	•
Mustang	4. 6L	2V	2002 MY	RCM	•	•	•	•
Mustang	4. 6L	2V	2003 MY	ABS/TCS	•	•	•	•
Mustang	4. 6L	2V	2003 MY	GEM	•	•	•	•
Mustang	4. 6L	2V	2003 MY	HEC	•	•	•	•
Mustang	4. 6L	2V	2003 MY	PCM	•	•	•	•
Mustang	4. 6L	2V	2003 MY	RCM	•	•	•	•
Mustang	4. 6L	2V	2004 MY	ABS/TCS	•	•	•	•
Mustang	4. 6L	2V	2004 MY	GEM	•	•	•	•
Mustang	4. 6L	2V	2004 MY	HEC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mustang	4. 6L	2V	2004 MY	PCM	•	•	•	•
Mustang	4. 6L	2V	2004 MY	RCM	•	•	•	•
Mustang	4. 6L	3V	2005 MY	ABS	•	•	•	•
Mustang	4. 6L	3V	2005 MY	ACM	•	•	•	•
Mustang	4. 6L	3V	2005 MY	GEM	•	•	•	•
Mustang	4. 6L	3V	2005 MY	IC	•	•	•	•
Mustang	4. 6L	3V	2005 MY	PCM	•	•	•	•
Mustang	4. 6L	3V	2005 MY	RCM	•	•	•	•
Mustang	4. 6L	3V	2006 MY	ABS	•		•	•
Mustang	4. 6L	3V	2006 MY	ACM	•		•	•
Mustang	4. 6L	3V	2006 MY	GEM	•		•	•
Mustang	4. 6L	3V	2006 MY	IC	•	•	•	•
Mustang	4. 6L	3V	2006 MY	PCM	•	•	•	•
Mustang	4. 6L	3V	2006 MY	RCM	•		•	•
Mustang	4. 6L	3V	2007 MY	ABS	•		•	•
Mustang	4. 6L	3V	2007 MY	ACM	•		•	•
Mustang	4. 6L	3V	2007 MY	GEM	•	•	•	•
Mustang	4. 6L	3V	2007 MY	IC	•		•	•
Mustang	4. 6L	3V	2007 MY	PCM	•	•	•	
Mustang	4. 6L	3V	2007 MY	RCM	•	•	•	•
Mustang	4. 6L	3V	2007 MY	SDARS	•	•	•	•
Mustang	4. 6L	3V	2008 MY	ABS	•	•	•	•
Mustang	4. 6L	3V	2008 MY	ACM	•	•	•	•
Mustang	4. 6L	3V	2008 MY	GEM / SJB	•	•	•	•
Mustang	4. 6L	3V	2008 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mustang	4. 6L	3V	2008 MY	PCM	•	•	•	
Mustang	4. 6L	3V	2008 MY	RCM	•	•	•	•
Mustang	4. 6L	3V	2008 MY	SDARS	•	•	•	•
Mustang	4. 6L	3V	2009 MY	ABS	•		•	•
Mustang	4. 6L	3V	2009 MY	ACM	•	•		•
Mustang	4. 6L	3V	2009 MY	APIM	•	•	•	0
Mustang	4. 6L	3V	2009 MY	GEM / SJB	•	•	•	•
Mustang	4. 6L	3V	2009 MY	IC	•	•	•	•
Mustang	4. 6L	3V	2009 MY	PCM	•	•	•	•
Mustang	4. 6L	3V	2009 MY	RCM	•	•	•	•
Mustang	4. 6L	3V	2009 MY	SDARS	•	•	•	•
Mustang	4. 6L	3V	2010 MY	ABS	•	•	•	
Mustang	4. 6L	3V	2010 MY	ACM	•	•	•	0
Mustang	4. 6L	3V	2010 MY	APIM	•	•	•	0
Mustang	4. 6L	3V	2010 MY	BCM-B	•	•	•	•
Mustang	4. 6L	3V	2010 MY	FCIM	•	•	•	0
Mustang	4. 6L	3V	2010 MY	FDIM	•			•
Mustang	4. 6L	3V	2010 MY	GEM / SJB	•	•	•	•
Mustang	4.6L	3V	2010 MY	GPSM	•			0
Mustang	4.6L	3V	2010 MY	HVAC	•			•
Mustang	4. 6L	3V	2010 MY	IPC	•			•
Mustang	4. 6L	3V	2010 MY	OCSM	•	•	•	0
Mustang	4. 6L	3V	2010 MY	PCM	•	•	•	•
Mustang	4. 6L	3V	2010 MY	RCM	•	•	•	0
Mustang	4. 6L	4V	1996 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mustang	4. 6L	4V	1996 MY	IAB	•	•	•	•
Mustang	4. 6L	4V	1996 MY	PATS	•	•	•	•
Mustang	4. 6L	4V	1996 MY	PCM	•	•	•	•
Mustang	4. 6L	4V	1997 MY	ABS/TCS	•	•	•	•
Mustang	4.6L	4V	1997 MY	IAB	•	•	•	•
Mustang	4.6L	4V	1997 MY	PATS	•	•	•	•
Mustang	4.6L	4V	1997 MY	PCM	•	•	•	•
Mustang	4. 6L	4V	1998 MY	ABS/TCS	•	•	•	•
Mustang	4. 6L	4V	1998 MY	IAB	•	•	•	•
Mustang	4. 6L	4V	1998 MY	PATS	•	•	•	•
Mustang	4. 6L	4V	1998 MY	PCM	•	•	•	•
Mustang	4.6L	4V	1999 MY	ABS/TCS	•	•	•	•
Mustang	4.6L	4V	1999 MY	GEM	•	•	•	•
Mustang	4. 6L	4V	1999 MY	HEC	•	•	•	•
Mustang	4. 6L	4V	1999 MY	PCM	•	•	•	•
Mustang	4. 6L	4V	1999 MY	RCM	•	•	•	•
Mustang	4. 6L	4V	2000 MY	ABS/TCS	•	•	•	•
Mustang	4. 6L	4V	2000 MY	GEM	•	•	•	•
Mustang	4. 6L	4V	2000 MY	HEC	•	•	•	•
Mustang	4. 6L	4V	2000 MY	PCM	•	•	•	•
Mustang	4. 6L	4V	2000 MY	RCM	•	•	•	•
Mustang	4. 6L	4V	2003 MY	ABS/TCS	•	•	•	•
Mustang	4. 6L	4V	2003 MY	GEM	•	•	•	•
Mustang	4. 6L	4V	2003 MY	HEC	•	•	•	•
Mustang	4. 6L	4V	2003 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mustang	4.6L	4V	2003 MY	RCM	•	•	•	•
Mustang	4. 6L	4V	2004 MY	ABS/TCS	•	•	•	•
Mustang	4. 6L	4V	2004 MY	GEM	•	•	•	•
Mustang	4. 6L	4V	2004 MY	HEC	•		•	•
Mustang	4. 6L	4V	2004 MY	PCM	•	•		•
Mustang	4. 6L	4V	2004 MY	RCM	•	•	•	•
Mustang	4.6L	Other	1996 MY	ABS/TCS	•	•	•	•
Mustang	4. 6L	Other	1996 MY	PCM	•	•	•	•
Mustang	4. 6L	Other	1997 MY	ABS/TCS	•	•	•	•
Mustang	4. 6L	Other	1997 MY	PCM	•	•	•	•
Mustang	5. 0L	4V	2011 MY	ABS	•	•	•	•
Mustang	5. 0L	4V	2011 MY	ACM	•	•	•	0
Mustang	5. 0L	4V	2011 MY	APIM	•	•	•	0
Mustang	5. 0L	4V	2011 MY	BCM-B	•	•	•	•
Mustang	5. 0L	4V	2011 MY	FCIM	•			0
Mustang	5. 0L	4V	2011 MY	FDIM	•			•
Mustang	5. 0L	4V	2011 MY	GEM / SJB	•	•	•	•
Mustang	5. 0L	4V	2011 MY	GPSM	•	•	•	0
Mustang	5. 0L	4V	2011 MY	HVAC	•			•
Mustang	5. 0L	4V	2011 MY	IPC	•		•	•
Mustang	5. 0L	4V	2011 MY	OCSM	•			0
Mustang	5. 0L	4V	2011 MY	PCM	•	•	•	•
Mustang	5. 0L	4V	2011 MY	RCM	•	•	•	0
Mustang	5.4L	4V	2007 MY	ABS	•	•	•	•
Mustang	5. 4L	4V	2007 MY	ACM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mustang	5. 4L	4V	2007 MY	GEM	•	•	•	•
Mustang	5. 4L	4V	2007 MY	IC	•	•	•	•
Mustang	5. 4L	4V	2007 MY	PCM	•	•	•	•
Mustang	5. 4L	4V	2007 MY	RCM	•	•	•	•
Mustang	5. 4L	4V	2007 MY	SDARS	•	•		•
Mustang	5. 4L	4V	2008 MY	ABS	•	•	•	•
Mustang	5. 4L	4V	2008 MY	ACM	•	•	•	•
Mustang	5. 4L	4V	2008 MY	GEM / SJB	•	•		•
Mustang	5. 4L	4V	2008 MY	IC	•	•	•	•
Mustang	5. 4L	4V	2008 MY	PCM	•	•		•
Mustang	5. 4L	4V	2008 MY	RCM	•	•		•
Mustang	5. 4L	4V	2008 MY	SDARS	•	•		•
Mustang	5. 4L	4V	2009 MY	ABS	•	•	•	•
Mustang	5. 4L	4V	2009 MY	ACM	•	•	•	•
Mustang	5. 4L	4V	2009 MY	APIM	•	•		0
Mustang	5. 4L	4V	2009 MY	GEM / SJB	•	•		•
Mustang	5. 4L	4V	2009 MY	IC	•	•		•
Mustang	5. 4L	4V	2009 MY	PCM	•	•		•
Mustang	5. 4L	4V	2009 MY	RCM	•	•	•	•
Mustang	5. 4L	4V	2009 MY	SDARS	•	•	•	•
Mustang	5. 4L	4V	2010 MY	ABS	•	•	•	•
Mustang	5. 4L	4V	2010 MY	ACM	•	•	•	0
Mustang	5. 4L	4V	2010 MY	APIM	•	•	•	0
Mustang	5. 4L	4V	2010 MY	BCM-B	•	•	•	•
Mustang	5. 4L	4V	2010 MY	FCIM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Mustang	5. 4L	4V	2010 MY	FDIM	•	•	•	•
Mustang	5. 4L	4V	2010 MY	GEM / SJB	•	•	•	•
Mustang	5. 4L	4V	2010 MY	GPSM	•	•	•	0
Mustang	5. 4L	4V	2010 MY	HVAC	•	•	•	•
Mustang	5. 4L	4V	2010 MY	IPC	•	•	•	•
Mustang	5. 4L	4V	2010 MY	OCSM	•	•	•	0
Mustang	5. 4L	4V	2010 MY	PCM	•	•	•	•
Mustang	5. 4L	4V	2010 MY	RCM	•	•	•	0
Mustang	5. 4L	4V	2011 MY	ABS	•	•	•	•
Mustang	5. 4L	4V	2011 MY	ACM	•	•	•	0
Mustang	5. 4L	4V	2011 MY	APIM	•	•	•	0
Mustang	5. 4L	4V	2011 MY	BCM-B	•	•	•	•
Mustang	5. 4L	4V	2011 MY	FCIM	•	•	•	0
Mustang	5. 4L	4V	2011 MY	FDIM	•	•	•	•
Mustang	5. 4L	4V	2011 MY	GEM / SJB	•	•	•	•
Mustang	5. 4L	4V	2011 MY	GPSM	•	•	•	0
Mustang	5. 4L	4V	2011 MY	HVAC	•	•	•	•
Mustang	5. 4L	4V	2011 MY	IPC	•	•	•	•
Mustang	5. 4L	4V	2011 MY	OCSM	•	•	•	0
Mustang	5. 4L	4V	2011 MY	PCM	•	•	•	•
Mustang	5. 4L	4V	2011 MY	RCM	•	•	•	0
Mustang	5. 4L	Other	2000 MY	ABS/TCS	•	•	•	•
Mustang	5. 4L	Other	2000 MY	PCM	•	•	•	•
Navigator	5. 4L	3V	2005 MY	4X4	•	•	•	•
Navigator	5. 4L	3V	2005 MY	ABS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Navigator	5. 4L	3V	2005 MY	DCSM	•	•	•	•
Navigator	5. 4L	3V	2005 MY	DSM	•	•	•	
Navigator	5. 4L	3V	2005 MY	EATC	•	•	•	•
Navigator	5. 4L	3V	2005 MY	IC	•	•	•	•
Navigator	5. 4L	3V	2005 MY	LTM	•	•	•	
Navigator	5. 4L	3V	2005 MY	NAV	•	•	•	0
Navigator	5. 4L	3V	2005 MY	PAM	•	•	•	0
Navigator	5. 4L	3V	2005 MY	PCM	•	•	•	•
Navigator	5. 4L	3V	2005 MY	RCM	•	•	•	•
Navigator	5. 4L	3V	2005 MY	TCM	•	•	•	0
Navigator	5. 4L	3V	2005 MY	VDM	•	•	•	
Navigator	5. 4L	3V	2005 MY	VSM	•	•	•	
Navigator	5. 4L	3V	2006 MY	4X4	•	•	•	•
Navigator	5. 4L	3V	2006 MY	ABS	•	•	•	•
Navigator	5. 4L	3V	2006 MY	DCSM	•	•	•	•
Navigator	5. 4L	3V	2006 MY	DSM	•	•	•	
Navigator	5. 4L	3V	2006 MY	EATC	•	•	•	•
Navigator	5. 4L	3V	2006 MY	IC	•	•	•	•
Navigator	5. 4L	3V	2006 MY	LTM	•	•	•	
Navigator	5. 4L	3V	2006 MY	NAV	•	•	•	0
Navigator	5. 4L	3V	2006 MY	PAM	•	•	•	0
Navigator	5. 4L	3V	2006 MY	PCM	•	•	•	•
Navigator	5. 4L	3V	2006 MY	RCM	•	•	•	•
Navigator	5. 4L	3V	2006 MY	TCM	•	•	•	0
Navigator	5. 4L	3V	2006 MY	VDM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Navigator	5. 4L	3V	2006 MY	VSM	•	•	•	•
Navigator	5. 4L	3V	2007 MY	4X4	•	•	•	•
Navigator	5. 4L	3V	2007 MY	ABS	•	•	•	•
Navigator	5. 4L	3V	2007 MY	ACM	•	•	•	
Navigator	5. 4L	3V	2007 MY	DCSM	•	•		•
Navigator	5. 4L	3V	2007 MY	DSM	•	•	•	•
Navigator	5. 4L	3V	2007 MY	DSP	•	•	•	0
Navigator	5. 4L	3V	2007 MY	EATC	•	•		
Navigator	5. 4L	3V	2007 MY	GEM	•		•	
Navigator	5. 4L	3V	2007 MY	IC	•			•
Navigator	5. 4L	3V	2007 MY	LTM	•			0
Navigator	5. 4L	3V	2007 MY	PAM	•	•		0
Navigator	5. 4L	3V	2007 MY	PCM	•	•	•	•
Navigator	5. 4L	3V	2007 MY	PRB	•		•	•
Navigator	5. 4L	3V	2007 MY	RCM	•			•
Navigator	5. 4L	3V	2007 MY	RCU	•			0
Navigator	5. 4L	3V	2007 MY	RETM	•	•	•	0
Navigator	5. 4L	3V	2007 MY	SDARS	•			•
Navigator	5. 4L	3V	2007 MY	TCM	•	•	•	0
Navigator	5. 4L	3V	2007 MY	VDM	•	•	•	
Navigator	5. 4L	3V	2008 MY	4X4	•	•	•	•
Navigator	5. 4L	3V	2008 MY	ABS	•	•	•	•
Navigator	5. 4L	3V	2008 MY	ACM	•	•	•	
Navigator	5. 4L	3V	2008 MY	APIM	•	•	•	0
Navigator	5. 4L	3V	2008 MY	DCSM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Navigator	5. 4L	3V	2008 MY	DSM	•	•	•	•
Navigator	5. 4L	3V	2008 MY	DSP	•	•	•	0
Navigator	5. 4L	3V	2008 MY	GEM / SJB	•	•	•	•
Navigator	5. 4L	3V	2008 MY	HVAC	•	•	•	•
Navigator	5. 4L	3V	2008 MY	IC		•	•	•
Navigator	5.4L	3V	2008 MY	LTM	•	•	•	0
Navigator	5.4L	3V	2008 MY	PAM	•	•	•	0
Navigator	5. 4L	3V	2008 MY	PCM	•	•	•	•
Navigator	5. 4L	3V	2008 MY	PRB	•	•	•	•
Navigator	5.4L	3V	2008 MY	RCM	•	•	•	
Navigator	5.4L	3V	2008 MY	RCU	•	•	•	
Navigator	5.4L	3V	2008 MY	RETM	•	•	•	0
Navigator	5.4L	3V	2008 MY	SDARS	•	•	•	•
Navigator	5. 4L	3V	2008 MY	TCM	•	•	•	0
Navigator	5. 4L	3V	2008 MY	VDM	•	•	•	
Navigator	5. 4L	3V	2009 MY	4X4		•	•	•
Navigator	5. 4L	3V	2009 MY	ABS		•	•	•
Navigator	5.4L	3V	2009 MY	ACM	•	•	•	
Navigator	5. 4L	3V	2009 MY	APIM	•	•	•	0
Navigator	5. 4L	3V	2009 MY	DCSM	•	•	•	•
Navigator	5. 4L	3V	2009 MY	DSM	•	•	•	•
Navigator	5. 4L	3V	2009 MY	DSP	•	•	•	0
Navigator	5. 4L	3V	2009 MY	GEM / SJB	•	•	•	•
Navigator	5. 4L	3V	2009 MY	HVAC	•	•	•	•
Navigator	5. 4L	3V	2009 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Navigator	5. 4L	3V	2009 MY	LTM	•	•	•	0
Navigator	5. 4L	3V	2009 MY	PAM	•	•	•	•
Navigator	5. 4L	3V	2009 MY	PCM	•	•	•	•
Navigator	5. 4L	3V	2009 MY	PRB	•	•	•	•
Navigator	5. 4L	3V	2009 MY	RCM	•	•	•	
Navigator	5. 4L	3V	2009 MY	RCU	•	•	•	
Navigator	5. 4L	3V	2009 MY	RETM	•	•	•	0
Navigator	5. 4L	3V	2009 MY	SDARS	•	•	•	•
Navigator	5. 4L	3V	2009 MY	TCM	•	•	•	•
Navigator	5. 4L	3V	2009 MY	VDM	•	•	•	
Navigator	5. 4L	3V	2010 MY	ABS	•	•	•	
Navigator	5. 4L	3V	2010 MY	ACM	•	•	•	
Navigator	5. 4L	3V	2010 MY	APIM	•	•	•	0
Navigator	5. 4L	3V	2010 MY	DCSM	•	•	•	•
Navigator	5. 4L	3V	2010 MY	DSM	•	•	•	•
Navigator	5. 4L	3V	2010 MY	DSP	•	•	•	0
Navigator	5. 4L	3V	2010 MY	GEM / SJB	•	•	•	•
Navigator	5. 4L	3V	2010 MY	GPSM	•	•	•	0
Navigator	5. 4L	3V	2010 MY	HVAC	•	•	•	•
Navigator	5. 4L	3V	2010 MY	IC	•	•	•	•
Navigator	5. 4L	3V	2010 MY	LTM	•	•	•	0
Navigator	5. 4L	3V	2010 MY	PAM	•	•	•	
Navigator	5. 4L	3V	2010 MY	PCM	•	•	•	•
Navigator	5. 4L	3V	2010 MY	PRB	•	•	•	•
Navigator	5. 4L	3V	2010 MY	RCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Navigator	5. 4L	3V	2010 MY	RCU	•	•	•	•
Navigator	5. 4L	3V	2010 MY	RETM	•	•	•	0
Navigator	5. 4L	3V	2010 MY	SDARS	•	•	•	•
Navigator	5. 4L	3V	2010 MY	TCCM	•	•	•	•
Navigator	5. 4L	3V	2010 MY	TCM	•	•	•	•
Navigator	5. 4L	3V	2010 MY	VDM	•	•	•	
Navigator	5. 4L	4V	1999 MY	4WAS	•	•	•	•
Navigator	5. 4L	4V	1999 MY	ABS/TCS	•	•	•	•
Navigator	5. 4L	4V	1999 MY	DSM	•	•	•	•
Navigator	5. 4L	4V	1999 MY	EATC	•	•	•	0
Navigator	5. 4L	4V	1999 MY	GEM	•	•	•	•
Navigator	5. 4L	4V	1999 MY	HEC	•	•	•	•
Navigator	5. 4L	4V	1999 MY	PCM	•	•	•	•
Navigator	5. 4L	4V	1999 MY	RAP	•	•	•	•
Navigator	5. 4L	4V	1999 MY	RCM	•	•	•	•
Navigator	5. 4L	4V	2000 MY	4WAS	•	•	•	•
Navigator	5. 4L	4V	2000 MY	ABS/TCS	•	•	•	•
Navigator	5. 4L	4V	2000 MY	DSM	•	•	•	•
Navigator	5. 4L	4V	2000 MY	EATC	•	•	•	0
Navigator	5. 4L	4V	2000 MY	GEM	•	•	•	•
Navigator	5. 4L	4V	2000 MY	HEC	•	•	•	•
Navigator	5. 4L	4V	2000 MY	PAM	•	•	•	•
Navigator	5. 4L	4V	2000 MY	PCM	•	•	•	•
Navigator	5. 4L	4V	2000 MY	RAP	•	•	•	•
Navigator	5. 4L	4V	2000 MY	RCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Navigator	5. 4L	4V	2003 MY	4X4	•	•	•	•
Navigator	5. 4L	4V	2003 MY	ABS/TCS	•	•	•	•
Navigator	5. 4L	4V	2003 MY	DCSM	•	•	•	•
Navigator	5. 4L	4V	2003 MY	DSM	•	•	•	•
Navigator	5. 4L	4V	2003 MY	EATC	•	•	•	•
Navigator	5. 4L	4V	2003 MY	HEC	•	•	•	•
Navigator	5. 4L	4V	2003 MY	NAV	•	•	•	0
Navigator	5. 4L	4V	2003 MY	PAM	•	•	•	0
Navigator	5. 4L	4V	2003 MY	PCM	•	•	•	•
Navigator	5. 4L	4V	2003 MY	PCSM	•	•	•	•
Navigator	5. 4L	4V	2003 MY	RCM	•	•	•	•
Navigator	5. 4L	4V	2003 MY	TPM	•	•	•	•
Navigator	5. 4L	4V	2003 MY	VDM	•	•	•	•
Navigator	5. 4L	4V	2003 MY	VSM	•	•	•	•
Navigator	5. 4L	4V	2004 MY	4X4	•	•	•	•
Navigator	5. 4L	4V	2004 MY	ABS/TCS	•	•	•	•
Navigator	5. 4L	4V	2004 MY	DCSM	•	•	•	•
Navigator	5. 4L	4V	2004 MY	DSM	•	•	•	•
Navigator	5. 4L	4V	2004 MY	EATC	•	•	•	•
Navigator	5. 4L	4V	2004 MY	HEC	•	•	•	•
Navigator	5. 4L	4V	2004 MY	LTM	•	•	•	•
Navigator	5. 4L	4V	2004 MY	NAV	•	•	•	0
Navigator	5. 4L	4V	2004 MY	PAM	•	•	•	0
Navigator	5. 4L	4V	2004 MY	PCM	•	•	•	•
Navigator	5. 4L	4V	2004 MY	PCSM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Navigator	5. 4L	4V	2004 MY	RCM	•	•	•	•
Navigator	5. 4L	4V	2004 MY	TPM	•	•	•	•
Navigator	5. 4L	4V	2004 MY	VDM	•	•	•	•
Navigator	5. 4L	4V	2004 MY	VSM	•		•	•
Navigator	5. 4L	Other	1998 MY	4WAS	•		•	•
Navigator	5. 4L	Other	1998 MY	ABS/TCS	•	•	•	•
Navigator	5. 4L	Other	1998 MY	DSM	•	•	•	•
Navigator	5. 4L	Other	1998 MY	GEM	•		•	•
Navigator	5. 4L	Other	1998 MY	IAB	•		•	•
Navigator	5. 4L	Other	1998 MY	PATS	•		•	•
Navigator	5. 4L	Other	1998 MY	PCM	•		•	•
Navigator	5. 4L	Other	1998 MY	RAP	•		•	•
Navigator	5. 4L	Other	1998 MY	RCC	•		•	0
Navigator EL	5. 4L	3V	2007 MY	4X4	•		•	•
Navigator EL	5. 4L	3V	2007 MY	ABS	•		•	•
Navigator EL	5. 4L	3V	2007 MY	ACM	•		•	•
Navigator EL	5. 4L	3V	2007 MY	DCSM	•		•	•
Navigator EL	5. 4L	3V	2007 MY	DSM	•		•	•
Navigator EL	5. 4L	3V	2007 MY	DSP	•		•	0
Navigator EL	5. 4L	3V	2007 MY	EATC	•		•	
Navigator EL	5. 4L	3V	2007 MY	GEM	•		•	
Navigator EL	5. 4L	3V	2007 MY	IC	•		•	•
Navigator EL	5. 4L	3V	2007 MY	LTM	•		•	0
Navigator EL	5. 4L	3V	2007 MY	PAM	•	•	•	0
Navigator EL	5. 4L	3V	2007 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Navigator EL	5. 4L	3V	2007 MY	PRB	Codes	Codes	•	• Test
Navigator EL	5. 4L	3V	2007 MY	RCM	•	•	•	•
Navigator EL	5. 4L	3V	2007 MY	RCU	•	•	•	0
Navigator EL	5. 4L	3V	2007 MY	RETM	•	•	•	0
Navigator EL	5. 4L	3V	2007 MY	SDARS	•	•	•	•
Navigator EL	5. 4L	3V	2007 MY	TCM	•	•	•	0
Navigator EL	5. 4L	3V	2007 MY	VDM	•	•	•	
Navigator EL	5. 4L	3V	2008 MY	4X4	•	•	•	•
Navigator EL	5. 4L	3V	2008 MY	ABS	•	•	•	•
Navigator EL	5. 4L	3V	2008 MY	ACM	•	•	•	•
Navigator EL	5. 4L	3V	2008 MY	APIM	•	•	•	0
Navigator EL	5. 4L	3V	2008 MY	DCSM	•	•	•	•
Navigator EL	5. 4L	3V	2008 MY	DSM	•	•	•	•
Navigator EL	5. 4L	3V	2008 MY	DSP	•	•	•	0
Navigator EL	5. 4L	3V	2008 MY	GEM / SJB	•	•	•	•
Navigator EL	5. 4L	3V	2008 MY	HVAC	•	•	•	•
Navigator EL	5. 4L	3V	2008 MY	IC	•	•	•	•
Navigator EL	5. 4L	3V	2008 MY	LTM	•	•	•	0
Navigator EL	5. 4L	3V	2008 MY	PAM	•	•	•	0
Navigator EL	5. 4L	3V	2008 MY	PCM	•	•	•	•
Navigator EL	5. 4L	3V	2008 MY	PRB	•	•	•	•
Navigator EL	5. 4L	3V	2008 MY	RCM	•	•	•	
Navigator EL	5. 4L	3V	2008 MY	RCU	•	•	•	•
Navigator EL	5. 4L	3V	2008 MY	RETM	•	•	•	0
Navigator EL	5. 4L	3V	2008 MY	SDARS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Navigator EL	5.4L	3V	2008 MY	TCM	•	•	•	0
Navigator EL	5.4L	3V	2008 MY	VDM	•	•	•	
Navigator EL	5.4L	3V	2009 MY	4X4	•	•	•	•
Navigator EL	5.4L	3V	2009 MY	ABS	•	•	•	•
Navigator EL	5. 4L	3V	2009 MY	ACM	•	•	•	•
Navigator EL	5. 4L	3V	2009 MY	APIM	•	•	•	0
Navigator EL	5. 4L	3V	2009 MY	DCSM	•	•	•	•
Navigator EL	5. 4L	3V	2009 MY	DSM	•	•	•	•
Navigator EL	5. 4L	3V	2009 MY	DSP	•	•	•	0
Navigator EL	5. 4L	3V	2009 MY	GEM / SJB	•	•	•	•
Navigator EL	5. 4L	3V	2009 MY	HVAC	•	•	•	•
Navigator EL	5. 4L	3V	2009 MY	IC	•	•	•	•
Navigator EL	5. 4L	3V	2009 MY	LTM	•		•	0
Navigator EL	5. 4L	3V	2009 MY	PAM	•	•	•	•
Navigator EL	5. 4L	3V	2009 MY	PCM	•	•	•	•
Navigator EL	5. 4L	3V	2009 MY	PRB	•	•	•	•
Navigator EL	5. 4L	3V	2009 MY	RCM	•	•	•	
Navigator EL	5. 4L	3V	2009 MY	RCU	•	•	•	•
Navigator EL	5. 4L	3V	2009 MY	RETM	•	•	•	0
Navigator EL	5. 4L	3V	2009 MY	SDARS	•	•	•	•
Navigator EL	5. 4L	3V	2009 MY	TCM	•	•	•	•
Navigator EL	5. 4L	3V	2009 MY	VDM	•	•	•	
Navigator EL	5. 4L	3V	2010 MY	ABS	•	•	•	•
Navigator EL	5. 4L	3V	2010 MY	ACM	•	•	•	•
Navigator EL	5. 4L	3V	2010 MY	APIM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Navigator EL	5. 4L	3V	2010 MY	DCSM	•	•	•	•
Navigator EL	5. 4L	3V	2010 MY	DSM	•	•	•	•
Navigator EL	5. 4L	3V	2010 MY	DSP	•	•	•	0
Navigator EL	5. 4L	3V	2010 MY	GEM / SJB	•	•	•	•
Navigator EL	5. 4L	3V	2010 MY	GPSM	•	•	•	0
Navigator EL	5. 4L	3V	2010 MY	HVAC	•	•	•	•
Navigator EL	5. 4L	3V	2010 MY	IC	•	•	•	•
Navigator EL	5. 4L	3V	2010 MY	LTM	•	•	•	0
Navigator EL	5. 4L	3V	2010 MY	PAM	•	•	•	•
Navigator EL	5. 4L	3V	2010 MY	PCM	•	•	•	•
Navigator EL	5. 4L	3V	2010 MY	PRB	•	•	•	•
Navigator EL	5. 4L	3V	2010 MY	RCM	•	•	•	•
Navigator EL	5. 4L	3V	2010 MY	RCU	•	•	•	•
Navigator EL	5. 4L	3V	2010 MY	RETM	•	•	•	0
Navigator EL	5. 4L	3V	2010 MY	SDARS	•	•	•	•
Navigator EL	5. 4L	3V	2010 MY	TCCM	•	•	•	•
Navigator EL	5. 4L	3V	2010 MY	TCM	•	•	•	•
Navigator EL	5. 4L	3V	2010 MY	VDM	•	•	•	
NOVO KA			2008 MY	IC	•	•	•	•
NOVO KA			2008 MY	PCM	•	•	•	•
NOVO KA			2008 MY	RCM	•	•	•	•
NOVO KA			2008 MY	RKE	•	•	•	•
NOVO KA	1. OL	FFV	2008 MY	IC	•	•	•	•
NOVO KA	1. 0L	FFV	2008 MY	PCM	•	•	•	•
NOVO KA	1. 0L	FFV	2008 MY	RCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
NOVO KA	1. 0L	FFV	2008 MY	RKE	•	•	•	•
NOVO KA	1. 0L	FFV	2009 MY	IC	•	•	•	•
NOVO KA	1. 0L	FFV	2009 MY	PCM	•		•	•
NOVO KA	1. 0L	FFV	2009 MY	RCM	•	•	•	•
NOVO KA	1. 0L	FFV	2009 MY	RKE	•	•	•	•
NOVO KA	1. 0L	FFV	2009 MY	TBM	•	•	•	0
NOVO KA	1. 0L	FFV	2011 MY	IC	•	•	•	•
NOVO KA	1. 0L	FFV	2011 MY	PCM	•	•	•	•
NOVO KA	1. 0L	FFV	2011 MY	RCM	•	•	•	•
NOVO KA	1. 0L	FFV	2011 MY	RKE	•	•	•	
NOVO KA	1. 0L	FFV	2011 MY	TBM	•	•	•	0
NOVO KA	1. 0L	Zetec Rocam	2008 MY	IC	•	•	•	•
NOVO KA	1. 0L	Zetec Rocam	2008 MY	PCM	•	•	•	•
NOVO KA	1. 0L	Zetec Rocam	2008 MY	RCM	•	•	•	•
NOVO KA	1. 0L	Zetec Rocam	2008 MY	RKE	•	•	•	•
NOVO KA	1. 0L	Zetec Rocam	2009 MY	IC	•	•	•	•
NOVO KA	1. 0L	Zetec Rocam	2009 MY	PCM	•	•	•	
NOVO KA	1. 0L	Zetec Rocam	2009 MY	RCM	•	•	•	•
NOVO KA	1. 0L	Zetec Rocam	2009 MY	RKE	•	•	•	•
NOVO KA	1. 0L	Zetec Rocam	2009 MY	TBM	•	•	•	0
NOVO KA	1.6L	FFV	2008 MY	IC	•	•	•	
NOVO KA	1.6L	FFV	2008 MY	PCM	•	•	•	•
NOVO KA	1.6L	FFV	2008 MY	RCM	•	•	•	•
NOVO KA	1.6L	FFV	2008 MY	RKE	•	•	•	•
NOVO KA	1. 6L	FFV	2009 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
NOVO KA	1. 6L	FFV	2009 MY	PCM	•	•	•	•
NOVO KA	1. 6L	FFV	2009 MY	RCM	•	•	•	•
NOVO KA	1.6L	FFV	2009 MY	RKE	•	•	•	•
NOVO KA	1.6L	FFV	2009 MY	TBM		•	•	0
NOVO KA	1.6L	Zetec Rocam	2008 MY	IC	•	•	•	•
NOVO KA	1.6L	Zetec Rocam	2008 MY	PCM	•	•	•	•
NOVO KA	1.6L	Zetec Rocam	2008 MY	RCM	•	•	•	•
NOVO KA	1.6L	Zetec Rocam	2008 MY	RKE	•	•	•	•
NOVO KA	1.6L	Zetec Rocam	2009 MY	IC		•	•	•
NOVO KA	1.6L	Zetec Rocam	2009 MY	PCM		•	•	•
NOVO KA	1.6L	Zetec Rocam	2009 MY	RCM	•	•	•	•
NOVO KA	1.6L	Zetec Rocam	2009 MY	RKE	•	•	•	•
NOVO KA	1.6L	Zetec Rocam	2009 MY	TBM	•	•	•	0
PREMACY / IXION	1.8L	FP	1999 MY	ABS		•	•	•
PREMACY / IXION	1.8L	FP	2002 MY	ABS/TCS		•	•	•
PREMACY / IXION	1.8L	FP	2002 MY	PCM		•	•	•
PREMACY / IXION	1.8L	FP_DE	1999 MY	ABS		•	•	•
PREMACY / IXION	2. 0L	FS	2001 MY	ABS/TCS		•	•	•
PREMACY / IXION	2. 0L	FS	2001 MY	PCM		•	•	•
PREMACY / IXION	2. 0L	RF-T	1999 MY	ABS		•	•	0
PROBE / MX-6	2. 0L	Other	1996 MY	PCM		•	•	•
PROBE / MX-6	2. 0L	Other	1997 MY	PCM		•	•	•
PROBE / MX-6	2. 5L	KL	1996 MY	PCM		•	•	•
PROBE / MX-6	2. 5L	KL	1997 MY	PCM	•	•	•	•
Puma	1. 4L	Zetec-SE	19985 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Puma	1.4L	Zetec-SE	19985 MY	HEC	•	•	•	
Puma	1.4L	Zetec-SE	19985 MY	PATS	•	•	•	0
Puma	1.4L	Zetec-SE	19985 MY	PCM	•	•	•	•
Puma	1.4L	Zetec-SE	1999.5 MY	ABS/TCS	•	•	•	•
Puma	1.4L	Zetec-SE	1999.5 MY	GEM	•	•	•	•
Puma	1.4L	Zetec-SE	1999.5 MY	HEC	•	•	•	
Puma	1.4L	Zetec-SE	1999.5 MY	PATS	•	•	•	0
Puma	1.4L	Zetec-SE	1999.5 MY	PCM	•	•	•	•
Puma	1.6L	Zetec-SE	2001 MY	ABS/TCS	•	•	•	•
Puma	1.6L	Zetec-SE	2001 MY	GEM	•	•	•	•
Puma	1.6L	Zetec-SE	2001 MY	HEC	•	•	•	
Puma	1.6L	Zetec-SE	2001 MY	PATS	•	•	•	0
Puma	1.6L	Zetec-SE	2001 MY	PCM	•	•	•	•
Puma	1.7L	Zetec-SE	1997.5 MY	ABS/TCS	•	•	•	•
Puma	1.7L	Zetec-SE	1997.5 MY	HEC	•	•	•	
Puma	1.7L	Zetec-SE	1997.5 MY	PATS	•	•	•	0
Puma	1.7L	Zetec-SE	1997.5 MY	PCM	•	•	•	•
Puma	1.7L	Zetec-SE	1999.5 MY	ABS/TCS	•	•	•	•
Puma	1.7L	Zetec-SE	1999.5 MY	GEM	•	•	•	•
Puma	1.7L	Zetec-SE	1999.5 MY	HEC	•	•	•	
Puma	1.7L	Zetec-SE	1999.5 MY	PATS	•	•	•	0
Puma	1.7L	Zetec-SE	1999.5 MY	PCM	•	•	•	•
Puma	1.7L	Zetec-SE	2001 MY	ABS/TCS	•	•	•	•
Puma	1.7L	Zetec-SE	2001 MY	GEM	•	•	•	•
Puma	1.7L	Zetec-SE	2001 MY	HEC	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Puma	1. 7L	Zetec-SE	2001 MY	PATS	•	•	•	0
Puma	1.7L	Zetec-SE	2001 MY	PCM	•	•	•	•
Ranger	2. 3L	DURATEC-HE / I4	2006 MY	4X4	•	•	•	•
Ranger	2. 3L	DURATEC-HE / I4	2006 MY	ABS/TCS	•	•	•	•
Ranger	2. 3L	DURATEC-HE / I4	2006 MY	GEM	•	•	•	•
Ranger	2. 3L	DURATEC-HE / I4	2006 MY	IC	•	•	•	•
Ranger	2. 3L	DURATEC-HE / I4	2006 MY	PCM	•	•	•	•
Ranger	2. 3L	DURATEC-HE / I4	2006 MY	RCM	•	•	•	•
Ranger	2. 3L	DURATEC-HE / I4	2009.5 MY	4X4	•	•	•	•
Ranger	2. 3L	DURATEC-HE / I4	2009.5 MY	ABS/TCS	•	•	•	•
Ranger	2. 3L	DURATEC-HE / I4	2009.5 MY	GEM	•	•	•	
Ranger	2. 3L	DURATEC-HE / I4	2009.5 MY	IC	•	•	•	
Ranger	2. 3L	DURATEC-HE / I4	2009.5 MY	PCM	•	•	•	•
Ranger	2. 3L	DURATEC-HE / I4	2009.5 MY	RCM	•	•	•	•
Ranger	3. 0L	I4 DSL Electronic	2005.5 MY	4X4	•	•	•	•
Ranger	3. OL	I4 DSL Electronic	2005.5 MY	ABS/TCS	•	•	•	•
Ranger	3. OL	I4 DSL Electronic	2005.5 MY	GEM	•	•	•	
Ranger	3. OL	I4 DSL Electronic	2005.5 MY	IC	•	•	•	•
Ranger	3. OL	I4 DSL Electronic	2005.5 MY	PCM	•	•	•	•
Ranger	3. OL	I4 DSL Electronic	2005.5 MY	RCM	•	•	•	•
Ranger / Courier / Mazda B Series /Bravo	4. 0L	V6 SOHC	2003 MY	ABS/TCS	•	•	•	•
Ranger / Courier / Mazda B Series /Bravo	4. 0L	V6 SOHC	2003 MY	ES0F	•	•	•	•
Ranger / Courier / Mazda B Series /Bravo	4. 0L	V6 SOHC	2003 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier			2004 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier			2004 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Ranger / Mazda B Series / Courier			2004 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier			2004 MY	IC	•	•	•	0
Ranger / Mazda B Series / Courier			2004 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier			2004 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2004 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2004 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2004 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2004 MY	IC	•	•	•	0
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2004 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2004 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2005 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2005 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2005 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2005 MY	IC	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2005 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2005 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2005 MY	TPM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2006 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2006 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2006 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2006 MY	IC	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2006 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2006 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2007 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2007 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2007 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2007 MY	IC	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2007 MY	OCSM	•	•	•	0
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2007 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2007 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2007 MY	SDARS	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2008 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2008 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2008 MY	GEM / SJB		•	•	
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2008 MY	IC		•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2008 MY	OCSM		•	•	0
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2008 MY	PCM	•	•	•	
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2008 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2008 MY	SDARS	•	•	•	
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2009 MY	4X4		•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2009 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2009 MY	GEM / SJB		•	•	
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2009 MY	IC	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2009 MY	OCSM		•	•	0
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2009 MY	PCM		•	•	
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2009 MY	RCM		•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2009 MY	SDARS		•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2010 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2010 MY	ABS	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2010 MY	GEM / SJB	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2010 MY	IC	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2010 MY	OCSM	•	•	•	0
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2010 MY	PCM	•	•	•	
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2010 MY	RCM	•	•	•	0
Ranger / Mazda B Series / Courier	2. 3L	DURATEC-HE / I4	2010 MY	SDARS		•	•	•
Ranger / Mazda B Series / Courier	2. 3L	OHC	1995 MY	ABS/TCS		•	•	0
Ranger / Mazda B Series / Courier	2. 3L	OHC	1995 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	OHC	1995 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	OHC	1995 MY	RAP		•	•	•
Ranger / Mazda B Series / Courier	2. 3L	OHC	1996 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	2. 3L	OHC	1996 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	2. 3L	OHC	1996 MY	IAB		•	•	•
Ranger / Mazda B Series / Courier	2. 3L	OHC	1996 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	OHC	1996 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	OHC	1997 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	OHC	1997 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	2. 3L	OHC	1997 MY	IAB		•	•	•
Ranger / Mazda B Series / Courier	2. 3L	OHC	1997 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	OHC	1997 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	1996 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	1996 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	1996 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	1997 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	1997 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	1997 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Ranger / Mazda B Series / Courier	2. 3L	Other	2001 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	2001 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	2001 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	2001 MY	PATS	•	•	0	•
Ranger / Mazda B Series / Courier	2. 3L	Other	2001 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	2001 MY	RAP	•	•	•	
Ranger / Mazda B Series / Courier	2. 3L	Other	2001 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	2002 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	2002 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	2002 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	2002 MY	PCM	•	•	•	
Ranger / Mazda B Series / Courier	2. 3L	Other	2002 MY	RAP	•	•	•	
Ranger / Mazda B Series / Courier	2.3L	Other	2002 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	2003 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	2003 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	2003 MY	GEM	•	•	•	
Ranger / Mazda B Series / Courier	2. 3L	Other	2003 MY	PCM	•	•	•	
Ranger / Mazda B Series / Courier	2. 3L	Other	2003 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	2. 3L	Other	2003 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	1998 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	1998 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	1998 MY	IAB	•	•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	1998 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	1998 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	1999 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Ranger / Mazda B Series / Courier	2. 5L	Other	1999 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	1999 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	1999 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	1999 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	2000 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	2000 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	2000 MY	PCM		•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	2000 MY	RAP		•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	2000 MY	RCM		•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	2001 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	2001 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	2001 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	2001 MY	PATS		•	0	•
Ranger / Mazda B Series / Courier	2.5L	Other	2001 MY	PCM		•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	2001 MY	RAP		•	•	•
Ranger / Mazda B Series / Courier	2.5L	Other	2001 MY	RCM		•	•	•
Ranger / Mazda B Series / Courier	2.8L	Other	2001 MY	4X4		•	•	•
Ranger / Mazda B Series / Courier	2.8L	Other	2001 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	2.8L	Other	2001 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	2.8L	Other	2001 MY	PATS		•	0	•
Ranger / Mazda B Series / Courier	2.8L	Other	2001 MY	PCM		•	•	•
Ranger / Mazda B Series / Courier	2.8L	Other	2001 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	2.8L	Other	2001 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	FFV	1999 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	FFV	1999 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Ranger / Mazda B Series / Courier	3. 0L	FFV	1999 MY	PATS	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	FFV	1999 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	FFV	1999 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	FFV	1999 MY	RCM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	FFV	2000 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	FFV	2000 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	FFV	2000 MY	PATS		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	FFV	2000 MY	PCM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	FFV	2000 MY	RAP		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	FFV	2000 MY	RCM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1995 MY	ABS/TCS		•	•	0
Ranger / Mazda B Series / Courier	3. 0L	Other	1995 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1995 MY	PCM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1995 MY	RAP		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1996 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1996 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1996 MY	IAB		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1996 MY	PCM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1996 MY	RAP		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1997 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1997 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1997 MY	IAB	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1997 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1997 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1998 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Ranger / Mazda B Series / Courier	3. 0L	Other	1998 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1998 MY	IAB	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1998 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1998 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1999 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1999 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1999 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1999 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	1999 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2000 MY	ABS/TCS	•	•	•	
Ranger / Mazda B Series / Courier	3. 0L	Other	2000 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	3.0L	Other	2000 MY	PATS	•	•	•	•
Ranger / Mazda B Series / Courier	3.0L	0ther	2000 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2000 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2000 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2001 MY	4X4	•	•	•	
Ranger / Mazda B Series / Courier	3. 0L	Other	2001 MY	ABS/TCS	•	•	•	
Ranger / Mazda B Series / Courier	3.0L	0ther	2001 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2001 MY	PATS	•	•	0	
Ranger / Mazda B Series / Courier	3. 0L	Other	2001 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2001 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2001 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2002 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2002 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2002 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Ranger / Mazda B Series / Courier	3. 0L	Other	2002 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2002 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2002 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2003 MY	4X4		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2003 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2003 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2003 MY	PCM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2003 MY	RAP		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2003 MY	RCM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2004 MY	4X4		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2004 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2004 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2004 MY	IC		•	•	0
Ranger / Mazda B Series / Courier	3. 0L	Other	2004 MY	PCM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2004 MY	RCM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2005 MY	4X4		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2005 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2005 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2005 MY	IC		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2005 MY	PCM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2005 MY	RCM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2005 MY	TPM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2006 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2006 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2006 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Ranger / Mazda B Series / Courier	3. 0L	Other	2006 MY	IC	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2006 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2006 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2007 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2007 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2007 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2007 MY	IC	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2007 MY	OCSM		•	•	0
Ranger / Mazda B Series / Courier	3. 0L	Other	2007 MY	PCM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2007 MY	RCM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2007 MY	SDARS		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2008 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2008 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2008 MY	GEM / SJB		•	•	
Ranger / Mazda B Series / Courier	3. 0L	Other	2008 MY	IC		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2008 MY	OCSM		•	•	0
Ranger / Mazda B Series / Courier	3. 0L	Other	2008 MY	PCM		•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2008 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	3. 0L	Other	2008 MY	SDARS		•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1995 MY	ABS/TCS		•	•	0
Ranger / Mazda B Series / Courier	4. 0L	Other	1995 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	4.0L	Other	1995 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	4.0L	Other	1995 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1996 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1996 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Ranger / Mazda B Series / Courier	4. 0L	Other	1996 MY	IAB	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1996 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1996 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1997 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1997 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	4.0L	Other	1997 MY	IAB	•	•	•	•
Ranger / Mazda B Series / Courier	4.0L	Other	1997 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1997 MY	RAP		•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1998 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1998 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1998 MY	IAB		•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1998 MY	PCM		•	•	•
Ranger / Mazda B Series / Courier	4.0L	Other	1998 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1999 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1999 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1999 MY	PATS		•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1999 MY	PCM		•	•	
Ranger / Mazda B Series / Courier	4. 0L	Other	1999 MY	RAP		•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	1999 MY	RCM		•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	2000 MY	ABS/TCS		•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	2000 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	2000 MY	PATS	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	2000 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	4.0L	Other	2000 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	2000 MY	RCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Ranger / Mazda B Series / Courier	4. 0L	Other	2001 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	2001 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	2001 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	2001 MY	PATS	•	•	0	•
Ranger / Mazda B Series / Courier	4. 0L	Other	2001 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	2001 MY	RAP	•	•	•	
Ranger / Mazda B Series / Courier	4. 0L	Other	2001 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	2002 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	2002 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	2002 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	2002 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	2002 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	Other	2002 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2003 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2003 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2003 MY	GEM	•	•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2003 MY	PCM	•	•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2003 MY	RAP	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2003 MY	RCM	•	•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2004 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2004 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2004 MY	GEM	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2004 MY	IC	•	•	•	0
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2004 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2004 MY	RCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2005 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2005 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2005 MY	GEM		•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2005 MY	IC	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2005 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2005 MY	RCM	•	•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2005 MY	TPM	•	•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2006 MY	4X4		•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2006 MY	ABS/TCS		•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2006 MY	GEM		•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2006 MY	IC		•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2006 MY	PCM	•	•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2006 MY	RCM	•	•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2007 MY	4X4		•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2007 MY	ABS/TCS		•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2007 MY	GEM		•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2007 MY	IC		•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2007 MY	OCSM	•	•	•	0
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2007 MY	PCM		•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2007 MY	RCM		•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2007 MY	SDARS		•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2008 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2008 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2008 MY	GEM / SJB	•	•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2008 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Ranger / Mazda B Series / Courier	4. OL	V6 SOHC	2008 MY	OCSM	•	•	•	0
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2008 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2008 MY	RCM	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2008 MY	SDARS	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2009 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2009 MY	ABS/TCS	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2009 MY	GEM / SJB	•	•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2009 MY	IC	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2009 MY	OCSM	•	•	•	0
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2009 MY	PCM	•	•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2009 MY	RCM	•	•	•	
Ranger / Mazda B Series / Courier	4.0L	V6 SOHC	2009 MY	SDARS	•	•	•	
Ranger / Mazda B Series / Courier	4.0L	V6 SOHC	2010 MY	4X4	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2010 MY	ABS	•	•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2010 MY	GEM / SJB	•	•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2010 MY	IC	•	•	•	
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2010 MY	OCSM	•	•	•	0
Ranger / Mazda B Series / Courier	4.0L	V6 SOHC	2010 MY	PCM	•	•	•	•
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2010 MY	RCM	•	•	•	0
Ranger / Mazda B Series / Courier	4. 0L	V6 SOHC	2010 MY	SDARS	•	•	•	
ROADSTER / MX-5	1.6L	В6	2000 MY	ABS	•	•	•	
ROADSTER / MX-5	1.6L	В6	2002 MY	ABS/TCS	•	•	•	
ROADSTER / MX-5	1.6L	B6	2002 MY	PCM	•	•	•	•
ROADSTER / MX-5	1.8L	BP	2000 MY	ABS	•	•	•	•
ROADSTER / MX-5	1.8L	BP	2002 MY	ABS/TCS	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
ROADSTER / MX-5	1.8L	BP	2002 MY	PCM	•	•	•	•
ROADSTER / MX-5	1.8L	BP Turbo	2003 MY	ABS/TCS	•	•	•	•
ROADSTER / MX-5	1.8L	BP Turbo	2003 MY	PCM	•	•	•	•
ROADSTER / MX-5 (Japan / General Specs.)	2. 0L	LF	2005 MY	ABS	•	•	•	•
ROADSTER / MX-5 (Japan / General Specs.)	2. 0L	LF	2005 MY	IC	•	•	•	0
ROADSTER / MX-5 (Japan / General Specs.)	2. 0L	LF	2005 MY	PCM	•	•	•	•
ROADSTER / MX-5 (Japan / General Specs.)	2. 0L	LF	2005 MY	RCM	•	•	•	0
ROADSTER / MX-5 (Japan / General Specs.)	2. 0L	LF	2005 MY	RHT	•	•	•	0
ROADSTER / MX-5 (Japan / General Specs.)	2. 0L	LF	2005 MY	RKE	•	•	•	•
ROADSTER / MX-5 (Japan / General Specs.)	2. 0L	LF	2005 MY	TCM	•	•	•	•
ROADSTER / MX-5 (Japan / General Specs.)	2. 0L	LF	2008 MY	ABS	•	•	•	•
ROADSTER / MX-5 (Japan / General Specs.)	2. 0L	LF	2008 MY	IC	•	•	•	0
ROADSTER / MX-5 (Japan / General Specs.)	2. 0L	LF	2008 MY	PCM	•	•	•	•
ROADSTER / MX-5 (Japan / General Specs.)	2. 0L	LF	2008 MY	RCM	•	•	•	0
ROADSTER / MX-5 (Japan / General Specs.)	2. 0L	LF	2008 MY	RHT	•	•	•	0
ROADSTER / MX-5 (Japan / General Specs.)	2. 0L	LF	2008 MY	RKE	•	•	•	•
ROADSTER / MX-5 (Japan / General Specs.)	2. 0L	LF	2008 MY	TCM	•	•	•	•
S. A. Fiesta	1. 0L	FFV	2006 MY	ABS/TCS	•	•	•	•
S. A. Fiesta	1. 0L	FFV	2006 MY	IC	•	•	•	
S. A. Fiesta	1. 0L	FFV	2006 MY	PCM	•	•	•	•
S. A. Fiesta	1. 0L	FFV	2006 MY	RCM	•		•	0
S. A. Fiesta	1. 0L	FFV	2006 MY	RKE	•	•	•	•
S. A. Fiesta	1. 0L	FFV	2009 MY	ABS/TCS	•	•	•	•
S. A. Fiesta	1. 0L	FFV	2009 MY	IC	•	•	•	•
S. A. Fiesta	1. 0L	FFV	2009 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
S. A. Fiesta	1. OL	FFV	2009 MY	RCM	•	•	•	0
S. A. Fiesta	1. 0L	FFV	2009 MY	RKE	•	•	•	•
S. A. Fiesta	1. 0L	FFV	2010 MY	ABS/TCS	•	•	•	•
S. A. Fiesta	1. 0L	FFV	2010 MY	IC	•	•	•	•
S. A. Fiesta	1. 0L	FFV	2010 MY	PCM	•	•	•	•
S. A. Fiesta	1. 0L	FFV	2010 MY	RCM	•	•	•	0
S. A. Fiesta	1. 0L	FFV	2010 MY	RKE	•	•	•	•
S. A. Fiesta	1. 0L	Zetec Rocam	2002.5 MY	ABS/TCS	•	•	•	•
S. A. Fiesta	1. 0L	Zetec Rocam	2002.5 MY	IC	•	•	•	•
S. A. Fiesta	1. 0L	Zetec Rocam	2002.5 MY	PCM	•	•	•	•
S. A. Fiesta	1. 0L	Zetec Rocam	2002.5 MY	RCM	•	•	•	0
S. A. Fiesta	1. 0L	Zetec Rocam	2002.5 MY	RKE	•	•	•	•
S. A. Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002.5 MY	ABS/TCS	•	•	•	•
S. A. Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002.5 MY	IC	•	•	•	•
S. A. Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002.5 MY	PCM	•	•	•	0
S. A. Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002.5 MY	RCM	•	•	•	0
S. A. Fiesta	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002.5 MY	RKE	•	•	•	•
S. A. Fiesta	1.6L	FFV	2002.5 MY	ABS/TCS	•	•	•	•
S. A. Fiesta	1.6L	FFV	2002.5 MY	IC	•	•	•	•
S. A. Fiesta	1.6L	FFV	2002.5 MY	PCM	•	•	•	•
S. A. Fiesta	1.6L	FFV	2002.5 MY	RCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
S. A. Fiesta	1.6L	FFV	2002.5 MY	RKE	•	•	•	•
S. A. Fiesta	1.6L	FFV	2006 MY	ABS/TCS	•	•	•	•
S. A. Fiesta	1.6L	FFV	2006 MY	IC	•	•	•	•
S. A. Fiesta	1.6L	FFV	2006 MY	PCM	•	•	•	•
S. A. Fiesta	1.6L	FFV	2006 MY	RCM	•	•	•	0
S. A. Fiesta	1.6L	FFV	2006 MY	RKE	•	•	•	•
S. A. Fiesta	1.6L	FFV	2009 MY	ABS/TCS	•	•	•	•
S. A. Fiesta	1.6L	FFV	2009 MY	IC	•	•	•	•
S. A. Fiesta	1.6L	FFV	2009 MY	PCM	•	•	•	•
S. A. Fiesta	1.6L	FFV	2009 MY	RCM	•	•	•	0
S. A. Fiesta	1.6L	FFV	2009 MY	RKE	•	•	•	•
S. A. Fiesta	1.6L	FFV	2011 MY	ABS/TCS	•	•	•	•
S. A. Fiesta	1.6L	FFV	2011 MY	IC	•	•	•	•
S. A. Fiesta	1.6L	FFV	2011 MY	PCM	•	•	•	•
S. A. Fiesta	1.6L	FFV	2011 MY	RCM	•	•	•	0
S. A. Fiesta	1.6L	FFV	2011 MY	RKE	•	•	•	•
S. A. Fiesta	1.6L	Zetec Rocam	2002.5 MY	ABS/TCS	•	•	•	•
S. A. Fiesta	1.6L	Zetec Rocam	2002.5 MY	IC	•	•	•	•
S. A. Fiesta	1.6L	Zetec Rocam	2002.5 MY	PCM	•	•	•	•
S. A. Fiesta	1.6L	Zetec Rocam	2002.5 MY	RCM	•	•	•	0
S. A. Fiesta	1.6L	Zetec Rocam	2002.5 MY	RKE	•	•	•	•
S. A. Fiesta	1.6L	Zetec Rocam	2006 MY	ABS/TCS	•	•	•	•
S. A. Fiesta	1.6L	Zetec Rocam	2006 MY	IC	•	•	•	
S. A. Fiesta	1.6L	Zetec Rocam	2006 MY	PCM	•	•	•	•
S. A. Fiesta	1. 6L	Zetec Rocam	2006 MY	RCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
S. A. Fiesta	1. 6L	Zetec Rocam	2006 MY	RKE	•	•	•	•
S. A. Fiesta	1. 6L	Zetec Rocam	2006 MY	TCM	•	•	•	0
S. A. Fiesta	1. 6L	Zetec Rocam	2009 MY	ABS/TCS	•	•	•	•
S. A. Fiesta	1. 6L	Zetec Rocam	2009 MY	IC	•	•	•	•
S. A. Fiesta	1. 6L	Zetec Rocam	2009 MY	PCM	•	•	•	•
S. A. Fiesta	1. 6L	Zetec Rocam	2009 MY	RCM	•	•	•	0
S. A. Fiesta	1. 6L	Zetec Rocam	2009 MY	RKE	•	•	•	•
S. A. Fiesta	1. 6L	Zetec Rocam	2009 MY	TCM	•	•	•	0
S. A. Courier			2011 MY	IC	•	•	•	•
S. A. Courier			2011 MY	PCM	•	•	•	•
S. A. Courier			2011 MY	TBM	•	•	•	0
S. A. Courier	1. 6L	FFV	2007 MY	PCM	•	•	•	•
S. A. Courier	1. 6L	FFV	2009 MY	IC	•	•	•	•
S. A. Courier	1. 6L	FFV	2009 MY	PCM	•	•	•	•
S.A. Courier	1. 6L	FFV	2009 MY	TBM	•	•	•	0
S. A. Courier	1. 6L	Zetec Rocam	2009 MY	IC	•	•	•	•
S. A. Courier	1. 6L	Zetec Rocam	2009 MY	PCM	•	•	•	•
S. A. Courier	1. 6L	Zetec Rocam	2009 MY	TBM	•	•	•	0
Street Ka	1. 6L	DURATEC 8V	2003.5 MY	ABS/TCS	•	•	•	•
Street Ka	1. 6L	DURATEC 8V	2003.5 MY	CSM	•	•	•	0
Street Ka	1. 6L	DURATEC 8V	2003.5 MY	GEM	•	•	•	•
Street Ka	1. 6L	DURATEC 8V	2003.5 MY	PCM	•	•	•	•
Taurus	3. 0L	2V	2003 MY	ABS/TCS	•	•	•	•
Taurus	3. 0L	2V	2003 MY	EATC	•	•	•	0
Taurus	3. 0L	2V	2003 MY	GEM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Taurus	3. OL	2V	2003 MY	PCM	•	•	•	•
Taurus	3. 0L	2V	2003 MY	RCM	•	•	•	0
Taurus	3. 0L	2V	2004 MY	ABS	•	•	•	•
Taurus	3. 0L	2V	2004 MY	EATC	•	•	•	•
Taurus	3. OL	2V	2004 MY	GEM	•	•	•	•
Taurus	3. 0L	2V	2004 MY	IC	•	•	•	•
Taurus	3. 0L	2V	2004 MY	PCM	•	•	•	•
Taurus	3. 0L	2V	2004 MY	RCM	•	•	•	•
Taurus	3. 0L	2V	2005 MY	ABS	•	•	•	•
Taurus	3. 0L	2V	2005 MY	EATC	•	•	•	•
Taurus	3. 0L	2V	2005 MY	GEM	•	•	•	•
Taurus	3. 0L	2V	2005 MY	IC	•	•	•	•
Taurus	3. 0L	2V	2005 MY	PCM	•	•	•	•
Taurus	3. OL	2V	2005 MY	RCM	•	•	•	•
Taurus	3. OL	2V	2006 MY	ABS	•	•	•	•
Taurus	3. 0L	2V	2006 MY	EATC	•	•	•	•
Taurus	3. 0L	2V	2006 MY	GEM	•	•	•	•
Taurus	3. 0L	2V	2006 MY	IC	•	•	•	•
Taurus	3. OL	2V	2006 MY	PCM	•	•	•	•
Taurus	3. OL	2V	2006 MY	RCM	•	•	•	•
Taurus	3. 0L	2V	2007 MY	ABS	•	•	•	•
Taurus	3. 0L	2V	2007 MY	EATC	•	•	•	•
Taurus	3. 0L	2V	2007 MY	GEM	•	•	•	•
Taurus	3. 0L	2V	2007 MY	IC	•	•	•	•
Taurus	3. 0L	2V	2007 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Taurus	3. 0L	2V	2007 MY	RCM	•	•	•	•
Taurus	3. 0L	4V	1996 MY	ABS/TCS	•	•	•	•
Taurus	3. 0L	4V	1996 MY	GEM	•	•	•	•
Taurus	3. 0L	4V	1996 MY	IAB	•	•	•	•
Taurus	3. OL	4V	1996 MY	PATS	•	•	•	•
Taurus	3. OL	4V	1996 MY	PCM	•	•	•	•
Taurus	3. 0L	4V	1996 MY	RAP	•	•	•	•
Taurus	3. OL	4V	1996 MY	RCC	•	•	•	0
Taurus	3. OL	4V	1997 MY	ABS/TCS	•	•	•	•
Taurus	3. OL	4V	1997 MY	GEM	•	•	•	•
Taurus	3. OL	4V	1997 MY	IAB	•	•	•	•
Taurus	3. OL	4V	1997 MY	PATS	•	•	•	•
Taurus	3. OL	4V	1997 MY	PCM	•	•	•	•
Taurus	3. OL	4V	1997 MY	RAP	•	•		•
Taurus	3. OL	4V	1997 MY	RCC	•	•		0
Taurus	3. OL	4V	1998 MY	ABS/TCS	•	•		•
Taurus	3. OL	4V	1998 MY	GEM	•	•		•
Taurus	3. OL	4V	1998 MY	IAB	•	•	•	•
Taurus	3. OL	4V	1998 MY	PATS	•	•		•
Taurus	3. OL	4V	1998 MY	PCM	•	•		•
Taurus	3. OL	4V	1998 MY	RAP	•	•		•
Taurus	3. OL	4V	1998 MY	RCC	•	•	•	0
Taurus	3. OL	4V	1999 MY	ABS/TCS	•	•	•	•
Taurus	3. OL	4V	1999 MY	GEM	•	•	•	•
Taurus	3. OL	4V	1999 MY	IAB	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Taurus	3. 0L	4V	1999 MY	PATS	•	•	•	•
Taurus	3. 0L	4V	1999 MY	PCM	•	•	•	•
Taurus	3. 0L	4V	1999 MY	RAP	•	•	•	•
Taurus	3. 0L	4V	1999 MY	RCC	•	•	•	0
Taurus	3. 0L	4V	2000 MY	ABS/TCS	•	•	•	•
Taurus	3. 0L	4V	2000 MY	EATC	•	•	•	0
Taurus	3. 0L	4V	2000 MY	GEM	•	•	•	•
Taurus	3. 0L	4V	2000 MY	PCM	•	•	•	•
Taurus	3. 0L	4V	2000 MY	RCM	•	•	•	•
Taurus	3. 0L	4V	2002 MY	ABS/TCS	•	•	•	•
Taurus	3. 0L	4V	2002 MY	EATC	•	•	•	0
Taurus	3. 0L	4V	2002 MY	GEM	•	•	•	•
Taurus	3. 0L	4V	2002 MY	PCM	•	•	•	•
Taurus	3. 0L	4V	2002 MY	RCM	•	•	•	0
Taurus	3. 0L	4V	2003 MY	ABS/TCS	•	•	•	•
Taurus	3. 0L	4V	2003 MY	EATC	•	•	•	0
Taurus	3. 0L	4V	2003 MY	GEM	•	•	•	•
Taurus	3. 0L	4V	2003 MY	PCM	•	•	•	•
Taurus	3. 0L	4V	2003 MY	RCM	•	•	•	0
Taurus	3. 0L	4V	2004 MY	ABS	•	•	•	•
Taurus	3. 0L	4V	2004 MY	EATC	•	•	•	•
Taurus	3. 0L	4V	2004 MY	GEM	•	•	•	•
Taurus	3. 0L	4V	2004 MY	IC	•	•	•	•
Taurus	3. 0L	4V	2004 MY	PCM	•	•	•	•
Taurus	3. OL	4V	2004 MY	RCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Taurus	3. OL	4V	2005 MY	ABS	•	•	•	•
Taurus	3. 0L	4V	2005 MY	EATC	•	•	•	•
Taurus	3. 0L	4V	2005 MY	GEM	•	•	•	•
Taurus	3. 0L	4V	2005 MY	IC	•	•	•	•
Taurus	3. OL	4V	2005 MY	PCM	•	•	•	•
Taurus	3. OL	4V	2005 MY	RCM	•	•	•	•
Taurus	3. 0L	FFV	1996 MY	ABS/TCS	•	•	•	•
Taurus	3. OL	FFV	1996 MY	GEM	•	•	•	•
Taurus	3. OL	FFV	1996 MY	IAB	•	•	•	•
Taurus	3. OL	FFV	1996 MY	PATS	•	•	•	•
Taurus	3. OL	FFV	1996 MY	PCM	•	•	•	•
Taurus	3. OL	FFV	1996 MY	RAP	•	•	•	•
Taurus	3. OL	FFV	1996 MY	RCC	•	•	•	0
Taurus	3. OL	FFV	1997 MY	ABS/TCS	•	•	•	•
Taurus	3. OL	FFV	1997 MY	GEM	•	•	•	•
Taurus	3. OL	FFV	1997 MY	IAB	•	•	•	•
Taurus	3. 0L	FFV	1997 MY	PATS	•	•	•	•
Taurus	3. OL	FFV	1997 MY	PCM	•	•	•	•
Taurus	3. 0L	FFV	1997 MY	RAP	•	•	•	•
Taurus	3. 0L	FFV	1997 MY	RCC	•	•	•	0
Taurus	3. 0L	FFV	1998 MY	ABS/TCS	•	•	•	•
Taurus	3. 0L	FFV	1998 MY	GEM	•	•	•	•
Taurus	3. 0L	FFV	1998 MY	IAB	•	•	•	•
Taurus	3. 0L	FFV	1998 MY	PATS	•	•	•	•
Taurus	3. 0L	FFV	1998 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Taurus	3. 0L	FFV	1998 MY	RAP	•	•	•	•
Taurus	3. 0L	FFV	1998 MY	RCC	•	•	•	0
Taurus	3. 0L	FFV	1999 MY	ABS/TCS	•	•	•	•
Taurus	3. 0L	FFV	1999 MY	GEM	•	•	•	•
Taurus	3. 0L	FFV	1999 MY	IAB	•	•	•	•
Taurus	3. 0L	FFV	1999 MY	PATS	•	•	•	•
Taurus	3. 0L	FFV	1999 MY	PCM	•	•	•	•
Taurus	3. 0L	FFV	1999 MY	RAP	•	•	•	•
Taurus	3. 0L	FFV	1999 MY	RCC	•	•	•	0
Taurus	3. 0L	FFV	2000 MY	ABS/TCS	•	•	•	•
Taurus	3. 0L	FFV	2000 MY	EATC	•	•	•	0
Taurus	3. 0L	FFV	2000 MY	GEM	•	•	•	•
Taurus	3. 0L	FFV	2000 MY	PCM	•	•	•	•
Taurus	3. 0L	FFV	2000 MY	RCM	•			•
Taurus	3. 0L	FFV	2002 MY	ABS/TCS	•			•
Taurus	3. 0L	FFV	2002 MY	EATC	•			0
Taurus	3. 0L	FFV	2002 MY	GEM	•			•
Taurus	3. 0L	FFV	2002 MY	PCM	•	•	•	•
Taurus	3. 0L	FFV	2002 MY	RCM	•			0
Taurus	3. 0L	FFV	2003 MY	ABS/TCS	•			•
Taurus	3. 0L	FFV	2003 MY	EATC	•			0
Taurus	3. 0L	FFV	2003 MY	GEM	•	•	•	•
Taurus	3. 0L	FFV	2003 MY	PCM	•	•	•	•
Taurus	3. 0L	FFV	2003 MY	RCM	•	•	•	0
Taurus	3. 0L	Other	1996 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Taurus	3. OL	Other	1996 MY	GEM	•	•	•	•
Taurus	3. OL	Other	1996 MY	IAB	•	•	•	•
Taurus	3. OL	Other	1996 MY	PATS	•	•	•	•
Taurus	3. 0L	Other	1996 MY	PCM	•	•	•	•
Taurus	3. 0L	Other	1996 MY	RAP	•	•	•	•
Taurus	3. 0L	Other	1996 MY	RCC	•			0
Taurus	3. 0L	Other	1997 MY	ABS/TCS	•			•
Taurus	3. 0L	Other	1997 MY	GEM	•	•		•
Taurus	3. 0L	Other	1997 MY	IAB	•	•	•	•
Taurus	3. 0L	Other	1997 MY	PATS	•	•	•	•
Taurus	3. 0L	Other	1997 MY	PCM	•	•	•	•
Taurus	3. 0L	Other	1997 MY	RAP	•	•	•	•
Taurus	3. 0L	Other	1997 MY	RCC	•	•	•	0
Taurus	3. 0L	Other	1998 MY	ABS/TCS	•	•		•
Taurus	3. 0L	Other	1998 MY	GEM	•	•	•	•
Taurus	3. 0L	Other	1998 MY	IAB	•	•	•	•
Taurus	3. 0L	Other	1998 MY	PCM	•	•	•	•
Taurus	3. 0L	Other	1998 MY	RAP	•	•	•	•
Taurus	3. 0L	Other	1998 MY	RCC	•	•	•	0
Taurus	3. 0L	Other	1999 MY	ABS/TCS	•	•	•	•
Taurus	3. 0L	Other	1999 MY	GEM	•	•	•	•
Taurus	3. OL	Other	1999 MY	IAB	•	•	•	•
Taurus	3. OL	Other	1999 MY	PATS	•	•	•	•
Taurus	3. OL	Other	1999 MY	PCM	•	•	•	•
Taurus	3. 0L	Other	1999 MY	RAP	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Taurus	3. 0L	Other	1999 MY	RCC	•	•	•	0
Taurus	3. 0L	Other	2000 MY	ABS/TCS	•	•	•	•
Taurus	3. 0L	Other	2000 MY	EATC	•	•	•	0
Taurus	3. 0L	Other	2000 MY	GEM	•	•	•	•
Taurus	3. OL	Other	2000 MY	PCM	•	•	•	•
Taurus	3. OL	Other	2000 MY	RCM	•	•	•	•
Taurus	3. OL	Other	2002 MY	ABS/TCS	•	•	•	•
Taurus	3. 0L	Other	2002 MY	EATC	•	•	•	0
Taurus	3. 0L	Other	2002 MY	GEM	•	•	•	•
Taurus	3. 0L	Other	2002 MY	PCM	•	•	•	•
Taurus	3. 0L	Other	2002 MY	RCM	•	•	•	0
Taurus	3. 4L	Other	1997 MY	ABS/TCS	•	•	•	•
Taurus	3. 4L	Other	1997 MY	GEM	•	•	•	•
Taurus	3. 4L	Other	1997 MY	PCM	•	•	•	•
Taurus	3. 4L	SHO	1996 MY	ABS/TCS	•	•	•	•
Taurus	3. 4L	SHO	1996 MY	GEM	•	•	•	•
Taurus	3. 4L	SHO	1996 MY	IAB	•	•	•	•
Taurus	3. 4L	SHO	1996 MY	PATS	•	•	•	•
Taurus	3. 4L	SHO	1996 MY	PCM	•	•	•	•
Taurus	3. 4L	SHO	1996 MY	RAP	•	•	•	•
Taurus	3. 4L	SHO	1996 MY	RCC	•	•	•	0
Taurus	3. 4L	SHO	1996 MY	SARC	•	•	•	
Taurus	3. 4L	SHO	1997 MY	ABS/TCS	•	•	•	•
Taurus	3. 4L	SHO	1997 MY	GEM	•	•	•	•
Taurus	3. 4L	SHO	1997 MY	IAB	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Taurus	3. 4L	SHO	1997 MY	PATS	•	•	•	•
Taurus	3. 4L	SH0	1997 MY	PCM	•	•	•	•
Taurus	3. 4L	SH0	1997 MY	RAP	•	•	•	•
Taurus	3. 4L	SHO	1997 MY	RCC	•	•	•	0
Taurus	3. 4L	SH0	1997 MY	SARC	•	•	•	
Taurus	3. 4L	SHO	1998 MY	ABS/TCS	•	•	•	
Taurus	3. 4L	SHO	1998 MY	GEM	•	•	•	•
Taurus	3. 4L	SH0	1998 MY	IAB	•	•	•	•
Taurus	3. 4L	SH0	1998 MY	PATS	•	•	•	•
Taurus	3. 4L	SH0	1998 MY	PCM	•	•	•	•
Taurus	3. 4L	SH0	1998 MY	RAP	•	•	•	•
Taurus	3. 4L	SH0	1998 MY	RCC	•	•	•	0
Taurus	3. 4L	SH0	1998 MY	SARC	•	•	•	
Taurus	3. 4L	SH0	1999 MY	ABS/TCS	•	•	•	•
Taurus	3. 4L	SH0	1999 MY	PATS	•	•	•	•
Taurus	3. 4L	SH0	1999 MY	PCM	•	•	•	•
Taurus	3. 4L	SH0	1999 MY	RAP	•	•	•	•
Taurus	3. 4L	SH0	1999 MY	RCC	•	•	•	0
Taurus	3. 5L	4V	2008 MY	4X4	•	•	•	•
Taurus	3. 5L	4V	2008 MY	ABS	•	•	•	•
Taurus	3. 5L	4V	2008 MY	ACM	•	•	•	•
Taurus	3. 5L	4V	2008 MY	APIM	•	•	•	0
Taurus	3. 5L	4V	2008 MY	DSM	•	•	•	•
Taurus	3. 5L	4V	2008 MY	GEM / SJB	•	•	•	•
Taurus	3. 5L	4V	2008 MY	HVAC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Taurus	3. 5L	4V	2008 MY	IC	•	•	•	•
Taurus	3. 5L	4V	2008 MY	OCSM	•	•	•	0
Taurus	3. 5L	4V	2008 MY	PAM	•	•	•	•
Taurus	3. 5L	4V	2008 MY	PCM	•	•	•	•
Taurus	3. 5L	4V	2008 MY	RCM	•	•	•	•
Taurus	3. 5L	4V	2008 MY	RETM	•	•	•	0
Taurus	3. 5L	4V	2008 MY	SDARS	•	•	•	•
Taurus	3. 5L	4V	2008 MY	SECM	•	•	•	•
Taurus	3. 5L	4V	2009 MY	4X4	•	•	•	•
Taurus	3. 5L	4V	2009 MY	ABS	•	•	•	
Taurus	3. 5L	4V	2009 MY	ACM	•	•	•	
Taurus	3. 5L	4V	2009 MY	APIM	•	•	•	0
Taurus	3. 5L	4V	2009 MY	DSM	•	•	•	•
Taurus	3. 5L	4V	2009 MY	GEM / SJB	•	•	•	•
Taurus	3. 5L	4V	2009 MY	HVAC	•	•	•	•
Taurus	3. 5L	4V	2009 MY	IC	•	•	•	•
Taurus	3. 5L	4V	2009 MY	OCSM	•	•	•	0
Taurus	3. 5L	4V	2009 MY	PAM	•	•	•	•
Taurus	3. 5L	4V	2009 MY	PCM	•	•	•	•
Taurus	3. 5L	4V	2009 MY	RCM	•	•	•	•
Taurus	3. 5L	4V	2009 MY	RETM	•	•	•	0
Taurus	3. 5L	4V	2009 MY	SDARS	•	•	•	•
Taurus	3. 5L	4V	2009 MY	SECM	•	•	•	•
Taurus	3. 5L	4V	2010 MY	4X4	•	•	•	•
Taurus	3. 5L	4V	2010 MY	ABS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Taurus	3. 5L	4V	2010 MY	ACM	•	•	•	0
Taurus	3. 5L	4V	2010 MY	APIM	•	•	•	0
Taurus	3. 5L	4V	2010 MY	C-CM	•	•	•	0
Taurus	3. 5L	4V	2010 MY	DCSM	•	•	•	•
Taurus	3. 5L	4V	2010 MY	DDM	•	•	•	•
Taurus	3. 5L	4V	2010 MY	DSM	•		•	•
Taurus	3. 5L	4V	2010 MY	DSP	•	•	•	0
Taurus	3. 5L	4V	2010 MY	FCIM	•		•	•
Taurus	3. 5L	4V	2010 MY	FDIM	•		•	0
Taurus	3. 5L	4V	2010 MY	GEM / SJB	•		•	•
Taurus	3. 5L	4V	2010 MY	GPSM	•		•	0
Taurus	3. 5L	4V	2010 MY	HCM	•		•	•
Taurus	3. 5L	4V	2010 MY	HCM-2	•	•	•	0
Taurus	3. 5L	4V	2010 MY	HUD	•		•	0
Taurus	3. 5L	4V	2010 MY	HVAC	•		•	•
Taurus	3. 5L	4V	2010 MY	ILCM	•		•	•
Taurus	3. 5L	4V	2010 MY	IPC	•		•	•
Taurus	3. 5L	4V	2010 MY	OCSM	•		•	0
Taurus	3. 5L	4V	2010 MY	PAM	•	•	•	0
Taurus	3. 5L	4V	2010 MY	PCM	•	•	•	•
Taurus	3. 5L	4V	2010 MY	PSCM	•	•	•	0
Taurus	3. 5L	4V	2010 MY	RCM	•	•	•	0
Taurus	3. 5L	4V	2010 MY	RETM	•	•	•	0
Taurus	3. 5L	4V	2010 MY	RFA	•	•	•	•
Taurus	3. 5L	4V	2010 MY	SASM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Taurus	3.5L	4V	2010 MY	SECM	•	•	•	
Taurus	3.5L	4V	2010 MY	SOD-L	•	•	•	•
Taurus	3. 5L	4V	2010 MY	SOD-R	•	•	•	•
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	4X4	•	•	•	•
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	ABS	•	•	•	•
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	ACM	•	•	•	0
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	APIM	•	•	•	0
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	C-CM	•	•	•	0
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	DCSM	•	•	•	•
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	DDM	•	•	•	•
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	DSM	•	•	•	•
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	DSP	•	•	•	0
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	FCIM	•	•	•	•
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	FDIM	•	•	•	0
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	GEM / SJB	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	GPSM	•	•	•	0
Taurus	3. 5L	Direct Injection	2010 MY	HCM	•	•	•	•
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	HCM-2	•	•	•	0
Taurus	3. 5L	Direct Injection	2010 MY	HUD	•	•	•	0
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	HVAC	•	•	•	•
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	ILCM	•	•	•	•
Taurus	3. 5L	Direct Injection	2010 MY	IPC	•	•	•	•
Taurus	3. 5L	Direct Injection	2010 MY	OCSM	•	•	•	0
Taurus	3. 5L	Direct Injection	2010 MY	PAM	•	•	•	0
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	PCM	•	•	•	•
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	PSCM	•	•	•	0
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	RCM	•	•	•	0
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	RETM	•	•	•	0
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	RFA	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	SASM	•	•	•	0
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	SECM	•	•	•	
Taurus	3. 5L	Direct Injection	2010 MY	SOD-L	•	•	•	•
Taurus	3. 5L	EcoBoost - Gas Turbocharged Direct Injection	2010 MY	SOD-R	•	•	•	•
Taurus X	3. 5L	4V	2008 MY	4X4	•	•	•	•
Taurus X	3. 5L	4V	2008 MY	ABS	•	•	•	•
Taurus X	3. 5L	4V	2008 MY	ACM	•	•	•	•
Taurus X	3. 5L	4V	2008 MY	APIM	•	•	•	0
Taurus X	3. 5L	4V	2008 MY	DSM	•	•	•	•
Taurus X	3. 5L	4V	2008 MY	GEM / SJB	•	•	•	•
Taurus X	3. 5L	4V	2008 MY	HVAC	•	•	•	•
Taurus X	3. 5L	4V	2008 MY	IC		•	•	•
Taurus X	3. 5L	4V	2008 MY	LTM		•	•	0
Taurus X	3. 5L	4V	2008 MY	OCSM	•	•	•	0
Taurus X	3. 5L	4V	2008 MY	PAM	•	•	•	•
Taurus X	3. 5L	4V	2008 MY	PCM	•	•	•	•
Taurus X	3. 5L	4V	2008 MY	RCM	•	•	•	•
Taurus X	3. 5L	4V	2008 MY	RETM	•	•	•	0
Taurus X	3. 5L	4V	2008 MY	SDARS	•	•	•	•
Taurus X	3. 5L	4V	2008 MY	SECM	•	•	•	•
Taurus X	3. 5L	4V	2009 MY	4X4	•	•	•	•
Taurus X	3. 5L	4V	2009 MY	ABS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Taurus X	3. 5L	4V	2009 MY	ACM	•	•	•	•
Taurus X	3.5L	4V	2009 MY	APIM	•	•	•	0
Taurus X	3. 5L	4V	2009 MY	DSM	•	•	•	•
Taurus X	3. 5L	4V	2009 MY	GEM / SJB	•	•	•	•
Taurus X	3. 5L	4V	2009 MY	HVAC	•	•	•	•
Taurus X	3. 5L	4V	2009 MY	IC	•	•	•	•
Taurus X	3. 5L	4V	2009 MY	LTM	•	•	•	0
Taurus X	3. 5L	4V	2009 MY	OCSM	•	•		0
Taurus X	3. 5L	4V	2009 MY	PAM	•	•		•
Taurus X	3. 5L	4V	2009 MY	PCM	•	•		•
Taurus X	3. 5L	4V	2009 MY	RCM	•	•		•
Taurus X	3. 5L	4V	2009 MY	RETM	•	•	•	0
Taurus X	3. 5L	4V	2009 MY	SDARS	•	•	•	•
Taurus X	3. 5L	4V	2009 MY	SECM	•	•	•	•
Territory	4. 0L	DOHC VCT	2004 MY	ABS	•	•		•
Territory	4. 0L	DOHC VCT	2004 MY	ABS/TCS	•	•		•
Territory	4. 0L	DOHC VCT	2004 MY	ACM	•	•		•
Territory	4. 0L	DOHC VCT	2004 MY	BEM	•	•		•
Territory	4. 0L	DOHC VCT	2004 MY	HIM	•	•		•
Territory	4. 0L	DOHC VCT	2004 MY	IC	•	•		•
Territory	4. 0L	DOHC VCT	2004 MY	PAM	•	•	•	•
Territory	4. 0L	DOHC VCT	2004 MY	PCM	•	•	•	0
Territory	4. 0L	DOHC VCT	2004 MY	RCM	•	•	•	•
Territory	4. 0L	DOHC VCT	2006 MY	ABS	•	•	•	•
Territory	4. 0L	DOHC VCT	2006 MY	ACM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Territory	4. OL	DOHC VCT	2006 MY	BEM	•	•	•	•
Territory	4. 0L	DOHC VCT	2006 MY	HIM	•	•	•	•
Territory	4. 0L	DOHC VCT	2006 MY	IC	•	•	•	•
Territory	4. 0L	DOHC VCT	2006 MY	PAM	•	•	•	•
Territory	4. 0L	DOHC VCT	2006 MY	PCM	•	•	•	0
Territory	4. 0L	DOHC VCT	2006 MY	RCM	•	•	•	•
Territory	4. 0L	DOHC VCT	2006 MY	TCM	•	•	•	0
Thunderbird	3.8L	Other	1996 MY	PCM	•	•	•	•
Thunderbird	3.8L	Other	1997 MY	PCM	•	•	•	•
Thunderbird	3. 9L	4V	2002 MY	ABS/TCS	•	•	•	•
Thunderbird	3. 9L	4V	2002 MY	ACM	•	•	•	•
Thunderbird	3. 9L	4V	2002 MY	DDM	•	•	•	•
Thunderbird	3. 9L	4V	2002 MY	EATC	•	•	•	•
Thunderbird	3.9L	4V	2002 MY	GEM	•	•	•	•
Thunderbird	3.9L	4V	2002 MY	HEC	•	•	•	•
Thunderbird	3. 9L	4V	2002 MY	PCM	•	•	•	•
Thunderbird	3.9L	4V	2002 MY	RCM	•	•	•	•
Thunderbird	3. 9L	4V	2002 MY	REM	•	•	•	•
Thunderbird	3.9L	4V	2003 MY	ABS/TCS	•	•	•	•
Thunderbird	3.9L	4V	2003 MY	ACM	•	•	•	•
Thunderbird	3. 9L	4V	2003 MY	DDM	•	•	•	•
Thunderbird	3.9L	4V	2003 MY	EATC	•	•	•	•
Thunderbird	3.9L	4V	2003 MY	GEM	•	•	•	•
Thunderbird	3. 9L	4V	2003 MY	HEC	•	•	•	•
Thunderbird	3. 9L	4V	2003 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Thunderbird	3. 9L	4V	2003 MY	RCM	•	•	•	•
Thunderbird	3.9L	4V	2003 MY	REM	•	•	•	•
Thunderbird	3.9L	4V	2004 MY	ABS/TCS	•	•	•	•
Thunderbird	3. 9L	4V	2004 MY	ACM	•	•	•	•
Thunderbird	3. 9L	4V	2004 MY	DDM	•	•	•	•
Thunderbird	3. 9L	4V	2004 MY	EATC	•	•	•	•
Thunderbird	3. 9L	4V	2004 MY	GEM	•	•	•	•
Thunderbird	3.9L	4V	2004 MY	HEC	•	•	•	•
Thunderbird	3. 9L	4V	2004 MY	PCM	•	•	•	•
Thunderbird	3. 9L	4V	2004 MY	RCM	•	•	•	•
Thunderbird	3. 9L	4V	2004 MY	REM	•	•	•	•
Thunderbird	3. 9L	4V	2005 MY	ABS/TCS	•	•	•	•
Thunderbird	3. 9L	4V	2005 MY	ACM	•	•	•	•
Thunderbird	3.9L	4V	2005 MY	DDM	•	•	•	•
Thunderbird	3.9L	4V	2005 MY	EATC	•	•	•	•
Thunderbird	3. 9L	4V	2005 MY	GEM	•	•	•	•
Thunderbird	3. 9L	4V	2005 MY	HEC	•	•	•	•
Thunderbird	3.9L	4V	2005 MY	PCM	•	•	•	•
Thunderbird	3.9L	4V	2005 MY	RCM	•	•	•	•
Thunderbird	3.9L	4V	2005 MY	REM	•	•	•	•
Thunderbird	4.6L	2V	1994 MY	PCM	•	•	•	•
Thunderbird	4. 6L	2V	1995 MY	PCM	•	•	•	•
Thunderbird	4. 6L	2V	1996 MY	PCM	•	•	•	•
Thunderbird	4. 6L	2V	1997 MY	PCM	•	•	•	•
Thunderbird	4.6L	Other	1996 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Titan	4. 0L	TF	2000 MY	PCM	•	•	•	•
Titan	4. 0L	TF	2002 MY	PCM	•	•	•	0
Town Car	4. 6L	2V	1995 MY	ABS/TCS	•	•	•	0
Town Car	4. 6L	2V	1995 MY	DDM	•	•	•	0
Town Car	4. 6L	2V	1995 MY	DSM	•	•	•	0
Town Car	4. 6L	2V	1995 MY	EATC	•	•	•	0
Town Car	4. 6L	2V	1995 MY	LCM	•	•	•	0
Town Car	4. 6L	2V	1995 MY	PCM	•	•	•	•
Town Car	4. 6L	2V	1996 MY	ABS/TCS	•	•	•	•
Town Car	4. 6L	2V	1996 MY	DDM	•	•	•	•
Town Car	4. 6L	2V	1996 MY	DSM	•	•	•	•
Town Car	4. 6L	2V	1996 MY	EATC	•	•	•	0
Town Car	4. 6L	2V	1996 MY	IAB	•	•	•	•
Town Car	4. 6L	2V	1996 MY	LCM	•	•	•	•
Town Car	4. 6L	2V	1996 MY	PCM	•	•	•	•
Town Car	4. 6L	2V	1997 MY	ABS/TCS	•	•	•	•
Town Car	4. 6L	2V	1997 MY	DDM	•	•	•	•
Town Car	4. 6L	2V	1997 MY	DSM	•	•	•	•
Town Car	4. 6L	2V	1997 MY	EATC	•	•	•	0
Town Car	4. 6L	2V	1997 MY	IAB	•	•	•	•
Town Car	4. 6L	2V	1997 MY	LCM	•	•	•	•
Town Car	4. 6L	2V	1997 MY	PCM	•	•	•	•
Town Car	4. 6L	2V	1998 MY	ABS/TCS	•	•	•	•
Town Car	4. 6L	2V	1998 MY	ACM	•	•	•	•
Town Car	4. 6L	2V	1998 MY	CPM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Town Car	4. 6L	2V	1998 MY	DDM	•	•	•	•
Town Car	4.6L	2V	1998 MY	DSM	•	•	•	•
Town Car	4. 6L	2V	1998 MY	EATC	•	•	•	0
Town Car	4. 6L	2V	1998 MY	HEC	•	•	•	•
Town Car	4. 6L	2V	1998 MY	IAB	•	•	•	•
Town Car	4. 6L	2V	1998 MY	LCM	•	•	•	•
Town Car	4. 6L	2V	1998 MY	NGSC	•	•	•	0
Town Car	4. 6L	2V	1998 MY	PCM	•	•	•	•
Town Car	4. 6L	2V	1998 MY	RASM	•	•	•	•
Town Car	4. 6L	2V	1999 MY	ABS/TCS	•	•	•	•
Town Car	4. 6L	2V	1999 MY	ACM	•	•	•	•
Town Car	4. 6L	2V	1999 MY	CPM	•	•	•	•
Town Car	4. 6L	2V	1999 MY	DDM	•	•	•	
Town Car	4. 6L	2V	1999 MY	DSM	•	•	•	•
Town Car	4. 6L	2V	1999 MY	EATC	•	•	•	0
Town Car	4.6L	2V	1999 MY	HEC	•	•	•	
Town Car	4.6L	2V	1999 MY	LCM	•	•	•	
Town Car	4. 6L	2V	1999 MY	NGSC	•	•	•	0
Town Car	4. 6L	2V	1999 MY	PCM	•	•	•	•
Town Car	4. 6L	2V	1999 MY	RASM	•	•	•	•
Town Car	4. 6L	2V	1999 MY	RCM	•	•	•	•
Town Car	4.6L	2V	2000 MY	ABS/TCS	•	•	•	•
Town Car	4.6L	2V	2000 MY	ACM	•	•	•	•
Town Car	4. 6L	2V	2000 MY	CPM	•	•	•	•
Town Car	4. 6L	2V	2000 MY	DDM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Town Car	4. 6L	2V	2000 MY	DSM	•	•	•	•
Town Car	4. 6L	2V	2000 MY	EATC	•	•	•	0
Town Car	4. 6L	2V	2000 MY	HEC	•	•	•	•
Town Car	4. 6L	2V	2000 MY	LCM	•	•	•	•
Town Car	4. 6L	2V	2000 MY	NGSC	•	•	•	0
Town Car	4. 6L	2V	2000 MY	PCM	•	•	•	•
Town Car	4. 6L	2V	2000 MY	RASM	•	•	•	•
Town Car	4. 6L	2V	2000 MY	RCM	•	•	•	•
Town Car	4. 6L	2V	2002 MY	ABS/TCS	•	•	•	•
Town Car	4. 6L	2V	2002 MY	ACM	•		•	•
Town Car	4. 6L	2V	2002 MY	CPM	•		•	•
Town Car	4. 6L	2V	2002 MY	DDM	•		•	•
Town Car	4. 6L	2V	2002 MY	DSM	•	•	•	•
Town Car	4. 6L	2V	2002 MY	EATC	•		•	0
Town Car	4. 6L	2V	2002 MY	HEC	•		•	•
Town Car	4. 6L	2V	2002 MY	LCM	•		•	•
Town Car	4. 6L	2V	2002 MY	NGSC	•		•	0
Town Car	4. 6L	2V	2002 MY	PCM	•	•	•	•
Town Car	4. 6L	2V	2002 MY	RASM	•		•	•
Town Car	4. 6L	2V	2002 MY	RCM	•		•	
Town Car	4. 6L	2V	2002 MY	RESCU	•		•	0
Town Car	4. 6L	2V	2003 MY	ABS/TCS	•	•	•	•
Town Car	4. 6L	2V	2003 MY	ACM	•	•	•	•
Town Car	4. 6L	2V	2003 MY	CPM	•	•	•	•
Town Car	4. 6L	2V	2003 MY	DDM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Town Car	4.6L	2V	2003 MY	DSM	•	•	•	•
Town Car	4.6L	2V	2003 MY	EATC	•	•	•	•
Town Car	4. 6L	2V	2003 MY	HEC	•	•	•	•
Town Car	4. 6L	2V	2003 MY	LCM	•		•	•
Town Car	4. 6L	2V	2003 MY	LTM	•	•	•	0
Town Car	4. 6L	2V	2003 MY	MC	•	•	•	0
Town Car	4.6L	2V	2003 MY	NAV	•	•	•	0
Town Car	4. 6L	2V	2003 MY	NGSC	•	•	•	0
Town Car	4. 6L	2V	2003 MY	PAM	•	•	•	0
Town Car	4. 6L	2V	2003 MY	PCM	•	•	•	•
Town Car	4. 6L	2V	2003 MY	RASM	•	•	•	•
Town Car	4.6L	2V	2003 MY	RCM	•	•	•	
Town Car	4.6L	2V	2003 MY	RESCU	•	•	•	0
Town Car	4.6L	2V	2004 MY	ABS/TCS	•	•	•	•
Town Car	4.6L	2V	2004 MY	ACM	•	•	•	•
Town Car	4.6L	2V	2004 MY	DDM	•	•	•	•
Town Car	4.6L	2V	2004 MY	DSM	•	•	•	•
Town Car	4.6L	2V	2004 MY	EATC	•	•	•	•
Town Car	4.6L	2V	2004 MY	HEC	•	•	•	•
Town Car	4.6L	2V	2004 MY	LCM	•	•	•	•
Town Car	4. 6L	2V	2004 MY	LTM	•	•	•	0
Town Car	4.6L	2V	2004 MY	MC	•	•	•	0
Town Car	4.6L	2V	2004 MY	NAV	•	•	•	0
Town Car	4.6L	2V	2004 MY	NGSC	•	•	•	0
Town Car	4.6L	2V	2004 MY	PAM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Town Car	4. 6L	2V	2004 MY	PCM	•	•	•	•
Town Car	4. 6L	2V	2004 MY	RASM	•	•	•	•
Town Car	4. 6L	2V	2004 MY	RCM	•	•	•	
Town Car	4. 6L	2V	2005 MY	ABS	•	•	•	•
Town Car	4. 6L	2V	2005 MY	ACM	•	•	•	•
Town Car	4. 6L	2V	2005 MY	DDM	•	•	•	•
Town Car	4. 6L	2V	2005 MY	DSM	•	•	•	•
Town Car	4. 6L	2V	2005 MY	EATC	•	•	•	•
Town Car	4. 6L	2V	2005 MY	HEC	•	•	•	•
Town Car	4. 6L	2V	2005 MY	LCM	•	•	•	•
Town Car	4. 6L	2V	2005 MY	LTM	•	•	•	0
Town Car	4. 6L	2V	2005 MY	MC	•	•	•	0
Town Car	4. 6L	2V	2005 MY	NAV	•	•	•	0
Town Car	4. 6L	2V	2005 MY	PAM	•	•	•	0
Town Car	4. 6L	2V	2005 MY	PCM	•	•	•	•
Town Car	4. 6L	2V	2005 MY	RASM	•	•	•	•
Town Car	4. 6L	2V	2005 MY	RCM	•	•	•	
Town Car	4. 6L	2V	2006 MY	ABS	•	•	•	•
Town Car	4. 6L	2V	2006 MY	DDM	•	•	•	•
Town Car	4. 6L	2V	2006 MY	DSM	•	•	•	•
Town Car	4. 6L	2V	2006 MY	EATC	•	•	•	•
Town Car	4. 6L	2V	2006 MY	IC	•	•	•	•
Town Car	4. 6L	2V	2006 MY	LCM	•	•	•	
Town Car	4. 6L	2V	2006 MY	LTM	•	•	•	0
Town Car	4. 6L	2V	2006 MY	MC	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Town Car	4. 6L	2V	2006 MY	NAV	•	•	•	0
Town Car	4. 6L	2V	2006 MY	PAM	•	•	•	0
Town Car	4. 6L	2V	2006 MY	PCM	•	•	•	•
Town Car	4. 6L	2V	2006 MY	RASM	•	•	•	•
Town Car	4. 6L	2V	2006 MY	RATC	•	•	•	0
Town Car	4. 6L	2V	2006 MY	RCM	•	•	•	
Town Car	4. 6L	2V	2007 MY	ABS	•	•	•	•
Town Car	4. 6L	2V	2007 MY	DDM	•	•	•	•
Town Car	4. 6L	2V	2007 MY	DSM	•	•	•	•
Town Car	4. 6L	2V	2007 MY	EATC	•	•	•	•
Town Car	4. 6L	2V	2007 MY	IC	•	•	•	•
Town Car	4. 6L	2V	2007 MY	LCM	•	•	•	
Town Car	4. 6L	2V	2007 MY	LTM	•	•	•	0
Town Car	4. 6L	2V	2007 MY	MC	•	•	•	0
Town Car	4. 6L	2V	2007 MY	NAV	•	•	•	0
Town Car	4. 6L	2V	2007 MY	PAM	•	•	•	0
Town Car	4. 6L	2V	2007 MY	PCM	•	•	•	
Town Car	4. 6L	2V	2007 MY	RATC	•	•	•	0
Town Car	4. 6L	2V	2007 MY	RCM	•	•	•	
Town Car	4. 6L	2V	2007 MY	VDM	•	•	•	
Town Car	4. 6L	2V	2008 MY	ABS	•	•	•	
Town Car	4. 6L	2V	2008 MY	DDM	•	•	•	•
Town Car	4. 6L	2V	2008 MY	DSM	•	•	•	•
Town Car	4. 6L	2V	2008 MY	HVAC	•	•	•	•
Town Car	4.6L	2V	2008 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Town Car	4. 6L	2V	2008 MY	LCM	•	•	•	
Town Car	4. 6L	2V	2008 MY	LTM	•	•	•	0
Town Car	4. 6L	2V	2008 MY	MC	•	•	•	0
Town Car	4. 6L	2V	2008 MY	NAV	•	•	•	0
Town Car	4. 6L	2V	2008 MY	PAM	•	•	•	0
Town Car	4. 6L	2V	2008 MY	PCM	•	•	•	•
Town Car	4. 6L	2V	2008 MY	RATC	•	•	•	0
Town Car	4. 6L	2V	2008 MY	RCM	•	•	•	
Town Car	4. 6L	2V	2008 MY	VDM	•	•	•	
Town Car	4. 6L	2V	2009 MY	ABS	•	•	•	•
Town Car	4. 6L	2V	2009 MY	DDM	•	•	•	•
Town Car	4. 6L	2V	2009 MY	DSM	•	•	•	•
Town Car	4. 6L	2V	2009 MY	HVAC	•	•	•	•
Town Car	4. 6L	2V	2009 MY	IC	•	•	•	•
Town Car	4. 6L	2V	2009 MY	LCM	•	•	•	•
Town Car	4. 6L	2V	2009 MY	LTM	•	•	•	0
Town Car	4. 6L	2V	2009 MY	MC	•	•	•	0
Town Car	4. 6L	2V	2009 MY	NAV	•	•	•	0
Town Car	4. 6L	2V	2009 MY	PAM	•	•	•	0
Town Car	4.6L	2V	2009 MY	PCM	•	•	•	•
Town Car	4. 6L	2V	2009 MY	RATC	•	•	•	0
Town Car	4. 6L	2V	2009 MY	RCM	•	•	•	
Town Car	4. 6L	2V	2009 MY	VDM	•	•	•	
Town Car	4. 6L	2V	2010 MY	ABS	•	•	•	•
Town Car	4. 6L	2V	2010 MY	DDM	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Town Car	4.6L	2V	2010 MY	DSM	•	•	•	•
Town Car	4.6L	2V	2010 MY	HVAC		•	•	•
Town Car	4.6L	2V	2010 MY	IC	•	•	•	•
Town Car	4.6L	2V	2010 MY	LCM	•	•	•	0
Town Car	4.6L	2V	2010 MY	MC	•	•	•	0
Town Car	4.6L	2V	2010 MY	NAV	•	•	•	0
Town Car	4.6L	2V	2010 MY	PAM	•	•	•	0
Town Car	4.6L	2V	2010 MY	PCM	•	•	•	•
Town Car	4.6L	2V	2010 MY	RCM		•	•	
Town Car	4.6L	2V	2010 MY	VDM		•	•	
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1995 MY	ABS		•	•	0
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1995 MY	ABS/TCS	•	•	•	•
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1995 MY	CSM	•	•	•	0
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1995 MY	PATS	•	•	0	•
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1995 MY	PCM	•	•	•	•
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1996 MY	ABS	•	•	•	0
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1996 MY	ABS/TCS	•	•	•	•
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1996 MY	CSM	•	•	•	0
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1996 MY	PCM	•	•	•	•
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1997 MY	ABS		•	•	0
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1997 MY	ABS/TCS		•	•	•
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1997 MY	CSM		•	•	0
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1997 MY	PATS	•	•	0	•
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1997 MY	PCM	•	•	•	•
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1997.5 MY	ABS	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1997.5 MY	ABS/TCS	•	•	•	•
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1997.5 MY	CSM	•	•	•	0
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1997.5 MY	PCM	•	•	•	•
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1998 MY	ABS	•	•	•	0
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1998 MY	ABS/TCS	•	•	•	•
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1998 MY	CSM	•	•	•	0
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1998 MY	PCM	•	•	•	•
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	19985 MY	ABS	•	•	•	0
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	19985 MY	ABS/TCS	•	•	•	•
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	19985 MY	CSM	•	•	•	0
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	19985 MY	PCM	•	•	•	•
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1999.5 MY	ABS	•	•	•	0
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1999.5 MY	ABS/TCS	•	•	•	•
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1999.5 MY	AFCM	•	•	•	0
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1999.5 MY	CSM	•	•	•	0
Transit Connect	2. 0L	2.0 DOHC SFI (8V)	1999.5 MY	PCM	•	•	•	•
Transit Connect	2. 0L	DURATEC-HE / I4	2010 MY	ABS	•	•	•	•
Transit Connect	2. 0L	DURATEC-HE / I4	2010 MY	ACM	•	•	•	0
Transit Connect	2. 0L	DURATEC-HE / I4	2010 MY	GEM / SJB	•	•	•	•
Transit Connect	2. 0L	DURATEC-HE / I4	2010 MY	IC	•	•	•	•
Transit Connect	2. 0L	DURATEC-HE / I4	2010 MY	OCSM	•	•	•	0
Transit Connect	2. 0L	DURATEC-HE / I4	2010 MY	PAM	•	•	•	•
Transit Connect	2. 0L	DURATEC-HE / I4	2010 MY	PCM	•	•	•	•
Transit Connect	2. 0L	DURATEC-HE / I4	2010 MY	RCM	•	•	•	0
Transit Connect	2. 0L	DURATEC-HE / I4	2010 MY	SRM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Transit Connect	2. 0L	DURATEC-HE / I4	2010 MY	VSM	•	•	•	•
Transit Connect	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	ABS/TCS	•	•	•	•
Transit Connect	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	CSM	•	•	•	•
Transit Connect	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	CSM	•	•	•	0
Transit Connect	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	FFH	•	•	•	•
Transit Connect	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	НЕС	•	•	•	•
Transit Connect	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	ICU	•	•	•	0
Transit Connect	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	PAM	•	•	•	0
Transit Connect	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	PCM	•	•	•	•
Transit Connect	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	RASM	•	•	•	•
Transit Connect	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	RCM	•	•	•	0
Transit Connect	2. 0L	Duratorq Turbo Diesel Common Rail Injection	2001 MY	TCM	•	•	•	•
Transit Connect	2. 0L	DURATORQ_DI	2001 MY	ABS/TCS	•	•	•	•
Transit Connect	2. 0L	DURATORQ_DI	2001 MY	CSM	•	•	•	•
Transit Connect	2. 0L	DURATORQ_DI	2001 MY	CSM	•	•	•	0
Transit Connect	2. 0L	DURATORQ_DI	2001 MY	FFH	•	•	•	•
Transit Connect	2. 0L	DURATORQ_DI	2001 MY	FIP	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Transit Connect	2. 0L	DURATORQ_DI	2001 MY	HEC	•	•	•	•
Transit Connect	2. 0L	DURATORQ_DI	2001 MY	PAM	•	•	•	•
Transit Connect	2. 0L	DURATORQ_DI	2001 MY	PCM	•	•	•	•
Transit Connect	2. 0L	DURATORQ_DI	2001 MY	RASM	•	•	•	•
Transit Connect	2. 0L	DURATORQ_DI	2001 MY	RCM	•	•	•	0
Transit Connect	2. 0L	DURATORQ_DI	2001 MY	TCM	•	•	•	•
Transit Connect	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	ABS	•	•	•	0
Transit Connect	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	ABS/TCS	•	•	•	•
Transit Connect	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	ACM	•	•	•	0
Transit Connect	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	BCMii	•	•	•	
Transit Connect	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	CSM	•	•	•	0
Transit Connect	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	FFH	•	•	•	•
Transit Connect	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	IPC	•	•	•	•
Transit Connect	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PAM	•	•	•	0
Transit Connect	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PCM	•	•	•	•
Transit Connect	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	RCM	•	•	•	0
Transit Connect	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	SRM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Transit Connect	2. 3L	DOHC SFI (16V)	2001 MY	ABS/TCS	•	•	•	•
Transit Connect	2. 3L	DOHC SFI (16V)	2001 MY	CSM	•	•	•	•
Transit Connect	2. 3L	DOHC SFI (16V)	2001 MY	CSM	•	•	•	0
Transit Connect	2. 3L	DOHC SFI (16V)	2001 MY	HEC	•	•	•	•
Transit Connect	2. 3L	DOHC SFI (16V)	2001 MY	PAM	•	•	•	0
Transit Connect	2. 3L	DOHC SFI (16V)	2001 MY	PCM	•	•	•	•
Transit Connect	2.3L	DOHC SFI (16V)	2001 MY	RASM	•	•	•	•
Transit Connect	2. 3L	DOHC SFI (16V)	2001 MY	RCM	•	•	•	0
Transit Connect	2. 3L	DURATEC-HE / I4	2006. 5	ABS	•	•	•	0
Transit Connect	2. 3L	DURATEC-HE / I4	2006. 5	ABS/TCS	•		•	•
Transit Connect	2. 3L	DURATEC-HE / I4	2006. 5	ACM	•		•	0
Transit Connect	2. 3L	DURATEC-HE / I4	2006. 5	BCMii	•		•	
Transit Connect	2. 3L	DURATEC-HE / I4	2006. 5	CSM	•	•	•	0
Transit Connect	2. 3L	DURATEC-HE / I4	2006. 5	FFH	•		•	•
Transit Connect	2. 3L	DURATEC-HE / I4	2006. 5	IPC	•		•	•
Transit Connect	2. 3L	DURATEC-HE / I4	2006. 5	PAM	•	•	•	0
Transit Connect	2. 3L	DURATEC-HE / I4	2006. 5	PCM	•		•	•
Transit Connect	2. 3L	DURATEC-HE / I4	2006. 5	RCM	•		•	0
Transit Connect	2. 3L	DURATEC-HE / I4	2006. 5	SRM	•	•	•	0
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2000 MY	ABS/TCS	•	•	•	•
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2000 MY	CSM	•	•	•	•
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2000 MY	CSM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2000 MY	FFH	•	•	•	•
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2000 MY	HEC	•	•	•	•
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2000 MY	ICU	•	•	•	0
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2000 MY	PAM	•	•	•	•
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2000 MY	PCM	•	•	•	•
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2000 MY	RCM	•	•	•	0
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	ABS	•	•	•	0
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	ABS/TCS	•	•	•	•
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	ACM	•	•	•	0
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	BCMii	•	•	•	
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	CSM	•	•	•	0
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	FFH	•	•	•	•
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	IPC	•	•	•	•
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PAM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PCM	•	•	•	•
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	RCM	•	•	•	0
Transit Connect	2. 4L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	SRM	•	•	•	0
Transit Connect	2.4L	DURATORQ_DI	2000 MY	ABS/TCS	•	•	•	•
Transit Connect	2.4L	DURATORQ_DI	2000 MY	CSM	•	•	•	•
Transit Connect	2.4L	DURATORQ_DI	2000 MY	CSM	•	•	•	0
Transit Connect	2.4L	DURATORQ_DI	2000 MY	FFH	•	•	•	•
Transit Connect	2.4L	DURATORQ_DI	2000 MY	FIP	•	•	•	0
Transit Connect	2.4L	DURATORQ_DI	2000 MY	HEC	•	•	•	
Transit Connect	2.4L	DURATORQ_DI	2000 MY	PAM	•	•		
Transit Connect	2.4L	DURATORQ_DI	2000 MY	PCM	•	•	•	•
Transit Connect	2.4L	DURATORQ_DI	2000 MY	PCM		•	•	0
Transit Connect	2.4L	DURATORQ_DI	2000 MY	RASM		•	•	•
Transit Connect	2. 4L	DURATORQ_DI	2000 MY	RCM		•	•	0
Transit Connect	2. 4L	DURATORQ_DI	2000 MY	TCM	•	•	•	•
Transit Connect	2. 5L	2.5 turbo diesel engines with EPIC	Other	ABS	•	•	•	0
Transit Connect	2. 5L	2.5 turbo diesel engines with EPIC	0ther	ABS/TCS	•	•	•	•
Transit Connect	2. 5L	2.5 turbo diesel engines with EPIC	0ther	CSM	•	•	•	0
Transit Connect	2. 5L	2.5 turbo diesel engines with EPIC	0ther	PCM	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Transit Connect	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	ABS	•	•	•	0
Transit Connect	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	ABS/TCS	•	•	•	•
Transit Connect	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	ACM	•	•	•	0
Transit Connect	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	BCMii	•	•	•	
Transit Connect	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	CSM	•	•	•	0
Transit Connect	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	FFH	•	•	•	•
Transit Connect	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	IPC	•	•	•	•
Transit Connect	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PAM	•	•	•	0
Transit Connect	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	PCM	•	•	•	•
Transit Connect	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	RCM	•	•	•	0
Transit Connect	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2006. 5	SRM	•	•	•	0
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002.5 MY	ABS/TCS	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002.5 MY	CSM	•	•	•	•
Transit Connect / Tourneo_Connect	1. 8L	Duratorq Turbo Diesel Common Rail Injection	2002.5 MY	ECS	•	•	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002.5 MY	FFH	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002.5 MY	HEC	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002.5 MY	ICU	•	•	•	0
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002.5 MY	PAM	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002.5 MY	PCM	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007 MY	ABS	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007 MY	ABS/TCS	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007 MY	ACM	•	•	•	0
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007 MY	ECS	•	•	•	0
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007 MY	FFH	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007 MY	IC	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007 MY	PAM	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007 MY	PCM	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2009.5 MY	ABS	•	•	•	

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes			Active Test
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2009.5 MY	ABS	•	•	•	0
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2009.5 MY	ACM	•	•	•	0
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2009.5 MY	FFH	•	•	•	0
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2009.5 MY	GEM	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2009.5 MY	IC	•	•	•	
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2009.5 MY	PAM	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2009.5 MY	PCM	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2009.5 MY	RCM	•	•	•	0
Transit Connect / Tourneo_Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2009.5 MY	SRM	•	•	•	0
Transit Connect / Tourneo_Connect	1.8L	Endura DI	2002.5 MY	ABS/TCS	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Endura DI	2002.5 MY	CSM	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Endura DI	2002.5 MY	ECS	•	•	•	0
Transit Connect / Tourneo_Connect	1.8L	Endura DI	2002.5 MY	FFH	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Endura DI	2002.5 MY	FIP	•	•	•	0
Transit Connect / Tourneo_Connect	1.8L	Endura DI	2002.5 MY	HEC	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Endura DI	2002.5 MY	PAM	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Endura DI	2002.5 MY	PCM	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Zetec	2002.5 MY	ABS/TCS	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Transit Connect / Tourneo_Connect	1.8L	Zetec	2002.5 MY	CSM	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Zetec	2002.5 MY	ECS	•	•	•	0
Transit Connect / Tourneo_Connect	1.8L	Zetec	2002.5 MY	FFH	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Zetec	2002.5 MY	HEC	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Zetec	2002.5 MY	PAM	•	•	•	•
Transit Connect / Tourneo_Connect	1.8L	Zetec	2002.5 MY	PCM	•	•	•	•
Windstar	3. 0L	V6 OHV	1995 MY	ABS/TCS	•	•	•	•
Windstar	3. 0L	V6 OHV	1995 MY	ABS/TCS	•	•	•	0
Windstar	3. 0L	V6 OHV	1995 MY	GEM	•	•	•	•
Windstar	3. 0L	V6 OHV	1995 MY	PCM	•	•	•	•
Windstar	3. 0L	V6 OHV	1995.5 MY	PCM	•	•	•	•
Windstar	3. 0L	V6 OHV	1996 MY	ABS/TCS	•	•	•	•
Windstar	3. 0L	V6 OHV	1996 MY	ABS/TCS	•	•	•	0
Windstar	3. 0L	V6 OHV	1996 MY	GEM	•	•	•	•
Windstar	3. 0L	V6 OHV	1996 MY	IAB	•	•	•	•
Windstar	3. 0L	V6 OHV	1996 MY	PCM	•	•	•	•
Windstar	3. 0L	V6 OHV	1997 MY	ABS/TCS	•	•	•	•
Windstar	3. 0L	V6 OHV	1997 MY	ABS/TCS	•	•	•	0
Windstar	3. 0L	V6 OHV	1997 MY	GEM	•	•	•	•
Windstar	3. 0L	V6 OHV	1997 MY	IAB	•	•	•	•
Windstar	3. 0L	V6 OHV	1997 MY	PCM	•	•	•	•
Windstar	3. 0L	V6 OHV	1998 MY	ABS/TCS	•	•	•	•
Windstar	3. 0L	V6 OHV	1998 MY	ABS/TCS	•	•	•	0
Windstar	3. 0L	V6 OHV	1998 MY	GEM	•	•	•	•
Windstar	3. OL	V6 OHV	1998 MY	IAB	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Windstar	3. 0L	V6 OHV	1998 MY	PCM	•	•	•	•
Windstar	3. 0L	V6 OHV	1998 MY	RAP	•	•	•	•
Windstar	3. 0L	V6 OHV	1999 MY	ABS/TCS	•	•	•	•
Windstar	3. OL	V6 OHV	1999 MY	DDM	•		•	
Windstar	3. OL	V6 OHV	1999 MY	FEM	•		•	•
Windstar	3. 0L	V6 OHV	1999 MY	IC	•	•	•	•
Windstar	3. 0L	V6 OHV	1999 MY	MC	•	•	•	•
Windstar	3. 0L	V6 OHV	1999 MY	NGSC	•		•	0
Windstar	3. 0L	V6 OHV	1999 MY	PAM	•		•	•
Windstar	3. 0L	V6 OHV	1999 MY	PCM	•		•	•
Windstar	3. 0L	V6 OHV	1999 MY	RCM	•	•	•	•
Windstar	3. OL	V6 OHV	1999 MY	REM	•	•	•	•
Windstar	3.8L	V6 OHV	1995 MY	ABS/TCS	•		•	•
Windstar	3.8L	V6 OHV	1995 MY	ABS/TCS	•		•	0
Windstar	3.8L	V6 OHV	1995 MY	GEM	•		•	•
Windstar	3.8L	V6 OHV	1995 MY	PCM	•		•	•
Windstar	3.8L	V6 OHV	1996 MY	ABS/TCS	•		•	•
Windstar	3.8L	V6 OHV	1996 MY	ABS/TCS	•	•	•	0
Windstar	3.8L	V6 OHV	1996 MY	GEM	•		•	•
Windstar	3.8L	V6 OHV	1996 MY	IAB	•		•	•
Windstar	3.8L	V6 OHV	1996 MY	PCM	•		•	•
Windstar	3.8L	V6 OHV	1997 MY	ABS/TCS	•		•	•
Windstar	3.8L	V6 OHV	1997 MY	ABS/TCS	•	•	•	0
Windstar	3.8L	V6 OHV	1997 MY	GEM	•	•	•	•
Windstar	3.8L	V6 OHV	1997 MY	IAB	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Windstar	3. 8L	V6 OHV	1997 MY	PCM	•	•	•	•
Windstar	3.8L	V6 OHV	1998 MY	ABS/TCS	•	•	•	•
Windstar	3.8L	V6 OHV	1998 MY	ABS/TCS	•	•	•	0
Windstar	3.8L	V6 OHV	1998 MY	GEM	•	•	•	•
Windstar	3.8L	V6 OHV	1998 MY	IAB	•		•	•
Windstar	3.8L	V6 OHV	1998 MY	PCM	•	•	•	•
Windstar	3.8L	V6 OHV	1998 MY	RAP	•	•	•	•
Windstar	3.8L	V6 OHV	1999 MY	ABS/TCS	•		•	•
Windstar	3.8L	V6 OHV	1999 MY	DDM	•		•	
Windstar	3.8L	V6 OHV	1999 MY	FEM	•		•	•
Windstar	3.8L	V6 OHV	1999 MY	IC	•		•	•
Windstar	3.8L	V6 OHV	1999 MY	LPSDM	•		•	•
Windstar	3.8L	V6 OHV	1999 MY	MC	•	•	•	•
Windstar	3.8L	V6 OHV	1999 MY	NGSC	•		•	0
Windstar	3.8L	V6 OHV	1999 MY	PAM	•		•	•
Windstar	3.8L	V6 OHV	1999 MY	PCM	•		•	•
Windstar	3.8L	V6 OHV	1999 MY	RCM	•	•	•	•
Windstar	3.8L	V6 OHV	1999 MY	REM	•		•	•
Windstar	3.8L	V6 OHV	1999 MY	RPSDM	•	•	•	•
Windstar	3.8L	V6 OHV	2000 MY	ABS/TCS	•	•	•	•
Windstar	3.8L	V6 OHV	2000 MY	DDM	•	•	•	•
Windstar	3.8L	V6 OHV	2000 MY	DSM	•	•	•	•
Windstar	3.8L	V6 OHV	2000 MY	FEM	•	•	•	•
Windstar	3. 8L	V6 OHV	2000 MY	IC	•	•	•	•
Windstar	3.8L	V6 OHV	2000 MY	LPSDM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Windstar	3.8L	V6 OHV	2000 MY	MC	•	•	•	•
Windstar	3. 8L	V6 OHV	2000 MY	NGSC	•	•	•	0
Windstar	3. 8L	V6 OHV	2000 MY	PAM	•		•	•
Windstar	3. 8L	V6 OHV	2000 MY	PCM	•		•	•
Windstar	3.8L	V6 OHV	2000 MY	RCM	•	•	•	•
Windstar	3.8L	V6 OHV	2000 MY	REM	•	•	•	•
Windstar	3.8L	V6 OHV	2000 MY	RPSDM	•	•	•	•
Windstar	3. 8L	V6 OHV	2002 MY	ABS/TCS	•		•	•
Windstar	3. 8L	V6 OHV	2002 MY	DDM	•		•	•
Windstar	3. 8L	V6 OHV	2002 MY	DSM	•		•	•
Windstar	3. 8L	V6 OHV	2002 MY	FEM	•		•	•
Windstar	3.8L	V6 OHV	2002 MY	IC	•	•	•	•
Windstar	3.8L	V6 OHV	2002 MY	LPSDM	•	•	•	•
Windstar	3. 8L	V6 OHV	2002 MY	MC	•		•	•
Windstar	3. 8L	V6 OHV	2002 MY	NGSC	•		•	0
Windstar	3. 8L	V6 OHV	2002 MY	PAM	•		•	•
Windstar	3.8L	V6 OHV	2002 MY	PCM	•		•	•
Windstar	3. 8L	V6 OHV	2002 MY	RCM	•		•	•
Windstar	3. 8L	V6 OHV	2002 MY	REM	•	•	•	•
Windstar	3. 8L	V6 OHV	2002 MY	RPSDM	•		•	•
Windstar	3. 8L	V6 OHV	2003 MY	ABS/TCS	•		•	•
Windstar	3. 8L	V6 OHV	2003 MY	DDM	•		•	•
Windstar	3. 8L	V6 OHV	2003 MY	DSM	•		•	•
Windstar	3.8L	V6 OHV	2003 MY	FEM	•	•	•	•
Windstar	3.8L	V6 OHV	2003 MY	IC	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Windstar	3. 8L	V6 OHV	2003 MY	LPSDM	•	•	•	•
Windstar	3. 8L	V6 OHV	2003 MY	MC	•	•	•	•
Windstar	3.8L	V6 OHV	2003 MY	NGSC	•	•	•	0
Windstar	3. 8L	V6 OHV	2003 MY	PAM	•	•	•	•
Windstar	3. 8L	V6 OHV	2003 MY	PCM	•	•	•	•
Windstar	3.8L	V6 OHV	2003 MY	RCM	•	•	•	•
Windstar	3.8L	V6 OHV	2003 MY	REM	•	•	•	•
Windstar	3.8L	V6 OHV	2003 MY	RPSDM	•	•	•	•
Zephyr/MKZ	3. 0L	4V	2006 MY	ABS	•	•	•	•
Zephyr/MKZ	3. 0L	4V	2006 MY	ACM	•	•	•	0
Zephyr/MKZ	3. 0L	4V	2006 MY	DCSM	•	•	•	•
Zephyr/MKZ	3. 0L	4V	2006 MY	DDM	•	•	•	•
Zephyr/MKZ	3. 0L	4V	2006 MY	DSM	•	•	•	•
Zephyr/MKZ	3. 0L	4V	2006 MY	DSP	•	•	•	0
Zephyr/MKZ	3. 0L	4V	2006 MY	EATC	•	•	•	•
Zephyr/MKZ	3. 0L	4V	2006 MY	GEM	•	•	•	•
Zephyr/MKZ	3. 0L	4V	2006 MY	IC	•	•	•	•
Zephyr/MKZ	3. 0L	4V	2006 MY	OCSM	•	•	•	0
Zephyr/MKZ	3. 0L	4V	2006 MY	PCM	•	•	•	•
Zephyr/MKZ	3. 0L	4V	2006 MY	RCM	•	•	•	•
Zephyr/MKZ	3. 0L	4V	2006 MY	TCM	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2007 MY	4X4	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2007 MY	ABS	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2007 MY	ACM	•	•	•	0
Zephyr/MKZ	3. 5L	4V	2007 MY	DCSM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Zephyr/MKZ	3. 5L	4V	2007 MY	DDM	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2007 MY	DSM	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2007 MY	DSP	•	•	•	0
Zephyr/MKZ	3. 5L	4V	2007 MY	EATC	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2007 MY	GEM	•		•	
Zephyr/MKZ	3. 5L	4V	2007 MY	IC	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2007 MY	OCSM	•	•	•	0
Zephyr/MKZ	3. 5L	4V	2007 MY	PCM	•		•	•
Zephyr/MKZ	3. 5L	4V	2007 MY	RCM	•		•	•
Zephyr/MKZ	3. 5L	4V	2007 MY	SDARS	•		•	•
Zephyr/MKZ	3. 5L	4V	2007 MY	TCM	•		•	•
Zephyr/MKZ	3. 5L	4V	2008 MY	4X4	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2008 MY	ABS	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2008 MY	ACM	•		•	0
Zephyr/MKZ	3. 5L	4V	2008 MY	APIM	•		•	0
Zephyr/MKZ	3. 5L	4V	2008 MY	DCSM	•		•	•
Zephyr/MKZ	3. 5L	4V	2008 MY	DDM	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2008 MY	DSM	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2008 MY	DSP	•		•	0
Zephyr/MKZ	3. 5L	4V	2008 MY	GEM / SJB	•		•	•
Zephyr/MKZ	3. 5L	4V	2008 MY	HVAC	•		•	•
Zephyr/MKZ	3. 5L	4V	2008 MY	IC	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2008 MY	OCSM	•	•	•	0
Zephyr/MKZ	3.5L	4V	2008 MY	PAM	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2008 MY	PCM	•	•	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes		Active Test
Zephyr/MKZ	3. 5L	4V	2008 MY	RCM	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2008 MY	SDARS	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2008 MY	TCM	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2009 MY	4X4	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2009 MY	ABS	•	•	•	•
Zephyr/MKZ	3.5L	4V	2009 MY	ACM	•	•	•	•
Zephyr/MKZ	3.5L	4V	2009 MY	APIM	•	•	•	0
Zephyr/MKZ	3. 5L	4V	2009 MY	DCSM	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2009 MY	DDM	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2009 MY	DSM	•	•	•	•
Zephyr/MKZ	3.5L	4V	2009 MY	DSP	•	•	•	0
Zephyr/MKZ	3.5L	4V	2009 MY	GEM / SJB	•	•	•	•
Zephyr/MKZ	3.5L	4V	2009 MY	HVAC	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2009 MY	IC	•	•	•	•
Zephyr/MKZ	3.5L	4V	2009 MY	OCSM	•	•	•	0
Zephyr/MKZ	3.5L	4V	2009 MY	PAM	•	•	•	•
Zephyr/MKZ	3.5L	4V	2009 MY	PCM	•	•	•	•
Zephyr/MKZ	3.5L	4V	2009 MY	RCM	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2009 MY	SDARS	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2009 MY	TCM	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2010 MY	4X4	•	•	•	•
Zephyr/MKZ	3.5L	4V	2010 MY	ABS	•	•	•	•
Zephyr/MKZ	3.5L	4V	2010 MY	ACM	•	•	•	0
Zephyr/MKZ	3. 5L	4V	2010 MY	APIM	•	•	•	0
Zephyr/MKZ	3. 5L	4V	2010 MY	DCSM	•	•		•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test
Zephyr/MKZ	3. 5L	4V	2010 MY	DDM	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2010 MY	DSM	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2010 MY	DSP	•	•	•	0
Zephyr/MKZ	3. 5L	4V	2010 MY	FCIM	•	•	•	0
Zephyr/MKZ	3. 5L	4V	2010 MY	FDIM	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2010 MY	GEM / SJB	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2010 MY	GPSM	•	•	•	0
Zephyr/MKZ	3. 5L	4V	2010 MY	HCM	•	•	•	0
Zephyr/MKZ	3. 5L	4V	2010 MY	HVAC	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2010 MY	ILCM	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2010 MY	IPC	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2010 MY	OCSM	•	•	•	0
Zephyr/MKZ	3. 5L	4V	2010 MY	PAM	•	•	•	•
Zephyr/MKZ	3.5L	4V	2010 MY	PCM	•	•	•	•
Zephyr/MKZ	3.5L	4V	2010 MY	RCM	•	•	•	0
Zephyr/MKZ	3.5L	4V	2010 MY	SOD-L	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2010 MY	SOD-R	•	•	•	•
Zephyr/MKZ	3. 5L	4V	2010 MY	TCM	•	•	•	