

MaxiDAS_Infiniti_V2.01 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	Read Codes	Erase Codes	Freeze Frame Data	Data Monitor	Active Test	Work Support	ECU Part Number	BCU Part Number	Read Codes [Past]	Trouble Diag Record	ECU Discriminated No	Calibration Data	C/U Initialization	Self Function Check	AV Comm Monitor	CAN Diag Support Mntr	Version
ABS	●	●	※	●	●	※	●	○	○	○	○	○	○	○	○	○	○
TCS	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○
IVMS	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○
CVT	●	●	○	●	○	●	●	○	○	○	○	○	○	○	○	●	○
ASCD	●	○	○	●	○	○	○	○	○	○	○	○	○	○	○	○	○
AIR PRESSURE MONITOR	●	○	○	●	※	●	※	○	○	○	○	○	○	○	○	○	○
Active SUS	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○
ACT D/SUS	●	●	●	●	●		●	○	○	○	○	○	○	○	○	○	○
4WD	●	●	※	●	※	●	●	○	○	○	○	○	○	○	○	○	○
SMART ENTRANCE	●	●	※	●	※	●	○	○	○	○	○	○	○	○	○	※	○
ICC	●	●	※	●	●	●	●	※	○	○	○	○	○	○	○	●	○
NATS	●	●	○	○	○	○	○	○	○	○	○	○	●	※	○	○	○
ENGINE	●	●	※	●	●	●	●	○	○	○	○	○	○	○	○	○	○
A/T	●	●	※	●	※	●	●	○	○	○	○	○	○	○	○	○	○
S/BLIND CAMERA	○	○	○	●	○	●	●	○	○	○	○	○	○	○	○	○	○
REARVIEW CAMERA	○	○	○	●	○	●	●	○	○	○	○	○	○	○	○	○	○
MOTOR ASSIST	●	●	○	●	○	●	○	○	○	○	○	○	○	○	○	○	○
HEAD LAMP LEVELIZER	●	●	○	●	●	●	●	○	○	○	○	○	○	○	○	○	○
DIFF LOCK	●	●	○	●	○	○	○	○	○	○	○	○	○	○	○	●	○
ALL MODE AWD/4WD	●	●	○	●	○	○	○	○	○	○	○	○	○	○	○	●	○
IPDM	●	●	○	●	●		○	○	○	○	○	○	○	○	○	○	○
AIR LEVELIZER	●	●	○	●	●	●	●	○	○	○	○	○	○	○	○	○	○
SONAR	●	●	○	●	●		●	○	○	○	○	○	○	○	○	○	○
AT	●	●	○	●	●	●	●	○	○	○	○	●	○	○	○	●	○
AIRBAG	●	●	○	○	○	○	○	○	※	※	※	○	○	○	○	※	○
PRECRASH SEATBELT	●	●	○	●	○	○	●	○	○	○	○	○	○	○	○	●	○
MULTI AV	●	●	○	●	○	○	※	○	○	○	○	○	○	○	※	※	※

