

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
ABS Brakes	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Readiness 4. Advanced ID
Auto Dist. Reg	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Engine	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream 6. Readiness	1. Single Reading 2. Login CodingII 3. Advanced ID
Auto Trans	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Auto HVAC	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Cent. Elect.	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Park/Steer Assist	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Airbags	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Steering wheel	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Instruments	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Aux. Heat	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
CAN Gateway	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Engine II	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Engine III	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
AWD	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Immobilizer	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Centr. Locks	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Navigation	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Inter. Monitor	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Central Conv.	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Xenon Range	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Radio	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Engine Conjunct.	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Diesel pump	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Electric drive	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Battery Regul.	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Battery charger	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Clutch	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Differential Locks	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Door Elect, Driver	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Door Elect, Pass.	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Door, Rear Left	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Door, Rear Right	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Braker Booster	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Braker Boost.Assi.	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Parking Brake	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Entry Assist, Driver	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Entry Assist, Passenger	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Steering Angle	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Susp. Elect.	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Anti Slip	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Level Control	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Steering assistance	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Rear spoiler	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Stabilizers	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Chassis Control	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Acc/Start Auth.	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Readiness 4. Advanced ID
Tire pressure monitoring	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Telematics	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Seat Mem. Pass	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Auto Roof	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Seat Mem. Driver	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Seat, Rear PS	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Parking aid	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Control Head	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Dis./Ctl Unit Rear	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Sound system	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
TV-Tuner	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Voice Control	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Telephone	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
HVAC, Rear	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Roof Electronics	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Seat, Rear, DS	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Auxiliary Fuel Tank	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Wiper Electr.	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Sliding Door	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Left light control	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Right light control	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Auto. Lighting switch	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Towing Protection	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Trailer Function	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Sec. Air Heating	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Active Steering	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Readiness 4. Advanced ID
Position Sensing	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Lane Change	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Tire Pressure II	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Lane Maintain	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Back-up Cam.	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Sliding Door Left	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Driver Ident.	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Intercom	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Special Function	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Data Transfer	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Operations	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Trunk Elect.	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Auxiliary Heater	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Media Player 1	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Media Player 2	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Media Player 3	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Media Player 4	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Ctrl Head RR	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Ctrl Head LR	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Ctrl Head Roof	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Ctrl Head Dash	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Digital Radio	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Radio Satellite	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Digital TV	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Centr. Electr. II	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Information Electr.	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID

MaxiDAS_Seat_V2.03 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

Unit	ECU Info.	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function(●)	Special Function(※)
Centr. Conv. II	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID
Inform. Electr. II	●	●	●	●	※	●	1. Coding 2. Basic Settings 3. Adaptation 4. Security Access 5. AdvancedDataStream	1. Single Reading 2. Login CodingII 3. Advanced ID