

MaxiSys_Ford_V6.01 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.**

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	4X4	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	ABS	●	●	●	●	0x0008
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	GEM	●	●	●	●	0x000A 0x000F
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	IC	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	PAM	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	PCM	●	●	●	●	0x0009 0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5
(All MY05) Escape/Tribute/Maverick/Mariner	2.3L	DURATEC-HE / I4	2005	RCM	●	●	●	●	0x000C
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	4X4	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	ABS	●	●	●	●	0x0008
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	GEM	●	●	●	●	0x000A 0x000F 0xF042 0xF04E 0xF04F 0xF050 0xF051 0xF056 0xF057 0xF058 0xF059 0xF090
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	IC	●	●	●	●	0x0005 0xF040 0xF043 0xF04D 0xF052 0xF053 0xF054 0xF055
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	PAM	●	●	●	●	○
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	PCM	●	●	●	●	0x0009 0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5
(All MY05) Escape/Tribute/Maverick/Mariner	3.0L	4V	2005	RCM	●	●	●	●	0x000C 0x006D
626 / 626 WAGON / TELSTAR	1.8L	FP	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0082 0x0083
626 / 626 WAGON / TELSTAR	1.8L	FP	1999	ABS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	1.8L	FP	2000	ABS/TCS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 - 1999	ABS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2.0L	FS	1997 - 2001	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0023 0x0025
626 / 626 WAGON / TELSTAR	2.0L	FS	1998 - 2001	ABS/TCS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2.0L	RF-T	1997 - 2000	PCM	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2.0L	RF-T	1999 - 2000	ABS	●	●	●	●	○
626 / 626 WAGON / TELSTAR	2.5L	KL	1997 - 2001	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
626 / 626 WAGON / TELSTAR	2.5L	KL	1998 - 2001	ABS/TCS	●	●	●	●	○
AEROSTAR	3.0L	Other	1996 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
AEROSTAR	4.0L	Other	1996 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Aspire	1.3L	Other	1996 - 1997	PCM	●	●	●	●	○
Aspire	1.5L	Other	1997	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Aviator	4.6L	4V	2003	VEMS	●	●	●	●	○
Aviator	4.6L	4V	2003 - 2005	4X4	●	●	●	●	○
Aviator	4.6L	4V	2003 - 2005	ABS/TCS	●	●	●	●	0x0008 0x0012
Aviator	4.6L	4V	2003 - 2005	DCSM	●	●	●	●	○
Aviator	4.6L	4V	2003 - 2005	DSM	●	●	●	●	○
Aviator	4.6L	4V	2003 - 2005	EATC	●	●	●	●	○
Aviator	4.6L	4V	2003 - 2005	IC	●	●	●	●	○
Aviator	4.6L	4V	2003 - 2005	NAV	●	●	●	●	0x0016
Aviator	4.6L	4V	2003 - 2005	PAM	●	●	●	●	○
Aviator	4.6L	4V	2003 - 2005	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C6
Aviator	4.6L	4V	2003 - 2005	PCSM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Aviator	4.6L	4V	2003 - 2005	RCM	●	●	●	●	0x000C
Aviator	4.6L	4V	2003 - 2005	TPM	●	●	●	●	○
Aviator	4.6L	4V	2003 - 2005	VAPS	●	●	●	●	○
Aviator	4.6L	4V	2003 - 2005	VSM	●	●	●	●	0x000A 0x000F
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	ACM	●	●	●	○	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	APIM	●	●	●	●	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	BCMii	●	●	●	●	0x00FE 0x0101 0x0118 0x0207
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	DDM	●	●	●	○	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	FCDIM	●	●	●	●	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	FDSM	●	●	●	○	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	GPSM	●	●	●	○	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	GWM	●	●	●	○	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	HVAC	●	●	●	●	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	IPC	●	●	●	●	0x0009
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x00C3 0x0114
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	PDM	●	●	●	○	○
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	PSCM	●	●	●	○	0x00D7 0x00DC
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	RCM	●	●	●	○	0x00EF
B-Max	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	RFA	●	●	●	○	0x000A
B-Max	1.25L	DURATEC 16V	2008	ABS	●	●	●	●	○
B-Max	1.25L	DURATEC 16V	2008	ACM	●	●	●	●	○
B-Max	1.25L	DURATEC 16V	2008	BCMii	●	●	●	●	○
B-Max	1.25L	DURATEC 16V	2008	FCDIM	●	●	●	●	○
B-Max	1.25L	DURATEC 16V	2008	HVAC	●	●	●	●	○
B-Max	1.25L	DURATEC 16V	2008	IPC	●	●	●	●	0x0009
B-Max	1.25L	DURATEC 16V	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
B-Max	1.25L	DURATEC 16V	2008	PSCM	●	●	●	●	○
B-Max	1.25L	DURATEC 16V	2008	RCM	●	●	●	●	○
B-Max	1.25L	DURATEC 16V	2008	RFA	●	●	●	●	○
B-Max	1.25L	DURATEC 16V	2008	SRM	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2008	SRM	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2008	TCM	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2008 - 2012	ABS	●	●	●	●	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119
B-Max	1.4L	DURATEC 16V	2008 - 2012	ACM	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2008 - 2012	BCMii	●	●	●	●	0x00FE 0x0101 0x0118 0x0207
B-Max	1.4L	DURATEC 16V	2008 - 2012	FCDIM	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2008 - 2012	HVAC	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2008 - 2012	IPC	●	●	●	●	0x0009
B-Max	1.4L	DURATEC 16V	2008 - 2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00BC
B-Max	1.4L	DURATEC 16V	2008 - 2012	PSCM	●	●	●	●	0x00D7 0x00DC
B-Max	1.4L	DURATEC 16V	2008 - 2012	RCM	●	●	●	●	0x00EF
B-Max	1.4L	DURATEC 16V	2008 - 2012	RFA	●	●	●	●	0x000A
B-Max	1.4L	DURATEC 16V	2012	APIM	●	●	●	●	○
B-Max	1.4L	DURATEC 16V	2012	DDM	●	●	●	○	○
B-Max	1.4L	DURATEC 16V	2012	FDSM	●	●	●	○	○
B-Max	1.4L	DURATEC 16V	2012	GPSM	●	●	●	○	○
B-Max	1.4L	DURATEC 16V	2012	GWM	●	●	●	○	○
B-Max	1.4L	DURATEC 16V	2012	PDM	●	●	●	○	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	ABS	●	●	●	●	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	ACM	●	●	●	●	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	BCMii	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	FCDIM	●	●	●	●	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	HVAC	●	●	●	●	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	IPC	●	●	●	●	0x0009
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	PSCM	●	●	●	●	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	RCM	●	●	●	●	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	RFA	●	●	●	●	○
B-Max	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	SRM	●	●	●	●	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D7 0x00D9 0x00DB 0x00E8 0x0119
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	ACM	●	●	●	○	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	APIM	●	●	●	●	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	BCMii	●	●	●	●	0x00FE 0x0101 0x0118 0x0207
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	DDM	●	●	●	○	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	FCDIM	●	●	●	●	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	FDSM	●	●	●	○	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	GPSM	●	●	●	○	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	GWM	●	●	●	○	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	HVAC	●	●	●	●	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	IPC	●	●	●	●	0x0009
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AF 0x00B0 0x00B1 0x00B2 0x00B8 0x00BD
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	PDM	●	●	●	○	○
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	PSCM	●	●	●	○	0x00DC
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	RCM	●	●	●	○	0x00EF
B-Max	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	RFA	●	●	●	○	0x000A
B-Max	1.6L	DURATEC VCT	2008	SRM	●	●	●	●	○
B-Max	1.6L	DURATEC VCT	2008 - 2012	ABS	●	●	●	●	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119
B-Max	1.6L	DURATEC VCT	2008 - 2012	ACM	●	●	●	●	○
B-Max	1.6L	DURATEC VCT	2008 - 2012	BCMii	●	●	●	●	0x00FE 0x0101 0x0118 0x0207
B-Max	1.6L	DURATEC VCT	2008 - 2012	FCDIM	●	●	●	●	○
B-Max	1.6L	DURATEC VCT	2008 - 2012	HVAC	●	●	●	●	○
B-Max	1.6L	DURATEC VCT	2008 - 2012	IPC	●	●	●	●	0x0009
B-Max	1.6L	DURATEC VCT	2008 - 2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00BC
B-Max	1.6L	DURATEC VCT	2008 - 2012	PSCM	●	●	●	●	0x00D7 0x00DC
B-Max	1.6L	DURATEC VCT	2008 - 2012	RCM	●	●	●	●	0x00EF
B-Max	1.6L	DURATEC VCT	2008 - 2012	RFA	●	●	●	●	0x000A
B-Max	1.6L	DURATEC VCT	2012	APIM	●	●	●	●	○
B-Max	1.6L	DURATEC VCT	2012	DDM	●	●	●	○	○
B-Max	1.6L	DURATEC VCT	2012	FDSM	●	●	●	○	○
B-Max	1.6L	DURATEC VCT	2012	GPSM	●	●	●	○	○
B-Max	1.6L	DURATEC VCT	2012	GWM	●	●	●	○	○
B-Max	1.6L	DURATEC VCT	2012	PDM	●	●	●	○	○
B-Max	1.6L	DURATEC VCT	2012	TCM	●	●	●	●	0x0117
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	ABS	●	●	●	●	○
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	ACM	●	●	●	●	○
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	BCMii	●	●	●	●	○
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	FCDIM	●	●	●	●	○
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	HVAC	●	●	●	●	○
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	IPC	●	●	●	●	0x0009
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	PSCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	RCM	●	●	●	●	○
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	RFA	●	●	●	●	○
B-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	SRM	●	●	●	●	○
B-Max	1.6L	TDCi ECO II	2012	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D7 0x00D9 0x00DB 0x00E8 0x0119
B-Max	1.6L	TDCi ECO II	2012	ACM	●	●	●	○	○
B-Max	1.6L	TDCi ECO II	2012	APIM	●	●	●	●	○
B-Max	1.6L	TDCi ECO II	2012	BCMii	●	●	●	●	0x00FE 0x0101 0x0118 0x0207
B-Max	1.6L	TDCi ECO II	2012	DDM	●	●	●	○	○
B-Max	1.6L	TDCi ECO II	2012	FCDIM	●	●	●	●	○
B-Max	1.6L	TDCi ECO II	2012	FDSM	●	●	●	○	○
B-Max	1.6L	TDCi ECO II	2012	GPSM	●	●	●	○	○
B-Max	1.6L	TDCi ECO II	2012	GWM	●	●	●	○	○
B-Max	1.6L	TDCi ECO II	2012	HVAC	●	●	●	●	○
B-Max	1.6L	TDCi ECO II	2012	IPC	●	●	●	●	0x0009
B-Max	1.6L	TDCi ECO II	2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AF 0x00B0 0x00B1 0x00B2 0x00B8 0x00BD
B-Max	1.6L	TDCi ECO II	2012	PDM	●	●	●	○	○
B-Max	1.6L	TDCi ECO II	2012	PSCM	●	●	●	○	0x00DC
B-Max	1.6L	TDCi ECO II	2012	RCM	●	●	●	○	0x00EF
B-Max	1.6L	TDCi ECO II	2012	RFA	●	●	●	○	0x000A
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2.2L	F2	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2.5L	WL	2001	PCM	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2.5L	WL	2001 - 2002	ABS	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2.5L	WL_T	2001 - 2005	ABS	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2.5L	WL_T	2001 - 2005	PCM	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2.6L	G6	1996 - 1999	PCM	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2.6L	G6	1999	ABS	●	●	●	●	○
B-Series / Bravo / Fighter / Courier / Ranger / Everest / Endeavour	2.9L	W9	2002	ABS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1.8L	F8	1999	ABS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1.8L	F8	1999 - 2002	PCM	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1.8L	F8	2002	ABS/TCS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1.8L	F8	2002	TCM	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1.8L	L8	2010	ABS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	1.8L	L8	2010	IC	●	●	●	○	○
BONGO / BONGO BRAWNY / SPECTRON	1.8L	L8	2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
BONGO / BONGO BRAWNY / SPECTRON	1.8L	L8	2010	TCM	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	2.0L	RF-T	2003 - 2007	ABS/TCS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	2.0L	RF-T	2003 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0055 0x005C
BONGO / BONGO BRAWNY / SPECTRON	2.0L	RF-T	2003 - 2007	TCM	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	2.2L	R2	1999	ABS	●	●	●	●	○
BONGO / BONGO BRAWNY / SPECTRON	2.2L	R2	1999	PCM	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	1.8L	F8	1999	ABS	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	1.8L	F8	1999	PCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2.0L	FE	1997 - 1999	ABS	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2.0L	FE	1997 - 2002	PCM	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2.0L	FE	2002	ABS/TCS	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2.0L	FE	2002	TCM	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2.2L	R2	1999	ABS	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2.2L	R2	1999	PCM	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2.5L	WL	1999	ABS	●	●	●	●	○
BONGO BRAWNY / ECONOVAN / MAZDA E-SERIES	2.5L	WL	1999	PCM	●	●	●	●	○
BT-50 / Ranger	2.2L	F2	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2.2L	F2	2007	PCM	●	●	●	●	○
BT-50 / Ranger	2.2L	F2	2007	RCM	●	●	●	●	○
BT-50 / Ranger	2.5L	L5	2012	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	2.5L	WL	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2.5L	WL	2007	PCM	●	●	●	●	○
BT-50 / Ranger	2.5L	WL	2007	RCM	●	●	●	●	○
BT-50 / Ranger	2.5L	WL-CD	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2.5L	WL-CD	2007	PCM	●	●	●	●	0x0055 0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	2.5L	WL-CD	2007	RCM	●	●	●	●	○
BT-50 / Ranger	2.5L	WL-CD	2007	TCM	●	●	●	●	○
BT-50 / Ranger	2.6L	G6	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	2.6L	G6	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	2.6L	G6	2007	RCM	●	●	●	●	○
BT-50 / Ranger	3.0L	WE-CD	2007	ABS/TCS	●	●	●	●	○
BT-50 / Ranger	3.0L	WE-CD	2007	PCM	●	●	●	●	0x0055 0x0080 0x0081 0x0082 0x0083
BT-50 / Ranger	3.0L	WE-CD	2007	RCM	●	●	●	●	○
BT-50 / Ranger	3.0L	WE-CD	2007	TCM	●	●	●	●	○
BT-50 / Ranger	4.0L	V6 SOHC	2007	ABS/TCS	●	●	●	●	0x0008
BT-50 / Ranger	4.0L	V6 SOHC	2007	ESOF	●	●	●	●	○
BT-50 / Ranger	4.0L	V6 SOHC	2007	PCM	●	●	●	●	0x0023 0x0024 0x0080 0x0081 0x0082 0x0083 0x0084
BT-50 / Ranger	4.0L	V6 SOHC	2007	RCM	●	●	●	●	○
Bantam	1.3L	Zetec Rocam	2001 - 2006	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Bantam	1.4L	Duratorq Turbo Diesel Common Rail Injection	2009	IC	●	●	●	○	○
Bantam	1.4L	Duratorq Turbo Diesel Common Rail Injection	2009	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Bantam	1.4L	Duratorq Turbo Diesel Common Rail Injection	2009	RCM	●	●	●	●	○
Bantam	1.6L	Zetec Rocam	2001 - 2006	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Blackwood	5.4L	4V	2002 - 2003	ABS/TCS	●	●	●	●	0x0008
Blackwood	5.4L	4V	2002 - 2003	DSM	●	●	●	●	○
Blackwood	5.4L	4V	2002 - 2003	EATC	●	●	●	●	○
Blackwood	5.4L	4V	2002 - 2003	GEM	●	●	●	●	○
Blackwood	5.4L	4V	2002 - 2003	HEC	●	●	●	●	0x0009
Blackwood	5.4L	4V	2002 - 2003	LTM	●	●	●	●	○
Blackwood	5.4L	4V	2002 - 2003	PAM	●	●	●	●	○
Blackwood	5.4L	4V	2002 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
Blackwood	5.4L	4V	2002 - 2003	RAP	●	●	●	●	0x000A 0x000F
Blackwood	5.4L	4V	2002 - 2003	RASM	●	●	●	●	○
Blackwood	5.4L	4V	2002 - 2003	RCM	●	●	●	●	○
Blue Bird C-Class Vision	6.8L	3V	2012	PCM	●	●	●	●	0x0067 0x0080 0x0081 0x0082 0x0083
Bronco	5.0L	Other	1996	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Bronco	5.8L	Other	1996	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	ABS	●	●	●	●	0x0012 0x0074 0x010A
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	ACM	●	●	●	●	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	APIM	●	●	●	●	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	BECM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	DDM	●	●	●	○	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	GWM	●	●	●	○	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	HVAC	●	●	●	●	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	IPC	●	●	●	●	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	PAM	●	●	○	○	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	PSCM	●	●	●	●	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	RFA	●	●	●	○	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2014	FCIM	●	●	●	●	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2014	GPSM	●	●	●	○	○
C-MAX	2.0L	Full Hybrid Electric Vehicle	2014	RGTM	●	●	●	○	0x013D
C-MAX	2.0L	PHEV	2013 - 2014	ABS	●	●	●	●	0x0012 0x0074 0x010A
C-MAX	2.0L	PHEV	2013 - 2014	ACM	●	●	●	●	○
C-MAX	2.0L	PHEV	2013 - 2014	APIM	●	●	●	●	○
C-MAX	2.0L	PHEV	2013 - 2014	BECM	●	●	●	●	○
C-MAX	2.0L	PHEV	2013 - 2014	DDM	●	●	●	○	○
C-MAX	2.0L	PHEV	2013 - 2014	GFM	●	●	●	○	○
C-MAX	2.0L	PHEV	2013 - 2014	GWM	●	●	●	○	○
C-MAX	2.0L	PHEV	2013 - 2014	HVAC	●	●	●	●	○
C-MAX	2.0L	PHEV	2013 - 2014	IPC	●	●	●	●	○
C-MAX	2.0L	PHEV	2013 - 2014	PAM	●	●	○	○	○
C-MAX	2.0L	PHEV	2013 - 2014	PSCM	●	●	●	●	○
C-MAX	2.0L	PHEV	2013 - 2014	RFA	●	●	●	○	○
C-MAX	2.0L	PHEV	2013 - 2014	SOBDM	●	●	●	●	○
C-MAX	2.0L	PHEV	2013 - 2014	TCU#1	●	●	●	○	○
C-MAX	2.0L	PHEV	2014	FCIM	●	●	●	●	○
C-MAX	2.0L	PHEV	2014	GPSM	●	●	●	○	○
C-MAX	2.0L	PHEV	2014	RGTM	●	●	●	○	0x013D
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	1.8L	FP	1997 - 1999	PCM	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	1.8L	FP	1999	ABS	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1997 - 1999	PCM	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	FS	1999	ABS	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.0L	RF	1997	PCM	●	●	●	●	○
CAPELLA / CAPELLA W / TELSTAR / TELSTAR W	2.5L	KL	1999	ABS	●	●	●	●	○
CF/LCF	4.5L	Direct Injection - Turbo	2006 - 2009	ABS	●	●	●	●	0x0008
CF/LCF	4.5L	Direct Injection - Turbo	2006 - 2009	TCM	●	●	●	●	○
Cargo	7.3L	ECOTORQ	2004	PCM	●	●	●	●	○
Cargo	Other	ISBe	2009 - 2012	TBM	●	●	●	●	0x0009 0x00D1 0x00D2 0x00D3 0x012F 0x0130
Cargo	Other	ISBe	2012	HEC	●	●	●	○	0x0009
Cargo	Other	ISBe	2012	RKE	●	●	●	●	○
Cargo	Other	ISCe	2009 - 2012	TBM	●	●	●	●	0x0009 0x00D1 0x00D2 0x00D3 0x012F 0x0130
Cargo	Other	ISCe	2012	HEC	●	●	●	○	0x0009
Cargo	Other	ISCe	2012	RKE	●	●	●	●	○
Cargo	Other	Mechanical	2009 - 2012	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3 0x012F 0x0130
Cargo	Other	Mechanical	2012	HEC	●	●	●	○	0x0009
Cargo	Other	Mechanical	2012	RKE	●	●	●	●	○
Continental	4.6L	4V	1995 - 2002	ABS/TCS	●	●	●	●	0x0008
Continental	4.6L	4V	1995 - 2002	ACM	●	●	●	●	○
Continental	4.6L	4V	1995 - 2002	CPM	●	●	●	●	○
Continental	4.6L	4V	1995 - 2002	DDM	●	●	●	●	0x000F 0x000A
Continental	4.6L	4V	1995 - 2002	DSM	●	●	●	●	○
Continental	4.6L	4V	1995 - 2002	EATC	●	●	●	●	○
Continental	4.6L	4V	1995 - 2002	LCM	●	●	●	●	○
Continental	4.6L	4V	1995 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Continental	4. 6L	4V	1995 - 2002	VDM	●	●	●	●	0x000E
Continental	4. 6L	4V	1995 - 2002	VIC	●	●	●	●	0x0009
Continental	4. 6L	4V	1996 - 1997	IAB	●	●	●	●	○
Continental	4. 6L	4V	1996 - 2000	RESCU	●	●	●	●	○
Continental	4. 6L	4V	1998	ECS	●	●	●	●	○
Continental	4. 6L	4V	1998 - 2002	NGSC	●	●	●	●	○
Continental	4. 6L	4V	1999 - 2002	RCM	●	●	●	●	○
Contour	2. 0L	GFP	1996 - 2000	ABS/TCS	●	●	●	●	0x0008
Contour	2. 0L	GFP	1996 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084
Contour	2. 0L	GFP	1998	PATS	●	●	●	●	0x0009
Contour	2. 0L	GFP	1998 - 2000	CSM	●	●	●	●	○
Contour	2. 0L	GFP	1999 - 2000	RCM	●	●	●	●	○
Contour	2. 0L	Zetec	1996 - 2000	ABS/TCS	●	●	●	●	0x0008
Contour	2. 0L	Zetec	1996 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084
Contour	2. 0L	Zetec	1998	PATS	●	●	●	●	0x0009
Contour	2. 0L	Zetec	1998 - 2000	CSM	●	●	●	●	○
Contour	2. 0L	Zetec	1999 - 2000	RCM	●	●	●	●	○
Contour	2. 5L	Duratec-VE	1996 - 2000	ABS/TCS	●	●	●	●	0x0008
Contour	2. 5L	Duratec-VE	1996 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084
Contour	2. 5L	Duratec-VE	1998	PATS	●	●	●	●	0x0009
Contour	2. 5L	Duratec-VE	1998 - 2000	CSM	●	●	●	●	○
Contour	2. 5L	Duratec-VE	1999 - 2000	RCM	●	●	●	●	○
Contour	2. 5L	HO	1998	PATS	●	●	●	●	0x0009
Contour	2. 5L	HO	1998 - 2000	ABS/TCS	●	●	●	●	0x0008
Contour	2. 5L	HO	1998 - 2000	CSM	●	●	●	●	○
Contour	2. 5L	HO	1998 - 2000	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0009 0x0084
Contour	2. 5L	HO	1999 - 2000	RCM	●	●	●	●	○
Cougar	2. 0L	Zetec	1998 - 2002	ABS/TCS	●	●	●	●	0x0008
Cougar	2. 0L	Zetec	1998 - 2002	CSM	●	●	●	●	○
Cougar	2. 0L	Zetec	1998 - 2002	HEC	●	●	●	●	○
Cougar	2. 0L	Zetec	1998 - 2002	IAB	●	●	●	●	○
Cougar	2. 0L	Zetec	1998 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084
Cougar	2. 5L	Duratec-VE	1998 - 2002	ABS/TCS	●	●	●	●	0x0008
Cougar	2. 5L	Duratec-VE	1998 - 2002	CSM	●	●	●	●	○
Cougar	2. 5L	Duratec-VE	1998 - 2002	HEC	●	●	●	●	○
Cougar	2. 5L	Duratec-VE	1998 - 2002	IAB	●	●	●	●	○
Cougar	2. 5L	Duratec-VE	1998 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0009
Cougar	2. 5L	Duratec-VE	2001	ABS	●	●	●	●	○
Cougar	2. 5L	Duratec-VE	2001	IC	●	●	●	●	○
Cougar	2. 5L	Duratec-VE	2001	MC	●	●	●	●	○
Cougar	2. 5L	Duratec-VE	2001	REM	●	●	●	●	○
Cougar	3. 8L	Other	1996 - 1997	ABS/TCS	●	●	●	●	○
Cougar	3. 8L	Other	1996 - 1997	HEC	●	●	●	●	○
Cougar	3. 8L	Other	1996 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Cougar	4. 6L	2V	1994 - 1997	ABS/TCS	●	●	●	●	○
Cougar	4. 6L	2V	1994 - 1997	HEC	●	●	●	●	○
Cougar	4. 6L	2V	1994 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Crown Victoria	4. 6L	2V	1995 - 1997	DSM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Crown Victoria	4. 6L	2V	1995 - 2004	ABS/TCS	●	●	●	●	0x0008
Crown Victoria	4. 6L	2V	1995 - 2007	EATC	●	●	●	●	○
Crown Victoria	4. 6L	2V	1995 - 2011	DDM	●	●	●	●	0x000F 0x000A 0x0042 0x0005 0xF044 0xF04C 0xF06A
Crown Victoria	4. 6L	2V	1995 - 2011	LCM	●	●	●	●	0xF042 0xF043
Crown Victoria	4. 6L	2V	1995 - 2011	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 0x0024 0x00C5
Crown Victoria	4. 6L	2V	1996 - 1997	IAB	●	●	●	●	○
Crown Victoria	4. 6L	2V	1998 - 2000	ECS	●	●	●	●	○
Crown Victoria	4. 6L	2V	1998 - 2002	PATS	●	●	●	●	0x0009
Crown Victoria	4. 6L	2V	2000 - 2011	RCM	●	●	●	●	0x000C
Crown Victoria	4. 6L	2V	2003 - 2006	RASM	●	●	●	●	0x0013
Crown Victoria	4. 6L	2V	2003 - 2006	VAPS	●	●	●	●	○
Crown Victoria	4. 6L	2V	2004 - 2010	MC	●	●	●	●	○
Crown Victoria	4. 6L	2V	2005 - 2011	ABS	●	●	●	●	0x0008
Crown Victoria	4. 6L	2V	2005 - 2011	FSSM	●	●	●	●	○
Crown Victoria	4. 6L	2V	2006 - 2011	IC	●	●	●	●	0x0005
Crown Victoria	4. 6L	2V	2007 - 2011	VDM	●	●	●	●	0x0005 0x0013 0x0014
Crown Victoria	4. 6L	2V	2008 - 2011	HVAC	●	●	●	●	○
Crown Victoria	4. 6L	2V NGV	1996 - 1997	DSM	●	●	●	●	○
Crown Victoria	4. 6L	2V NGV	1996 - 1997	IAB	●	●	●	●	○
Crown Victoria	4. 6L	2V NGV	1996 - 2000	ABS/TCS	●	●	●	●	0x0008
Crown Victoria	4. 6L	2V NGV	1996 - 2000	DDM	●	●	●	●	0x000F 0x000A
Crown Victoria	4. 6L	2V NGV	1996 - 2000	FIM	●	●	●	●	○
Crown Victoria	4. 6L	2V NGV	1996 - 2000	LCM	●	●	●	●	○
Crown Victoria	4. 6L	2V_NGV	1996 - 2000	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084
Crown Victoria	4. 6L	2V_NGV	1998 - 2000	EATC	●	●	●	●	○
Crown Victoria	4. 6L	2V_NGV	1998 - 2000	ECS	●	●	●	●	○
Crown Victoria	4. 6L	2V_NGV	1998 - 2000	PATS	●	●	●	●	0x0009
Crown Victoria	4. 6L	2V_NGV	2000	RCM	●	●	●	●	○
Crown Victoria	4. 6L	Other	1995	ABS/TCS	●	●	●	●	0x0008
Crown Victoria	4. 6L	Other	1995	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
DEMIO / FESTIVA MINI WAGON	1. 3L	B3	1996 - 1999	ABS	●	●	●	●	○
DEMIO / FESTIVA MINI WAGON	1. 3L	B3	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
DEMIO / FESTIVA MINI WAGON	1. 3L	B3	2000	ABS/TCS	●	●	●	●	○
DEMIO / FESTIVA MINI WAGON	1. 5L	B5	1996 - 1999	ABS	●	●	●	●	○
E-Series	4. 2L	Other	1997 - 2003	ABS/TCS	●	●	●	●	0x0008
E-Series	4. 2L	Other	1997 - 2003	ECS	●	●	●	●	○
E-Series	4. 2L	Other	1997 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084
E-Series	4. 6L	2V	2003	ECS	●	●	●	●	○
E-Series	4. 6L	2V	2003 - 2007	ABS/TCS	●	●	●	●	0x0008 0x001B
E-Series	4. 6L	2V	2003 - 2014	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 0x0009 0x0067
E-Series	4. 6L	2V	2004 - 2006	RAP	●	●	●	●	0x000A 0x000F
E-Series	4. 6L	2V	2004 - 2008	IC	●	●	●	●	0x0005 0xF027 0xF066 0xF067 0x0009
E-Series	4. 6L	2V	2004 - 2014	RCM	●	●	●	●	○
E-Series	4. 6L	2V	2006 - 2014	ABS	●	●	●	●	0x0008 0x0012
E-Series	4. 6L	2V	2007 - 2008	VSM	●	●	●	●	0x000A 0x0042
E-Series	4. 6L	2V	2007 - 2014	PAM	●	●	●	●	○
E-Series	4. 6L	2V	2009 - 2014	ACM	●	●	●	●	0x0017 0x0018
E-Series	4. 6L	2V	2009 - 2014	GEM / SJB	●	●	●	●	0x000A 0x0042 0xF03C 0xF042 0xF049 0xF04B 0xF04C 0xF068 0xF069 0xF06A

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
E-Series	4.6L	2V	2009 - 2014	IPC	●	●	●	●	0x0009
E-Series	4.6L	2V	2009 - 2014	TBC	●	●	●	●	○
E-Series	4.6L	2V	2010 - 2013	SDARS	●	●	●	●	○
E-Series	4.6L	2V	2010 - 2014	APIM	●	●	●	●	0x0019
E-Series	4.6L	2V	2010 - 2014	GPSM	●	●	●	○	○
E-Series	4.6L	Other	1997 - 2002	ABS/TCS	●	●	●	●	0x0008
E-Series	4.6L	Other	1997 - 2002	ECS	●	●	●	●	○
E-Series	4.6L	Other	1997 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084
E-Series	4.9L	GFP	1996	ABS/TCS	●	●	●	●	0x0008
E-Series	4.9L	GFP	1996	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
E-Series	4.9L	Other	1996	ABS/TCS	●	●	●	●	0x0008
E-Series	4.9L	Other	1996	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
E-Series	5.0L	Other	1996	ABS/TCS	●	●	●	●	0x0008
E-Series	5.0L	Other	1996	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
E-Series	5.4L	2V	2004	AFCM	●	●	●	●	○
E-Series	5.4L	2V	2004 - 2006	RAP	●	●	●	●	0x000A 0x000F
E-Series	5.4L	2V	2004 - 2007	ABS/TCS	●	●	●	●	0x0008 0x001B
E-Series	5.4L	2V	2004 - 2008	IC	●	●	●	●	0x0005 0xF066 0xF067 0x0009 0xF027
E-Series	5.4L	2V	2004 - 2014	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0009 0x0067
E-Series	5.4L	2V	2004 - 2014	RCM	●	●	●	●	0x0005 0xF022
E-Series	5.4L	2V	2006 - 2014	ABS	●	●	●	●	0x0008 0x0012
E-Series	5.4L	2V	2007 - 2008	VSM	●	●	●	●	0x000A 0xF044 0x0042
E-Series	5.4L	2V	2007 - 2014	PAM	●	●	●	●	○
E-Series	5.4L	2V	2009 - 2014	ACM	●	●	●	●	0x0017 0x0018
E-Series	5.4L	2V	2009 - 2014	GEM / SJB	●	●	●	●	0x000A 0x0042
E-Series	5.4L	2V	2009 - 2014	IPC	●	●	●	●	0x0009
E-Series	5.4L	2V	2009 - 2014	TBC	●	●	●	●	○
E-Series	5.4L	2V	2010 - 2013	SDARS	●	●	●	●	○
E-Series	5.4L	2V	2010 - 2014	APIM	●	●	●	●	0x0019
E-Series	5.4L	2V	2010 - 2014	GPSM	●	●	●	○	○
E-Series	5.4L	BIF	1999	ABS/TCS	●	●	●	●	0x0008
E-Series	5.4L	BIF	1999	AFCM	●	●	●	●	○
E-Series	5.4L	BIF	1999	ECS	●	●	●	●	○
E-Series	5.4L	BIF	1999	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
E-Series	5.4L	NGV	1997 - 2000	ABS/TCS	●	●	●	●	0x0008
E-Series	5.4L	NGV	1997 - 2000	ECS	●	●	●	●	○
E-Series	5.4L	NGV	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084
E-Series	5.4L	NGV	1998 - 2000	FIM	●	●	●	●	○
E-Series	5.4L	Other	1997 - 2003	ABS/TCS	●	●	●	●	0x0008
E-Series	5.4L	Other	1997 - 2003	ECS	●	●	●	●	○
E-Series	5.4L	Other	1997 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084
E-Series	5.8L	Other	1996	ABS/TCS	●	●	●	●	0x0008
E-Series	5.8L	Other	1996	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
E-Series	6.0L	Direct Injection - Turbo	2004 - 2006	RAP	●	●	●	●	0x000A 0x000F
E-Series	6.0L	Direct Injection - Turbo	2004 - 2007	ABS/TCS	●	●	●	●	0x0008 0x001B
E-Series	6.0L	Direct Injection - Turbo	2004 - 2008	IC	●	●	●	●	0x0005 0xF027 0xF066 0xF067 0x0009
E-Series	6.0L	Direct Injection - Turbo	2004 - 2010	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0009

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
E-Series	6.0L	Direct Injection - Turbo	2004 - 2010	RCM	●	●	●	●	○
E-Series	6.0L	Direct Injection - Turbo	2004 - 2010	TCM	●	●	●	●	○
E-Series	6.0L	Direct Injection - Turbo	2006 - 2010	ABS	●	●	●	●	0x0008 0x0012 0x0005
E-Series	6.0L	Direct Injection - Turbo	2007 - 2008	VSM	●	●	●	●	0x000A 0x0042
E-Series	6.0L	Direct Injection - Turbo	2007 - 2010	PAM	●	●	●	●	○
E-Series	6.0L	Direct Injection - Turbo	2009 - 2010	ACM	●	●	●	●	0x0017 0x0018
E-Series	6.0L	Direct Injection - Turbo	2009 - 2010	GEM / SJB	●	●	●	●	0x000A 0x0042 0xF03C 0xF042 0xF049 0xF04B 0xF04C 0xF068 0xF069 0xF06A
E-Series	6.0L	Direct Injection - Turbo	2009 - 2010	IPC	●	●	●	●	○
E-Series	6.0L	Direct Injection - Turbo	2009 - 2010	TBC	●	●	●	●	○
E-Series	6.0L	Direct Injection - Turbo	2010	APIM	●	●	●	●	0x0019
E-Series	6.0L	Direct Injection - Turbo	2010	GPSM	●	●	●	○	○
E-Series	6.0L	Direct Injection - Turbo	2010	SDARS	●	●	●	●	○
E-Series	6.8L	2V	2004 - 2006	RAP	●	●	●	●	0x000A 0x000F
E-Series	6.8L	2V	2004 - 2007	ABS/TCS	●	●	●	●	0x0008 0x001B
E-Series	6.8L	2V	2004 - 2008	IC	●	●	●	●	0x0009
E-Series	6.8L	2V	2004 - 2014	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0067 0x0009
E-Series	6.8L	2V	2004 - 2014	RCM	●	●	●	●	○
E-Series	6.8L	2V	2006 - 2014	ABS	●	●	●	●	0x0008 0x0012 0x0005
E-Series	6.8L	2V	2007 - 2008	VSM	●	●	●	●	0x000A 0x0042
E-Series	6.8L	2V	2007 - 2014	PAM	●	●	●	●	○
E-Series	6.8L	2V	2009 - 2014	ACM	●	●	●	●	0x0017 0x0018
E-Series	6.8L	2V	2009 - 2014	GEM / SJB	●	●	●	●	0x000A 0x0042 0xF03C 0xF042 0xF049 0xF04B 0xF04C 0xF068 0xF069 0xF06A
E-Series	6.8L	2V	2009 - 2014	IPC	●	●	●	●	0x0009
E-Series	6.8L	2V	2009 - 2014	TBC	●	●	●	●	○
E-Series	6.8L	2V	2010 - 2013	SDARS	●	●	●	●	○
E-Series	6.8L	2V	2010 - 2014	APIM	●	●	●	●	0x0019
E-Series	6.8L	2V	2010 - 2014	GPSM	●	●	●	○	○
E-Series	6.8L	Other	1997 - 2003	ABS/TCS	●	●	●	●	0x0008
E-Series	6.8L	Other	1997 - 2003	ECS	●	●	●	●	○
E-Series	6.8L	Other	1997 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084
E-Series	7.3L	Direct Injection - Turbo	1995 - 2003	ABS/TCS	●	●	●	●	0x0008
E-Series	7.3L	Direct Injection - Turbo	1995 - 2003	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0083 0x0010 0x0028 0x0031 0x0033
E-Series	7.3L	Direct Injection - Turbo	1997 - 2003	ECS	●	●	●	●	○
E-Series	7.5L	Other	1996	ABS/TCS	●	●	●	●	0x0008
E-Series	7.5L	Other	1996	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
E-Series	Other	Other	2012	ABS	●	●	●	●	○
E-Series	Other	Other	2012	ACM	●	●	●	●	○
E-Series	Other	Other	2012	APIM	●	●	●	●	○
E-Series	Other	Other	2012	GEM / SJB	●	●	●	●	0x0042
E-Series	Other	Other	2012	GPSM	●	●	●	●	○
E-Series	Other	Other	2012	IPC	●	●	●	●	○
E-Series	Other	Other	2012	PAM	●	●	●	●	○
E-Series	Other	Other	2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
E-Series	Other	Other	2012	RCM	●	●	●	●	○
E-Series	Other	Other	2012	SDARS	●	●	●	●	○
E-Series	Other	Other	2012	TBC	●	●	●	●	○
E-Series Shuttle Bus	6.8L	H2ICE	2006	ABS/TCS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
E-Series Shuttle Bus	6.8L	H2ICE	2006	AFCM	●	●	●	●	○
E-Series Shuttle Bus	6.8L	H2ICE	2006	EMM	●	●	●	●	○
E-Series Shuttle Bus	6.8L	H2ICE	2006	IC	●	●	●	●	○
E-Series Shuttle Bus	6.8L	H2ICE	2006	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
E-Series Shuttle Bus	6.8L	H2ICE	2006	RCM	●	●	●	●	○
EcoSport	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	ABS	●	●	●	●	○
EcoSport	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	ACM	●	●	●	●	○
EcoSport	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	DDM	●	●	●	●	○
EcoSport	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	HVAC	●	●	●	●	○
EcoSport	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PSCM	●	●	●	○	0x00CB 0x00CC
EcoSport	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	RCM	●	●	●	○	○
EcoSport	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●	●	○
EcoSport	1.0L	Zetec Rocam	2003	ABS/TCS	●	●	●	●	0x0008 0x000B
EcoSport	1.0L	Zetec Rocam	2003	GEM	●	●	●	●	○
EcoSport	1.0L	Zetec Rocam	2003	IC	●	●	●	●	○
EcoSport	1.0L	Zetec Rocam	2003	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
EcoSport	1.0L	Zetec Rocam	2003	RCM	●	●	●	●	○
EcoSport	1.0L	Zetec Rocam	2003	RKE	●	●	●	●	○
EcoSport	1.4L	Duratorq Turbo Diesel Common Rail Injection	2003	ABS/TCS	●	●	●	●	0x0008 0x000B
EcoSport	1.4L	Duratorq Turbo Diesel Common Rail Injection	2003	GEM	●	●	●	●	○
EcoSport	1.4L	Duratorq Turbo Diesel Common Rail Injection	2003	IC	●	●	●	●	○
EcoSport	1.4L	Duratorq Turbo Diesel Common Rail Injection	2003	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
EcoSport	1.4L	Duratorq Turbo Diesel Common Rail Injection	2003	RCM	●	●	●	●	○
EcoSport	1.4L	Duratorq Turbo Diesel Common Rail Injection	2003	RKE	●	●	●	●	○
EcoSport	1.5L	DURATEC VCT	2014	APIM	●	●	●	●	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	ABS	●	●	●	●	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	ACM	●	●	●	●	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	APIM	●	●	●	●	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	FCDIM	●	●	●	●	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	HVAC	●	●	●	●	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	PSCM	●	●	●	○	0x00CB 0x00CC
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	RCM	●	●	●	○	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection	2012	TBM	●	●	●	●	○
EcoSport	1.5L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	APIM	●	●	●	●	○
EcoSport	1.5L	TivCT	2012	ABS	●	●	●	●	○
EcoSport	1.5L	TivCT	2012	ACM	●	●	●	○	○
EcoSport	1.5L	TivCT	2012	APIM	●	●	●	●	○
EcoSport	1.5L	TivCT	2012	BCM#1	●	●	●	●	0x000A
EcoSport	1.5L	TivCT	2012	DDM	●	●	●	○	○
EcoSport	1.5L	TivCT	2012	FCDIM	●	●	●	●	○
EcoSport	1.5L	TivCT	2012	HVAC	●	●	●	●	○
EcoSport	1.5L	TivCT	2012	IPC	●	●	●	●	○
EcoSport	1.5L	TivCT	2012	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
EcoSport	1.5L	TivCT	2012	PSCM	●	●	●	○	0x00CB 0x00CC
EcoSport	1.5L	TivCT	2012	RCM	●	●	●	○	○
EcoSport	1.5L	TivCT	2012	TCM	●	●	●	●	0x0117 0x0158
EcoSport	1.6L	FFV	2003 - 2006	GEM	●	●	●	●	○
EcoSport	1.6L	FFV	2003 - 2011	ABS/TCS	●	●	●	●	0x0008 0x000B
EcoSport	1.6L	FFV	2003 - 2011	IC	●	●	●	●	○
EcoSport	1.6L	FFV	2003 - 2011	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x012E
EcoSport	1.6L	FFV	2003 - 2011	RCM	●	●	●	●	○
EcoSport	1.6L	FFV	2003 - 2011	RKE	●	●	●	●	0x000A
EcoSport	1.6L	FFV	2011	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
EcoSport	1.6L	Sigma	2012	ABS	●	●	●	●	○
EcoSport	1.6L	Sigma	2012	ACM	●	●	●	●	○
EcoSport	1.6L	Sigma	2012	APIM	●	●	●	●	○
EcoSport	1.6L	Sigma	2012	BCM#1	●	●	●	●	○
EcoSport	1.6L	Sigma	2012	DDM	●	●	●	○	○
EcoSport	1.6L	Sigma	2012	FCDIM	●	●	●	●	○
EcoSport	1.6L	Sigma	2012	HVAC	●	●	●	●	○
EcoSport	1.6L	Sigma	2012	IPC	●	●	●	●	○
EcoSport	1.6L	Sigma	2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0084
EcoSport	1.6L	Sigma	2012	PSCM	●	●	●	○	0x00CB 0x00CC
EcoSport	1.6L	Sigma	2012	RCM	●	●	●	○	○
EcoSport	1.6L	Sigma	2012	RFA	●	●	●	○	○
EcoSport	1.6L	Sigma	2012	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
EcoSport	1.6L	Zetec Rocam	2003	GEM	●	●	●	●	○
EcoSport	1.6L	Zetec Rocam	2003 – 2009	ABS/TCS	●	●	●	●	0x0008 0x000B
EcoSport	1.6L	Zetec Rocam	2003 – 2009	IC	●	●	●	●	○
EcoSport	1.6L	Zetec Rocam	2003 – 2009	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
EcoSport	1.6L	Zetec Rocam	2003 – 2009	RCM	●	●	●	●	○
EcoSport	1.6L	Zetec Rocam	2003 – 2009	RKE	●	●	●	●	0x000A
EcoSport	2.0L	DURATEC	2013	ABS	●	●	●	●	○
EcoSport	2.0L	DURATEC	2013	ACM	●	●	●	●	○
EcoSport	2.0L	DURATEC	2013	APIM	●	●	●	●	○
EcoSport	2.0L	DURATEC	2013	DDM	●	●	●	●	○
EcoSport	2.0L	DURATEC	2013	HVAC	●	●	●	●	○
EcoSport	2.0L	DURATEC	2013	PSCM	●	●	●	○	○
EcoSport	2.0L	DURATEC	2013	RCM	●	●	●	○	○
EcoSport	2.0L	DURATEC	2013	TBM	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2003 – 2006	GEM	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2003 – 2007	ABS/TCS	●	●	●	●	0x0008 0x000B
EcoSport	2.0L	DURATEC-HE / I4	2003 – 2007	IC	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2003 – 2007	RKE	●	●	●	●	0x000A
EcoSport	2.0L	DURATEC-HE / I4	2003 – 2012	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x0023 0x0067 0x0084
EcoSport	2.0L	DURATEC-HE / I4	2003 – 2012	RCM	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2012	ABS	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2012	ACM	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2012	APIM	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2012	BCM#1	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2012	DDM	●	●	●	○	○
EcoSport	2.0L	DURATEC-HE / I4	2012	FCDIM	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2012	HVAC	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2012	IPC	●	●	●	●	○
EcoSport	2.0L	DURATEC-HE / I4	2012	PSCM	●	●	●	○	0x00CB 0x00CC
EcoSport	2.0L	DURATEC-HE / I4	2012	RFA	●	●	●	○	○
EcoSport	2.0L	DURATEC-HE / I4	2012	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
EcoSport	2.0L	FFV	2009 – 2011	ABS/TCS	●	●	●	●	0x0008 0x000B
EcoSport	2.0L	FFV	2009 – 2011	IC	●	●	●	●	○
EcoSport	2.0L	FFV	2009 – 2011	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x00C5
EcoSport	2.0L	FFV	2009 – 2011	RCM	●	●	●	●	○
EcoSport	2.0L	FFV	2009 – 2011	RKE	●	●	●	●	0x000A
EcoSport	2.0L	FFV	2011	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
EcoSport	2.0L	Zetec Rocam	2009	ABS/TCS	●	●	●	●	○
EcoSport	2.0L	Zetec Rocam	2009	IC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
EcoSport	2.0L	Zetec Rocam	2009	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
EcoSport	2.0L	Zetec Rocam	2009	RCM	●	●	●	●	○
EcoSport	2.0L	Zetec Rocam	2009	RKE	●	●	●	●	0x000A
EcoSport	Other	Other	2012	ABS	●	●	●	●	○
EcoSport	Other	Other	2012	ACM	●	●	●	○	○
EcoSport	Other	Other	2012	APIM	●	●	●	●	○
EcoSport	Other	Other	2012	BCM#1	●	●	●	●	0x000A
EcoSport	Other	Other	2012	DDM	●	●	●	○	○
EcoSport	Other	Other	2012	FCDIM	●	●	●	●	○
EcoSport	Other	Other	2012	HVAC	●	●	●	●	○
EcoSport	Other	Other	2012	IPC	●	●	●	●	○
EcoSport	Other	Other	2012	PSCM	●	●	●	○	○
EcoSport	Other	Other	2012	RCM	●	●	●	○	○
Econovan	2.0L	OHC	2008	IC	●	●	●	●	○
Econovan	2.0L	OHC	2008	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012	TPM	●	●	●	●	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2013	C-CM	●	●	●	○	0x0046
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2013	FCDIM	●	●	●	●	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2013	HVAC	●	●	●	●	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2013	OCSM	●	●	●	●	0x000C 0x0015
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2013	PCM	●	●	●	●	0x0024 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2013	RCM	●	●	●	○	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2013	TCM	●	●	●	●	0x0010 0x0028 0x0031 0x0033 0x0038
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	ABS	●	●	●	●	0x0008 0x0012
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	ACM	●	●	●	●	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	APIM	●	●	●	○	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	BCM#1	●	●	●	●	0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x000A 0x0112
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	DCSM	●	●	●	●	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	DSM	●	●	●	●	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	DSP	●	●	●	●	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	FCIM	●	●	●	○	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	FLM	●	●	●	●	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	GPSM	●	●	●	○	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	HUD	●	●	●	●	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	IPC	●	●	●	●	0x00D0
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	LTM	●	●	●	○	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	PAM	●	●	●	○	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	RFA	●	●	●	●	0x0064
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	RLCM-A	●	●	●	●	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	SCCM	●	●	●	●	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	SOD-L	●	●	●	●	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	SOD-R	●	●	●	●	○
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2012 - 2014	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
Edge	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RTM	●	●	●	○	○
Edge	3.5L	4V	2007	EATC	●	●	●	●	○
Edge	3.5L	4V	2007	GEM	●	●	●	●	0x000A 0x000F 0x001A
Edge	3.5L	4V	2007 - 2010	4X4	●	●	●	●	○
Edge	3.5L	4V	2007 - 2010	ABS	●	●	●	●	0x0008 0x0012 0x0005
Edge	3.5L	4V	2007 - 2010	ACM	●	●	●	●	0x0016 0x0017 0x0018 0x0019 0x0005
Edge	3.5L	4V	2007 - 2010	DSM	●	●	●	●	0x0005 0xF041
Edge	3.5L	4V	2007 - 2010	IC	●	●	●	●	0x0009 0x0005 0xF027 0xF047 0xF04A

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Edge	3.5L	4V	2007 - 2010	OCSM	●	●	●	○	0x000C 0x0015 0x006D
Edge	3.5L	4V	2007 - 2010	PAM	●	●	●	●	0x0005
Edge	3.5L	4V	2007 - 2010	PCM	●	●	●	●	0x0024 0x0025 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x0202 0x0010 0x0023 0x0028 0x0031 0x0033 0x00C5
Edge	3.5L	4V	2007 - 2010	RCM	●	●	●	●	0x0005
Edge	3.5L	4V	2007 - 2010	RETM	●	●	●	●	0x0005 0xF04D
Edge	3.5L	4V	2007 - 2010	SASM	●	●	●	●	○
Edge	3.5L	4V	2007 - 2010	SDARS	●	●	●	●	0x0019 0x0005
Edge	3.5L	4V	2007 - 2010	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
Edge	3.5L	4V	2008 - 2010	APIM	●	●	●	●	0x0019 0x001C
Edge	3.5L	4V	2008 - 2010	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C
Edge	3.5L	4V	2008 - 2010	HVAC	●	●	●	●	○
Edge	3.5L	4V	2008 - 2010	LTM	●	●	●	●	○
Edge	3.5L	4V	2010	GPSM	●	●	●	○	○
Edge	3.5L	TiVCT	2011 - 2012	TPM	●	●	●	●	○
Edge	3.5L	TiVCT	2011 - 2013	C-CM	●	●	●	○	0x0046
Edge	3.5L	TiVCT	2011 - 2013	FCDIM	●	●	●	●	○
Edge	3.5L	TiVCT	2011 - 2013	HVAC	●	●	●	●	○
Edge	3.5L	TiVCT	2011 - 2013	OCSM	●	●	●	●	0x000C 0x0015
Edge	3.5L	TiVCT	2011 - 2013	PCM	●	●	●	●	0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0108
Edge	3.5L	TiVCT	2011 - 2013	RCM	●	●	●	○	○
Edge	3.5L	TiVCT	2011 - 2014	ABS	●	●	●	●	0x0008 0x0012
Edge	3.5L	TiVCT	2011 - 2014	ACM	●	●	●	○	○
Edge	3.5L	TiVCT	2011 - 2014	APIM	●	●	●	○	0x00D6
Edge	3.5L	TiVCT	2011 - 2014	BCM#1	●	●	●	●	0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x000A 0x0112
Edge	3.5L	TiVCT	2011 - 2014	DCSM	●	●	●	●	○
Edge	3.5L	TiVCT	2011 - 2014	DSM	●	●	●	●	○
Edge	3.5L	TiVCT	2011 - 2014	DSP	●	●	●	●	○
Edge	3.5L	TiVCT	2011 - 2014	FCIM	●	●	●	○	○
Edge	3.5L	TiVCT	2011 - 2014	FLM	●	●	●	●	○
Edge	3.5L	TiVCT	2011 - 2014	GPSM	●	●	●	●	○
Edge	3.5L	TiVCT	2011 - 2014	HUD	●	●	●	●	○
Edge	3.5L	TiVCT	2011 - 2014	IPC	●	●	●	●	0x00D0
Edge	3.5L	TiVCT	2011 - 2014	LTM	●	●	●	●	○
Edge	3.5L	TiVCT	2011 - 2014	PAM	●	●	●	●	○
Edge	3.5L	TiVCT	2011 - 2014	RFA	●	●	●	●	0x0064
Edge	3.5L	TiVCT	2011 - 2014	RLCM-A	●	●	●	●	○
Edge	3.5L	TiVCT	2011 - 2014	SCCM	●	●	●	●	○
Edge	3.5L	TiVCT	2011 - 2014	SOD-L	●	●	●	●	○
Edge	3.5L	TiVCT	2011 - 2014	SOD-R	●	●	●	●	○
Edge	3.5L	TiVCT	2011 - 2014	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
Edge	3.5L	TiVCT	2013 - 2014	RTM	●	●	●	○	○
Edge	3.7L	TiVCT	2011 - 2012	TPM	●	●	●	●	○
Edge	3.7L	TiVCT	2011 - 2013	C-CM	●	●	●	○	0x0046
Edge	3.7L	TiVCT	2011 - 2013	FCDIM	●	●	●	○	○
Edge	3.7L	TiVCT	2011 - 2013	HVAC	●	●	●	●	○
Edge	3.7L	TiVCT	2011 - 2013	OCSM	●	●	●	●	0x000C 0x0015

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Edge	3.7L	TiVCT	2011 - 2013	PCM	●	●	●	●	0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0108
Edge	3.7L	TiVCT	2011 - 2013	RCM	●	●	●	○	○
Edge	3.7L	TiVCT	2011 - 2014	ABS	●	●	●	●	0x0008 0x0012
Edge	3.7L	TiVCT	2011 - 2014	ACM	●	●	●	○	○
Edge	3.7L	TiVCT	2011 - 2014	APIM	●	●	●	○	0x00D6
Edge	3.7L	TiVCT	2011 - 2014	BCM#1	●	●	●	●	0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x000A 0x0112
Edge	3.7L	TiVCT	2011 - 2014	DCSM	●	●	●	●	○
Edge	3.7L	TiVCT	2011 - 2014	DSM	●	●	●	●	○
Edge	3.7L	TiVCT	2011 - 2014	DSP	●	●	●	●	○
Edge	3.7L	TiVCT	2011 - 2014	FCIM	●	●	●	○	○
Edge	3.7L	TiVCT	2011 - 2014	FLM	●	●	●	●	○
Edge	3.7L	TiVCT	2011 - 2014	GPSM	●	●	●	●	○
Edge	3.7L	TiVCT	2011 - 2014	HUD	●	●	●	●	○
Edge	3.7L	TiVCT	2011 - 2014	IPC	●	●	●	●	0x00D0
Edge	3.7L	TiVCT	2011 - 2014	LTM	●	●	●	●	○
Edge	3.7L	TiVCT	2011 - 2014	PAM	●	●	●	●	○
Edge	3.7L	TiVCT	2011 - 2014	RFA	●	●	●	●	0x0064
Edge	3.7L	TiVCT	2011 - 2014	RLCM-A	●	●	●	●	○
Edge	3.7L	TiVCT	2011 - 2014	SCCM	●	●	●	●	○
Edge	3.7L	TiVCT	2011 - 2014	SOD-L	●	●	●	●	○
Edge	3.7L	TiVCT	2011 - 2014	SOD-R	●	●	●	●	○
Edge	3.7L	TiVCT	2011 - 2014	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
Edge	3.7L	TiVCT	2013 - 2014	RTM	●	●	●	○	○
Edge	Other	Other	2014	ABS	●	●	●	●	○
Edge	Other	Other	2014	ACM	●	●	●	●	○
Edge	Other	Other	2014	APIM	●	●	●	○	○
Edge	Other	Other	2014	BCM#1	●	●	●	○	○
Edge	Other	Other	2014	DCSM	●	●	●	●	○
Edge	Other	Other	2014	DSM	●	●	●	●	○
Edge	Other	Other	2014	DSP	●	●	●	●	○
Edge	Other	Other	2014	FCIM	●	●	●	○	○
Edge	Other	Other	2014	FLM	●	●	●	●	○
Edge	Other	Other	2014	GPSM	●	●	●	○	○
Edge	Other	Other	2014	HUD	●	●	●	●	○
Edge	Other	Other	2014	IPC	●	●	●	●	○
Edge	Other	Other	2014	LTM	●	●	●	●	○
Edge	Other	Other	2014	PAM	●	●	●	○	○
Edge	Other	Other	2014	RFA	●	●	●	●	○
Edge	Other	Other	2014	RLCM-A	●	●	●	●	○
Edge	Other	Other	2014	RTM	●	●	●	○	○
Edge	Other	Other	2014	SCCM	●	●	●	●	○
Edge	Other	Other	2014	SOD-L	●	●	●	●	○
Edge	Other	Other	2014	SOD-R	●	●	●	●	○
Edge	Other	Other	2014	TBM	●	●	●	●	○
Escape / Mariner Hybrid	2.3L	HEV / ATKINSON 4V	2005 - 2007	4X4	●	●	●	●	○
Escape / Mariner Hybrid	2.3L	HEV / ATKINSON 4V	2005 - 2007	ABS	●	●	●	●	0x0012 0x0074
Escape / Mariner Hybrid	2.3L	HEV / ATKINSON 4V	2005 - 2007	BCM	●	●	●	●	0x006E
Escape / Mariner Hybrid	2.3L	HEV / ATKINSON 4V	2005 - 2007	EPS	●	●	●	●	○
Escape / Mariner Hybrid	2.3L	HEV / ATKINSON 4V	2005 - 2007	GEM	●	●	●	●	0x000A 0x000F
Escape / Mariner Hybrid	2.3L	HEV / ATKINSON 4V	2005 - 2007	IC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape / Mariner Hybrid	2.3L	HEV / ATKINSON 4V	2005 - 2007	PAM	●	●	●	●	○
Escape / Mariner Hybrid	2.3L	HEV / ATKINSON 4V	2005 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0009 0x0023 0x0024 0x0025 0x0084 0x00C5
Escape / Mariner Hybrid	2.3L	HEV / ATKINSON 4V	2005 - 2007	RCM	●	●	●	●	0x000C
Escape / Mariner Hybrid	2.3L	HEV / ATKINSON 4V	2005 - 2007	TCM	●	●	●	●	○
Escape / Tribute (2006/4 -)	2.3L	L3	2006	ABS	●	●	●	●	○
Escape / Tribute (2006/4 -)	2.3L	L3	2006	GEM	●	●	●	●	○
Escape / Tribute (2006/4 -)	2.3L	L3	2006	IC	●	●	●	●	○
Escape / Tribute (2006/4 -)	2.3L	L3	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Escape / Tribute (2006/4 -)	2.3L	L3	2006	RCM	●	●	●	●	○
Escape / Tribute (2006/3)	2.3L	L3	2003	ABS	●	●	●	●	○
Escape / Tribute (2006/3)	2.3L	L3	2003	GEM	●	●	●	●	○
Escape / Tribute (2006/3)	2.3L	L3	2003	IC	●	●	●	●	○
Escape / Tribute (2006/3)	2.3L	L3	2003	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Escape / Tribute (2006/3)	2.3L	L3	2003	RCM	●	●	●	●	○
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	4X4	●	●	●	●	○
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	ABS	●	●	●	●	0x0005 0x0008 0x0012 0x0053
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	ACM	●	●	●	●	0x0016 0x0017 0x0018 0xF05A
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	FDIM	●	●	●	●	0xF05A
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C 0xF05B 0xF05C 0xF05E 0xF05F 0xF060 0xF061
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	HVAC	●	●	●	●	○
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	IC	●	●	●	●	0x0005 0x0009 0xF027 0xF04B 0xF04C 0xF054
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	OCSM	●	●	●	○	0x000C 0x006D
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	PAM	●	●	●	●	○
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	PSCM	●	●	○	○	0x0005 0x0053
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	RCM	●	●	●	●	0x0005 0xF022 0xF05D
Escape / Tribute / Mariner	2.3L	DURATEC-HE / I4	2008	SDARS	●	●	●	●	0x0019
Escape / Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	4X4	●	●	●	●	○
Escape / Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	ABS	●	●	●	●	0x0005 0x0012 0x0053 0x0074
Escape / Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	ACM	●	●	●	●	0x0005 0x0016 0x0017 0x0018 0xF05A
Escape / Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	BCM	●	●	●	●	0x006E
Escape / Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	FDIM	●	●	●	●	0x0005 0xF05A
Escape / Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C 0xF05B 0xF05C 0xF05E 0xF05F 0xF060 0xF061
Escape / Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	HVAC	●	●	●	●	○
Escape / Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	IC	●	●	●	●	0x0005 0x0009 0xF027 0xF04B 0xF04C 0xF054
Escape / Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	OCSM	●	●	●	○	0x000C
Escape / Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	PAM	●	●	●	●	○
Escape / Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5
Escape / Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	PSCM	●	●	○	○	0x0005 0x0053
Escape / Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	RCM	●	●	●	●	0x0005 0xF022 0xF05D
Escape / Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	SDARS	●	●	●	●	0x0019
Escape / Tribute / Mariner	2.3L	HEV / ATKINSON 4V	2008	TCM	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	DURATEC-HE / I4	2009	SDARS	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	4X4	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	ABS	●	●	●	●	0x0008 0x0012 0x0053
Escape / Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	ACM	●	●	●	●	0x0017 0x0018

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape / Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	APIM	●	●	●	●	0x0019 0x001C
Escape / Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	FDIM	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	GEM / SJB	●	●	●	●	0x000F 0x0042
Escape / Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	HVAC	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	IC	●	●	●	●	0x0009
Escape / Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	OCSM	●	●	●	○	0x000C 0x006D
Escape / Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	PAM	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	PCM	●	●	●	●	0x0024 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0023 0x0038
Escape / Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	PSCM	●	●	○	○	0x0053 0x00CC
Escape / Tribute / Mariner	2.5L	DURATEC-HE / I4	2009 - 2012	RCM	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	DURATEC-HE / I4	2010 - 2012	GPSM	●	●	●	○	○
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009	SDARS	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	4X4	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	ABS	●	●	●	●	0x0053 0x0074
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	ACM	●	●	●	●	0x0017 0x0018
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	APIM	●	●	●	●	0x0019 0x001C
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	BCM	●	●	●	●	0x006E
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	FDIM	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	GEM / SJB	●	●	●	●	0x000F 0x0042
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	HVAC	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	IC	●	●	●	●	0x0009
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	OCSM	●	●	●	○	0x000C 0x006D
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	PAM	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	PCM	●	●	●	●	0x0024 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0028 0x0031 0x0033
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	PSCM	●	●	○	○	0x0053 0x00CC
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	RCM	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2009 - 2012	TCM	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 - 2012	ACCM#2	●	●	●	●	○
Escape / Tribute / Mariner	2.5L	HEV / ATKINSON 4V	2010 - 2012	GPSM	●	●	●	○	○
Escape / Tribute / Mariner	3.0L	4V	2008 - 2009	SDARS	●	●	●	●	0x0019 0x0005
Escape / Tribute / Mariner	3.0L	4V	2008 - 2012	4X4	●	●	●	●	○
Escape / Tribute / Mariner	3.0L	4V	2008 - 2012	ABS	●	●	●	●	0x0005 0x0008 0x0012 0x0053
Escape / Tribute / Mariner	3.0L	4V	2008 - 2012	ACM	●	●	●	●	0x0016 0x0017 0x0018 0xF05A
Escape / Tribute / Mariner	3.0L	4V	2008 - 2012	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	3.0L	4V	2008 - 2012	FDIM	●	●	●	●	0xF05A 0x0005 0xF062 0xF063
Escape / Tribute / Mariner	3.0L	4V	2008 - 2012	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C 0xF05B 0xF05C 0xF05E 0xF05F 0xF060 0xF061
Escape / Tribute / Mariner	3.0L	4V	2008 - 2012	HVAC	●	●	●	●	0x0005
Escape / Tribute / Mariner	3.0L	4V	2008 - 2012	IC	●	●	●	●	0x0009 0xF027 0xF04B 0xF04C 0xF054 0x0005
Escape / Tribute / Mariner	3.0L	4V	2008 - 2012	OCSM	●	●	●	○	0x000C 0x006D
Escape / Tribute / Mariner	3.0L	4V	2008 - 2012	PAM	●	●	●	●	○
Escape / Tribute / Mariner	3.0L	4V	2008 - 2012	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0009 0x0038 0x0067
Escape / Tribute / Mariner	3.0L	4V	2008 - 2012	PSCM	●	●	○	○	0x0005 0x0053 0x00CC
Escape / Tribute / Mariner	3.0L	4V	2008 - 2012	RCM	●	●	●	●	0xF022 0xF05D 0x0005
Escape / Tribute / Mariner	3.0L	4V	2009 - 2012	APIM	●	●	●	●	0x001C 0x0019
Escape / Tribute / Mariner	3.0L	4V	2010 - 2012	GPSM	●	●	●	○	○
Escape / Tribute / Mariner	Other	Other	2012	4X4	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape / Tribute / Mariner	Other	Other	2012	ABS	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	ACM	●	●	●	○	○
Escape / Tribute / Mariner	Other	Other	2012	APIM	●	●	●	○	○
Escape / Tribute / Mariner	Other	Other	2012	FCIM	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	FDIM	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	GEM / SJB	●	●	●	●	0x0042
Escape / Tribute / Mariner	Other	Other	2012	GPSM	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	HVAC	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	IC	●	●	●	●	○
Escape / Tribute / Mariner	Other	Other	2012	OCSM	●	●	●	○	○
Escape / Tribute / Mariner	Other	Other	2012	PAM	●	●	●	○	○
Escape / Tribute / Mariner	Other	Other	2012	PSCM	●	●	○	○	○
Escape / Tribute / Mariner	Other	Other	2012	RCM	●	●	●	●	○
Escape / Tribute / Maverick	2.0L	Zetec	2001 - 2004	ABS/TCS	●	●	●	●	0x0008
Escape / Tribute / Maverick	2.0L	Zetec	2001 - 2004	GEM	●	●	●	●	0x000A
Escape / Tribute / Maverick	2.0L	Zetec	2001 - 2004	IC	●	●	●	●	○
Escape / Tribute / Maverick	2.0L	Zetec	2001 - 2004	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024
Escape / Tribute / Maverick	2.0L	Zetec	2001 - 2004	RCM	●	●	●	●	○
Escape / Tribute / Maverick	2.0L	Zetec	2003 - 2004	PAM	●	●	●	●	○
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006 - 2007	4X4	●	●	●	●	○
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006 - 2007	ABS	●	●	●	●	0x0008
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006 - 2007	GEM	●	●	●	●	0x000A 0x000F
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006 - 2007	IC	●	●	●	●	○
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006 - 2007	PAM	●	●	●	●	○
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006 - 2007	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5
Escape / Tribute / Maverick	2.3L	DURATEC-HE / I4	2006 - 2007	RCM	●	●	●	●	0x000C
Escape / Tribute / Maverick	3.0L	4V	2001 - 2004	ABS/TCS	●	●	●	●	0x0008
Escape / Tribute / Maverick	3.0L	4V	2001 - 2007	GEM	●	●	●	●	0x000A 0x000F 0xF042 0xF04E 0xF04F 0xF050 0xF051 0xF056 0xF057 0xF058 0xF059 0xF090
Escape / Tribute / Maverick	3.0L	4V	2001 - 2007	IC	●	●	●	●	0x0005 0xF040 0xF043 0xF04D 0xF052 0xF053 0xF054 0xF055
Escape / Tribute / Maverick	3.0L	4V	2001 - 2007	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 0x00C5 0x0202
Escape / Tribute / Maverick	3.0L	4V	2001 - 2007	RCM	●	●	●	●	0x000C 0x006D
Escape / Tribute / Maverick	3.0L	4V	2003 - 2007	PAM	●	●	●	●	○
Escape / Tribute / Maverick	3.0L	4V	2006 - 2007	4X4	●	●	●	●	○
Escape / Tribute / Maverick	3.0L	4V	2006 - 2007	ABS	●	●	●	●	0x0005 0x0008
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	ABS	●	●	●	●	0x0012
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	ACM	●	●	●	●	0x0017
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	●	0x000F 0x00D5 0x0101
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	DSM	●	●	●	●	0x00F2
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	FCDIM	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPC	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPM-B	●	●	●	○	○
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	OCSM	●	●	●	●	0x000C
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	PCM	●	●	●	●	0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0108
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	RGTM	●	●	●	○	0x013D
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●	●	0x0019
Escape/Kuga	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DDM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape/Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	DSP	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	FCIM	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	GPSM	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	HCM	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	HVAC	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	PAM	●	●	○	○	○
Escape/Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	PDM	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	PSCM	●	●	●	○	0x00CB 0x00CC
Escape/Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	RCM	●	●	●	○	○
Escape/Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	RFA	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	SASM	●	●	●	○	○
Escape/Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	SOD-L	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	SOD-R	●	●	●	●	○
Escape/Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	TRM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	ABS	●	●	●	●	0x0012
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	ACM	●	●	●	●	0x0017
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	●	0x00D5 0x0101
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	DSM	●	●	●	●	0x00F2
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	FCDIM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	IPC	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	IPM-B	●	●	●	○	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	OCSM	●	●	●	●	0x000C
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	PCM	●	●	●	●	0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0108
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013	RGTM	●	●	●	○	0x013D
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	APIM	●	●	●	●	0x0019
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	DDM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	DSP	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	FCIM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	GPSM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	HCM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	HVAC	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	PAM	●	●	○	○	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	PDM	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	PSCM	●	●	●	○	0x00CB 0x00CC
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	RCM	●	●	●	○	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	RFA	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	SASM	●	●	●	○	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	SOD-L	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	SOD-R	●	●	●	●	○
Escape/Kuga	2.0L	EcoBoost – Gas Turbocharged Direct Injection	2013 – 2014	TRM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	ABS	●	●	●	●	0x0012
Escape/Kuga	2.5L	IVCT	2013	ACM	●	●	●	●	0x0017
Escape/Kuga	2.5L	IVCT	2013	BCM#1	●	●	●	●	0x00D5 0x0101
Escape/Kuga	2.5L	IVCT	2013	DSM	●	●	●	●	0x00F2
Escape/Kuga	2.5L	IVCT	2013	FCDIM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	IPC	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013	IPM-B	●	●	●	○	○
Escape/Kuga	2.5L	IVCT	2013	OCSM	●	●	●	●	0x000C
Escape/Kuga	2.5L	IVCT	2013	PCM	●	●	●	●	0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084
Escape/Kuga	2.5L	IVCT	2013	RGTM	●	●	●	○	0x013D
Escape/Kuga	2.5L	IVCT	2013 – 2014	APIM	●	●	●	●	0x0019

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escape/Kuga	2.5L	IVCT	2013 - 2014	DDM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	DSP	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	FCIM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	GPSM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	HCM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	HVAC	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	PAM	●	●	○	○	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	PDM	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	PSCM	●	●	●	○	0x00CB 0x00CC
Escape/Kuga	2.5L	IVCT	2013 - 2014	RCM	●	●	●	○	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	RFA	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	SASM	●	●	●	○	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	SOD-L	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	SOD-R	●	●	●	●	○
Escape/Kuga	2.5L	IVCT	2013 - 2014	TRM	●	●	●	●	○
Escort	1.3L	Endura-E	1995 - 1998	ABS	●	●	●	●	○
Escort	1.3L	Endura-E	1995 - 1998	ABS/TCS	●	●	●	●	○
Escort	1.3L	Endura-E	1995 - 1998	CSM	●	●	●	●	○
Escort	1.3L	Endura-E	1995 - 1998	HEC	●	●	●	●	○
Escort	1.3L	Endura-E	1995 - 1998	PATS	●	●	●	●	○
Escort	1.3L	Endura-E	1995 - 1998	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Escort	1.4L	1.4 PT-E SFI	1994 - 1998	ABS/TCS	●	●	●	●	○
Escort	1.4L	1.4 PT-E SFI	1994 - 1998	CSM	●	●	●	●	○
Escort	1.4L	1.4 PT-E SFI	1994 - 1998	HEC	●	●	●	●	○
Escort	1.4L	1.4 PT-E SFI	1994 - 1998	PATS	●	●	●	●	○
Escort	1.4L	1.4 PT-E SFI	1994 - 1998	PCM	●	●	●	●	○
Escort	1.4L	1.4 PT-E SFI	1995 - 1998	ABS	●	●	●	●	○
Escort	1.6L	PT-E	Other	ABS/TCS	●	●	●	●	○
Escort	1.6L	PT-E	Other	CSM	●	●	●	●	○
Escort	1.6L	PT-E	Other	HEC	●	●	●	●	○
Escort	1.6L	PT-E	Other	PATS	●	●	●	●	○
Escort	1.6L	PT-E	Other	PCM	●	●	●	●	○
Escort	1.6L	Zetec	1993 - 1997	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Escort	1.6L	Zetec	1993 - 1998	ABS/TCS	●	●	●	●	○
Escort	1.6L	Zetec	1993 - 1998	CSM	●	●	●	●	○
Escort	1.6L	Zetec	1993 - 1998	HEC	●	●	●	●	○
Escort	1.6L	Zetec	1993 - 1998	PATS	●	●	●	●	○
Escort	1.6L	Zetec	1995 - 1998	ABS	●	●	●	●	○
Escort	1.6L	Zetec Rocam	2000	ABS/TCS	●	●	●	●	○
Escort	1.6L	Zetec Rocam	2000	CSM	●	●	●	●	○
Escort	1.6L	Zetec Rocam	2000	HEC	●	●	●	●	○
Escort	1.6L	Zetec Rocam	2000	PATS	●	●	●	●	○
Escort	1.6L	Zetec Rocam	2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
Escort	1.8L	Endura-DE	1996 - Other	ABS/TCS	●	●	●	●	○
Escort	1.8L	Endura-DE	1996 - Other	CSM	●	●	●	●	○
Escort	1.8L	Endura-DE	1996 - Other	HEC	●	●	●	●	○
Escort	1.8L	Endura-DE	1996 - Other	PATS	●	●	●	●	○
Escort	1.8L	Endura-DE	1996 - Other	PCM	●	●	●	●	○
Escort	1.8L	Endura-DE	1997	ABS	●	●	●	●	○
Escort	1.8L	Other	1996	ABS/TCS	●	●	●	●	○
Escort	1.8L	Other	1996	CSM	●	●	●	●	○
Escort	1.8L	Other	1996	HEC	●	●	●	●	○
Escort	1.8L	Other	1996	PATS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Escort	1.8L	Other	1996	PCM	●	●	●	●	○
Escort	1.8L	Zetec	1992 – 1996	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Escort	1.8L	Zetec	1992 – 1998	ABS/TCS	●	●	●	●	○
Escort	1.8L	Zetec	1992 – 1998	CSM	●	●	●	●	○
Escort	1.8L	Zetec	1992 – 1998	HEC	●	●	●	●	○
Escort	1.8L	Zetec	1992 – 1998	PATS	●	●	●	●	○
Escort	1.8L	Zetec	1995 – 1998	ABS	●	●	●	●	○
Escort	1.9L	Other	1996	ABS/TCS	●	●	●	●	○
Escort	1.9L	Other	1996	PATS	●	●	●	●	○
Escort	1.9L	Other	1996	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Escort	2.0L	DOHC Cosworth	1994 – 1995	ABS/TCS	●	●	●	●	○
Escort	2.0L	DOHC Cosworth	1994 – 1995	PATS	●	●	●	●	○
Escort	2.0L	DOHC Cosworth	1994 – 1995	PCM	●	●	●	●	○
Escort	2.0L	DOHC Cosworth	1995	ABS	●	●	●	●	○
Escort	2.0L	SPI	1997 – 2002	ABS/TCS	●	●	●	●	0x0008
Escort	2.0L	SPI	1997 – 2002	PATS	●	●	●	●	○
Escort	2.0L	SPI	1997 – 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
Escort	2.0L	SPI	1997 – 2002	RAP	●	●	●	●	0x000A
Escort	2.0L	SPI	1998 – 1999	ABS	●	●	●	●	0x0008
Escort	2.0L	SPI	1998 – 2002	ECS	●	●	●	●	○
Escort	2.0L	Zetec	1998 – 1999	ABS	●	●	●	●	0x0008
Escort	2.0L	Zetec	1998 – 2003	ABS/TCS	●	●	●	●	0x0008
Escort	2.0L	Zetec	1998 – 2003	ECS	●	●	●	●	○
Escort	2.0L	Zetec	1998 – 2003	PATS	●	●	●	●	○
Escort	2.0L	Zetec	1998 – 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
Escort	2.0L	Zetec	1998 – 2003	RAP	●	●	●	●	0x000A
Everest / Endeavour	2.5L	WL-CD	2007	ABS/TCS	●	●	●	●	○
Everest / Endeavour	2.5L	WL-CD	2007	PCM	●	●	●	●	0x0055 0x0080 0x0081 0x0082 0x0083 0x00CE
Everest / Endeavour	2.5L	WL-CD	2007	RCM	●	●	●	●	○
Everest / Endeavour	2.5L	WL-CD	2007	TCM	●	●	●	●	○
Everest / Endeavour	2.6L	G6	2007	ABS/TCS	●	●	●	●	○
Everest / Endeavour	2.6L	G6	2007	PCM	●	●	●	●	○
Everest / Endeavour	2.6L	G6	2007	RCM	●	●	●	●	○
Everest / Endeavour	3.0L	WE-CD	2007	ABS/TCS	●	●	●	●	○
Everest / Endeavour	3.0L	WE-CD	2007	PCM	●	●	●	●	0x0055 0x0080 0x0081 0x0082 0x0083 0x00CE
Everest / Endeavour	3.0L	WE-CD	2007	RCM	●	●	●	●	○
Everest / Endeavour	3.0L	WE-CD	2007	TCM	●	●	●	●	○
Excursion	5.4L	2V	2004	ECS	●	●	●	●	○
Excursion	5.4L	2V	2004 – 2005	ABS/TCS	●	●	●	●	0x0008 0x001B
Excursion	5.4L	2V	2004 – 2005	DSM	●	●	●	●	○
Excursion	5.4L	2V	2004 – 2005	EATC	●	●	●	●	○
Excursion	5.4L	2V	2004 – 2005	GEM	●	●	●	●	○
Excursion	5.4L	2V	2004 – 2005	HEC	●	●	●	●	○
Excursion	5.4L	2V	2004 – 2005	OTC	●	●	●	●	○
Excursion	5.4L	2V	2004 – 2005	PAM	●	●	●	●	○
Excursion	5.4L	2V	2004 – 2005	PATS	●	●	●	●	0x0009
Excursion	5.4L	2V	2004 – 2005	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Excursion	5.4L	2V	2004 – 2005	VSM	●	●	●	●	0x000A 0x000F
Excursion	5.4L	2V	2005	RCM	●	●	●	●	○
Excursion	5.4L	Other	2000	MC	●	●	●	●	○
Excursion	5.4L	Other	2000 – 2003	ABS/TCS	●	●	●	●	0x0008
Excursion	5.4L	Other	2000 – 2003	ECS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Excursion	5.4L	Other	2000 - 2003	GEM	●	●	●	●	0x000F
Excursion	5.4L	Other	2000 - 2003	PAM	●	●	●	●	○
Excursion	5.4L	Other	2000 - 2003	PATS	●	●	●	●	0x0009
Excursion	5.4L	Other	2000 - 2003	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Excursion	5.4L	Other	2002	CSM	●	●	●	●	0x000A 0x000F
Excursion	5.4L	Other	2002 - 2003	DSM	●	●	●	●	○
Excursion	5.4L	Other	2002 - 2003	EATC	●	●	●	●	○
Excursion	5.4L	Other	2002 - 2003	HEC	●	●	●	●	○
Excursion	5.4L	Other	2002 - 2003	OTC	●	●	●	●	○
Excursion	5.4L	Other	2003	FOH	●	●	●	●	○
Excursion	5.4L	Other	2003	VSM	●	●	●	●	0x000A 0x000F
Excursion	6.0L	Direct Injection - Turbo	2003	FOH	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2004	ECS	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	ABS/TCS	●	●	●	●	0x0008 0x001B
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	DSM	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	EATC	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	GEM	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	HEC	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	OTC	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	PAM	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	PATS	●	●	●	●	0x0009
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x00C5 0x0084
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	TCM	●	●	●	●	○
Excursion	6.0L	Direct Injection - Turbo	2003 - 2005	VSM	●	●	●	●	0x000A 0x000F
Excursion	6.0L	Direct Injection - Turbo	2005	RCM	●	●	●	●	○
Excursion	6.8L	2V	2004	ECS	●	●	●	●	○
Excursion	6.8L	2V	2004 - 2005	ABS/TCS	●	●	●	●	0x0008 0x001B
Excursion	6.8L	2V	2004 - 2005	DSM	●	●	●	●	○
Excursion	6.8L	2V	2004 - 2005	EATC	●	●	●	●	○
Excursion	6.8L	2V	2004 - 2005	GEM	●	●	●	●	○
Excursion	6.8L	2V	2004 - 2005	HEC	●	●	●	●	○
Excursion	6.8L	2V	2004 - 2005	OTC	●	●	●	●	○
Excursion	6.8L	2V	2004 - 2005	PAM	●	●	●	●	○
Excursion	6.8L	2V	2004 - 2005	PATS	●	●	●	●	0x0009
Excursion	6.8L	2V	2004 - 2005	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Excursion	6.8L	2V	2004 - 2005	VSM	●	●	●	●	0x000A 0x000F
Excursion	6.8L	2V	2005	RCM	●	●	●	●	○
Excursion	6.8L	Other	2000	MC	●	●	●	●	○
Excursion	6.8L	Other	2000 - 2003	ABS/TCS	●	●	●	●	0x0008
Excursion	6.8L	Other	2000 - 2003	ECS	●	●	●	●	○
Excursion	6.8L	Other	2000 - 2003	GEM	●	●	●	●	0x000F
Excursion	6.8L	Other	2000 - 2003	PAM	●	●	●	●	○
Excursion	6.8L	Other	2000 - 2003	PATS	●	●	●	●	0x0009
Excursion	6.8L	Other	2000 - 2003	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Excursion	6.8L	Other	2002	CSM	●	●	●	●	0x000A 0x000F
Excursion	6.8L	Other	2002 - 2003	DSM	●	●	●	●	○
Excursion	6.8L	Other	2002 - 2003	EATC	●	●	●	●	○
Excursion	6.8L	Other	2002 - 2003	HEC	●	●	●	●	○
Excursion	6.8L	Other	2002 - 2003	OTC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Excursion	6.8L	Other	2003	FOH	●	●	●	●	○
Excursion	6.8L	Other	2003	VSM	●	●	●	●	0x000A 0x000F
Excursion	7.3L	Direct Injection - Turbo	2000	MC	●	●	●	●	○
Excursion	7.3L	Direct Injection - Turbo	2000 - 2003	ABS/TCS	●	●	●	●	0x0008
Excursion	7.3L	Direct Injection - Turbo	2000 - 2003	ECS	●	●	●	●	○
Excursion	7.3L	Direct Injection - Turbo	2000 - 2003	GEM	●	●	●	●	0x000F
Excursion	7.3L	Direct Injection - Turbo	2000 - 2003	PAM	●	●	●	●	○
Excursion	7.3L	Direct Injection - Turbo	2000 - 2003	PATS	●	●	●	●	0x0009
Excursion	7.3L	Direct Injection - Turbo	2000 - 2003	PCM	●	●	●	●	0x0010 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083
Excursion	7.3L	Direct Injection - Turbo	2002	CSM	●	●	●	●	0x000A 0x000F
Excursion	7.3L	Direct Injection - Turbo	2002 - 2003	DSM	●	●	●	●	○
Excursion	7.3L	Direct Injection - Turbo	2002 - 2003	EATC	●	●	●	●	○
Excursion	7.3L	Direct Injection - Turbo	2002 - 2003	HEC	●	●	●	●	○
Excursion	7.3L	Direct Injection - Turbo	2002 - 2003	OTC	●	●	●	●	○
Excursion	7.3L	Direct Injection - Turbo	2003	FOH	●	●	●	●	○
Excursion	7.3L	Direct Injection - Turbo	2003	VSM	●	●	●	●	0x000A 0x000F
Expedition	4.6L	2V	2003 - 2004	4X4	●	●	●	●	○
Expedition	4.6L	2V	2003 - 2004	ABS/TCS	●	●	●	●	0x0008 0x0012
Expedition	4.6L	2V	2003 - 2004	DCSM	●	●	●	●	○
Expedition	4.6L	2V	2003 - 2004	DSM	●	●	●	●	○
Expedition	4.6L	2V	2003 - 2004	EATC	●	●	●	●	○
Expedition	4.6L	2V	2003 - 2004	HEC	●	●	●	●	○
Expedition	4.6L	2V	2003 - 2004	PAM	●	●	●	●	○
Expedition	4.6L	2V	2003 - 2004	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024
Expedition	4.6L	2V	2003 - 2004	PCSM	●	●	●	●	○
Expedition	4.6L	2V	2003 - 2004	RCM	●	●	●	●	0x000C
Expedition	4.6L	2V	2003 - 2004	TPM	●	●	●	●	○
Expedition	4.6L	2V	2003 - 2004	VDM	●	●	●	●	0x000E 0x0013 0x0014
Expedition	4.6L	2V	2003 - 2004	VSM	●	●	●	●	0x000A 0x000F
Expedition	4.6L	Other	1997 - 1998	IAB	●	●	●	●	○
Expedition	4.6L	Other	1997 - 1998	PATS	●	●	●	●	0x0009
Expedition	4.6L	Other	1997 - 2000	4WAS	●	●	●	●	0x000E
Expedition	4.6L	Other	1997 - 2000	ABS/TCS	●	●	●	●	0x0008
Expedition	4.6L	Other	1997 - 2000	GEM	●	●	●	●	○
Expedition	4.6L	Other	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084
Expedition	4.6L	Other	1997 - 2000	RAP	●	●	●	●	0x000A 0x000F
Expedition	4.6L	Other	1998	RCC	●	●	●	●	○
Expedition	4.6L	Other	1999 - 2000	EATC	●	●	●	●	○
Expedition	4.6L	Other	1999 - 2000	HEC	●	●	●	●	0x0009
Expedition	4.6L	Other	1999 - 2000	RCM	●	●	●	●	○
Expedition	4.6L	Other	2000	DSM	●	●	●	●	○
Expedition	4.6L	Other	2000	PAM	●	●	●	●	○
Expedition	5.4L	2V	2003 - 2004	4X4	●	●	●	●	○
Expedition	5.4L	2V	2003 - 2004	ABS/TCS	●	●	●	●	0x0008 0x0012
Expedition	5.4L	2V	2003 - 2004	DCSM	●	●	●	●	○
Expedition	5.4L	2V	2003 - 2004	DSM	●	●	●	●	○
Expedition	5.4L	2V	2003 - 2004	EATC	●	●	●	●	○
Expedition	5.4L	2V	2003 - 2004	HEC	●	●	●	●	○
Expedition	5.4L	2V	2003 - 2004	PAM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Expedition	5.4L	2V	2003 - 2004	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024
Expedition	5.4L	2V	2003 - 2004	PCSM	●	●	●	●	○
Expedition	5.4L	2V	2003 - 2004	RCM	●	●	●	●	0x000C
Expedition	5.4L	2V	2003 - 2004	TPM	●	●	●	●	○
Expedition	5.4L	2V	2003 - 2004	VDM	●	●	●	●	0x000E 0x0013 0x0014
Expedition	5.4L	2V	2003 - 2004	VSM	●	●	●	●	0x000A 0x000F
Expedition	5.4L	3V	2005 - 2006	VSM	●	●	●	●	0x000A 0x000F
Expedition	5.4L	3V	2005 - 2007	EATC	●	●	●	●	○
Expedition	5.4L	3V	2005 - 2010	4X4	●	●	●	●	○
Expedition	5.4L	3V	2005 - 2012	PAM	●	●	●	●	○
Expedition	5.4L	3V	2005 - 2014	ABS	●	●	●	●	0x0012 0x0008
Expedition	5.4L	3V	2005 - 2014	DCSM	●	●	●	●	0xF070
Expedition	5.4L	3V	2005 - 2014	DSM	●	●	●	●	0xF041 0xF06C 0xF06D 0xF06F
Expedition	5.4L	3V	2005 - 2014	IC	●	●	●	●	0xF041 0xF044 0xF04A 0xF04D 0xF06B 0xF06E 0x0009 0x0023 0x0080 0x0081 0x0082 0x0083 0x0083 0x0084 0x0009 0x0010 0x0024 0x0025 0x0028 0x0031 0x0033 0x00C5 0x0067
Expedition	5.4L	3V	2005 - 2014	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083 0x0083 0x0084 0x0009 0x0010 0x0024 0x0025 0x0028 0x0031 0x0033 0x00C5 0x0067
Expedition	5.4L	3V	2005 - 2014	RCM	●	●	●	●	0xF022 0xF05D 0x000C
Expedition	5.4L	3V	2005 - 2014	VDM	●	●	●	●	0x000E 0x0013 0x0014
Expedition	5.4L	3V	2007	GEM	●	●	●	●	0xF03C 0xF042 0xF049 0xF05C 0xF060 0xF068 0xF069 0xF06A
Expedition	5.4L	3V	2007 - 2011	TCM	●	●	●	●	0x00CE
Expedition	5.4L	3V	2007 - 2012	RETM	●	●	●	●	0xF04D 0xF05A
Expedition	5.4L	3V	2007 - 2014	ACM	●	●	●	●	0x0016 0x0017 0x0018
Expedition	5.4L	3V	2007 - 2014	DSP	●	●	●	●	○
Expedition	5.4L	3V	2007 - 2014	LTM	●	●	●	●	○
Expedition	5.4L	3V	2007 - 2014	RCU	●	●	●	●	0xF05A
Expedition	5.4L	3V	2007 - 2014	SDARS	●	●	●	●	0x0019
Expedition	5.4L	3V	2008 - 2014	GEM / SJB	●	●	●	●	0x000F 0x0042 0x000A
Expedition	5.4L	3V	2008 - 2014	HVAC	●	●	●	●	○
Expedition	5.4L	3V	2008 - 2014	PRB	●	●	●	●	○
Expedition	5.4L	3V	2009 - 2014	APIM	●	●	●	●	0x0019 0x001C
Expedition	5.4L	3V	2010 - 2012	GPSM	●	●	●	○	○
Expedition	5.4L	3V	2010 - 2014	TCCM	●	●	●	●	○
Expedition	5.4L	3V	2013 - 2014	TBC	●	●	●	●	○
Expedition	5.4L	Other	1997 - 1998	IAB	●	●	●	●	○
Expedition	5.4L	Other	1997 - 1998	PATS	●	●	●	●	0x0009
Expedition	5.4L	Other	1997 - 2000	4WAS	●	●	●	●	0x000E
Expedition	5.4L	Other	1997 - 2000	ABS/TCS	●	●	●	●	0x0008
Expedition	5.4L	Other	1997 - 2000	GEM	●	●	●	●	○
Expedition	5.4L	Other	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084
Expedition	5.4L	Other	1997 - 2000	RAP	●	●	●	●	0x000A 0x000F
Expedition	5.4L	Other	1998	RCC	●	●	●	●	○
Expedition	5.4L	Other	1999 - 2000	EATC	●	●	●	●	○
Expedition	5.4L	Other	1999 - 2000	HEC	●	●	●	●	0x0009
Expedition	5.4L	Other	1999 - 2000	RCM	●	●	●	●	○
Expedition	5.4L	Other	2000	DSM	●	●	●	●	○
Expedition	5.4L	Other	2000	PAM	●	●	●	●	○
Expedition	Other	Other	2013	ABS	●	●	●	●	○
Expedition	Other	Other	2013	ACM	●	●	●	●	○
Expedition	Other	Other	2013	APIM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Expedition	Other	Other	2013	DCSM	●	●	●	●	○
Expedition	Other	Other	2013	DSM	●	●	●	●	○
Expedition	Other	Other	2013	DSP	●	●	●	●	○
Expedition	Other	Other	2013	GEM / SJB	●	●	●	●	○
Expedition	Other	Other	2013	HVAC	●	●	●	●	○
Expedition	Other	Other	2013	IC	●	●	●	●	○
Expedition	Other	Other	2013	LTM	●	●	●	●	○
Expedition	Other	Other	2013	PCM	●	●	●	●	○
Expedition	Other	Other	2013	PRB	●	●	●	●	○
Expedition	Other	Other	2013	RCM	●	●	●	●	○
Expedition	Other	Other	2013	RCU	●	●	●	●	○
Expedition	Other	Other	2013	SDARS	●	●	●	●	○
Expedition	Other	Other	2013	TBC	●	●	●	●	○
Expedition	Other	Other	2013	TCCM	●	●	●	●	○
Expedition	Other	Other	2013	VDM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2012	TPM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	ABS	●	●	●	●	0x0008 0x0012
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	ACM	●	●	●	○	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	BCM#1	●	●	●	●	0x000A 0x000F 0x0042 0x00D5 0x00FE 0x0009 0x00D4
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	C-CM	●	●	●	○	0x0046
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	FCDIM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	HVAC	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	IPC	●	●	●	●	0x00D0
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	OCSM	●	●	●	●	0x000C
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0024 0x0038
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	SCCM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	TCM	●	●	●	●	0x0038 0x0010 0x0028 0x0031 0x0033
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	APIM	●	●	●	○	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	ATCM	●	●	●	○	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	CLM#1	●	●	●	○	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	DCSM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	DSM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	DSP	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	FCIM	●	●	●	○	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	FLM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	GPSM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	HSWM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	HUD	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	LTM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	PAM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	PSCM	●	●	●	○	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	RCM	●	●	●	○	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	RFA	●	●	●	●	0x0064
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	RLCM-A	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	SOD-L	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	SOD-R	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPM-A	●	●	●	○	0x013E
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	GFM	●	●	●	●	○
Explorer	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RTM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	ABS	●	●	●	●	0x0008 0x0012
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	ACM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	○	0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	C-CM	●	●	●	○	0x0046
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	FCDIM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	HVAC	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPC	●	●	●	●	0x00D0
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPM-A	●	●	●	○	0x013E
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	OCSM	●	●	●	●	0x000C
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	PCM	●	●	●	●	0x0010 0x0024 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCCM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	ATCM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	CLM#1	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DCSM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSP	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	FCIM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	FLM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	GFM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	GPSM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HSWM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HUD	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	LTM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	PAM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	PSCM	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RCM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RFA	●	●	●	●	0x0064
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RLCM-A	●	●	●	●	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RTM	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-L	●	●	●	○	○
Explorer	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-R	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2012	TPM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2013	ABS	●	●	●	●	0x0008 0x0012
Explorer	3.5L	TiVCT	2011 - 2013	ACM	●	●	●	○	○
Explorer	3.5L	TiVCT	2011 - 2013	BCM#1	●	●	●	●	0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x000A
Explorer	3.5L	TiVCT	2011 - 2013	C-CM	●	●	●	○	0x0046
Explorer	3.5L	TiVCT	2011 - 2013	FCDIM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2013	HVAC	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2013	IPC	●	●	●	●	0x00D0
Explorer	3.5L	TiVCT	2011 - 2013	OCSM	●	●	●	●	0x000C
Explorer	3.5L	TiVCT	2011 - 2013	PCM	●	●	●	●	0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0108
Explorer	3.5L	TiVCT	2011 - 2013	SCCM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	APIM	●	●	●	○	○
Explorer	3.5L	TiVCT	2011 - 2014	ATCM	●	●	●	○	○
Explorer	3.5L	TiVCT	2011 - 2014	CLM#1	●	●	●	○	○
Explorer	3.5L	TiVCT	2011 - 2014	DCSM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	DSM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	DSP	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	FCIM	●	●	●	○	○
Explorer	3.5L	TiVCT	2011 - 2014	FLM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	GPSM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Explorer	3.5L	TiVCT	2011 - 2014	HSWM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	HUD	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	LTM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	PAM	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	PSCM	●	●	●	○	○
Explorer	3.5L	TiVCT	2011 - 2014	RCM	●	●	●	○	○
Explorer	3.5L	TiVCT	2011 - 2014	RFA	●	●	●	●	0x0064
Explorer	3.5L	TiVCT	2011 - 2014	RLCM-A	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	SOD-L	●	●	●	●	○
Explorer	3.5L	TiVCT	2011 - 2014	SOD-R	●	●	●	●	○
Explorer	3.5L	TiVCT	2013	IPM-A	●	●	●	○	0x013E
Explorer	3.5L	TiVCT	2013 - 2014	GFM	●	●	●	●	○
Explorer	3.5L	TiVCT	2013 - 2014	RTM	●	●	●	○	○
Explorer	3.7L	TiVCT	2013	ABS	●	●	●	●	0x0008 0x0012
Explorer	3.7L	TiVCT	2013	ACM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013	BCM#1	●	●	●	○	0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE
Explorer	3.7L	TiVCT	2013	C-CM	●	●	●	○	0x0046
Explorer	3.7L	TiVCT	2013	FCDIM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013	HVAC	●	●	●	●	○
Explorer	3.7L	TiVCT	2013	IPC	●	●	●	●	0x00D0
Explorer	3.7L	TiVCT	2013	IPM-A	●	●	●	○	0x013E
Explorer	3.7L	TiVCT	2013	OCSM	●	●	●	●	0x000C
Explorer	3.7L	TiVCT	2013	PCM	●	●	●	●	0x0010 0x0024 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095
Explorer	3.7L	TiVCT	2013	SCCM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	APIM	●	●	●	○	○
Explorer	3.7L	TiVCT	2013 - 2014	ATCM	●	●	●	○	○
Explorer	3.7L	TiVCT	2013 - 2014	CLM#1	●	●	●	○	○
Explorer	3.7L	TiVCT	2013 - 2014	DCSM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	DSM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	DSP	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	FCIM	●	●	●	○	○
Explorer	3.7L	TiVCT	2013 - 2014	FLM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	GFM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	GPSM	●	●	●	○	○
Explorer	3.7L	TiVCT	2013 - 2014	HSWM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	HUD	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	LTM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	PAM	●	●	●	○	○
Explorer	3.7L	TiVCT	2013 - 2014	PSCM	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	RCM	●	●	●	○	○
Explorer	3.7L	TiVCT	2013 - 2014	RFA	●	●	●	●	0x0064
Explorer	3.7L	TiVCT	2013 - 2014	RLCM-A	●	●	●	●	○
Explorer	3.7L	TiVCT	2013 - 2014	RTM	●	●	●	○	○
Explorer	3.7L	TiVCT	2013 - 2014	SOD-L	●	●	●	○	○
Explorer	3.7L	TiVCT	2013 - 2014	SOD-R	●	●	●	●	○
Explorer	4.0L	2V	2006 - 2007	EATC	●	●	●	●	○
Explorer	4.0L	2V	2006 - 2007	GEM	●	●	●	●	0x0005 0x000A 0x000F 0xF042 0xF044 0xF04C
Explorer	4.0L	2V	2006 - 2010	4X4	●	●	●	●	○
Explorer	4.0L	2V	2006 - 2010	ABS	●	●	●	●	0x0005 0x0008 0x0012
Explorer	4.0L	2V	2006 - 2010	ACM	●	●	●	●	0x0005 0x0016 0x0017 0x0018 0xF05A 0xF073
Explorer	4.0L	2V	2006 - 2010	DSM	●	●	●	●	0xF041 0xF074 0xF075 0x0005

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Explorer	4. 0L	2V	2006 - 2010	IC	●	●	●	●	0x0009 0xF027 0xF040 0xF044 0xF04D 0xF054 0xF06B 0x0005
Explorer	4. 0L	2V	2006 - 2010	OCSM	●	●	●	○	0x000C 0x0015 0x006D
Explorer	4. 0L	2V	2006 - 2010	PAM	●	●	●	●	○
Explorer	4. 0L	2V	2006 - 2010	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x00C6
Explorer	4. 0L	2V	2006 - 2010	PRB	●	●	●	●	○
Explorer	4. 0L	2V	2006 - 2010	RCM	●	●	●	●	0x0005 0xF022 0xF05D
Explorer	4. 0L	2V	2006 - 2010	RETM	●	●	●	●	0xF04D 0xF05A 0xF076
Explorer	4. 0L	2V	2006 - 2010	SDARS	●	●	●	●	0x0005 0x0019
Explorer	4. 0L	2V	2008 - 2010	APIM	●	●	●	●	0x0019 0x001C
Explorer	4. 0L	2V	2008 - 2010	GEM / SJB	●	●	●	●	0x0005 0x000A 0x000F 0x0042 0xF042 0xF044 0xF04C
Explorer	4. 0L	2V	2008 - 2010	HVAC	●	●	●	●	0x0005
Explorer	4. 0L	2V	2010	GPSM	●	●	●	○	○
Explorer	4. 0L	Other	1996 - 1998	IAB	●	●	●	●	○
Explorer	4. 0L	Other	1996 - 2000	ABS/TCS	●	●	●	●	0x0008
Explorer	4. 0L	Other	1996 - 2000	ARC	●	●	●	●	0x000E
Explorer	4. 0L	Other	1996 - 2000	EATC	●	●	●	●	○
Explorer	4. 0L	Other	1996 - 2000	GEM	●	●	●	●	0x0203 0x0204
Explorer	4. 0L	Other	1996 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
Explorer	4. 0L	Other	1996 - 2000	RAP	●	●	●	●	0x000F 0x000A
Explorer	4. 0L	Other	1998 - 2000	DSM	●	●	●	●	○
Explorer	4. 0L	Other	1998 - 2000	PAM	●	●	●	●	○
Explorer	4. 0L	Other	1998 - 2000	PATS	●	●	●	●	0x0009
Explorer	4. 0L	Other	1999 - 2000	RCM	●	●	●	●	○
Explorer	4. 0L	V6 OHV	1996 - 1998	IAB	●	●	●	●	○
Explorer	4. 0L	V6 OHV	1996 - 1999	ABS/TCS	●	●	●	●	0x0008
Explorer	4. 0L	V6 OHV	1996 - 1999	ARC	●	●	●	●	0x000E
Explorer	4. 0L	V6 OHV	1996 - 1999	EATC	●	●	●	●	○
Explorer	4. 0L	V6 OHV	1996 - 1999	GEM	●	●	●	●	0x0203
Explorer	4. 0L	V6 OHV	1996 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Explorer	4. 0L	V6 OHV	1996 - 1999	RAP	●	●	●	●	0x000F 0x000A
Explorer	4. 0L	V6 OHV	1998 - 1999	DSM	●	●	●	●	○
Explorer	4. 0L	V6 OHV	1998 - 1999	PAM	●	●	●	●	○
Explorer	4. 0L	V6 OHV	1998 - 1999	PATS	●	●	●	●	0x0009
Explorer	4. 0L	V6 OHV	1999	RCM	●	●	●	●	○
Explorer	4. 0L	V6 SOHC	1997 - 1998	IAB	●	●	●	●	○
Explorer	4. 0L	V6 SOHC	1997 - 2000	ARC	●	●	●	●	0x000E
Explorer	4. 0L	V6 SOHC	1997 - 2000	RAP	●	●	●	●	0x000A 0x000F
Explorer	4. 0L	V6 SOHC	1997 - 2002	GEM	●	●	●	●	0x0203 0x0204
Explorer	4. 0L	V6 SOHC	1997 - 2003	ABS/TCS	●	●	●	●	0x0008 0x0012
Explorer	4. 0L	V6 SOHC	1997 - 2005	EATC	●	●	●	●	0x0005
Explorer	4. 0L	V6 SOHC	1997 - 2005	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 0x00C6 0x0024
Explorer	4. 0L	V6 SOHC	1998 - 2000	PATS	●	●	●	●	0x0009
Explorer	4. 0L	V6 SOHC	1998 - 2005	DSM	●	●	●	●	○
Explorer	4. 0L	V6 SOHC	1998 - 2005	PAM	●	●	●	●	○
Explorer	4. 0L	V6 SOHC	1999	MC	●	●	●	●	○
Explorer	4. 0L	V6 SOHC	1999 - 2005	RCM	●	●	●	●	0x000C 0x006D
Explorer	4. 0L	V6 SOHC	2002	CSM	●	●	●	●	0x000F
Explorer	4. 0L	V6 SOHC	2002 - 2003	HEC	●	●	●	●	○
Explorer	4. 0L	V6 SOHC	2002 - 2005	4X4	●	●	●	●	0x0111
Explorer	4. 0L	V6 SOHC	2002 - 2005	IC	●	●	●	●	0x0005 0xF027 0xF044 0xF04D 0xF054 0xF071 0xF072

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Explorer	4.0L	V6 SOHC	2002 - 2005	TPM	●	●	●	●	0x0005
Explorer	4.0L	V6 SOHC	2003 - 2005	VSM	●	●	●	●	0x000A 0x000F
Explorer	4.0L	V6 SOHC	2004 - 2005	ABS	●	●	●	●	0x0008 0x0012 0x0005
Explorer	4.6L	2V	2002	CSM	●	●	●	●	0x000F
Explorer	4.6L	2V	2002	GEM	●	●	●	●	0x0203 0x0204
Explorer	4.6L	2V	2002 - 2003	ABS/TCS	●	●	●	●	0x0008 0x0012
Explorer	4.6L	2V	2002 - 2003	HEC	●	●	●	●	○
Explorer	4.6L	2V	2002 - 2005	4X4	●	●	●	●	○
Explorer	4.6L	2V	2002 - 2005	DSM	●	●	●	●	○
Explorer	4.6L	2V	2002 - 2005	EATC	●	●	●	●	0x0005
Explorer	4.6L	2V	2002 - 2005	IC	●	●	●	●	0x0005
Explorer	4.6L	2V	2002 - 2005	PAM	●	●	●	●	○
Explorer	4.6L	2V	2002 - 2005	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C6 0x0024
Explorer	4.6L	2V	2002 - 2005	RCM	●	●	●	●	0x000C
Explorer	4.6L	2V	2002 - 2005	TPM	●	●	●	●	0x0005
Explorer	4.6L	2V	2003 - 2005	VSM	●	●	●	●	0x000A 0x000F
Explorer	4.6L	2V	2004 - 2005	ABS	●	●	●	●	0x0008 0x0012
Explorer	4.6L	3V	2006 - 2007	EATC	●	●	●	●	0x0005
Explorer	4.6L	3V	2006 - 2007	GEM	●	●	●	●	0x0005 0x000A 0x000F 0xF042 0xF044 0xF04C
Explorer	4.6L	3V	2006 - 2010	4X4	●	●	●	●	○
Explorer	4.6L	3V	2006 - 2010	ABS	●	●	●	●	0x0005 0x0008 0x0012
Explorer	4.6L	3V	2006 - 2010	ACM	●	●	●	●	0x0005 0x0016 0x0017 0x0018 0xF04D 0xF05A 0xF073
Explorer	4.6L	3V	2006 - 2010	DSM	●	●	●	●	0x0005 0xF041 0xF074 0xF075
Explorer	4.6L	3V	2006 - 2010	IC	●	●	●	●	0x0009 0xF044 0x0005 0xF027 0xF04D 0xF054
Explorer	4.6L	3V	2006 - 2010	OCSM	●	●	●	○	0x000C 0x0015 0x006D
Explorer	4.6L	3V	2006 - 2010	PAM	●	●	●	●	0x0005
Explorer	4.6L	3V	2006 - 2010	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x00C6
Explorer	4.6L	3V	2006 - 2010	PRB	●	●	●	●	○
Explorer	4.6L	3V	2006 - 2010	RCM	●	●	●	●	0x0005 0xF022 0xF05D
Explorer	4.6L	3V	2006 - 2010	RETM	●	●	●	●	0x0005 0xF04D 0xF05A 0xF076
Explorer	4.6L	3V	2006 - 2010	SDARS	●	●	●	●	0x0005 0x0019
Explorer	4.6L	3V	2006 - 2010	TCM	●	●	●	●	0x00CE
Explorer	4.6L	3V	2008 - 2010	APIM	●	●	●	●	0x0019 0x001C
Explorer	4.6L	3V	2008 - 2010	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0x0005 0xF042 0xF044 0xF04C
Explorer	4.6L	3V	2008 - 2010	HVAC	●	●	●	●	0x0005
Explorer	4.6L	3V	2010	GPSM	●	●	●	○	○
Explorer	5.0L	Other	1996 - 1998	IAB	●	●	●	●	○
Explorer	5.0L	Other	1996 - 2000	ABS/TCS	●	●	●	●	0x0008 0x0005
Explorer	5.0L	Other	1996 - 2000	EATC	●	●	●	●	○
Explorer	5.0L	Other	1996 - 2000	GEM	●	●	●	●	0x0203 0x0005 0x0204
Explorer	5.0L	Other	1996 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084
Explorer	5.0L	Other	1996 - 2000	RAP	●	●	●	●	0x000F 0x000A 0x0005 0xF044
Explorer	5.0L	Other	1997 - 2000	ARC	●	●	●	●	0x000E
Explorer	5.0L	Other	1998 - 2000	DSM	●	●	●	●	○
Explorer	5.0L	Other	1998 - 2000	PAM	●	●	●	●	○
Explorer	5.0L	Other	1998 - 2000	PATS	●	●	●	●	0x0009
Explorer	5.0L	Other	1999 - 2000	RCM	●	●	●	●	○
Explorer	Other	Other	2014	APIM	●	●	●	○	○
Explorer	Other	Other	2014	ATCM	●	●	●	○	○
Explorer	Other	Other	2014	CLM#1	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Explorer	Other	Other	2014	DCSM	●	●	●	●	○
Explorer	Other	Other	2014	DSM	●	●	●	●	○
Explorer	Other	Other	2014	DSP	●	●	●	●	○
Explorer	Other	Other	2014	FCIM	●	●	●	○	○
Explorer	Other	Other	2014	FLM	●	●	●	●	○
Explorer	Other	Other	2014	GFM	●	●	●	●	○
Explorer	Other	Other	2014	GPSM	●	●	●	○	○
Explorer	Other	Other	2014	HSWM	●	●	●	●	○
Explorer	Other	Other	2014	HUD	●	●	●	●	○
Explorer	Other	Other	2014	LTM	●	●	●	●	○
Explorer	Other	Other	2014	PAM	●	●	●	○	○
Explorer	Other	Other	2014	PSCM	●	●	●	●	○
Explorer	Other	Other	2014	RCM	●	●	●	○	○
Explorer	Other	Other	2014	RFA	●	●	●	●	○
Explorer	Other	Other	2014	RLCM-A	●	●	●	●	○
Explorer	Other	Other	2014	RTM	●	●	●	○	○
Explorer	Other	Other	2014	SOD-L	●	●	●	○	○
Explorer	Other	Other	2014	SOD-R	●	●	●	●	○
Explorer Sport	4.0L	V6 SOHC	2000	PATS	●	●	●	●	0x0009
Explorer Sport	4.0L	V6 SOHC	2000 - 2003	4X4	●	●	●	●	○
Explorer Sport	4.0L	V6 SOHC	2000 - 2003	ABS/TCS	●	●	●	●	0x0008
Explorer Sport	4.0L	V6 SOHC	2000 - 2003	GEM	●	●	●	●	0x0203 0x0204
Explorer Sport	4.0L	V6 SOHC	2000 - 2003	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Explorer Sport	4.0L	V6 SOHC	2000 - 2003	RAP	●	●	●	●	0x000A 0x000F
Explorer Sport	4.0L	V6 SOHC	2000 - 2003	RCM	●	●	●	●	0x000C
Explorer SportTrac	4.0L	2V	2007	EATC	●	●	●	●	○
Explorer SportTrac	4.0L	2V	2007	GEM	●	●	●	●	0x0005 0x000A 0x000F 0xF042 0xF044 0xF04C
Explorer SportTrac	4.0L	2V	2007 - 2010	4X4	●	●	●	●	○
Explorer SportTrac	4.0L	2V	2007 - 2010	ABS	●	●	●	●	0x0008 0x0012
Explorer SportTrac	4.0L	2V	2007 - 2010	ACM	●	●	●	●	0x0016 0x0017 0x0018
Explorer SportTrac	4.0L	2V	2007 - 2010	IC	●	●	●	●	0x0009 0xF027 0xF040 0xF044 0xF04D 0xF054 0xF06B 0x0005
Explorer SportTrac	4.0L	2V	2007 - 2010	OCSM	●	●	●	○	0x000C 0x0015 0x006D
Explorer SportTrac	4.0L	2V	2007 - 2010	PAM	●	●	●	●	○
Explorer SportTrac	4.0L	2V	2007 - 2010	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x00C6
Explorer SportTrac	4.0L	2V	2007 - 2010	RCM	●	●	●	●	0x0005 0xF022 0xF05D
Explorer SportTrac	4.0L	2V	2007 - 2010	RETM	●	●	●	●	0xF04D 0xF05A
Explorer SportTrac	4.0L	2V	2007 - 2010	SDARS	●	●	●	●	0x0005 0x0019
Explorer SportTrac	4.0L	2V	2008 - 2010	APIM	●	●	●	●	0x0019 0x001C
Explorer SportTrac	4.0L	2V	2008 - 2010	GEM / SJB	●	●	●	●	0x0005 0x000A 0x000F 0x0042 0xF042 0xF044 0xF04C
Explorer SportTrac	4.0L	2V	2008 - 2010	HVAC	●	●	●	●	0x0005
Explorer SportTrac	4.0L	2V	2010	GPSM	●	●	●	○	○
Explorer SportTrac	4.0L	V6 SOHC	2000 - 2003	GEM	●	●	●	●	0x0203 0x0204
Explorer SportTrac	4.0L	V6 SOHC	2000 - 2005	4X4	●	●	●	●	○
Explorer SportTrac	4.0L	V6 SOHC	2000 - 2005	ABS/TCS	●	●	●	●	0x0008
Explorer SportTrac	4.0L	V6 SOHC	2000 - 2005	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024
Explorer SportTrac	4.0L	V6 SOHC	2000 - 2005	RAP	●	●	●	●	0x000A 0x000F
Explorer SportTrac	4.0L	V6 SOHC	2000 - 2005	RCM	●	●	●	●	0x000C
Explorer SportTrac	4.0L	V6 SOHC	2004 - 2005	HEC	●	●	●	●	○
Explorer SportTrac	4.6L	3V	2007	EATC	●	●	●	●	0x0005

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Explorer SportTrac	4.6L	3V	2007	GEM	●	●	●	●	0x0005 0x000A 0x000F 0xF042 0xF044 0xF04C
Explorer SportTrac	4.6L	3V	2007 - 2010	4X4	●	●	●	●	○
Explorer SportTrac	4.6L	3V	2007 - 2010	ABS	●	●	●	●	0x0008 0x0012
Explorer SportTrac	4.6L	3V	2007 - 2010	ACM	●	●	●	●	0x0016 0x0017 0x0018 0x0005
Explorer SportTrac	4.6L	3V	2007 - 2010	IC	●	●	●	●	0x0009 0xF044 0x0005 0xF027 0xF04D 0xF054
Explorer SportTrac	4.6L	3V	2007 - 2010	OCSM	●	●	●	○	0x000C 0x0015 0x006D
Explorer SportTrac	4.6L	3V	2007 - 2010	PAM	●	●	●	●	0x0005
Explorer SportTrac	4.6L	3V	2007 - 2010	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x00C6
Explorer SportTrac	4.6L	3V	2007 - 2010	RCM	●	●	●	●	0x0005 0xF022 0xF05D
Explorer SportTrac	4.6L	3V	2007 - 2010	RETM	●	●	●	●	0x0005 0xF04D 0xF05A
Explorer SportTrac	4.6L	3V	2007 - 2010	SDARS	●	●	●	●	0x0005 0x0019
Explorer SportTrac	4.6L	3V	2007 - 2010	TCM	●	●	●	●	0x00CE
Explorer SportTrac	4.6L	3V	2008 - 2010	APIM	●	●	●	●	0x0019 0x001C
Explorer SportTrac	4.6L	3V	2008 - 2010	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0x0005 0xF042 0xF044 0xF04C
Explorer SportTrac	4.6L	3V	2008 - 2010	HVAC	●	●	●	●	0x0005
Explorer SportTrac	4.6L	3V	2010	GPSM	●	●	●	○	○
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2012	ABS	●	●	●	●	0x0008 0x0012
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2012	ACM	●	●	●	○	0x0017 0x0018
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2012	DSP	●	●	●	●	○
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2012	FCIM	●	●	●	●	○
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2012	GPSM	●	●	●	●	○
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2012	HVAC	●	●	●	●	○
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2012	ILCM	●	●	●	●	○
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2012	OCSM	●	●	●	●	0x000C 0x0015
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2012	PCM	●	●	●	●	0x0009 0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0095 0x0010 0x0028 0x0031 0x0033 0x0084
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2012	SCCM	●	●	●	●	○
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2012	TPM	●	●	●	●	○
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	APIM	●	●	●	●	0x0019 0x001C
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	BCM#1	●	●	●	●	0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x0112
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	DCSM	●	●	●	●	○
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	DSM	●	●	●	●	○
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	FDIM	●	●	●	●	○
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	IPC	●	●	●	●	0x00D0
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	PAM	●	●	●	●	○
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	PRB	●	●	●	●	○
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	PSCM	●	●	●	●	0x00CB
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	RCM	●	●	●	●	○
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	TBC	●	●	●	●	○
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	TCCM	●	●	●	●	○
F-150	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RTM	●	●	●	○	○
F-150	3.7L	TivCT	2011 - 2012	ABS	●	●	●	●	0x0008 0x0012
F-150	3.7L	TivCT	2011 - 2012	ACM	●	●	●	○	0x0017 0x0018
F-150	3.7L	TivCT	2011 - 2012	DSP	●	●	●	●	○
F-150	3.7L	TivCT	2011 - 2012	FCIM	●	●	●	●	○
F-150	3.7L	TivCT	2011 - 2012	GPSM	●	●	●	●	○
F-150	3.7L	TivCT	2011 - 2012	HVAC	●	●	●	●	0x0005
F-150	3.7L	TivCT	2011 - 2012	ILCM	●	●	●	●	○
F-150	3.7L	TivCT	2011 - 2012	OCSM	●	●	●	●	0x000C 0x0015
F-150	3.7L	TivCT	2011 - 2012	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-150	3.7L	TiVCT	2011 - 2012	SCCM	●	●	●	●	0x0005
F-150	3.7L	TiVCT	2011 - 2012	TPM	●	●	●	●	○
F-150	3.7L	TiVCT	2011 - 2014	APIM	●	●	●	●	0x0019 0x001C
F-150	3.7L	TiVCT	2011 - 2014	BCM#1	●	●	●	●	0x000A 0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x0112
F-150	3.7L	TiVCT	2011 - 2014	DCSM	●	●	●	●	○
F-150	3.7L	TiVCT	2011 - 2014	DSM	●	●	●	●	0x0005
F-150	3.7L	TiVCT	2011 - 2014	FDIM	●	●	●	●	0x0005
F-150	3.7L	TiVCT	2011 - 2014	IPC	●	●	●	●	0x0005 0x00D0
F-150	3.7L	TiVCT	2011 - 2014	PAM	●	●	●	●	○
F-150	3.7L	TiVCT	2011 - 2014	PRB	●	●	●	●	○
F-150	3.7L	TiVCT	2011 - 2014	PSCM	●	●	●	●	0x0005 0x00CB
F-150	3.7L	TiVCT	2011 - 2014	RCM	●	●	●	●	○
F-150	3.7L	TiVCT	2011 - 2014	TBC	●	●	●	●	○
F-150	3.7L	TiVCT	2011 - 2014	TCCM	●	●	●	●	○
F-150	3.7L	TiVCT	2013 - 2014	RTM	●	●	●	○	○
F-150	4.2L	2V	2005 - 2007	EATC	●	●	●	●	○
F-150	4.2L	2V	2005 - 2008	4X4	●	●	●	●	○
F-150	4.2L	2V	2005 - 2008	ABS	●	●	●	●	0x0005 0x0008 0x000B
F-150	4.2L	2V	2005 - 2008	DSM	●	●	●	●	○
F-150	4.2L	2V	2005 - 2008	IC	●	●	●	●	0xF071
F-150	4.2L	2V	2005 - 2008	PAM	●	●	●	●	○
F-150	4.2L	2V	2005 - 2008	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
F-150	4.2L	2V	2005 - 2008	RCM	●	●	●	●	0x000C 0x006D
F-150	4.2L	2V	2005 - 2008	VSM	●	●	●	●	0x000A 0x000F
F-150	4.2L	2V	2008	HVAC	●	●	●	●	○
F-150	4.2L	2V	2008	RETM	●	●	●	●	0x0018
F-150	4.2L	Other	1997 - 2000	IAB	●	●	●	●	○
F-150	4.2L	Other	1997 - 2006	ABS/TCS	●	●	●	●	0x0008 0x001B
F-150	4.2L	Other	1997 - 2006	GEM	●	●	●	●	○
F-150	4.2L	Other	1997 - 2006	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024
F-150	4.2L	Other	1997 - 2006	RAP	●	●	●	●	0x000A 0x000F
F-150	4.2L	Other	1999 - 2006	IC	●	●	●	●	0x0009
F-150	4.2L	Other	2002 - 2006	RCM	●	●	●	●	○
F-150	4.6L	2V	2003 - 2005	ABS/TCS	●	●	●	●	0x0008 0x001B
F-150	4.6L	2V	2003 - 2005	GEM	●	●	●	●	○
F-150	4.6L	2V	2003 - 2005	RAP	●	●	●	●	0x000A 0x000F
F-150	4.6L	2V	2003 - 2010	IC	●	●	●	●	0x0009 0x0005 0xF071 0xF077
F-150	4.6L	2V	2003 - 2010	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0009 0x0010 0x0028 0x0031 0x0033 0x0024 0x0067
F-150	4.6L	2V	2003 - 2010	RCM	●	●	●	●	0x000C
F-150	4.6L	2V	2004 - 2007	EATC	●	●	●	●	○
F-150	4.6L	2V	2004 - 2008	4X4	●	●	●	●	○
F-150	4.6L	2V	2004 - 2008	VSM	●	●	●	●	0x000A 0x000F
F-150	4.6L	2V	2004 - 2010	ABS	●	●	●	●	0x0008 0x000B 0x0005 0x0012
F-150	4.6L	2V	2004 - 2010	DSM	●	●	●	●	○
F-150	4.6L	2V	2004 - 2010	PAM	●	●	●	●	○
F-150	4.6L	2V	2008	RETM	●	●	●	●	0x0018
F-150	4.6L	2V	2008 - 2010	HVAC	●	●	●	●	○
F-150	4.6L	2V	2009 - 2010	ACM	●	●	●	●	0x0017 0x0018
F-150	4.6L	2V	2009 - 2010	APIM	●	●	●	●	0x0019 0x001C
F-150	4.6L	2V	2009 - 2010	DCSM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-150	4.6L	2V	2009 - 2010	DSP	●	●	●	●	○
F-150	4.6L	2V	2009 - 2010	FCIM	●	●	●	●	○
F-150	4.6L	2V	2009 - 2010	FDIM	●	●	●	●	○
F-150	4.6L	2V	2009 - 2010	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
F-150	4.6L	2V	2009 - 2010	OCSM	●	●	●	●	0x000C 0x0015
F-150	4.6L	2V	2009 - 2010	PRB	●	●	●	●	○
F-150	4.6L	2V	2009 - 2010	TBC	●	●	●	●	○
F-150	4.6L	2V	2009 - 2010	TCCM	●	●	●	●	○
F-150	4.6L	2V	2010	GPSM	●	●	●	○	○
F-150	4.6L	2V	2010	ILCM	●	●	●	●	○
F-150	4.6L	3V	2009 - 2010	ABS	●	●	●	●	0x0008 0x0012
F-150	4.6L	3V	2009 - 2010	ACM	●	●	●	●	0x0017 0x0018
F-150	4.6L	3V	2009 - 2010	APIM	●	●	●	●	0x0019 0x001C
F-150	4.6L	3V	2009 - 2010	DCSM	●	●	●	●	○
F-150	4.6L	3V	2009 - 2010	DSM	●	●	●	●	○
F-150	4.6L	3V	2009 - 2010	DSP	●	●	●	●	○
F-150	4.6L	3V	2009 - 2010	FCIM	●	●	●	●	○
F-150	4.6L	3V	2009 - 2010	FDIM	●	●	●	●	○
F-150	4.6L	3V	2009 - 2010	GEM / SJB	●	●	●	●	0x000F 0x0042
F-150	4.6L	3V	2009 - 2010	HVAC	●	●	●	●	○
F-150	4.6L	3V	2009 - 2010	IC	●	●	●	●	0x0009
F-150	4.6L	3V	2009 - 2010	OCSM	●	●	●	●	0x000C 0x0015
F-150	4.6L	3V	2009 - 2010	PAM	●	●	●	●	○
F-150	4.6L	3V	2009 - 2010	PCM	●	●	●	●	0x0024 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084
F-150	4.6L	3V	2009 - 2010	PRB	●	●	●	●	○
F-150	4.6L	3V	2009 - 2010	RCM	●	●	●	●	○
F-150	4.6L	3V	2009 - 2010	TBC	●	●	●	●	○
F-150	4.6L	3V	2009 - 2010	TCCM	●	●	●	●	○
F-150	4.6L	3V	2009 - 2010	TCM	●	●	●	●	○
F-150	4.6L	3V	2010	GPSM	●	●	●	○	○
F-150	4.6L	3V	2010	ILCM	●	●	●	●	○
F-150	4.6L	Other	1997 - 2000	IAB	●	●	●	●	○
F-150	4.6L	Other	1997 - 2002	ABS/TCS	●	●	●	●	0x0008
F-150	4.6L	Other	1997 - 2002	GEM	●	●	●	●	○
F-150	4.6L	Other	1997 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
F-150	4.6L	Other	1997 - 2002	RAP	●	●	●	●	0x000A 0x000F
F-150	4.6L	Other	1999 - 2002	IC	●	●	●	●	0x0009
F-150	4.6L	Other	2002	RCM	●	●	●	●	○
F-150	5.0L	TivCT	2011 - 2012	ABS	●	●	●	●	0x0008 0x0012
F-150	5.0L	TivCT	2011 - 2012	ACM	●	●	●	○	0x0017 0x0018
F-150	5.0L	TivCT	2011 - 2012	DSP	●	●	●	●	○
F-150	5.0L	TivCT	2011 - 2012	FCIM	●	●	●	●	○
F-150	5.0L	TivCT	2011 - 2012	GPSM	●	●	●	●	○
F-150	5.0L	TivCT	2011 - 2012	HVAC	●	●	●	●	○
F-150	5.0L	TivCT	2011 - 2012	ILCM	●	●	●	●	○
F-150	5.0L	TivCT	2011 - 2012	OCSM	●	●	●	●	0x000C 0x0015
F-150	5.0L	TivCT	2011 - 2012	PCM	●	●	●	●	0x0009 0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0010 0x0028 0x0031 0x0033
F-150	5.0L	TivCT	2011 - 2012	SCCM	●	●	●	●	○
F-150	5.0L	TivCT	2011 - 2012	TPM	●	●	●	●	○
F-150	5.0L	TivCT	2011 - 2014	APIM	●	●	●	●	0x0019 0x001C
F-150	5.0L	TivCT	2011 - 2014	BCM#1	●	●	●	●	0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x0112
F-150	5.0L	TivCT	2011 - 2014	DCSM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-150	5.0L	TiVCT	2011 - 2014	DSM	●	●	●	●	○
F-150	5.0L	TiVCT	2011 - 2014	FDIM	●	●	●	●	○
F-150	5.0L	TiVCT	2011 - 2014	IPC	●	●	●	●	0x00D0
F-150	5.0L	TiVCT	2011 - 2014	PAM	●	●	●	●	○
F-150	5.0L	TiVCT	2011 - 2014	PRB	●	●	●	●	○
F-150	5.0L	TiVCT	2011 - 2014	PSCM	●	●	●	●	0x00CB
F-150	5.0L	TiVCT	2011 - 2014	RCM	●	●	●	●	○
F-150	5.0L	TiVCT	2011 - 2014	TBC	●	●	●	●	○
F-150	5.0L	TiVCT	2011 - 2014	TCCM	●	●	●	●	○
F-150	5.0L	TiVCT	2013 - 2014	RTM	●	●	●	○	○
F-150	5.4L	2V	2004	ABS/TCS	●	●	●	●	0x0008 0x001B
F-150	5.4L	2V	2004	GEM	●	●	●	●	0x0143
F-150	5.4L	2V	2004	IC	●	●	●	●	0x0009
F-150	5.4L	2V	2004	PCM	●	●	●	●	0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083
F-150	5.4L	2V	2004	RAP	●	●	●	●	0x000A 0x000F
F-150	5.4L	2V	2004	RCM	●	●	●	●	○
F-150	5.4L	3V	2004 - 2007	EATC	●	●	●	●	○
F-150	5.4L	3V	2004 - 2008	4X4	●	●	●	●	○
F-150	5.4L	3V	2004 - 2008	VSM	●	●	●	●	0x000A 0x000F
F-150	5.4L	3V	2004 - 2010	ABS	●	●	●	●	0x0005 0x0008 0x000B 0x0012
F-150	5.4L	3V	2004 - 2010	DSM	●	●	●	●	○
F-150	5.4L	3V	2004 - 2010	IC	●	●	●	●	0xF071 0x0005 0xF044 0x0009
F-150	5.4L	3V	2004 - 2010	PAM	●	●	●	●	○
F-150	5.4L	3V	2004 - 2010	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 0x0067 0x00C5
F-150	5.4L	3V	2004 - 2010	RCM	●	●	●	●	0x000C 0x006D
F-150	5.4L	3V	2008	RETM	●	●	●	●	0x0018
F-150	5.4L	3V	2008 - 2010	HVAC	●	●	●	●	○
F-150	5.4L	3V	2009 - 2010	ACM	●	●	●	●	0x0017 0x0018
F-150	5.4L	3V	2009 - 2010	APIM	●	●	●	●	0x0019 0x001C
F-150	5.4L	3V	2009 - 2010	DCSM	●	●	●	●	○
F-150	5.4L	3V	2009 - 2010	DSP	●	●	●	●	○
F-150	5.4L	3V	2009 - 2010	FCIM	●	●	●	●	○
F-150	5.4L	3V	2009 - 2010	FDIM	●	●	●	●	○
F-150	5.4L	3V	2009 - 2010	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
F-150	5.4L	3V	2009 - 2010	OCSM	●	●	●	●	0x000C 0x0015
F-150	5.4L	3V	2009 - 2010	PRB	●	●	●	●	○
F-150	5.4L	3V	2009 - 2010	TBC	●	●	●	●	○
F-150	5.4L	3V	2009 - 2010	TCCM	●	●	●	●	○
F-150	5.4L	3V	2009 - 2010	TCM	●	●	●	●	0x00CE
F-150	5.4L	3V	2010	GPSM	●	●	●	○	○
F-150	5.4L	3V	2010	ILCM	●	●	●	●	○
F-150	5.4L	BIF	1998 - 2000	ABS/TCS	●	●	●	●	0x0008
F-150	5.4L	BIF	1998 - 2000	AFCM	●	●	●	●	○
F-150	5.4L	BIF	1998 - 2000	GEM	●	●	●	●	○
F-150	5.4L	BIF	1998 - 2000	IAB	●	●	●	●	○
F-150	5.4L	BIF	1998 - 2000	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083 0x0025 0x0084
F-150	5.4L	BIF	1998 - 2000	RAP	●	●	●	●	0x000A 0x000F
F-150	5.4L	BIF	1999 - 2000	IC	●	●	●	●	0x0009
F-150	5.4L	NGV	2000	ABS/TCS	●	●	●	●	0x0008
F-150	5.4L	NGV	2000	FIM	●	●	●	●	○
F-150	5.4L	NGV	2000	GEM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-150	5.4L	NGV	2000	IAB	●	●	●	●	○
F-150	5.4L	NGV	2000	IC	●	●	●	●	0x0009
F-150	5.4L	NGV	2000	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083 0x0084
F-150	5.4L	NGV	2000	RAP	●	●	●	●	0x000A 0x000F
F-150	5.4L	Other	1997 - 2000	IAB	●	●	●	●	○
F-150	5.4L	Other	1997 - 2003	ABS/TCS	●	●	●	●	0x0008
F-150	5.4L	Other	1997 - 2003	GEM	●	●	●	●	○
F-150	5.4L	Other	1997 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
F-150	5.4L	Other	1997 - 2003	RAP	●	●	●	●	0x000A 0x000F
F-150	5.4L	Other	1999 - 2003	IC	●	●	●	●	0x0009
F-150	5.4L	Other	2002 - 2003	RCM	●	●	●	●	○
F-150	6.2L	2V	2010	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
F-150	6.2L	2V	2010	IC	●	●	●	●	0x0009
F-150	6.2L	2V	2010 - 2012	ABS	●	●	●	●	0x0008 0x0012
F-150	6.2L	2V	2010 - 2012	ACM	●	●	●	○	0x0017 0x0018
F-150	6.2L	2V	2010 - 2012	DSP	●	●	●	●	○
F-150	6.2L	2V	2010 - 2012	FCIM	●	●	●	●	○
F-150	6.2L	2V	2010 - 2012	GPSM	●	●	●	○	○
F-150	6.2L	2V	2010 - 2012	HVAC	●	●	●	●	0x0005
F-150	6.2L	2V	2010 - 2012	IHCM	●	●	●	●	○
F-150	6.2L	2V	2010 - 2012	OCSM	●	●	●	●	0x000C 0x0015
F-150	6.2L	2V	2010 - 2012	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0009 0x0095
F-150	6.2L	2V	2010 - 2014	APIM	●	●	●	●	0x0019 0x001C
F-150	6.2L	2V	2010 - 2014	DCSM	●	●	●	●	○
F-150	6.2L	2V	2010 - 2014	DSM	●	●	●	●	0x0005
F-150	6.2L	2V	2010 - 2014	FDIM	●	●	●	●	0x0005
F-150	6.2L	2V	2010 - 2014	PAM	●	●	●	●	○
F-150	6.2L	2V	2010 - 2014	PRB	●	●	●	●	○
F-150	6.2L	2V	2010 - 2014	RCM	●	●	●	●	○
F-150	6.2L	2V	2010 - 2014	TBC	●	●	●	●	○
F-150	6.2L	2V	2010 - 2014	TCCM	●	●	●	●	○
F-150	6.2L	2V	2011 - 2012	SCCM	●	●	●	●	0x0005
F-150	6.2L	2V	2011 - 2012	TPM	●	●	●	●	○
F-150	6.2L	2V	2011 - 2014	BCM#1	●	●	●	●	0x000A 0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x0112
F-150	6.2L	2V	2011 - 2014	IPC	●	●	●	●	0x0005 0x00D0
F-150	6.2L	2V	2011 - 2014	PSCM	●	●	●	●	0x0005 0x00CB
F-150	6.2L	2V	2013 - 2014	RTM	●	●	●	○	○
F-150	Other	Other	2004	4X4	●	●	●	●	○
F-150	Other	Other	2004	EATC	●	●	●	●	○
F-150	Other	Other	2004	IC	●	●	●	●	○
F-150	Other	Other	2004	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
F-150	Other	Other	2004	VSM	●	●	●	●	0x000A
F-150	Other	Other	2004 - 2012	ABS	●	●	●	●	○
F-150	Other	Other	2004 - 2012	DSM	●	●	●	●	○
F-150	Other	Other	2004 - 2012	PAM	●	●	●	●	○
F-150	Other	Other	2004 - 2012	RCM	●	●	●	●	○
F-150	Other	Other	2012	ACM	●	●	●	○	○
F-150	Other	Other	2012	BCM#1	●	●	●	○	0x0112
F-150	Other	Other	2012	DCSM	●	●	●	●	○
F-150	Other	Other	2012	DSP	●	●	●	●	○
F-150	Other	Other	2012	FCIM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-150	Other	Other	2012	FDIM	●	●	●	●	○
F-150	Other	Other	2012	HVAC	●	●	●	○	○
F-150	Other	Other	2012	IHCM	●	●	●	●	○
F-150	Other	Other	2012	IPC	●	●	●	●	○
F-150	Other	Other	2012	OCSM	●	●	●	●	○
F-150	Other	Other	2012	PRB	●	●	●	●	○
F-150	Other	Other	2012	PSCM	●	●	●	●	○
F-150	Other	Other	2012	SCCM	●	●	●	●	○
F-150	Other	Other	2012	TBC	●	●	●	●	○
F-150	Other	Other	2012	TCCM	●	●	●	●	○
F-150	Other	Other	2012	TPM	●	●	●	●	○
F-150 SuperCrew (4 full size doors)	4.6L	2V	2003	ABS/TCS	●	●	●	●	0x0008
F-150 SuperCrew (4 full size doors)	4.6L	2V	2003	EATC	●	●	●	●	○
F-150 SuperCrew (4 full size doors)	4.6L	2V	2003	GEM	●	●	●	●	○
F-150 SuperCrew (4 full size doors)	4.6L	2V	2003	HEC	●	●	●	●	0x0009
F-150 SuperCrew (4 full size doors)	4.6L	2V	2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
F-150 SuperCrew (4 full size doors)	4.6L	2V	2003	RAP	●	●	●	●	0x000A 0x000F
F-150 SuperCrew (4 full size doors)	4.6L	2V	2003	RCM	●	●	●	●	○
F-150 SuperCrew (4 full size doors)	4.6L	Other	2001 - 2002	ABS/TCS	●	●	●	●	0x0008
F-150 SuperCrew (4 full size doors)	4.6L	Other	2001 - 2002	GEM	●	●	●	●	○
F-150 SuperCrew (4 full size doors)	4.6L	Other	2001 - 2002	HEC	●	●	●	●	0x0009
F-150 SuperCrew (4 full size doors)	4.6L	Other	2001 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
F-150 SuperCrew (4 full size doors)	4.6L	Other	2001 - 2002	RAP	●	●	●	●	0x000A 0x000F
F-150 SuperCrew (4 full size doors)	4.6L	Other	2001 - 2002	RCM	●	●	●	●	○
F-150 SuperCrew (4 full size doors)	4.6L	Other	2002	EATC	●	●	●	●	○
F-150 SuperCrew (4 full size doors)	5.4L	2V	2003	ABS/TCS	●	●	●	●	0x0008
F-150 SuperCrew (4 full size doors)	5.4L	2V	2003	EATC	●	●	●	●	○
F-150 SuperCrew (4 full size doors)	5.4L	2V	2003	GEM	●	●	●	●	○
F-150 SuperCrew (4 full size doors)	5.4L	2V	2003	HEC	●	●	●	●	0x0009
F-150 SuperCrew (4 full size doors)	5.4L	2V	2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
F-150 SuperCrew (4 full size doors)	5.4L	2V	2003	RAP	●	●	●	●	0x000A 0x000F
F-150 SuperCrew (4 full size doors)	5.4L	2V	2003	RCM	●	●	●	●	○
F-150 SuperCrew (4 full size doors)	5.4L	Other	2001 - 2002	ABS/TCS	●	●	●	●	0x0008
F-150 SuperCrew (4 full size doors)	5.4L	Other	2001 - 2002	GEM	●	●	●	●	○
F-150 SuperCrew (4 full size doors)	5.4L	Other	2001 - 2002	HEC	●	●	●	●	0x0009
F-150 SuperCrew (4 full size doors)	5.4L	Other	2001 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
F-150 SuperCrew (4 full size doors)	5.4L	Other	2001 - 2002	RAP	●	●	●	●	0x000A 0x000F
F-150 SuperCrew (4 full size doors)	5.4L	Other	2001 - 2002	RCM	●	●	●	●	○
F-150 SuperCrew (4 full size doors)	5.4L	Other	2002	EATC	●	●	●	●	○
F-250	3.9L	Cummins Diesel	2006	4X4	●	●	●	●	○
F-250	3.9L	Cummins Diesel	2006	ABS/TCS	●	●	●	●	0x0008
F-250	3.9L	Cummins Diesel	2006	GEM	●	●	●	●	○
F-250	3.9L	Cummins Diesel	2006	HEC	●	●	●	●	○
F-250	3.9L	Cummins Diesel	2006	OTC	●	●	●	●	○
F-250	3.9L	Cummins Diesel	2006	PAM	●	●	●	●	○
F-250	3.9L	Cummins Diesel	2006	RCM	●	●	●	●	○
F-250	3.9L	Cummins Diesel	2006	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
F-250 Light Duty	4.2L	Other	1999	ABS/TCS	●	●	●	●	0x0008
F-250 Light Duty	4.2L	Other	1999	GEM	●	●	●	●	○
F-250 Light Duty	4.2L	Other	1999	IC	●	●	●	●	0x0009
F-250 Light Duty	4.2L	Other	1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
F-250 Light Duty	4.2L	Other	1999	RAP	●	●	●	●	0x000A 0x000F
F-250 Light Duty	4.2L	Other	1999	RCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-250 Light Duty	4.6L	Other	1997 - 1998	IAB	●	●	●	●	○
F-250 Light Duty	4.6L	Other	1997 - 2000	ABS/TCS	●	●	●	●	0x0008
F-250 Light Duty	4.6L	Other	1997 - 2000	GEM	●	●	●	●	○
F-250 Light Duty	4.6L	Other	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
F-250 Light Duty	4.6L	Other	1997 - 2000	RAP	●	●	●	●	0x000A
F-250 Light Duty	4.6L	Other	1999 - 2000	IC	●	●	●	●	0x0009
F-250 Light Duty	4.6L	Other	1999 - 2000	RCM	●	●	●	●	○
F-250 Light Duty	5.4L	BIF	1998	IAB	●	●	●	●	○
F-250 Light Duty	5.4L	BIF	1998 - 1999	ABS/TCS	●	●	●	●	0x0008
F-250 Light Duty	5.4L	BIF	1998 - 1999	AFCM	●	●	●	●	○
F-250 Light Duty	5.4L	BIF	1998 - 1999	GEM	●	●	●	●	○
F-250 Light Duty	5.4L	BIF	1998 - 1999	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
F-250 Light Duty	5.4L	BIF	1998 - 1999	RAP	●	●	●	●	0x000A 0x000F
F-250 Light Duty	5.4L	BIF	1999	IC	●	●	●	●	0x0009
F-250 Light Duty	5.4L	BIF	1999	RCM	●	●	●	●	○
F-250 Light Duty	5.4L	NGV	1997 - 1998	IAB	●	●	●	●	○
F-250 Light Duty	5.4L	NGV	1997 - 2000	ABS/TCS	●	●	●	●	0x0008
F-250 Light Duty	5.4L	NGV	1997 - 2000	FIM	●	●	●	●	○
F-250 Light Duty	5.4L	NGV	1997 - 2000	GEM	●	●	●	●	○
F-250 Light Duty	5.4L	NGV	1997 - 2000	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083 0x0084
F-250 Light Duty	5.4L	NGV	1997 - 2000	RAP	●	●	●	●	0x000A 0x000F
F-250 Light Duty	5.4L	NGV	1999 - 2000	IC	●	●	●	●	0x0009
F-250 Light Duty	5.4L	NGV	1999 - 2000	RCM	●	●	●	●	○
F-250 Light Duty	5.4L	Other	1997 - 1998	IAB	●	●	●	●	○
F-250 Light Duty	5.4L	Other	1997 - 2000	ABS/TCS	●	●	●	●	0x0008
F-250 Light Duty	5.4L	Other	1997 - 2000	GEM	●	●	●	●	○
F-250 Light Duty	5.4L	Other	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
F-250 Light Duty	5.4L	Other	1997 - 2000	RAP	●	●	●	●	0x000A 0x000F
F-250 Light Duty	5.4L	Other	1999 - 2000	IC	●	●	●	●	0x0009
F-250 Light Duty	5.4L	Other	1999 - 2000	RCM	●	●	●	●	○
F-650 / F-750	5.9L	Cummins Diesel	2000 - 2007	ABS/TCS	●	●	●	●	0x0008
F-650 / F-750	5.9L	Cummins Diesel	2000 - 2007	GEM	●	●	●	●	○
F-650 / F-750	6.0L	Direct Injection - Turbo	2004 - 2007	GEM	●	●	●	●	○
F-650 / F-750	6.0L	Direct Injection - Turbo	2005 - 2007	ABS/TCS	●	●	●	●	○
F-650 / F-750	6.7L	Cummins Diesel	2008 - 2012	GEM / SJB	●	●	●	○	○
F-650 / F-750	6.7L	Cummins Diesel	2011 - 2013	ACM	●	●	●	○	○
F-650 / F-750	6.7L	Cummins Diesel	2011 - 2013	HVAC	●	●	●	●	○
F-650 / F-750	6.7L	Cummins Diesel	2011 - 2013	IPC	●	●	●	●	○
F-650 / F-750	6.7L	Cummins Diesel	2012 - 2013	APIM	●	●	●	●	○
F-650 / F-750	6.8L	3V	2012	GEM / SJB	●	●	●	○	○
F-650 / F-750	6.8L	3V	2012	PCM	●	●	●	●	0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084
F-650 / F-750	6.8L	3V	2012 - 2013	ACM	●	●	●	○	○
F-650 / F-750	6.8L	3V	2012 - 2013	IPC	●	●	●	●	○
F-650 / F-750	6.8L	3V	2012 - 2014	APIM	●	●	●	●	○
F-650 / F-750	6.8L	3V	2012 - 2014	HVAC	●	●	●	●	○
F-650 / F-750	7.2L	Caterpillar Diesel	2000 - 2007	ABS/TCS	●	●	●	●	0x0008
F-650 / F-750	7.2L	Caterpillar Diesel	2000 - 2007	GEM	●	●	●	●	○
F-650 / F-750	7.2L	Caterpillar Diesel	2008 - 2010	GEM / SJB	●	●	●	○	○
F-650 / F-750	7.3L	Direct Injection - Turbo	2000 - 2003	ABS/TCS	●	●	●	●	0x0008
F-650 / F-750	7.3L	Direct Injection - Turbo	2000 - 2003	GEM	●	●	●	●	○
F-650 / F-750	7.3L	Direct Injection - Turbo	2000 - 2003	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
F-650 / F-750	Other	Other	2005 - 2006	ABS/TCS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-650 / F-750	Other	Other	2005 - 2006	GEM	●	●	●	●	○
F-650 / F-750	Other	Other	2013	ACM	●	●	●	○	○
F-650 / F-750	Other	Other	2013	APIM	●	●	●	●	○
F-650 / F-750	Other	Other	2013	HVAC	●	●	●	●	○
F-650 / F-750	Other	Other	2013	IPC	●	●	●	●	○
F-Series	4.9L	GFP	1996	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
F-Series	4.9L	Other	1996	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
F-Series	5.0L	Other	1996	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
F-Series	5.8L	Other	1996 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
F-Series	7.3L	Direct Injection - Turbo	1994 - 1997	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0083
F-Series	7.5L	Other	1996 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	ABS/TCS	●	●	●	●	0x0008
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	FOH	●	●	●	●	○
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	GEM	●	●	●	●	○
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	HEC	●	●	●	●	○
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	OTC	●	●	●	●	○
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	PAM	●	●	●	●	○
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	PATS	●	●	●	●	0x0009
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	RCM	●	●	●	●	○
F-Series Super Duty	4.2L	Direct Injection - Turbo	2003	VSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	4.2L	Other	2001	ABS/TCS	●	●	●	●	0x0008
F-Series Super Duty	4.2L	Other	2001	ECS	●	●	●	●	○
F-Series Super Duty	4.2L	Other	2001	GEM	●	●	●	●	○
F-Series Super Duty	4.2L	Other	2001	OTC	●	●	●	●	○
F-Series Super Duty	4.2L	Other	2001	PAM	●	●	●	●	○
F-Series Super Duty	4.2L	Other	2001	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
F-Series Super Duty	4.2L	Other	2001	RCM	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2004	ABS/TCS	●	●	●	●	0x0008 0x001B
F-Series Super Duty	5.4L	2V	2004	HEC	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2004	OTC	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2004	PATS	●	●	●	●	0x0009
F-Series Super Duty	5.4L	2V	2004 - 2006	GEM	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2004 - 2006	VSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	5.4L	2V	2004 - 2008	PAM	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2004 - 2008	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
F-Series Super Duty	5.4L	2V	2004 - 2008	RCM	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2005 - 2006	EATC	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2005 - 2008	ABS	●	●	●	●	0x0008
F-Series Super Duty	5.4L	2V	2005 - 2008	IC	●	●	●	●	0x0009
F-Series Super Duty	5.4L	2V	2005 - 2008	TBC	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2008	4X4	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2008	ACM	●	●	●	●	0x0016 0x0017 0x0018
F-Series Super Duty	5.4L	2V	2008	DSM	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2008	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
F-Series Super Duty	5.4L	2V	2008	HVAC	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2008	RETM	●	●	●	●	○
F-Series Super Duty	5.4L	2V	2008	SDARS	●	●	●	●	0x0019
F-Series Super Duty	5.4L	3V	2005 - 2007	EATC	●	●	●	●	○
F-Series Super Duty	5.4L	3V	2005 - 2007	GEM	●	●	●	●	○
F-Series Super Duty	5.4L	3V	2005 - 2007	VSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	5.4L	3V	2005 - 2010	ABS	●	●	●	●	0x0008 0x0005

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-Series Super Duty	5.4L	3V	2005 - 2010	IC	●	●	●	●	0x0009 0x0005 0xF027 0xF04D 0xF07E
F-Series Super Duty	5.4L	3V	2005 - 2010	PAM	●	●	●	●	0x0005
F-Series Super Duty	5.4L	3V	2005 - 2010	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5
F-Series Super Duty	5.4L	3V	2005 - 2010	RCM	●	●	●	●	0x0005 0xF022
F-Series Super Duty	5.4L	3V	2005 - 2010	TBC	●	●	●	●	○
F-Series Super Duty	5.4L	3V	2008 - 2010	4X4	●	●	●	●	○
F-Series Super Duty	5.4L	3V	2008 - 2010	ACM	●	●	●	●	0x0016 0x0017 0x0018
F-Series Super Duty	5.4L	3V	2008 - 2010	DSM	●	●	●	●	0x0005 0xF041
F-Series Super Duty	5.4L	3V	2008 - 2010	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C 0xF05C 0xF065 0xF06A 0xF080 0xF081 0xF0B0
F-Series Super Duty	5.4L	3V	2008 - 2010	HVAC	●	●	●	●	○
F-Series Super Duty	5.4L	3V	2008 - 2010	RETM	●	●	●	●	0x0005 0xF04D 0xF05A
F-Series Super Duty	5.4L	3V	2008 - 2010	SDARS	●	●	●	●	0x0019 0x0005 0xF07F
F-Series Super Duty	5.4L	3V	2009 - 2010	APIM	●	●	●	●	0x001C 0x0019
F-Series Super Duty	5.4L	3V	2010	GPSM	●	●	●	○	○
F-Series Super Duty	5.4L	BIF	1999	ABS/TCS	●	●	●	●	0x0008
F-Series Super Duty	5.4L	BIF	1999	AFCM	●	●	●	●	○
F-Series Super Duty	5.4L	BIF	1999	ECS	●	●	●	●	○
F-Series Super Duty	5.4L	BIF	1999	GEM	●	●	●	●	○
F-Series Super Duty	5.4L	BIF	1999	OTC	●	●	●	●	○
F-Series Super Duty	5.4L	BIF	1999	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
F-Series Super Duty	5.4L	Other	1999 - 2001	ECS	●	●	●	●	○
F-Series Super Duty	5.4L	Other	1999 - 2003	ABS/TCS	●	●	●	●	0x0008
F-Series Super Duty	5.4L	Other	1999 - 2003	GEM	●	●	●	●	○
F-Series Super Duty	5.4L	Other	1999 - 2003	OTC	●	●	●	●	○
F-Series Super Duty	5.4L	Other	1999 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084
F-Series Super Duty	5.4L	Other	2000 - 2003	PATS	●	●	●	●	0x0009
F-Series Super Duty	5.4L	Other	2001 - 2003	PAM	●	●	●	●	○
F-Series Super Duty	5.4L	Other	2001 - 2003	RCM	●	●	●	●	○
F-Series Super Duty	5.4L	Other	2002	CSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	5.4L	Other	2002 - 2003	HEC	●	●	●	●	○
F-Series Super Duty	5.4L	Other	2003	FOH	●	●	●	●	○
F-Series Super Duty	5.4L	Other	2003	VSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2004	ABS/TCS	●	●	●	●	0x0008 0x001B
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2004	FOH	●	●	●	●	○
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2004	HEC	●	●	●	●	○
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2004	OTC	●	●	●	●	○
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2004	PATS	●	●	●	●	0x0009
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2007	GEM	●	●	●	●	○
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2007	PAM	●	●	●	●	○
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2007	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2007	RCM	●	●	●	●	○
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2007	TCM	●	●	●	●	0x0010 0x0028 0x0031 0x0033 0x00C5
F-Series Super Duty	6.0L	Direct Injection - Turbo	2003 - 2007	VSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	6.0L	Direct Injection - Turbo	2005 - 2007	ABS	●	●	●	●	0x0008
F-Series Super Duty	6.0L	Direct Injection - Turbo	2005 - 2007	EATC	●	●	●	●	○
F-Series Super Duty	6.0L	Direct Injection - Turbo	2005 - 2007	IC	●	●	●	●	○
F-Series Super Duty	6.0L	Direct Injection - Turbo	2005 - 2007	TBC	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2012	ABS	●	●	●	●	0x0008
F-Series Super Duty	6.2L	2V	2011 - 2012	ACM	●	●	●	○	0x0017 0x0018

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-Series Super Duty	6.2L	2V	2011 - 2012	HVAC	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2012	IPC	●	●	●	●	0x00D0
F-Series Super Duty	6.2L	2V	2011 - 2012	PAM	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2012	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095
F-Series Super Duty	6.2L	2V	2011 - 2012	SDARS	●	●	●	●	0x0019
F-Series Super Duty	6.2L	2V	2011 - 2012	TPM	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2014	APIM	●	●	●	●	0x0019
F-Series Super Duty	6.2L	2V	2011 - 2014	BCM#1	●	●	●	●	0x000A 0x000F 0x0042 0x00D4 0x00FE 0x0112
F-Series Super Duty	6.2L	2V	2011 - 2014	DCSM	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2014	DSM	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2014	GPSM	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2014	RCM	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2014	SCCM	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2014	TBC	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2011 - 2014	TCCM	●	●	●	●	○
F-Series Super Duty	6.2L	2V	2013 - 2014	FCIM	●	●	●	○	○
F-Series Super Duty	6.2L	2V	2013 - 2014	RTM	●	●	●	○	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	4X4	●	●	●	●	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	ABS	●	●	●	●	0x0005 0xF046 0xF084
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	ACM	●	●	●	●	0x0005 0x0017 0x0018 0xF05A 0xF07A 0xF07F
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	AHCM	●	●	●	●	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	CDIM	●	●	●	●	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	DSM	●	●	●	●	0x0005
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	GEM / SJB	●	●	●	●	0x0042 0xF042 0xF048 0xF049 0xF04B 0xF05C 0xF06A 0xF080 0xF081
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	HVAC	●	●	●	●	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	IC	●	●	●	●	0xF027 0xF04D 0xF07E 0xF082 0xF083
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	PAM	●	●	●	●	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	PCM	●	●	●	●	0x0023 0x0025 0x0047 0x0048 0x0058 0x0080 0x0081 0x0082 0x0083 0x0084 0x00A2 0x00A3
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	RCM	●	●	●	●	0x0005 0xF022
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	RETM	●	●	●	●	0x0005 0xF04D 0xF05A
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	SDARS	●	●	●	●	0x0005 0xF07F
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	TBC	●	●	●	●	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2008 - 2010	TCM	●	●	●	●	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2009 - 2010	APIM	●	●	●	●	○
F-Series Super Duty	6.4L	Power Stroke - Direct Injection Turbo Diesel	2010	GPSM	●	●	●	○	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011	NOx#1	●	●	●	○	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2012	ABS	●	●	●	●	0x0008
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2012	ACM	●	●	●	○	0x0017 0x0018 0x0005
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2012	HVAC	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2012	IPC	●	●	●	●	0x00D0
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2012	PAM	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2012	SDARS	●	●	●	●	0x0005
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2012	TPM	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2013	GPCM	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2013	PCM	●	●	●	●	0x0009 0x0058 0x0059 0x0080 0x0081 0x0082 0x0083 0x0091 0x0093 0x0095 0x009B 0x009C 0x009D 0x009E 0x009F 0x00A0 0x00CE 0x000F 0x0010 0x0028 0x0031 0x0033
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2013	TCM	●	●	●	●	0x0038 0x00CE

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	AHCM	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	APIM	●	●	●	●	0x0019
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	BCM#1	●	●	●	●	0x000A 0x000F 0x0042 0x00D4 0x00FE 0x0112
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	CDIM	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	DCSM	●	●	●	●	0x0005
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	DSM	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	GPSM	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	RCM	●	●	●	●	0x0005
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	SCCM	●	●	●	●	0x0005
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	TBC	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2011 - 2014	TCCM	●	●	●	●	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2013 - 2014	FCIM	●	●	●	○	○
F-Series Super Duty	6.7L	Power Stroke - Direct Injection Turbo Diesel	2013 - 2014	RTM	●	●	●	○	○
F-Series Super Duty	6.8L	2V	2004	ABS/TCS	●	●	●	●	0x0008 0x001B
F-Series Super Duty	6.8L	2V	2004	HEC	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2004	OTC	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2004	PATS	●	●	●	●	0x0009
F-Series Super Duty	6.8L	2V	2004 - 2007	GEM	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2004 - 2007	VSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	6.8L	2V	2004 - 2008	PAM	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2004 - 2008	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
F-Series Super Duty	6.8L	2V	2004 - 2008	RCM	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2005 - 2007	EATC	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2005 - 2008	ABS	●	●	●	●	0x0008
F-Series Super Duty	6.8L	2V	2005 - 2008	IC	●	●	●	●	0x0009
F-Series Super Duty	6.8L	2V	2005 - 2008	TBC	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2008	4X4	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2008	ACM	●	●	●	●	0x0016 0x0017 0x0018
F-Series Super Duty	6.8L	2V	2008	DSM	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2008	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
F-Series Super Duty	6.8L	2V	2008	HVAC	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2008	RETM	●	●	●	●	○
F-Series Super Duty	6.8L	2V	2008	SDARS	●	●	●	●	0x0019
F-Series Super Duty	6.8L	3V	2005 - 2007	EATC	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2005 - 2007	GEM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2005 - 2007	VSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	6.8L	3V	2005 - 2010	IC	●	●	●	●	0x0009
F-Series Super Duty	6.8L	3V	2005 - 2012	ABS	●	●	●	●	0x0008
F-Series Super Duty	6.8L	3V	2005 - 2012	PAM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2005 - 2012	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0009 0x0067 0x0095
F-Series Super Duty	6.8L	3V	2005 - 2014	RCM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2005 - 2014	TBC	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2008 - 2010	4X4	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2008 - 2010	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
F-Series Super Duty	6.8L	3V	2008 - 2010	RETM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2008 - 2011	SDARS	●	●	●	●	0x0019
F-Series Super Duty	6.8L	3V	2008 - 2012	ACM	●	●	●	●	0x0016 0x0017 0x0018
F-Series Super Duty	6.8L	3V	2008 - 2012	HVAC	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2008 - 2014	DSM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2009 - 2014	APIM	●	●	●	●	0x0019 0x001C

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
F-Series Super Duty	6.8L	3V	2010 - 2014	GPSM	●	●	●	○	○
F-Series Super Duty	6.8L	3V	2011 - 2012	IPC	●	●	●	●	0x00D0
F-Series Super Duty	6.8L	3V	2011 - 2012	TPM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2011 - 2014	BCM#1	●	●	●	●	0x000F 0x0042 0x00D4 0x00FE 0x0112
F-Series Super Duty	6.8L	3V	2011 - 2014	DCSM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2011 - 2014	SCCM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2011 - 2014	TCCM	●	●	●	●	○
F-Series Super Duty	6.8L	3V	2013 - 2014	FCIM	●	●	●	○	○
F-Series Super Duty	6.8L	3V	2013 - 2014	RTM	●	●	●	○	○
F-Series Super Duty	6.8L	Other	1999 - 2001	ECS	●	●	●	●	○
F-Series Super Duty	6.8L	Other	1999 - 2003	ABS/TCS	●	●	●	●	0x0008
F-Series Super Duty	6.8L	Other	1999 - 2003	GEM	●	●	●	●	○
F-Series Super Duty	6.8L	Other	1999 - 2003	OTC	●	●	●	●	○
F-Series Super Duty	6.8L	Other	1999 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084
F-Series Super Duty	6.8L	Other	2000 - 2001	AFCM	●	●	●	●	○
F-Series Super Duty	6.8L	Other	2000 - 2003	PATS	●	●	●	●	0x0009
F-Series Super Duty	6.8L	Other	2001 - 2003	PAM	●	●	●	●	○
F-Series Super Duty	6.8L	Other	2001 - 2003	RCM	●	●	●	●	○
F-Series Super Duty	6.8L	Other	2002	CSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	6.8L	Other	2002 - 2003	HEC	●	●	●	●	○
F-Series Super Duty	6.8L	Other	2003	FOH	●	●	●	●	○
F-Series Super Duty	6.8L	Other	2003	VSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	7.3L	Direct Injection - Turbo	1999 - 2001	ECS	●	●	●	●	○
F-Series Super Duty	7.3L	Direct Injection - Turbo	1999 - 2003	ABS/TCS	●	●	●	●	0x0008
F-Series Super Duty	7.3L	Direct Injection - Turbo	1999 - 2003	GEM	●	●	●	●	○
F-Series Super Duty	7.3L	Direct Injection - Turbo	1999 - 2003	OTC	●	●	●	●	○
F-Series Super Duty	7.3L	Direct Injection - Turbo	1999 - 2003	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
F-Series Super Duty	7.3L	Direct Injection - Turbo	2000 - 2003	PATS	●	●	●	●	0x0009
F-Series Super Duty	7.3L	Direct Injection - Turbo	2001 - 2003	PAM	●	●	●	●	○
F-Series Super Duty	7.3L	Direct Injection - Turbo	2001 - 2003	RCM	●	●	●	●	○
F-Series Super Duty	7.3L	Direct Injection - Turbo	2002	CSM	●	●	●	●	0x000A 0x000F
F-Series Super Duty	7.3L	Direct Injection - Turbo	2002 - 2003	HEC	●	●	●	●	○
F-Series Super Duty	7.3L	Direct Injection - Turbo	2003	FOH	●	●	●	●	○
F-Series Super Duty	7.3L	Direct Injection - Turbo	2003	VSM	●	●	●	●	0x000A 0x000F
F350/4000	3.9L	Cummins Diesel	2009	4X4	●	●	●	●	○
F350/4000	3.9L	Cummins Diesel	2009	GEM	●	●	●	●	○
F350/4000	3.9L	Cummins Diesel	2009	TBM	●	●	●	●	○
FAMILIA / LASER	1.3L	B3	1998	ABS	●	●	●	●	○
FAMILIA / LASER	1.3L	B3	1998	PCM	●	●	●	●	○
FAMILIA / LASER	1.5L	ZL	1998 - 2000	ABS	●	●	●	●	○
FAMILIA / LASER	1.5L	ZL	1998 - 2002	PCM	●	●	●	●	○
FAMILIA / LASER	1.5L	ZL	2000 - 2002	ABS/TCS	●	●	●	●	○
FAMILIA / LASER	1.8L	FP	1998	ABS	●	●	●	●	○
FAMILIA / LASER	1.8L	FP	1998	PCM	●	●	●	●	○
FAMILIA / LASER	2.0L	FS	1999 - 2000	ABS	●	●	●	●	○
FAMILIA / LASER	2.0L	FS	1999 - 2002	PCM	●	●	●	●	○
FAMILIA / LASER	2.0L	FS	2002	ABS/TCS	●	●	●	●	○
FAMILIA / LASER	2.0L	RF	1998	ABS	●	●	●	●	○
FAMILIA / LASER	2.0L	RF	1998	PCM	●	●	●	●	○
FIGO	1.4 DV4	Duratorq Turbo Diesel Common Rail Injection	2010	ABS/TCS	●	●	●	●	0x0008
FIGO	1.4 DV4	Duratorq Turbo Diesel Common Rail Injection	2010	IC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
FIGO	1.4 DV4	Duratorq Turbo Diesel Common Rail Injection	2010	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
FIGO	1.4 DV4	Duratorq Turbo Diesel Common Rail Injection	2010	RCM	●	●	●	●	○
FIGO	1.4L	DURATEC 16V	2010 - 2011	ABS/TCS	●	●	●	●	0x0008
FIGO	1.4L	DURATEC 16V	2010 - 2011	IC	●	●	●	●	○
FIGO	1.4L	DURATEC 16V	2010 - 2011	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
FIGO	1.4L	DURATEC 16V	2010 - 2011	RCM	●	●	●	●	○
FIGO	1.4L	DURATEC 16V	2011	GEM	●	●	●	●	○
FIGO	1.6L	DURATEC 16V	2011	ABS/TCS	●	●	●	●	0x0008
FIGO	1.6L	DURATEC 16V	2011	GEM	●	●	●	●	○
FIGO	1.6L	DURATEC 16V	2011	IC	●	●	●	●	○
FIGO	1.6L	DURATEC 16V	2011	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
FIGO	1.6L	DURATEC 16V	2011	RCM	●	●	●	●	○
FIGO	1.19L	DURATEC 16V	2010	ABS/TCS	●	●	●	●	0x0008
FIGO	1.19L	DURATEC 16V	2010	IC	●	●	●	●	○
FIGO	1.19L	DURATEC 16V	2010	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
FIGO	1.19L	DURATEC 16V	2010	RCM	●	●	●	●	○
FIGO	Other	DURATEC 16V	2011	ABS/TCS	●	●	●	●	○
FIGO	Other	DURATEC 16V	2011	GEM	●	●	●	●	○
FIGO	Other	DURATEC 16V	2011	IC	●	●	●	●	○
FIGO	Other	DURATEC 16V	2011	RCM	●	●	●	●	○
FORD GT	5.4L	4V	2005 - 2006	ABS/TCS	●	●	●	●	0x0008
FORD GT	5.4L	4V	2005 - 2006	AFCM	●	●	●	●	○
FORD GT	5.4L	4V	2005 - 2006	GEM	●	●	●	●	0x000A
FORD GT	5.4L	4V	2005 - 2006	IC	●	●	●	●	○
FORD GT	5.4L	4V	2005 - 2006	PATS	●	●	●	●	0x0009
FORD GT	5.4L	4V	2005 - 2006	PCM	●	●	●	●	0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083
FORD GT	5.4L	4V	2005 - 2006	RCM	●	●	●	●	○
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	1997 - 2002	PCM	●	●	●	●	○
FRIENDEE / FREDA / BONGO FRIENDEE	2.0L	FE	2002	TCM	●	●	●	●	○
FRIENDEE / FREDA / BONGO FRIENDEE	2.5L	WL T	1999	PCM	●	●	●	●	○
Fairlane / LTD	4.0L	DOHC VCT	2003 - 2006	ABS/TCS	●	●	●	●	0x0008
Fairlane / LTD	4.0L	DOHC VCT	2003 - 2006	ACM	●	●	●	●	0x003B 0x0040
Fairlane / LTD	4.0L	DOHC VCT	2003 - 2006	BEM	●	●	●	●	0x0005 0x0009 0x0035 0xF002 0xF003 0xF004 0xF005 0xF007 0xF008 0xF009 0xF00A 0xF00D 0xF00E 0xF010 0xF011
Fairlane / LTD	4.0L	DOHC VCT	2003 - 2006	HIM	●	●	●	●	0x0005 0x003A
Fairlane / LTD	4.0L	DOHC VCT	2003 - 2006	IC	●	●	●	●	0x0044 0x005F 0x0061 0x0062 0x0069 0xF006 0xF00B 0xF00C 0xF00F
Fairlane / LTD	4.0L	DOHC VCT	2003 - 2006	PAM	●	●	●	●	0x0005
Fairlane / LTD	4.0L	DOHC VCT	2003 - 2006	PCM	●	●	●	●	0x0023 0x0025 0x0045 0x0080 0x0081 0x0082 0x0083 0x0084
Fairlane / LTD	4.0L	DOHC VCT	2003 - 2006	RCM	●	●	●	●	○
Fairlane / LTD	4.0L	DOHC VCT	2006	ABS	●	●	●	●	0x0005 0x0008
Fairlane / LTD	4.0L	DOHC VCT	2006	TCM	●	●	●	●	○
Fairlane / LTD	4.0L	Other	Other	ABS	●	●	●	●	0x0008
Fairlane / LTD	5.0L	Other	Other	ABS	●	●	●	●	0x0008
Fairlane / LTD	5.4L	3V	2003 - 2006	ABS/TCS	●	●	●	●	0x0008
Fairlane / LTD	5.4L	3V	2003 - 2006	ACM	●	●	●	●	0x003B 0x0040
Fairlane / LTD	5.4L	3V	2003 - 2006	BEM	●	●	●	●	0x0009 0x0035 0xF002 0xF003 0xF004 0xF005 0xF007 0xF008 0xF009 0xF00A 0xF00D 0xF00E 0xF010 0xF011 0x0005
Fairlane / LTD	5.4L	3V	2003 - 2006	HIM	●	●	●	●	0x003A 0x0005

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fairlane / LTD	5.4L	3V	2003 - 2006	IC	●	●	●	●	0x0044 0x005F 0x0061 0x0062 0x0069 0xF006 0xF00B 0xF00C 0xF00F
Fairlane / LTD	5.4L	3V	2003 - 2006	PAM	●	●	●	●	0x0005
Fairlane / LTD	5.4L	3V	2003 - 2006	PCM	●	●	●	●	0x0023 0x0025 0x0045 0x0080 0x0081 0x0082 0x0083 0x0084
Fairlane / LTD	5.4L	3V	2003 - 2006	RCM	●	●	●	●	○
Fairlane / LTD	5.4L	3V	2006	ABS	●	●	●	●	0x0005 0x0008
Fairlane / LTD	5.4L	3V	2006	TCM	●	●	●	●	○
Fairmont	4.0L	DOHC VCT	2003 - 2006	ABS/TCS	●	●	●	●	0x0008
Fairmont	4.0L	DOHC VCT	2003 - 2006	ACM	●	●	●	●	0x003B 0x0040
Fairmont	4.0L	DOHC VCT	2003 - 2006	BEM	●	●	●	●	0x0005 0x0009 0x0035 0xF002 0xF003 0xF004 0xF005 0xF007 0xF008 0xF009 0xF00A 0xF00D 0xF00E 0xF010 0xF011
Fairmont	4.0L	DOHC VCT	2003 - 2006	HIM	●	●	●	●	0x0005 0x003A
Fairmont	4.0L	DOHC VCT	2003 - 2006	IC	●	●	●	●	0x0044 0x005F 0x0061 0x0062 0x0069 0xF006 0xF00B 0xF00C 0xF00F
Fairmont	4.0L	DOHC VCT	2003 - 2006	PAM	●	●	●	●	0x0005
Fairmont	4.0L	DOHC VCT	2003 - 2006	PCM	●	●	●	●	0x0023 0x0025 0x0045 0x0080 0x0081 0x0082 0x0083 0x0084
Fairmont	4.0L	DOHC VCT	2003 - 2006	RCM	●	●	●	●	○
Fairmont	4.0L	DOHC VCT	2006	ABS	●	●	●	●	0x0005 0x0008
Fairmont	4.0L	DOHC VCT	2006	TCM	●	●	●	●	○
Fairmont	4.0L	Other	Other	ABS	●	●	●	●	0x0008
Fairmont	5.0L	Other	Other	ABS	●	●	●	●	0x0008
Fairmont	5.4L	3V	2003 - 2006	ABS/TCS	●	●	●	●	0x0008
Fairmont	5.4L	3V	2003 - 2006	ACM	●	●	●	●	0x003B 0x0040
Fairmont	5.4L	3V	2003 - 2006	BEM	●	●	●	●	0x0009 0x0035 0xF002 0xF003 0xF004 0xF005 0xF007 0xF008 0xF009 0xF00A 0xF00D 0xF00E 0xF010 0xF011 0x0005
Fairmont	5.4L	3V	2003 - 2006	HIM	●	●	●	●	0x003A 0x0005
Fairmont	5.4L	3V	2003 - 2006	IC	●	●	●	●	0x0044 0x005F 0x0061 0x0062 0x0069 0xF006 0xF00B 0xF00C 0xF00F
Fairmont	5.4L	3V	2003 - 2006	PAM	●	●	●	●	0x0005
Fairmont	5.4L	3V	2003 - 2006	PCM	●	●	●	●	0x0023 0x0025 0x0045 0x0080 0x0081 0x0082 0x0083 0x0084
Fairmont	5.4L	3V	2003 - 2006	RCM	●	●	●	●	○
Fairmont	5.4L	3V	2006	ABS	●	●	●	●	0x0005 0x0008
Fairmont	5.4L	3V	2006	TCM	●	●	●	●	○
Festiva	1.5L	Other	Other	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Festiva Sedan	1.5L	Other	Other	PCM	●	●	●	●	○
Fiesta	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●	●	○
Fiesta	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	DDM	●	●	●	●	○
Fiesta	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	FCIM	●	●	●	○	○
Fiesta	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	GPSM	●	●	●	○	○
Fiesta	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	HVAC	●	●	●	●	○
Fiesta	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	RCM	●	●	●	○	○
Fiesta	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	RFA	●	●	●	○	○
Fiesta	1.0L	GTDI FGEC	2013	APIM	●	●	●	●	○
Fiesta	1.0L	GTDI FGEC	2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00BC 0x0115
Fiesta	1.0L	GTDI FGEC	2013	TCM	●	●	●	●	0x0117
Fiesta	1.0L	Gasoline Direct injection	2013	APIM	●	●	●	●	○
Fiesta	1.25L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta	1.25L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	0x0005 0xF02D 0xF030 0xF0A2 0xF0B3

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta	1.25L	DURATEC 16V	2002 – 2006	IC	●	●	●	●	0x0005 0xF020
Fiesta	1.25L	DURATEC 16V	2002 – 2008	RCM	●	●	●	●	0x00F0 0x0102
Fiesta	1.25L	DURATEC 16V	2002 – 2013	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x00BC
Fiesta	1.25L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fiesta	1.25L	DURATEC 16V	2006 – 2008	ACM	●	●	●	●	○
Fiesta	1.25L	DURATEC 16V	2006 – 2008	SRM	●	●	●	●	○
Fiesta	1.25L	DURATEC 16V	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119
Fiesta	1.25L	DURATEC 16V	2008	BCMii	●	●	●	●	○
Fiesta	1.25L	DURATEC 16V	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.25L	DURATEC 16V	2008	HVAC	●	●	●	●	○
Fiesta	1.25L	DURATEC 16V	2008	IPC	●	●	●	●	0x0009 0xF020
Fiesta	1.25L	DURATEC 16V	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.25L	DURATEC 16V	2008	RFA	●	●	●	○	0x000A
Fiesta	1.25L	DURATEC 16V	2013	APIM	●	●	●	●	○
Fiesta	1.3L	BZ	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119
Fiesta	1.3L	BZ	2008	ACM	●	●	●	●	○
Fiesta	1.3L	BZ	2008	BCMii	●	●	●	●	○
Fiesta	1.3L	BZ	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.3L	BZ	2008	HVAC	●	●	●	●	○
Fiesta	1.3L	BZ	2008	IPC	●	●	●	●	0x0009
Fiesta	1.3L	BZ	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta	1.3L	BZ	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.3L	BZ	2008	RCM	●	●	●	○	0x00F0 0x0102
Fiesta	1.3L	BZ	2008	RFA	●	●	●	○	0x000A
Fiesta	1.3L	BZ	2008	SRM	●	●	●	○	○
Fiesta	1.3L	DURATEC 8V	2002 – 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta	1.3L	DURATEC 8V	2002 – 2006	GEM	●	●	●	●	○
Fiesta	1.3L	DURATEC 8V	2002 – 2006	IC	●	●	●	●	○
Fiesta	1.3L	DURATEC 8V	2002 – 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta	1.3L	DURATEC 8V	2002 – 2006	RCM	●	●	●	●	○
Fiesta	1.3L	DURATEC 8V	2006	ACM	●	●	●	●	○
Fiesta	1.3L	DURATEC 8V	2006	EATC	●	●	●	●	○
Fiesta	1.3L	DURATEC 8V	2006	SRM	●	●	●	●	○
Fiesta	1.4L	DURATEC 16V	2002 – 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta	1.4L	DURATEC 16V	2002 – 2006	GEM	●	●	●	●	0x0005 0xF020 0xF030 0xF0A2 0xF0B3 0xF0B6
Fiesta	1.4L	DURATEC 16V	2002 – 2006	IC	●	●	●	●	0x0005 0xF020 0xF063 0xF0B5 0xF0B7
Fiesta	1.4L	DURATEC 16V	2002 – 2006	TCM	●	●	●	●	0x003F
Fiesta	1.4L	DURATEC 16V	2002 – 2008	RCM	●	●	●	●	0x00F0 0x0102
Fiesta	1.4L	DURATEC 16V	2002 – 2013	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x00BC
Fiesta	1.4L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fiesta	1.4L	DURATEC 16V	2006 – 2008	ACM	●	●	●	●	0x0005
Fiesta	1.4L	DURATEC 16V	2006 – 2008	SRM	●	●	●	●	0xF037 0xF038 0xF039
Fiesta	1.4L	DURATEC 16V	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119
Fiesta	1.4L	DURATEC 16V	2008	BCMii	●	●	●	●	○
Fiesta	1.4L	DURATEC 16V	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.4L	DURATEC 16V	2008	HVAC	●	●	●	●	○
Fiesta	1.4L	DURATEC 16V	2008	IPC	●	●	●	●	0x0009 0xF020
Fiesta	1.4L	DURATEC 16V	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.4L	DURATEC 16V	2008	RFA	●	●	●	○	○
Fiesta	1.4L	DURATEC 16V	2013	APIM	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 – 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 – 2006	GEM	●	●	●	●	0xF02D 0xF030 0xF0A2 0xF0B3 0xF0B6 0xF0B7
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 – 2006	IC	●	●	●	●	0xF020 0xF063 0xF0B5 0xF0B7

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	TCM	●	●	●	●	0x003F
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RCM	●	●	●	●	0x00F0 0x0102
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006	EATC	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2008	ACM	●	●	●	●	0x0005
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2008	SRM	●	●	●	●	0xF037 0xF038 0xF039
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	BCMii	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	HVAC	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	IPC	●	●	●	●	0x0009 0xF020
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2008	RFA	●	●	●	○	0x000A
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	ACM	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	BCMii	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	HVAC	●	●	●	●	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	IPC	●	●	●	●	0x0009
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	RCM	●	●	●	○	0x00F0
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	RFA	●	●	●	○	○
Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	SRM	●	●	●	○	○
Fiesta	1.5L	BZ	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119
Fiesta	1.5L	BZ	2008	ACM	●	●	●	●	○
Fiesta	1.5L	BZ	2008	BCMii	●	●	●	●	○
Fiesta	1.5L	BZ	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.5L	BZ	2008	HVAC	●	●	●	●	○
Fiesta	1.5L	BZ	2008	IPC	●	●	●	●	0x0009 0xF020
Fiesta	1.5L	BZ	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta	1.5L	BZ	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.5L	BZ	2008	RCM	●	●	●	○	0x00F0 0x0102
Fiesta	1.5L	BZ	2008	RFA	●	●	●	○	0x000A
Fiesta	1.5L	BZ	2008	SRM	●	●	●	○	○
Fiesta	1.5L	DURATEC 16V	2013	APIM	●	●	●	●	○
Fiesta	1.5L	DURATEC 16V	2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	ACM	●	●	●	●	○
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	BCMii	●	●	●	●	○
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	HVAC	●	●	●	●	○
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	IPC	●	●	●	●	0x0009
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083 0x0092 0x0099 0x009A 0x00B4 0x00BC
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	RCM	●	●	●	○	0x00F0 0x0102
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	RFA	●	●	●	○	0x000A
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection	2008	SRM	●	●	●	○	○
Fiesta	1.5L	Duratorq Turbo Diesel Common Rail Injection StgV	2013	APIM	●	●	●	●	○
Fiesta	1.5L	TivCT	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119
Fiesta	1.5L	TivCT	2008	ACM	●	●	●	●	○
Fiesta	1.5L	TivCT	2008	BCMii	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta	1.5L	TiVCT	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.5L	TiVCT	2008	HVAC	●	●	●	●	○
Fiesta	1.5L	TiVCT	2008	IPC	●	●	●	●	0x0009
Fiesta	1.5L	TiVCT	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.5L	TiVCT	2008	RCM	●	●	●	○	0x00F0 0x0102
Fiesta	1.5L	TiVCT	2008	RFA	●	●	●	○	0x000A
Fiesta	1.5L	TiVCT	2008	SRM	●	●	●	○	○
Fiesta	1.5L	TiVCT	2008 - 2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Fiesta	1.5L	TiVCT	2008 - 2013	TCM	●	●	●	●	0x0117 0x0158
Fiesta	1.5L	TiVCT	2013	APIM	●	●	●	●	○
Fiesta	1.5L	Zetec-SE	2013	APIM	●	●	●	●	○
Fiesta	1.6L	DURATEC 16V	2002	TCM	●	●	●	●	○
Fiesta	1.6L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta	1.6L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	○
Fiesta	1.6L	DURATEC 16V	2002 - 2006	IC	●	●	●	●	○
Fiesta	1.6L	DURATEC 16V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta	1.6L	DURATEC 16V	2002 - 2006	RCM	●	●	●	●	○
Fiesta	1.6L	DURATEC 16V	2006	ACM	●	●	●	●	○
Fiesta	1.6L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fiesta	1.6L	DURATEC 16V	2006	SRM	●	●	●	●	○
Fiesta	1.6L	DURATEC VCT	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119
Fiesta	1.6L	DURATEC VCT	2008	ACM	●	●	●	●	○
Fiesta	1.6L	DURATEC VCT	2008	BCMii	●	●	●	●	○
Fiesta	1.6L	DURATEC VCT	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.6L	DURATEC VCT	2008	HVAC	●	●	●	●	○
Fiesta	1.6L	DURATEC VCT	2008	IPC	●	●	●	●	0x0009 0xF020
Fiesta	1.6L	DURATEC VCT	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.6L	DURATEC VCT	2008	RCM	●	●	●	○	0x00F0 0x0102
Fiesta	1.6L	DURATEC VCT	2008	RFA	●	●	●	○	0x000A
Fiesta	1.6L	DURATEC VCT	2008	SRM	●	●	●	○	○
Fiesta	1.6L	DURATEC VCT	2008 - 2013	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x00BC
Fiesta	1.6L	DURATEC VCT	2013	APIM	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	EPS	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	GEM	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	IC	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0092 0x0096 0x0097 0x0099 0x009A 0x00AD 0x00AE 0x0090 0x0098 0x00AA 0x00B0 0x00B1
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RCM	●	●	●	●	0x00F0 0x0102
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006	EATC	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2008	ACM	●	●	●	○	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2008	SRM	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	BCMii	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	HVAC	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	IPC	●	●	●	●	0x0009 0xF020
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	RFA	●	●	●	○	0x000A
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	ACM	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	BCMii	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	HVAC	●	●	●	●	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	IPC	●	●	●	●	0x0009 0xF020
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AF 0x00B0 0x00B1 0x00B2 0x00B8 0x00B9 0x00BD
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	RCM	●	●	●	○	0x00F0
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	RFA	●	●	●	○	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	SRM	●	●	●	○	○
Fiesta	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2013	APIM	●	●	●	●	○
Fiesta	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●	●	○
Fiesta	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	DDM	●	●	●	●	○
Fiesta	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	FCIM	●	●	●	○	○
Fiesta	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	GPSM	●	●	●	○	○
Fiesta	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	HVAC	●	●	●	●	○
Fiesta	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	RCM	●	●	●	○	○
Fiesta	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2014	RFA	●	●	●	○	○
Fiesta	1.6L	Sigma	2011 - 2012	ABS	●	●	●	●	0x0008 0x0012
Fiesta	1.6L	Sigma	2011 - 2012	ACM	●	●	●	○	○
Fiesta	1.6L	Sigma	2011 - 2012	APIM	●	●	●	●	○
Fiesta	1.6L	Sigma	2011 - 2012	BCM#1	●	●	●	●	○
Fiesta	1.6L	Sigma	2011 - 2012	FCDIM	●	●	●	●	○
Fiesta	1.6L	Sigma	2011 - 2012	GPSM	●	●	●	○	○
Fiesta	1.6L	Sigma	2011 - 2012	IPC	●	●	●	●	○
Fiesta	1.6L	Sigma	2011 - 2012	OCSM	●	●	●	○	0x000C
Fiesta	1.6L	Sigma	2011 - 2012	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x0096 0x0097 0x009A 0x012B 0x020A 0x0211
Fiesta	1.6L	Sigma	2011 - 2012	PSCM	●	●	●	○	0x00CB 0x00CC 0x011E
Fiesta	1.6L	Sigma	2011 - 2012	RCM	●	●	●	○	○
Fiesta	1.6L	Sigma	2011 - 2012	RFA	●	●	●	○	○
Fiesta	1.6L	Sigma	2011 - 2012	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
Fiesta	1.6L	Sigma	2011 - 2012	TCM	●	●	●	●	○
Fiesta	1.6L	Sigma	2011 - 2012	VSM	●	●	●	●	0x0042
Fiesta	1.6L	TDCi ECO II	2008	ABS	●	●	●	○	0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119
Fiesta	1.6L	TDCi ECO II	2008	ACM	●	●	●	●	○
Fiesta	1.6L	TDCi ECO II	2008	BCMii	●	●	●	●	○
Fiesta	1.6L	TDCi ECO II	2008	FCDIM	●	●	●	●	0x00E9
Fiesta	1.6L	TDCi ECO II	2008	HVAC	●	●	●	●	○
Fiesta	1.6L	TDCi ECO II	2008	IPC	●	●	●	●	0x0009
Fiesta	1.6L	TDCi ECO II	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AF 0x00B0 0x00B1 0x00B2 0x00B8 0x00BD 0x00C3
Fiesta	1.6L	TDCi ECO II	2008	PSCM	●	●	●	○	0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.6L	TDCi ECO II	2008	RCM	●	●	●	○	0x00F0 0x0102
Fiesta	1.6L	TDCi ECO II	2008	RFA	●	●	●	○	0x000A
Fiesta	1.6L	TDCi ECO II	2008	SRM	●	●	●	○	○
Fiesta	1.6L	TDCi ECO II	2013	APIM	●	●	●	●	○
Fiesta	1.6L	TivCT	2008	BCMii	●	●	●	○	○
Fiesta	1.6L	TivCT	2008	SRM	●	●	●	○	○
Fiesta	1.6L	TivCT	2008 - 2012	PSCM	●	●	●	○	0x00CB 0x00CC 0x011E 0x00D7 0x00D8 0x00DA 0x00DC
Fiesta	1.6L	TivCT	2008 - 2013	ABS	●	●	●	●	0x0008 0x0012 0x002B 0x002C 0x0054 0x00D9 0x00DB 0x00E8 0x0119

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta	1.6L	TiVCT	2008 – 2013	ACM	●	●	●	○	○
Fiesta	1.6L	TiVCT	2008 – 2013	FCDIM	●	●	●	●	0x00E9
Fiesta	1.6L	TiVCT	2008 – 2013	IPC	●	●	●	●	0x0009
Fiesta	1.6L	TiVCT	2008 – 2013	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0084 0x0023
Fiesta	1.6L	TiVCT	2008 – 2013	TCM	●	●	●	●	0x0117
Fiesta	1.6L	TiVCT	2008 – 2014	HVAC	●	●	●	●	○
Fiesta	1.6L	TiVCT	2008 – 2014	RCM	●	●	●	○	0x00F0 0x0102
Fiesta	1.6L	TiVCT	2008 – 2014	RFA	●	●	●	○	0x000A
Fiesta	1.6L	TiVCT	2011 – 2013	BCM#1	●	●	●	●	○
Fiesta	1.6L	TiVCT	2011 – 2013	OCSM	●	●	●	○	0x000C
Fiesta	1.6L	TiVCT	2011 – 2013	VSM	●	●	●	●	0x0042
Fiesta	1.6L	TiVCT	2011 – 2014	APIM	●	●	●	●	○
Fiesta	1.6L	TiVCT	2011 – 2014	GPSM	●	●	●	○	○
Fiesta	1.6L	TiVCT	2014	DDM	●	●	●	●	○
Fiesta	1.6L	TiVCT	2014	FCIM	●	●	●	○	○
Fiesta / Ikon	1.4 DV4	Duratorq Turbo Diesel Common Rail Injection	2006	ABS/TCS	●	●	●	●	0x0008
Fiesta / Ikon	1.4 DV4	Duratorq Turbo Diesel Common Rail Injection	2006	GEM	●	●	●	●	○
Fiesta / Ikon	1.4 DV4	Duratorq Turbo Diesel Common Rail Injection	2006	IC	●	●	●	●	○
Fiesta / Ikon	1.4 DV4	Duratorq Turbo Diesel Common Rail Injection	2006	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Fiesta / Ikon	1.4 DV4	Duratorq Turbo Diesel Common Rail Injection	2006	RCM	●	●	●	●	○
Fiesta / Ikon	1.4L	DURATEC 16V	2006	ABS/TCS	●	●	●	●	0x0008
Fiesta / Ikon	1.4L	DURATEC 16V	2006	GEM	●	●	●	●	○
Fiesta / Ikon	1.4L	DURATEC 16V	2006	IC	●	●	●	●	○
Fiesta / Ikon	1.4L	DURATEC 16V	2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Ikon	1.4L	DURATEC 16V	2006	RCM	●	●	●	●	○
Fiesta / Ikon	1.6L	DURATEC 16V	2006	ABS/TCS	●	●	●	●	0x0008
Fiesta / Ikon	1.6L	DURATEC 16V	2006	GEM	●	●	●	●	○
Fiesta / Ikon	1.6L	DURATEC 16V	2006	IC	●	●	●	●	○
Fiesta / Ikon	1.6L	DURATEC 16V	2006	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Fiesta / Ikon	1.6L	DURATEC 16V	2006	RCM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	HCS	1996 – 1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	HCS	1996 – 1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	HCS	1996 – 1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	HCS	1996 – 1999	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0023
Fiesta / Mazda 121 / Bantam	1.0L	HCS	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.0L	Zetec Rocam	1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 – 2000	ABS-TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 – 2000	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 – 2000	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1996 – 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1999 – 2000	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	1999 – 2000	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.25L	Zetec-SE	2000	PATS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 – 1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 – 1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 – 1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1996 – 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
Fiesta / Mazda 121 / Bantam	1.3L	Endura-E	1999	ECS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta / Mazda 121 / Bantam	1. 3L	Endura-E	1999	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	1. 4 PT-E SFI	1994 - 1996	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	1. 4 PT-E SFI	1994 - 1996	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	1. 4 PT-E SFI	1994 - 1996	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	PT-E	2000	PCM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1996 - 1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1996 - 1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1996 - 1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1996 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 4L	Zetec-SE	1999	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	PATS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Other	2001	PCM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec Rocam	1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 6L	Zetec-SE	2000	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	FIP	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	GEM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	PATS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura DI	2000	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	ECS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	HEC	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	PATS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Endura-DE	1996 - Other	PCM	○	○	●	○	○
Fiesta / Mazda 121 / Bantam	1. 8L	Zetec	1992 - 1994	ABS/TCS	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Zetec	1992 - 1994	CSM	●	●	●	●	○
Fiesta / Mazda 121 / Bantam	1. 8L	Zetec	1992 - 1994	HEC	●	●	●	●	○
Fiesta 3-Door	1. 25L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta 3-Door	1. 25L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	0x0005 0xF02D 0xF030 0xF0A2 0xF0B3

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta 3-Door	1.25L	DURATEC 16V	2002 - 2006	IC	●	●	●	●	0x0005 0xF020
Fiesta 3-Door	1.25L	DURATEC 16V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta 3-Door	1.25L	DURATEC 16V	2002 - 2006	RCM	●	●	●	●	○
Fiesta 3-Door	1.25L	DURATEC 16V	2006	ACM	●	●	●	●	○
Fiesta 3-Door	1.25L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fiesta 3-Door	1.25L	DURATEC 16V	2006	SRM	●	●	●	●	○
Fiesta 3-Door	1.3L	DURATEC 8V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta 3-Door	1.3L	DURATEC 8V	2002 - 2006	GEM	●	●	●	●	○
Fiesta 3-Door	1.3L	DURATEC 8V	2002 - 2006	IC	●	●	●	●	○
Fiesta 3-Door	1.3L	DURATEC 8V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta 3-Door	1.3L	DURATEC 8V	2002 - 2006	RCM	●	●	●	●	○
Fiesta 3-Door	1.3L	DURATEC 8V	2006	ACM	●	●	●	●	○
Fiesta 3-Door	1.3L	DURATEC 8V	2006	EATC	●	●	●	●	○
Fiesta 3-Door	1.3L	DURATEC 8V	2006	SRM	●	●	●	●	○
Fiesta 3-Door	1.4L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta 3-Door	1.4L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	0x0005 0xF02D 0xF030 0xF0A2 0xF0B3 0xF0B6
Fiesta 3-Door	1.4L	DURATEC 16V	2002 - 2006	IC	●	●	●	●	0x0005 0xF020 0xF063 0xF0B5 0xF0B7
Fiesta 3-Door	1.4L	DURATEC 16V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta 3-Door	1.4L	DURATEC 16V	2002 - 2006	RCM	●	●	●	●	○
Fiesta 3-Door	1.4L	DURATEC 16V	2002 - 2006	TCM	●	●	●	●	0x003F
Fiesta 3-Door	1.4L	DURATEC 16V	2006	ACM	●	●	●	●	0x0005
Fiesta 3-Door	1.4L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fiesta 3-Door	1.4L	DURATEC 16V	2006	SRM	●	●	●	●	0xF037 0xF038 0xF039
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	GEM	●	●	●	●	0xF02D 0xF030 0xF0A2 0xF0B3 0xF0B6 0xF0B7
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	IC	●	●	●	●	0xF020 0xF063 0xF0B5 0xF0B7
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	RCM	●	●	●	●	○
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	TCM	●	●	●	●	0x003F
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	0x0005
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006	EATC	●	●	●	●	○
Fiesta 3-Door	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	0xF037 0xF038 0xF039
Fiesta 3-Door	1.6L	DURATEC 16V	2002	TCM	●	●	●	●	○
Fiesta 3-Door	1.6L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta 3-Door	1.6L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	○
Fiesta 3-Door	1.6L	DURATEC 16V	2002 - 2006	IC	●	●	●	●	○
Fiesta 3-Door	1.6L	DURATEC 16V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta 3-Door	1.6L	DURATEC 16V	2002 - 2006	RCM	●	●	●	●	○
Fiesta 3-Door	1.6L	DURATEC 16V	2006	ACM	●	●	●	●	○
Fiesta 3-Door	1.6L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fiesta 3-Door	1.6L	DURATEC 16V	2006	SRM	●	●	●	●	○
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	EPS	●	●	●	●	○
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	GEM	●	●	●	●	○
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	IC	●	●	●	●	○
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0092 0x0096 0x0097 0x0099 0x009A 0x00AD 0x00AE
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	RCM	●	●	●	●	○
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006	EATC	●	●	●	●	○
Fiesta 3-Door	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
Fiesta 3-Door	2.0L	DURATEC-HE / I4	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fiesta 3-Door	2.0L	DURATEC-HE / I4	2002 - 2006	GEM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fiesta 3-Door	2.0L	DURATEC-HE / I4	2002 - 2006	IC	●	●	●	●	○
Fiesta 3-Door	2.0L	DURATEC-HE / I4	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fiesta 3-Door	2.0L	DURATEC-HE / I4	2002 - 2006	RCM	●	●	●	●	○
Fiesta 3-Door	2.0L	DURATEC-HE / I4	2006	ACM	●	●	●	●	○
Fiesta 3-Door	2.0L	DURATEC-HE / I4	2006	EATC	●	●	●	●	○
Fiesta 3-Door	2.0L	DURATEC-HE / I4	2006	SRM	●	●	●	●	○
Five Hundred	3.0L	4V	2006 - 2007	4X4	●	●	●	●	○
Five Hundred	3.0L	4V	2006 - 2007	ABS	●	●	●	●	0x0005 0xF046
Five Hundred	3.0L	4V	2006 - 2007	ACM	●	●	●	●	0x0005 0xF05A 0xF062 0xF063 0xF07F
Five Hundred	3.0L	4V	2006 - 2007	DSM	●	●	●	●	0x0005
Five Hundred	3.0L	4V	2006 - 2007	EATC	●	●	●	●	○
Five Hundred	3.0L	4V	2006 - 2007	GEM	●	●	●	●	0x0005 0xF042 0xF044 0xF048 0xF085
Five Hundred	3.0L	4V	2006 - 2007	IC	●	●	●	●	0x0005 0xF04D 0xF054 0xF099
Five Hundred	3.0L	4V	2006 - 2007	PAM	●	●	●	●	○
Five Hundred	3.0L	4V	2006 - 2007	PCM	●	●	●	●	0x0009 0x0023 0x0024 0x0080 0x0081 0x0082 0x0083 0x0084
Five Hundred	3.0L	4V	2006 - 2007	RCM	●	●	●	●	0x0005 0x006D 0xF05D
Five Hundred	3.0L	4V	2006 - 2007	RETM	●	●	●	●	○
Five Hundred	3.0L	4V	2006 - 2007	TCM	●	●	●	●	○
Five Hundred	3.0L	4V	2007	SDARS	●	●	●	●	○
Five Hundred (MY05) / Montego (MY05)	3.0L	4V	2005	4X4	●	●	●	●	○
Five Hundred (MY05) / Montego (MY05)	3.0L	4V	2005	ABS	●	●	●	●	0x0005 0xF046
Five Hundred (MY05) / Montego (MY05)	3.0L	4V	2005	ACM	●	●	●	●	0x0005 0xF05A 0xF062 0xF063 0xF07F
Five Hundred (MY05) / Montego (MY05)	3.0L	4V	2005	DSM	●	●	●	●	0x0005
Five Hundred (MY05) / Montego (MY05)	3.0L	4V	2005	EATC	●	●	●	●	○
Five Hundred (MY05) / Montego (MY05)	3.0L	4V	2005	GEM	●	●	●	●	○
Five Hundred (MY05) / Montego (MY05)	3.0L	4V	2005	IC	●	●	●	●	0x0005 0xF04D 0xF054 0xF099
Five Hundred (MY05) / Montego (MY05)	3.0L	4V	2005	PAM	●	●	●	●	○
Five Hundred (MY05) / Montego (MY05)	3.0L	4V	2005	PCM	●	●	●	●	0x0009 0x0023 0x0024 0x0080 0x0081 0x0082 0x0083 0x0084
Five Hundred (MY05) / Montego (MY05)	3.0L	4V	2005	RCM	●	●	●	●	0x0005 0x006D 0xF05D
Five Hundred (MY05) / Montego (MY05)	3.0L	4V	2005	RETM	●	●	●	●	○
Five Hundred (MY05) / Montego (MY05)	3.0L	4V	2005	TCM	●	●	●	●	○
Flex	3.5L	4V	2009	SECM	●	●	○	○	○
Flex	3.5L	4V	2009 - 2012	4X4	●	●	●	●	0x0108
Flex	3.5L	4V	2009 - 2012	ABS	●	●	●	●	0x0008 0x0012
Flex	3.5L	4V	2009 - 2012	ACM	●	●	●	●	0x0017 0x0018
Flex	3.5L	4V	2009 - 2012	APIM	●	●	●	●	0x0019 0x001C
Flex	3.5L	4V	2009 - 2012	DCSM	●	●	●	●	○
Flex	3.5L	4V	2009 - 2012	DSM	●	●	●	●	○
Flex	3.5L	4V	2009 - 2012	DSP	●	●	●	●	○
Flex	3.5L	4V	2009 - 2012	FCIM	●	●	●	●	○
Flex	3.5L	4V	2009 - 2012	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
Flex	3.5L	4V	2009 - 2012	HVAC	●	●	●	●	○
Flex	3.5L	4V	2009 - 2012	IC	●	●	●	●	0x0009
Flex	3.5L	4V	2009 - 2012	LTM	●	●	●	●	○
Flex	3.5L	4V	2009 - 2012	OCSM	●	●	●	○	0x000C 0x0015 0x006D
Flex	3.5L	4V	2009 - 2012	PAM	●	●	●	●	○
Flex	3.5L	4V	2009 - 2012	PCM	●	●	●	●	0x0024 0x0025 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0023 0x0028 0x0031 0x0033
Flex	3.5L	4V	2009 - 2012	RCM	●	●	●	●	○
Flex	3.5L	4V	2009 - 2012	RETM	●	●	●	●	○
Flex	3.5L	4V	2010 - 2011	C-CM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Flex	3.5L	4V	2010 - 2011	HUD	●	●	●	○	○
Flex	3.5L	4V	2010 - 2012	DDM	●	●	●	●	○
Flex	3.5L	4V	2010 - 2012	GPSM	●	●	●	○	○
Flex	3.5L	4V	2010 - 2012	HCM	●	●	●	●	○
Flex	3.5L	4V	2010 - 2012	HCM-2	●	●	●	●	○
Flex	3.5L	4V	2010 - 2012	ILCM	●	●	●	●	○
Flex	3.5L	4V	2010 - 2012	PSCM	●	●	●	○	○
Flex	3.5L	4V	2010 - 2012	SASM	●	●	●	●	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	4X4	●	●	●	●	0x0108
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	HCM-2	●	●	●	●	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	IC	●	●	●	●	0x0005
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	ILCM	●	●	●	●	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	RETM	●	●	●	●	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	SASM	●	●	●	●	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	C-CM	●	●	●	○	0x0046
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	DCSM	●	●	●	●	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	LTM	●	●	●	●	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	OCSM	●	●	●	●	0x000C 0x0015
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	ABS	●	●	●	●	0x0008 0x0012
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	ACM	●	●	●	●	0x0018 0x0017
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	APIM	●	●	●	●	0x0019 0x001C
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	DDM	●	●	●	●	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	DSM	●	●	●	●	0x0005
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	DSP	●	●	●	●	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	FCIM	●	●	●	●	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	GPSM	●	●	●	○	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	HCM	●	●	●	●	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	HUD	●	●	●	○	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	HVAC	●	●	●	●	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	PAM	●	●	●	○	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	PSCM	●	●	●	○	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	RCM	●	●	●	●	0x0005
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	○	0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	FCDIM	●	●	●	●	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPC	●	●	●	●	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RACM	●	●	●	●	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RFA	●	●	●	●	0x0064
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RTM	●	●	●	○	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SCCM	●	●	●	●	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-L	●	●	●	○	○
Flex	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-R	●	●	●	●	○
Flex	3.5L	TiVCT	2013	BCM#1	●	●	●	○	0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE
Flex	3.5L	TiVCT	2013	C-CM	●	●	●	○	0x0046
Flex	3.5L	TiVCT	2013	DCSM	●	●	●	●	○
Flex	3.5L	TiVCT	2013	FCDIM	●	●	●	●	○
Flex	3.5L	TiVCT	2013	IPC	●	●	●	●	0x00D0
Flex	3.5L	TiVCT	2013	LTM	●	●	●	●	○
Flex	3.5L	TiVCT	2013	OCSM	●	●	●	●	0x000C 0x0015

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Flex	3.5L	TiVCT	2013	PCM	●	●	●	●	0x0010 0x0024 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108
Flex	3.5L	TiVCT	2013 - 2014	ABS	●	●	●	●	0x0008
Flex	3.5L	TiVCT	2013 - 2014	ACM	●	●	●	●	0x0017 0x0018
Flex	3.5L	TiVCT	2013 - 2014	APIM	●	●	●	●	0x0019
Flex	3.5L	TiVCT	2013 - 2014	DDM	●	●	●	●	○
Flex	3.5L	TiVCT	2013 - 2014	DSM	●	●	●	●	○
Flex	3.5L	TiVCT	2013 - 2014	DSP	●	●	●	●	○
Flex	3.5L	TiVCT	2013 - 2014	FCIM	●	●	●	○	○
Flex	3.5L	TiVCT	2013 - 2014	GPSM	●	●	●	○	○
Flex	3.5L	TiVCT	2013 - 2014	HCM	●	●	●	●	○
Flex	3.5L	TiVCT	2013 - 2014	HUD	●	●	●	●	○
Flex	3.5L	TiVCT	2013 - 2014	HVAC	●	●	●	●	○
Flex	3.5L	TiVCT	2013 - 2014	PAM	●	●	●	○	○
Flex	3.5L	TiVCT	2013 - 2014	PSCM	●	●	●	○	○
Flex	3.5L	TiVCT	2013 - 2014	RACM	●	●	●	●	○
Flex	3.5L	TiVCT	2013 - 2014	RCM	●	●	●	●	○
Flex	3.5L	TiVCT	2013 - 2014	RFA	●	●	●	●	0x0064
Flex	3.5L	TiVCT	2013 - 2014	RTM	●	●	●	○	○
Flex	3.5L	TiVCT	2013 - 2014	SCCM	●	●	●	●	○
Flex	3.5L	TiVCT	2013 - 2014	SOD-L	●	●	●	○	○
Flex	3.5L	TiVCT	2013 - 2014	SOD-R	●	●	●	●	○
Flex	Other	Other	2012	4X4	●	●	●	●	○
Flex	Other	Other	2012	DCSM	●	●	●	●	○
Flex	Other	Other	2012	GEM / SJB	●	●	●	●	0x0042
Flex	Other	Other	2012	HCM-2	●	●	●	●	○
Flex	Other	Other	2012	IC	●	●	●	●	○
Flex	Other	Other	2012	IHCM	●	●	●	●	○
Flex	Other	Other	2012	LTM	●	●	●	●	○
Flex	Other	Other	2012	OCSM	●	●	●	●	○
Flex	Other	Other	2012	RTM	●	●	●	●	○
Flex	Other	Other	2012	SASM	●	●	●	●	○
Flex	Other	Other	2012 - 2014	ABS	●	●	●	●	○
Flex	Other	Other	2012 - 2014	ACM	●	●	●	●	○
Flex	Other	Other	2012 - 2014	APIM	●	●	●	●	○
Flex	Other	Other	2012 - 2014	DDM	●	●	●	●	○
Flex	Other	Other	2012 - 2014	DSM	●	●	●	●	○
Flex	Other	Other	2012 - 2014	DSP	●	●	●	●	○
Flex	Other	Other	2012 - 2014	FCIM	●	●	●	●	○
Flex	Other	Other	2012 - 2014	GPSM	●	●	●	●	○
Flex	Other	Other	2012 - 2014	HCM	●	●	●	●	○
Flex	Other	Other	2012 - 2014	HVAC	●	●	●	●	○
Flex	Other	Other	2012 - 2014	PAM	●	●	●	○	○
Flex	Other	Other	2012 - 2014	PSCM	●	●	●	○	○
Flex	Other	Other	2012 - 2014	RCM	●	●	●	●	○
Flex	Other	Other	2014	HUD	●	●	●	●	○
Flex	Other	Other	2014	RACM	●	●	●	●	○
Flex	Other	Other	2014	RFA	●	●	●	●	○
Flex	Other	Other	2014	RTM	●	●	●	○	○
Flex	Other	Other	2014	SCCM	●	●	●	●	○
Flex	Other	Other	2014	SOD-L	●	●	●	○	○
Flex	Other	Other	2014	SOD-R	●	●	●	●	○
Focus	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	ABS	●	●	●	○	0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0119

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	ACM	●	●	●	●	○
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	AHCM	●	●	●	○	0x00CF
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	APIM	●	●	●	●	○
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	BCMii	●	●	●	●	0x0009 0x00D5 0x0101
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	CCMii	●	●	●	●	0x00F9
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	DDM	●	●	●	○	0x0140
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	DSP	●	●	●	○	○
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	FCDIM	●	●	●	●	○
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	FCIM	●	●	●	●	○
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	FDSM	●	●	●	○	○
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	HCM	●	●	●	○	0x0032
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	HVAC	●	●	●	○	○
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	IPC	●	●	●	●	0xF020
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	IPM-A	●	●	●	○	0x00E5
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	IPM-B	●	●	●	○	○
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	PAM	●	●	●	○	○
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x00C3 0x0114
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	PDM	●	●	●	○	0x0141
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	PSCM	●	●	●	○	0x00DC 0x00DF 0x00E0 0x00E1
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	RCM	●	●	●	●	0x0102
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	RFA	●	●	●	○	○
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	SASM	●	●	●	○	○
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	SOD-L	●	●	●	●	○
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	SOD-R	●	●	●	●	○
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	SRM	●	●	●	●	○
Focus	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	TRM	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003	RL DCU	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003	RR DCU	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 – 2007	GDM	●	●	●	●	0x0100
Focus	1.4L	DURATEC 16V	2003 – 2007	NAV	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 – 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x002B 0x00EB 0x00EC
Focus	1.4L	DURATEC 16V	2003 – 2008	ACM	●	●	●	●	0x011A
Focus	1.4L	DURATEC 16V	2003 – 2008	CDP	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 – 2008	D DCU	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 – 2008	EATC	●	●	●	●	0x0005
Focus	1.4L	DURATEC 16V	2003 – 2008	FFH	●	●	●	●	0x002D 0x002F
Focus	1.4L	DURATEC 16V	2003 – 2008	GEM	●	●	●	●	0x00ED
Focus	1.4L	DURATEC 16V	2003 – 2008	HCM	●	●	●	●	0x0156 0x0155
Focus	1.4L	DURATEC 16V	2003 – 2008	IC	●	●	●	●	0x0009
Focus	1.4L	DURATEC 16V	2003 – 2008	PAM	●	●	●	●	0x0005
Focus	1.4L	DURATEC 16V	2003 – 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0025
Focus	1.4L	DURATEC 16V	2003 – 2008	P DCU	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 – 2008	RCM	●	●	●	●	0x00EA
Focus	1.4L	DURATEC 16V	2003 – 2008	RETM	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2003 – 2008	RKE	●	●	●	●	0x000A
Focus	1.4L	DURATEC 16V	2003 – 2008	SRM	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2008	CMR	●	●	●	●	○
Focus	1.4L	DURATEC 16V	2008	EPS	●	●	●	○	○
Focus	1.4L	Zetec-SE	1999	CSM	●	●	●	●	○
Focus	1.4L	Zetec-SE	1999	CTM	●	●	●	●	○
Focus	1.4L	Zetec-SE	1999 – 2002	ABS/TCS	●	●	●	●	0x00F1 0x0008 0x0012

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.4L	Zetec-SE	1999 - 2002	ECS	●	●	●	●	○
Focus	1.4L	Zetec-SE	1999 - 2002	HEC	●	●	●	●	○
Focus	1.4L	Zetec-SE	1999 - 2002	MC	●	●	●	●	○
Focus	1.4L	Zetec-SE	1999 - 2002	PATS	●	●	●	○	○
Focus	1.4L	Zetec-SE	1999 - 2002	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x000A 0x0084
Focus	1.4L	Zetec-SE	2002	EATC	●	●	●	●	○
Focus	1.4L	Zetec-SE	2002	GEM	●	●	●	●	○
Focus	1.4L	Zetec-SE	2002	HCM	●	●	●	●	0x0032
Focus	1.4L	Zetec-SE	2002	RCM	●	●	●	●	○
Focus	1.6L	BZ	2005	ABS	●	●	●	●	0x0012 0x0029 0x002A 0x002C 0x0054
Focus	1.6L	BZ	2005	D DCU	●	●	●	●	○
Focus	1.6L	BZ	2005	EATC	●	●	●	●	○
Focus	1.6L	BZ	2005	GEM	●	●	●	●	○
Focus	1.6L	BZ	2005	HCM	●	●	●	●	0x0155 0x0156
Focus	1.6L	BZ	2005	IC	●	●	●	●	0x0009
Focus	1.6L	BZ	2005	PAM	●	●	●	●	○
Focus	1.6L	BZ	2005	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00C5 0x00C6
Focus	1.6L	BZ	2005	P DCU	●	●	●	●	○
Focus	1.6L	BZ	2005	RCM	●	●	●	●	○
Focus	1.6L	BZ	2005	RL DCU	●	●	●	●	○
Focus	1.6L	BZ	2005	RR DCU	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2003	RL DCU	●	●	●	●	0x0005 0xF026
Focus	1.6L	DURATEC 16V	2003	RR DCU	●	●	●	●	0x0005 0xF026
Focus	1.6L	DURATEC 16V	2003 - 2007	GDM	●	●	●	●	0x0100 0x0005
Focus	1.6L	DURATEC 16V	2003 - 2007	NAV	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2003 - 2007	RETM	●	●	●	●	0x0005
Focus	1.6L	DURATEC 16V	2003 - 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x0005 0x002B 0x00EB 0x00EC
Focus	1.6L	DURATEC 16V	2003 - 2008	ACM	●	●	●	●	0x011A 0x0005
Focus	1.6L	DURATEC 16V	2003 - 2008	CDP	●	●	●	●	0x0005
Focus	1.6L	DURATEC 16V	2003 - 2008	D DCU	●	●	●	●	0xF026
Focus	1.6L	DURATEC 16V	2003 - 2008	EATC	●	●	●	●	0x0005
Focus	1.6L	DURATEC 16V	2003 - 2008	FFH	●	●	●	●	0x002D 0x002F
Focus	1.6L	DURATEC 16V	2003 - 2008	GEM	●	●	●	●	0x0005 0x00ED 0xF026 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF03B 0xF03C 0xF03D 0xF033 0xF034
Focus	1.6L	DURATEC 16V	2003 - 2008	HCM	●	●	●	●	0x0156 0x0005 0x0155
Focus	1.6L	DURATEC 16V	2003 - 2008	IC	●	●	●	●	0x0009 0xF01E 0xF020 0xF028 0xF032 0xF03E
Focus	1.6L	DURATEC 16V	2003 - 2008	PAM	●	●	●	●	0x0005
Focus	1.6L	DURATEC 16V	2003 - 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0025
Focus	1.6L	DURATEC 16V	2003 - 2008	P DCU	●	●	●	●	0x0005 0xF026
Focus	1.6L	DURATEC 16V	2003 - 2008	RCM	●	●	●	●	0xF027 0xF031
Focus	1.6L	DURATEC 16V	2003 - 2008	RKE	●	●	●	●	0x0005 0x000A
Focus	1.6L	DURATEC 16V	2003 - 2008	SRM	●	●	●	●	0xF037 0xF038 0xF039
Focus	1.6L	DURATEC 16V	2006 - 2008	FTCM	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2007	TCM	●	●	●	●	○
Focus	1.6L	DURATEC 16V	2008	EPS	●	●	●	○	0x0005
Focus	1.6L	DURATEC VCT	2003	RL DCU	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2003	RR DCU	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2003 - 2007	GDM	●	●	●	●	0x0100
Focus	1.6L	DURATEC VCT	2003 - 2007	NAV	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2003 - 2008	CDP	●	●	●	●	0x0005

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.6L	DURATEC VCT	2003 - 2008	D DCU	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2003 - 2008	EATC	●	●	●	●	0x0005
Focus	1.6L	DURATEC VCT	2003 - 2008	FFH	●	●	●	●	0x002D 0x002F
Focus	1.6L	DURATEC VCT	2003 - 2008	GEM	●	●	●	●	0x00ED 0x0005 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF033 0xF034 0xF035 0xF03A 0xF03B 0xF03C 0xF03D
Focus	1.6L	DURATEC VCT	2003 - 2008	IC	●	●	●	●	0x0009 0x0005 0xF01E 0xF020 0xF028 0xF032 0xF036 0xF03E
Focus	1.6L	DURATEC VCT	2003 - 2008	P DCU	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2003 - 2008	RETM	●	●	●	●	0x0005
Focus	1.6L	DURATEC VCT	2003 - 2008	RKE	●	●	●	●	0x000A 0x0005
Focus	1.6L	DURATEC VCT	2003 - 2011	ABS	●	●	●	○	0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0119 0x0008 0x0029 0x002A 0x0030 0x00DD 0x00DE 0x00EB 0x0005 0x00EC
Focus	1.6L	DURATEC VCT	2003 - 2011	ACM	●	●	●	●	0x0005
Focus	1.6L	DURATEC VCT	2003 - 2011	HCM	●	●	●	○	0x0032 0x0155 0x0156
Focus	1.6L	DURATEC VCT	2003 - 2011	PAM	●	●	●	○	0x0005
Focus	1.6L	DURATEC VCT	2003 - 2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00BC 0x0116 0x0117 0x0025
Focus	1.6L	DURATEC VCT	2003 - 2011	RCM	●	●	●	●	0x0102 0x00EA 0xF027 0xF031
Focus	1.6L	DURATEC VCT	2003 - 2011	SRM	●	●	●	●	0xF037 0xF038 0xF039
Focus	1.6L	DURATEC VCT	2008	CMR	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2008	EPS	●	●	●	○	0x0005
Focus	1.6L	DURATEC VCT	2011	AHCM	●	●	●	○	0x00CF
Focus	1.6L	DURATEC VCT	2011	APIM	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2011	BCM <i>i</i>	●	●	●	●	0x0009 0x00D5 0x0101
Focus	1.6L	DURATEC VCT	2011	CCM <i>i</i>	●	●	●	●	0x00F9
Focus	1.6L	DURATEC VCT	2011	DDM	●	●	●	○	0x00FB 0x0140
Focus	1.6L	DURATEC VCT	2011	DSP	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	FCDIM	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2011	FCIM	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2011	FDSM	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	HVAC	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	IPC	●	●	●	●	0xF020
Focus	1.6L	DURATEC VCT	2011	IPM-A	●	●	●	○	0x00E5
Focus	1.6L	DURATEC VCT	2011	IPM-B	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	PDM	●	●	●	○	0x00FC 0x0141
Focus	1.6L	DURATEC VCT	2011	PSCM	●	●	●	○	0x00DC 0x00DF 0x00E0 0x00E1
Focus	1.6L	DURATEC VCT	2011	RFA	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	SASM	●	●	●	○	○
Focus	1.6L	DURATEC VCT	2011	SOD-L	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2011	SOD-R	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2011	TCM	●	●	●	●	○
Focus	1.6L	DURATEC VCT	2011	TRM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003	RL DCU	●	●	●	●	0xF026
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003	RR DCU	●	●	●	●	0xF026
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2007	GDM	●	●	●	●	0x0005 0x0100
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2007	NAV	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	CDP	●	●	●	●	0x0005
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	D DCU	●	●	●	●	0x0005 0xF026
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	EATC	●	●	●	●	0x0005
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	EPS	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	FACM	●	●	●	●	0x0005 0x006B 0x0094 0x00A1
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	FFH	●	●	●	●	0x002D 0x002F

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	GEM	●	●	●	●	0x00ED 0xF026 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF03B 0xF03C 0xF03D
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	IC	●	●	●	●	0x0009 0xF01E 0xF020 0xF028 0xF032 0xF03E
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	P_DCU	●	●	●	●	0x0005 0xF026
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	RETM	●	●	●	●	0x0005
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	RKE	●	●	●	●	0x0005 0x000A
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	ABS	●	●	●	●	0x0005 0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB 0x00EC 0x0053 0x00D9 0x00DB 0x0119
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	ACM	●	●	●	●	0x0005
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	HCM	●	●	●	●	0x0005 0x0155 0x0156 0x0032
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	PAM	●	●	●	●	0x0005
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0096 0x0097 0x0098 0x0099 0x009A 0x020A 0x00B1 0x00B3 0x00B7 0x00B9 0x00BC 0x00BD 0x00C1 0x00C3
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	RCM	●	●	●	●	0xF027 0xF031 0x00EA 0x0102
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	SRM	●	●	●	●	0xF037 0xF038 0xF039
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	CMR	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	AHCM	●	●	●	○	0x00CF
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	APIM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	0x0009 0x00D5 0x0101
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	CCMii	●	●	●	●	0x00F9
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	○	0x0140
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	DSP	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	FCTM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	FDSM	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-A	●	●	●	○	0x00E5
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-B	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	○	0x0141
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	PSCM	●	●	●	○	0x00DC 0x00DF 0x00E0 0x00E1
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	RFA	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	SASM	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-L	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-R	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	ABS	●	●	●	●	0x0005 0x0008 0x0029 0x002A 0x002C 0x0030 0x00DD 0x00DE 0x00E8
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	ACM	●	●	●	●	0x0005 0x011A
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	CDP	●	●	●	●	0x0005
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	CMR	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	D DCU	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	EATC	●	●	●	●	0x0005
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	EPS	●	●	●	○	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	FFH	●	●	●	●	0x002D 0x002F
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	GEM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	HCM	●	●	●	○	0x0155 0x0156
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	IC	●	●	●	●	0x0009
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	PAM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	P DCU	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	RCM	●	●	●	●	0x00EA
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	RETM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	RKE	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	SRM	●	●	●	●	○
Focus	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	TCM	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	ABS	●	●	●	○	0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0119
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	ACM	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	AHCM	●	●	●	○	0x00CF
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	APIM	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	BCMii	●	●	●	●	0x0009 0x00D5 0x0101
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	CCMii	●	●	●	●	0x00F9
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	DDM	●	●	●	○	0x00FB 0x0140
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	DSP	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	FCDIM	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	FCIM	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	FDSM	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	HCM	●	●	●	○	0x0032
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	HVAC	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPC	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-A	●	●	●	○	0x00E5
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-B	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PAM	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x00C3 0x0114
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PDM	●	●	●	○	0x00FC 0x0141
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PSCM	●	●	●	○	0x00DC 0x00DF 0x00E0 0x00E1
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RCM	●	●	●	●	0x0102
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RFA	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SASM	●	●	●	○	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-L	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-R	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SRM	●	●	●	●	○
Focus	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	TRM	●	●	●	●	○
Focus	1.6L	FFV	2007 - 2009	ABS/TCS	●	●	●	●	0x0012 0x0008
Focus	1.6L	FFV	2007 - 2010	GEM	●	●	●	●	○
Focus	1.6L	FFV	2007 - 2010	IC	●	●	●	●	0x0009
Focus	1.6L	FFV	2007 - 2010	PCM	●	●	●	●	0x0009 0x000A 0x0025 0x0080 0x0081 0x0082 0x0083 0x0096 0x0097 0x009A 0x00AB 0x020A
Focus	1.6L	FFV	2007 - 2010	RCM	●	●	●	●	○
Focus	1.6L	FFV	2009	MC	●	●	●	●	○
Focus	1.6L	FFV	2009 - 2010	EATC	●	●	●	●	○
Focus	1.6L	FFV	2009 - 2010	HCM	●	●	●	●	0x0032 0x0155
Focus	1.6L	FFV	2010	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002C 0x0030 0x0053 0x00DD 0x00DE 0x00EB 0x00EC
Focus	1.6L	FFV	2010	ACM	●	●	●	●	○
Focus	1.6L	FFV	2010	D_DCU	●	●	●	●	○
Focus	1.6L	FFV	2010	EPS	●	●	●	○	○
Focus	1.6L	FFV	2010	PAM	●	●	●	●	○
Focus	1.6L	FFV	2010	P_DCU	●	●	●	●	○
Focus	1.6L	FFV	2010	RKE	●	●	●	●	○
Focus	1.6L	FFV	2010	SRM	●	●	●	●	○
Focus	1.6L	FFV	2010	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
Focus	1.6L	FFV	2010	TCM	●	●	●	●	0x0070 0x00C5

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.6L	OHC	2009	ABS/TCS	●	●	●	●	0x0012
Focus	1.6L	OHC	2009	EATC	●	●	●	●	○
Focus	1.6L	OHC	2009	GEM	●	●	●	●	○
Focus	1.6L	OHC	2009	HCM	●	●	●	●	0x0032
Focus	1.6L	OHC	2009	IC	●	●	●	●	○
Focus	1.6L	OHC	2009	MC	●	●	●	●	○
Focus	1.6L	OHC	2009	PCM	●	●	●	●	0x0009 0x000A 0x0025 0x0080 0x0081 0x0082 0x0083
Focus	1.6L	OHC	2009	RCM	●	●	●	●	○
Focus	1.6L	Sigma	2010	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002C 0x0030 0x0053 0x00DD 0x00DE 0x00EB 0x00EC
Focus	1.6L	Sigma	2010	ACM	●	●	●	●	○
Focus	1.6L	Sigma	2010	D DCU	●	●	●	●	○
Focus	1.6L	Sigma	2010	EATC	●	●	●	●	○
Focus	1.6L	Sigma	2010	EPS	●	●	●	○	○
Focus	1.6L	Sigma	2010	GEM	●	●	●	○	○
Focus	1.6L	Sigma	2010	HCM	●	●	●	○	0x0155
Focus	1.6L	Sigma	2010	IC	●	●	●	●	0x0009
Focus	1.6L	Sigma	2010	PAM	●	●	●	●	○
Focus	1.6L	Sigma	2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0096 0x0097 0x009A 0x00AB 0x020A
Focus	1.6L	Sigma	2010	P DCU	●	●	●	●	○
Focus	1.6L	Sigma	2010	RCM	●	●	●	●	○
Focus	1.6L	Sigma	2010	RKE	●	●	●	●	○
Focus	1.6L	Sigma	2010	SRM	●	●	●	●	○
Focus	1.6L	Sigma	2010	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
Focus	1.6L	Sigma	2010	TCM	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	ABS	●	●	●	○	0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0119
Focus	1.6L	TDCi ECO III	2011	ACM	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	AHCM	●	●	●	○	0x00CF
Focus	1.6L	TDCi ECO III	2011	APIM	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	BCMii	●	●	●	●	0x0009 0x00D5 0x0101
Focus	1.6L	TDCi ECO III	2011	CCMii	●	●	●	●	0x00F9
Focus	1.6L	TDCi ECO III	2011	DDM	●	●	●	○	0x0140
Focus	1.6L	TDCi ECO III	2011	DSP	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	FCDIM	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	FCIM	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	FDSM	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	HCM	●	●	●	○	0x0032
Focus	1.6L	TDCi ECO III	2011	HVAC	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	IPC	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	IPM-A	●	●	●	○	0x00E5
Focus	1.6L	TDCi ECO III	2011	IPM-B	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	PAM	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0098 0x00AF 0x00B0 0x00B2 0x00B8 0x00BD 0x00C3
Focus	1.6L	TDCi ECO III	2011	PDM	●	●	●	○	0x0141
Focus	1.6L	TDCi ECO III	2011	PSCM	●	●	●	○	0x00DC 0x00DF 0x00E0 0x00E1
Focus	1.6L	TDCi ECO III	2011	RCM	●	●	●	●	0x0102
Focus	1.6L	TDCi ECO III	2011	RFA	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	SASM	●	●	●	○	○
Focus	1.6L	TDCi ECO III	2011	SOD-L	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	SOD-R	●	●	●	●	○
Focus	1.6L	TDCi ECO III	2011	SRM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.6L	TDCi ECO III	2011	TRM	●	●	●	●	○
Focus	1.6L	Zetec	1999	CSM	●	●	●	●	○
Focus	1.6L	Zetec	1999	CTM	●	●	●	●	○
Focus	1.6L	Zetec	1999	PATS	●	●	●	○	○
Focus	1.6L	Zetec	1999 – 2002	ABS/TCS	●	●	●	●	0x00F1 0x0008 0x0012
Focus	1.6L	Zetec	1999 – 2002	ECS	●	●	●	●	○
Focus	1.6L	Zetec	1999 – 2002	HEC	●	●	●	●	○
Focus	1.6L	Zetec	1999 – 2002	PCM	●	●	●	●	0x0009 0x000A 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
Focus	1.6L	Zetec	2002	EATC	●	●	●	●	○
Focus	1.6L	Zetec	2002	GEM	●	●	●	●	○
Focus	1.6L	Zetec	2002	HCM	●	●	●	●	0x0032
Focus	1.6L	Zetec	2002	MC	●	●	●	●	○
Focus	1.6L	Zetec	2002	RCM	●	●	●	●	○
Focus	1.6L	Zetec Rocam	2002	ABS/TCS	●	●	●	●	0x0008 0x0012
Focus	1.6L	Zetec Rocam	2002	EATC	●	●	●	●	○
Focus	1.6L	Zetec Rocam	2002	ECS	●	●	●	●	○
Focus	1.6L	Zetec Rocam	2002	GEM	●	●	●	●	○
Focus	1.6L	Zetec Rocam	2002	HCM	●	●	●	●	0x0032
Focus	1.6L	Zetec Rocam	2002	HEC	●	●	●	●	○
Focus	1.6L	Zetec Rocam	2002	MC	●	●	●	●	○
Focus	1.6L	Zetec Rocam	2002	PCM	●	●	●	●	0x0009 0x000A 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
Focus	1.6L	Zetec Rocam	2002	RCM	●	●	●	●	○
Focus	1.6L	Zetec-SE	1999	CSM	●	●	●	●	○
Focus	1.6L	Zetec-SE	1999	CTM	●	●	●	●	○
Focus	1.6L	Zetec-SE	1999 – 2002	ABS/TCS	●	●	●	●	0x00F1 0x0008 0x0012
Focus	1.6L	Zetec-SE	1999 – 2002	ECS	●	●	●	●	○
Focus	1.6L	Zetec-SE	1999 – 2002	HEC	●	●	●	●	○
Focus	1.6L	Zetec-SE	1999 – 2002	MC	●	●	●	●	○
Focus	1.6L	Zetec-SE	1999 – 2002	PATS	●	●	●	○	○
Focus	1.6L	Zetec-SE	1999 – 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x000A 0x0084
Focus	1.6L	Zetec-SE	2002	EATC	●	●	●	●	○
Focus	1.6L	Zetec-SE	2002	GEM	●	●	●	●	○
Focus	1.6L	Zetec-SE	2002	HCM	●	●	●	●	0x0032
Focus	1.6L	Zetec-SE	2002	RCM	●	●	●	●	○
Focus	1.8L	DURATEC-HE / I4	2003 – 2005	RL DCU	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 – 2005	RR DCU	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 – 2007	GDM	●	●	●	●	0x0100
Focus	1.8L	DURATEC-HE / I4	2003 – 2007	NAV	●	●	●	●	○
Focus	1.8L	DURATEC-HE / I4	2003 – 2007	TCM	●	●	●	●	○
Focus	1.8L	DURATEC-HE / I4	2003 – 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x0005 0x0012 0x0054 0x00DD 0x00DE 0x00EB 0x00EC
Focus	1.8L	DURATEC-HE / I4	2003 – 2008	ACM	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 – 2008	CDP	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 – 2008	D DCU	●	●	●	●	0x0005 0xF026
Focus	1.8L	DURATEC-HE / I4	2003 – 2008	EATC	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 – 2008	EPS	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 – 2008	FFH	●	●	●	●	0x002D 0x002F
Focus	1.8L	DURATEC-HE / I4	2003 – 2008	GEM	●	●	●	●	0x0005 0x00ED 0xF025 0xF026 0xF02B 0xF02C 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF033 0xF034 0xF03B 0xF03C 0xF03D

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	HCM	●	●	●	●	0x0155 0x0156 0x0005
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	IC	●	●	●	●	0x0009 0x0005 0xF01E 0xF020 0xF028 0xF029 0xF032 0xF03E 0xF03F 0xF040 0xF036
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	PAM	●	●	●	●	○
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	P_DCU	●	●	●	●	0x0005 0xF026
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	RCM	●	●	●	●	0x0005 0xF027 0xF031 0x00EA
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	RETM	●	●	●	●	0x0005
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	RKE	●	●	●	●	0x000A
Focus	1.8L	DURATEC-HE / I4	2003 - 2008	SRM	●	●	●	●	0xF037 0xF038 0xF039
Focus	1.8L	DURATEC-HE / I4	2008	CMR	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001	CSM	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001	CTM	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2002	ABS/TCS	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2002	ECS	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2002	HEC	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2002	ICU	○	○	●	○	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2002	MC	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2008	FFH	●	●	●	●	0x002D 0x002F
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2008	PCM	●	●	●	●	0x006F 0x0080 0x0081 0x0082 0x0083 0x00B4
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	EATC	●	●	●	●	0x0005
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	GEM	●	●	●	●	0x00ED 0x0005 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF033 0xF034 0xF035 0xF03A 0xF03B 0xF03C 0xF03D
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	HCM	●	●	●	●	0x0155 0x0156
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RCM	●	●	●	●	0x00EA 0xF027 0xF031
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003	RL_DCU	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003	RR_DCU	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2007	GDM	●	●	●	●	0x0100
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2007	NAV	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB 0x00EC 0x0005
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	ACM	●	●	●	●	0x0005
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	CDP	●	●	●	●	0x0005
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	D_DCU	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	EPS	●	●	●	●	0x0005
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	IC	●	●	●	●	0x0009 0x0005 0xF01E 0xF020 0xF028 0xF032 0xF036 0xF03E
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	PAM	●	●	●	●	0x0005
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	P_DCU	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	RETM	●	●	●	●	0x0005
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	RKE	●	●	●	●	0x000A 0x0005
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	SRM	●	●	●	●	0xF037 0xF038 0xF039
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008	CMR	●	●	●	●	○
Focus	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008	FACM	●	●	●	●	0x0005 0x006B
Focus	1.8L	Endura DI	1999	CSM	●	●	●	●	○
Focus	1.8L	Endura DI	1999	CTM	●	●	●	●	○
Focus	1.8L	Endura DI	1999 - 2002	ABS/TCS	●	●	●	●	0x00F1 0x0008 0x0012
Focus	1.8L	Endura DI	1999 - 2002	ECS	●	●	●	●	○
Focus	1.8L	Endura DI	1999 - 2002	FFH	●	●	●	●	0x00CF
Focus	1.8L	Endura DI	1999 - 2002	FIP	●	●	●	●	○
Focus	1.8L	Endura DI	1999 - 2002	HEC	●	●	●	●	○
Focus	1.8L	Endura DI	1999 - 2002	MC	●	●	●	●	○
Focus	1.8L	Endura DI	1999 - 2002	PATS	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	1.8L	Endura DI	1999 - 2002	PCM	●	●	●	●	0x0009 0x000A 0x0080 0x0081 0x0082 0x0083
Focus	1.8L	Endura DI	2002	EATC	●	●	●	●	○
Focus	1.8L	Endura DI	2002	GEM	●	●	●	●	○
Focus	1.8L	Endura DI	2002	HCM	●	●	●	●	0x0032
Focus	1.8L	Endura DI	2002	RCM	●	●	●	●	○
Focus	1.8L	Zetec	1999	CSM	●	●	●	●	○
Focus	1.8L	Zetec	1999	CTM	●	●	●	●	○
Focus	1.8L	Zetec	1999	PATS	●	●	●	○	○
Focus	1.8L	Zetec	1999 - 2002	ABS/TCS	●	●	●	●	0x00F1
Focus	1.8L	Zetec	1999 - 2002	ECS	●	●	●	●	○
Focus	1.8L	Zetec	1999 - 2002	HEC	●	●	●	●	○
Focus	1.8L	Zetec	1999 - 2002	MC	●	●	●	●	○
Focus	1.8L	Zetec	1999 - 2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0084 0x0009 0x0023 0x0025
Focus	1.8L	Zetec	2002	AFCM	●	●	●	●	○
Focus	1.8L	Zetec	2002	EATC	●	●	●	●	○
Focus	1.8L	Zetec	2002	GEM	●	●	●	●	○
Focus	1.8L	Zetec	2002	HCM	●	●	●	●	○
Focus	1.8L	Zetec	2002	RCM	●	●	●	●	○
Focus	2.0L	DURATEC 16V	2005	ABS/TCS	●	●	●	●	0x0008 0x0012
Focus	2.0L	DURATEC 16V	2005	EATC	●	●	●	●	○
Focus	2.0L	DURATEC 16V	2005	GEM	●	●	●	●	○
Focus	2.0L	DURATEC 16V	2005	HCM	●	●	●	●	0x0032
Focus	2.0L	DURATEC 16V	2005	IC	●	●	●	●	○
Focus	2.0L	DURATEC 16V	2005	MC	●	●	●	●	○
Focus	2.0L	DURATEC 16V	2005	PCM	●	●	●	●	0x0009 0x000A 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Focus	2.0L	DURATEC 16V	2005	RCM	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2003	RL DCU	●	●	●	●	0x0005 0xF026
Focus	2.0L	DURATEC-HE / I4	2003	RR DCU	●	●	●	●	0x0005 0xF026
Focus	2.0L	DURATEC-HE / I4	2003 - 2007	GDM	●	●	●	●	0x0100
Focus	2.0L	DURATEC-HE / I4	2003 - 2007	NAV	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2003 - 2007	RETM	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	CDP	●	●	●	●	0x0005
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	D DCU	●	●	●	●	0x0005 0xF026
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	EATC	●	●	●	●	0x0005
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	EPS	●	●	●	●	0x0005
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	FFH	●	●	●	●	0x002D 0x002F
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	GEM	●	●	●	●	0x000A 0x0005 0x00ED 0xF025 0xF026 0xF02A 0xF02B 0xF02C 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF031 0xF034 0xF03B 0xF03C 0xF03D
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	HCM	●	●	●	●	0x0005 0x0155 0x0156
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	PAM	●	●	●	●	0x0005
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	P DCU	●	●	●	●	0x0005 0xF026
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	RKE	●	●	●	●	0x000A 0x0005
Focus	2.0L	DURATEC-HE / I4	2003 - 2008	SRM	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2003 - 2011	ABS	●	●	●	●	0x0008 0x0012 0x0029 0x002A 0x002B 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x00EB 0x00EC 0x0005
Focus	2.0L	DURATEC-HE / I4	2003 - 2011	ACM	●	●	●	●	0x0005 0x0017 0x0018 0xF021 0xF05A 0xF078 0xF079 0xF07A 0xF07B 0xF07C 0xF07D
Focus	2.0L	DURATEC-HE / I4	2003 - 2011	IC	●	●	●	●	0x0009 0x0005 0xF027 0xF020
Focus	2.0L	DURATEC-HE / I4	2003 - 2011	PCM	●	●	●	●	0x0009 0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	2.0L	DURATEC-HE / I4	2003 - 2011	RCM	●	●	●	●	0x000C 0x0005 0xF027 0xF031 0xF022 0xF05D
Focus	2.0L	DURATEC-HE / I4	2006 - 2008	FTCM	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2008	SDARS	●	●	●	●	0xF062
Focus	2.0L	DURATEC-HE / I4	2008 - 2011	APIM	●	●	●	○	0x0019 0x001C
Focus	2.0L	DURATEC-HE / I4	2008 - 2011	FCIM	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2008 - 2011	FDIM	●	●	●	●	0x0005 0xF05A 0xF078
Focus	2.0L	DURATEC-HE / I4	2008 - 2011	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0xF042 0xF04B 0xF04C
Focus	2.0L	DURATEC-HE / I4	2008 - 2011	HVAC	●	●	●	●	○
Focus	2.0L	DURATEC-HE / I4	2008 - 2011	OCSM	●	●	●	○	0x000C 0x006D
Focus	2.0L	DURATEC-HE / I4	2010 - 2011	GPSM	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2005	RL DCU	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2005	RR DCU	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2007	GDM	●	●	●	●	0x0005 0x0100
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2007	NAV	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2007	RETM	●	●	●	●	0x0005
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	CDP	●	●	●	●	0x0005
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	D DCU	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	EATC	●	●	●	●	0x0005
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	EPS	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	FACM	●	●	●	●	0x0005 0x006B 0x0094 0x00A1
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	FFH	●	●	●	●	0x002D 0x002F
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	GEM	●	●	●	●	0x0005 0x00ED 0xF026 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF03B 0xF03C 0xF03D
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	IC	●	●	●	●	0x0009
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	P DCU	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2008	RKE	●	●	●	●	0x0005 0x000A
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	ABS	●	●	●	○	0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0119 0x0005 0x0008 0x0029 0x002A 0x0030 0x00DD 0x00DE 0x00EB 0x00EC 0x0012 0x0054
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	ACM	●	●	●	●	0x0005
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	HCM	●	●	●	○	0x0032 0x0155 0x0156
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	PAM	●	●	●	○	0x0005
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00A4 0x00B0 0x00B1 0x00B3 0x00B7 0x00B8 0x00B9 0x00BC 0x00BF 0x00C1 0x00E7 0x0115 0x0116 0x013B 0x00AB
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	RCM	●	●	●	●	0x0102 0xF027 0xF031
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2003 - 2011	SRM	●	●	●	●	0xF037 0xF039 0xF03F
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2008	FTCM	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	AHCM	●	●	●	○	0x00CF
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	APIM	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	0x0009 0x00D5 0x0101
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	CCMii	●	●	●	●	0x00F9
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	○	0x0140
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	DSP	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	FCIM	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	FDSM	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-A	●	●	●	○	0x00E5
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-B	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	○	0x0141

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	PSCM	●	●	●	○	0x00DC 0x00DF 0x00E0 0x00E1
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	RFA	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SASM	●	●	●	○	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-L	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-R	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	●	●	●	●	○
Focus	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	AHCM	●	●	●	○	0x00CF
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	BCMii	●	●	●	●	0x0009 0x00D5 0x0101
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	CCMii	●	●	●	●	0x00F9
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	FDSM	●	●	●	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-A	●	●	●	○	0x00E5
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-L	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-R	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	SRM	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	TRM	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	ACM	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	FCDIM	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	IPC	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	IPM-B	●	●	●	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	PCM	●	●	●	●	0x0024 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	PSCM	●	●	●	○	0x00CB 0x00CC 0x00DC 0x00DF 0x00E0 0x00E1
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	ABS	●	●	●	○	0x0012 0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0119
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	APTM	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	DDM	●	●	●	●	0x0140
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	DSP	●	●	●	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	FCIM	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	HCM	●	●	●	●	0x0032
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	HVAC	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	ICM#1	●	●	●	●	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	PAM	●	●	○	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	PDM	●	●	●	●	0x0141
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	RCM	●	●	●	○	0x0102
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	RFA	●	●	●	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	SASM	●	●	●	○	○
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	●	0x00D5 0x0101
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	OCSM	●	●	●	●	0x000C
Focus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	GPSM	●	●	●	○	○
Focus	2.0L	FFV	2010	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002C 0x0030 0x0053 0x00DD 0x00DE 0x00EB 0x00EC
Focus	2.0L	FFV	2010	ACM	●	●	●	●	○
Focus	2.0L	FFV	2010	D DCU	●	●	●	●	○
Focus	2.0L	FFV	2010	EATC	●	●	●	●	○
Focus	2.0L	FFV	2010	EPS	●	●	●	○	○
Focus	2.0L	FFV	2010	GEM	●	●	●	●	○
Focus	2.0L	FFV	2010	HCM	●	●	●	○	0x0155
Focus	2.0L	FFV	2010	IC	●	●	●	●	0x0009
Focus	2.0L	FFV	2010	PAM	●	●	●	●	○
Focus	2.0L	FFV	2010	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0096 0x0097 0x009A 0x00AB 0x020A
Focus	2.0L	FFV	2010	P DCU	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	2.0L	FFV	2010	RCM	●	●	●	●	○
Focus	2.0L	FFV	2010	RKE	●	●	●	●	○
Focus	2.0L	FFV	2010	SRM	●	●	●	●	○
Focus	2.0L	FFV	2010	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
Focus	2.0L	FFV	2010	TCM	●	●	●	●	0x0070 0x00C5
Focus	2.0L	Gasoline Direct injection	2011	ABS	●	●	●	○	0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0119
Focus	2.0L	Gasoline Direct injection	2011	AHCM	●	●	●	○	0x00CF
Focus	2.0L	Gasoline Direct injection	2011	APIM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	CCMi i	●	●	●	●	0x00F9
Focus	2.0L	Gasoline Direct injection	2011	DDM	●	●	●	○	0x0140
Focus	2.0L	Gasoline Direct injection	2011	DSP	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	FCDIM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	FCIM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	FDSM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	HCM	●	●	●	○	0x0032
Focus	2.0L	Gasoline Direct injection	2011	HVAC	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	IPM-A	●	●	●	○	0x00E5
Focus	2.0L	Gasoline Direct injection	2011	IPM-B	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	PAM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Focus	2.0L	Gasoline Direct injection	2011	PDM	●	●	●	○	0x0141
Focus	2.0L	Gasoline Direct injection	2011	PSCM	●	●	●	○	0x00DC 0x00DF 0x00E0 0x00E1
Focus	2.0L	Gasoline Direct injection	2011	RCM	●	●	●	●	0x0102
Focus	2.0L	Gasoline Direct injection	2011	RFA	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	SASM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	SOD-L	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	SOD-R	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	SRM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	TCM	●	●	●	●	0x0117
Focus	2.0L	Gasoline Direct injection	2011	TRM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	ACM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	AHCM	●	●	●	○	0x00CF
Focus	2.0L	Gasoline Direct injection	2011	BCM i i	●	●	●	●	0x0009 0x00D5 0x0101
Focus	2.0L	Gasoline Direct injection	2011	CCMi i	●	●	●	●	0x00F9
Focus	2.0L	Gasoline Direct injection	2011	FCDIM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	FDSM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	HCM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011	IPM-A	●	●	●	○	0x00E5
Focus	2.0L	Gasoline Direct injection	2011	PCM	●	●	●	●	0x0067 0x0080 0x0081 0x0082 0x0083 0x0115 0x0116
Focus	2.0L	Gasoline Direct injection	2011	SOD-L	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	SOD-R	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	SRM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011	TRM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011 - 2012	IPC	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011 - 2012	IPM-B	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011 - 2012	PSCM	●	●	●	○	0x00DC 0x00DF 0x00E0 0x00E1
Focus	2.0L	Gasoline Direct injection	2011 - 2012	TCM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011 - 2014	ABS	●	●	●	○	0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0119 0x0012
Focus	2.0L	Gasoline Direct injection	2011 - 2014	APIM	●	●	●	●	○
Focus	2.0L	Gasoline Direct injection	2011 - 2014	DDM	●	●	●	○	0x0140
Focus	2.0L	Gasoline Direct injection	2011 - 2014	DSP	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011 - 2014	FCIM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	2.0L	Gasoline Direct injection	2011 - 2014	HVAC	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011 - 2014	PAM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011 - 2014	PDM	●	●	●	○	0x0141
Focus	2.0L	Gasoline Direct injection	2011 - 2014	RCM	●	●	●	●	0x0102
Focus	2.0L	Gasoline Direct injection	2011 - 2014	RFA	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2011 - 2014	SASM	●	●	●	○	○
Focus	2.0L	Gasoline Direct injection	2012 - 2014	GPSM	●	●	●	○	○
Focus	2.0L	SPI	2000	CSM	●	●	●	●	○
Focus	2.0L	SPI	2000	CTM	●	●	●	●	0x000A
Focus	2.0L	SPI	2000 - 2002	ECS	●	●	●	●	○
Focus	2.0L	SPI	2000 - 2004	ABS/TCS	●	●	●	●	0x0008 0x0012
Focus	2.0L	SPI	2000 - 2004	HEC	●	●	●	●	○
Focus	2.0L	SPI	2000 - 2004	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x000A 0x0024
Focus	2.0L	SPI	2002	EATC	●	●	●	●	○
Focus	2.0L	SPI	2002	HCM	●	●	●	●	0x0032
Focus	2.0L	SPI	2002	MC	●	●	●	●	○
Focus	2.0L	SPI	2002 - 2004	GEM	●	●	●	●	0x000A
Focus	2.0L	SPI	2002 - 2004	RCM	●	●	●	●	○
Focus	2.0L	ZETEC ST	2002	EATC	●	●	●	●	○
Focus	2.0L	ZETEC ST	2002	ECS	●	●	●	●	○
Focus	2.0L	ZETEC ST	2002	HCM	●	●	●	●	0x0032
Focus	2.0L	ZETEC ST	2002	MC	●	●	●	●	○
Focus	2.0L	ZETEC ST	2002 - 2004	ABS/TCS	●	●	●	●	0x0008 0x0012
Focus	2.0L	ZETEC ST	2002 - 2004	GEM	●	●	●	●	0x000A
Focus	2.0L	ZETEC ST	2002 - 2004	HEC	●	●	●	●	○
Focus	2.0L	ZETEC ST	2002 - 2004	PCM	●	●	●	●	0x0009 0x000A 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024
Focus	2.0L	ZETEC ST	2002 - 2004	RCM	●	●	●	●	○
Focus	2.0L	Zetec	1999	PATS	●	●	●	○	○
Focus	2.0L	Zetec	1999 - 2000	CSM	●	●	●	●	○
Focus	2.0L	Zetec	1999 - 2000	CTM	●	●	●	●	0x000A
Focus	2.0L	Zetec	1999 - 2002	ECS	●	●	●	●	○
Focus	2.0L	Zetec	1999 - 2002	MC	●	●	●	●	○
Focus	2.0L	Zetec	1999 - 2004	ABS/TCS	●	●	●	●	0x00F1 0x0008 0x0012
Focus	2.0L	Zetec	1999 - 2004	HEC	●	●	●	●	0x0005
Focus	2.0L	Zetec	1999 - 2004	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024
Focus	2.0L	Zetec	2002	EATC	●	●	●	●	○
Focus	2.0L	Zetec	2002	HCM	●	●	●	●	○
Focus	2.0L	Zetec	2002 - 2004	GEM	●	●	●	●	0x0005 0xF02D 0xF02F 0xF030 0xF03A 0xF09E 0xF0A1 0xF0A4 0x000A
Focus	2.0L	Zetec	2002 - 2004	RCM	●	●	●	●	0x0005
Focus	2.3L	DURATEC-HE / I4	2003 - 2004	ABS/TCS	●	●	●	●	0x0008 0x0012
Focus	2.3L	DURATEC-HE / I4	2003 - 2007	GEM	●	●	●	●	0x000A
Focus	2.3L	DURATEC-HE / I4	2003 - 2007	IC	●	●	●	●	○
Focus	2.3L	DURATEC-HE / I4	2003 - 2007	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024
Focus	2.3L	DURATEC-HE / I4	2003 - 2007	RCM	●	●	●	●	0x000C
Focus	2.3L	DURATEC-HE / I4	2004	HEC	●	●	●	●	○
Focus	2.3L	DURATEC-HE / I4	2005 - 2007	ABS	●	●	●	●	0x0008 0x0012
Focus	2.5L	Duratec RS	2008	ABS	●	●	●	●	0x0005 0x0008 0x0029 0x002A 0x00EB 0x00EC
Focus	2.5L	Duratec RS	2008	ACM	●	●	●	●	0x0005

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	2.5L	Duratec RS	2008	CDP	●	●	●	●	0x0005
Focus	2.5L	Duratec RS	2008	CMR	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	D_DCU	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	EATC	●	●	●	●	0x0005
Focus	2.5L	Duratec RS	2008	EPS	●	●	●	○	0x0005
Focus	2.5L	Duratec RS	2008	FFH	●	●	●	●	0x002D 0x002F
Focus	2.5L	Duratec RS	2008	GEM	●	●	●	●	0x0005 0x00ED 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF033 0xF034 0xF035 0xF03A 0xF03B 0xF03C 0xF03D
Focus	2.5L	Duratec RS	2008	HCM	●	●	●	○	0x0155 0x0156
Focus	2.5L	Duratec RS	2008	IC	●	●	●	●	0x0005 0x0009 0x0113 0xF01E 0xF020 0xF028 0xF032 0xF036 0xF03E
Focus	2.5L	Duratec RS	2008	MC	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	PAM	●	●	●	●	0x0005
Focus	2.5L	Duratec RS	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Focus	2.5L	Duratec RS	2008	P_DCU	●	●	●	●	○
Focus	2.5L	Duratec RS	2008	RCM	●	●	●	●	0x00EA 0xF027 0xF031
Focus	2.5L	Duratec RS	2008	RETM	●	●	●	●	0x0005
Focus	2.5L	Duratec RS	2008	RKE	●	●	●	●	0x0005
Focus	2.5L	Duratec RS	2008	SRM	●	●	●	●	○
Focus	2.5L	I5	2003	RL_DCU	●	●	●	●	○
Focus	2.5L	I5	2003	RR_DCU	●	●	●	●	○
Focus	2.5L	I5	2003 – 2007	GDM	●	●	●	●	○
Focus	2.5L	I5	2003 – 2007	NAV	●	●	●	●	○
Focus	2.5L	I5	2003 – 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x00EB 0x00EC
Focus	2.5L	I5	2003 – 2008	ACM	●	●	●	●	0x011A 0x0005
Focus	2.5L	I5	2003 – 2008	CDP	●	●	●	●	0x0005
Focus	2.5L	I5	2003 – 2008	D_DCU	●	●	●	●	○
Focus	2.5L	I5	2003 – 2008	EATC	●	●	●	●	0x0005
Focus	2.5L	I5	2003 – 2008	EPS	●	●	●	○	0x0005
Focus	2.5L	I5	2003 – 2008	FFH	●	●	●	●	0x002D 0x002F
Focus	2.5L	I5	2003 – 2008	GEM	●	●	●	●	0x0005 0x00ED
Focus	2.5L	I5	2003 – 2008	HCM	●	●	●	○	0x0156 0x0155
Focus	2.5L	I5	2003 – 2008	IC	●	●	●	●	0x0009
Focus	2.5L	I5	2003 – 2008	MC	●	●	●	●	○
Focus	2.5L	I5	2003 – 2008	PAM	●	●	●	●	0x0005
Focus	2.5L	I5	2003 – 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Focus	2.5L	I5	2003 – 2008	P_DCU	●	●	●	●	○
Focus	2.5L	I5	2003 – 2008	RCM	●	●	●	●	0x0005 0x00EA
Focus	2.5L	I5	2003 – 2008	RETM	●	●	●	●	0x0005
Focus	2.5L	I5	2003 – 2008	RKE	●	●	●	●	0x0005 0x000A
Focus	2.5L	I5	2003 – 2008	SRM	●	●	●	●	○
Focus	2.5L	I5	2008	CMR	●	●	●	●	○
Focus	23kWh	Battery Electric Vehicle	2012	ACCM#2	●	●	●	○	○
Focus	23kWh	Battery Electric Vehicle	2012	BCCM	●	●	●	○	○
Focus	23kWh	Battery Electric Vehicle	2012	BCM#1	●	●	●	●	○
Focus	23kWh	Battery Electric Vehicle	2012	IPM-B	●	●	●	○	○
Focus	23kWh	Battery Electric Vehicle	2012	OCSM	●	●	●	●	○
Focus	23kWh	Battery Electric Vehicle	2012	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
Focus	23kWh	Battery Electric Vehicle	2012	PSCM	●	●	●	○	○
Focus	23kWh	Battery Electric Vehicle	2012 – 2013	ACM	●	●	●	○	○
Focus	23kWh	Battery Electric Vehicle	2012 – 2013	FCDIM	●	●	●	●	○
Focus	23kWh	Battery Electric Vehicle	2012 – 2013	IPC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus	23kWh	Battery Electric Vehicle	2012 - 2013	TCM	●	●	●	○	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	ABS	●	●	●	○	0x0012 0x0074 0x010A
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	APIM	●	●	●	○	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	BECM	●	●	●	●	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	DCDC	●	●	●	●	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	DDM	●	●	●	●	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	DSP	●	●	●	○	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	FCIM	●	●	●	○	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	GFM	●	●	●	○	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	GPSM	●	●	●	○	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	GWM	●	●	●	○	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	HCM	●	●	●	○	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	HVAC	●	●	●	●	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	PAM	●	●	○	○	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	PDM	●	●	●	●	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	RCM	●	●	●	○	0x00EF
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	RFA	●	●	●	○	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	SASM	●	●	●	○	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	SOBDM	●	●	●	●	○
Focus	23kWh	Battery Electric Vehicle	2012 - 2014	TCU#1	●	●	●	○	○
Focus	23kWh	Battery Electric Vehicle	2013	BCM i	●	●	●	●	0x0101
Focus	Other	Other	2013	ABS	●	●	●	○	○
Focus	Other	Other	2013	ACM	●	●	●	●	○
Focus	Other	Other	2013	APIM	●	●	●	●	○
Focus	Other	Other	2013	BCM#1	●	●	●	●	0x00D5 0x0101
Focus	Other	Other	2013	DDM	●	●	●	●	○
Focus	Other	Other	2013	DSP	●	●	●	○	○
Focus	Other	Other	2013	FCDIM	●	●	●	●	○
Focus	Other	Other	2013	FCIM	●	●	●	●	○
Focus	Other	Other	2013	GPSM	●	●	●	○	○
Focus	Other	Other	2013	HVAC	●	●	●	●	○
Focus	Other	Other	2013	IPC	●	●	●	●	○
Focus	Other	Other	2013	IPM-B	●	●	●	○	○
Focus	Other	Other	2013	OCSM	●	●	●	●	○
Focus	Other	Other	2013	PAM	●	●	○	○	○
Focus	Other	Other	2013	PDM	●	●	●	●	○
Focus	Other	Other	2013	PSCM	●	●	●	○	0x00CB 0x00CC
Focus	Other	Other	2013	RCM	●	●	●	○	○
Focus	Other	Other	2013	RFA	●	●	●	○	○
Focus	Other	Other	2013	SASM	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	ABS	●	●	●	○	0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	AHCM	●	●	●	○	0x00CF
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	DDM	●	●	●	○	0x00FB 0x0140
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	FCDIM	●	●	●	●	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	FDSM	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	HCM	●	●	●	○	0x0032
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	HVAC	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPC	●	●	●	●	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-A	●	●	●	○	0x00E5
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-B	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	PAM	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Focus C-MAX	1.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	PDM	●	●	●	○	0x00FC 0x0141

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus C-MAX	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	PSCM	●	●	●	○	0x00DC 0x00DF 0x00E0 0x00E1
Focus C-MAX	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	RCM	●	●	●	●	0x0102
Focus C-MAX	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	RFA	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	SASM	●	●	●	○	○
Focus C-MAX	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	SOD-L	●	●	●	○	0xF026
Focus C-MAX	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	SOD-R	●	●	●	○	0xF026
Focus C-MAX	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	SRM	●	●	●	●	○
Focus C-MAX	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2011	TRM	●	●	●	○	○
Focus C-MAX	1.4L	DURATEC 16V	2002	RL DCU	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002	RR DCU	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x002B
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	ACM	●	●	●	●	0x011A
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	CDP	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	D DCU	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	EATC	●	●	●	●	0x0005
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	EPB	●	●	●	●	0x001F
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	FFH	●	●	●	●	0x002D 0x002F
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	GDM	●	●	●	●	0x0100
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	GEM	●	●	●	●	0x00ED
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	HCM	●	●	●	●	0x0155 0x0156
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	IC	●	●	●	●	0x0009
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	NAV	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	PAM	●	●	●	●	0x0005
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0025
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	P DCU	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	RCM	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	RETM	●	●	●	●	○
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	RKE	●	●	●	●	0x000A
Focus C-MAX	1.4L	DURATEC 16V	2002 – 2007	SRM	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002	RL DCU	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002	RR DCU	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2007	EPB	●	●	●	●	0x001F
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2007	GDM	●	●	●	●	0x0100 0x0005
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2007	NAV	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x0005 0x002B 0x00EB 0x00EC
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2008	ACM	●	●	●	●	0x011A 0x0005
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2008	CDP	●	●	●	●	0x0005
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2008	D DCU	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2008	EATC	●	●	●	●	0x0005
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2008	FFH	●	●	●	●	0x002D 0x002F
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2008	GEM	●	●	●	●	0x0005 0x00ED 0xF026 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF03B 0xF03C 0xF03D 0xF033 0xF034
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2008	HCM	●	●	●	●	0x0155 0x0156
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2008	IC	●	●	●	●	0x0009 0x0005 0xF01E 0xF020 0xF028 0xF032 0xF03E
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2008	PAM	●	●	●	●	0x0005
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0025
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2008	P DCU	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2008	RCM	●	●	●	●	0xF027 0xF031 0x00EA
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2008	RETM	●	●	●	●	0x0005
Focus C-MAX	1.6L	DURATEC 16V	2002 – 2008	RKE	●	●	●	●	0x0005 0x000A

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus C-MAX	1.6L	DURATEC 16V	2002 - 2008	SRM	●	●	●	●	0xF037 0xF038 0xF039
Focus C-MAX	1.6L	DURATEC 16V	2008	CMR	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC 16V	2008	EPS	●	●	●	○	0x0005
Focus C-MAX	1.6L	DURATEC VCT	2002	RL DCU	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2002	RR DCU	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2007	EPB	●	●	●	●	0x001F
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2007	GDM	●	●	●	●	0x0100
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2007	NAV	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	CDP	●	●	●	●	0x0005
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	D DCU	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	EATC	●	●	●	●	0x0005
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	FFH	●	●	●	●	0x002D 0x002F
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	GEM	●	●	●	●	0x00ED 0x0005 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF033 0xF034 0xF035 0xF03A 0xF03B 0xF03C 0xF03D
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	IC	●	●	●	●	0x0009 0x0005 0xF01E 0xF020 0xF028 0xF032 0xF036 0xF03E
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	P DCU	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	RETM	●	●	●	●	0x0005
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2008	RKE	●	●	●	●	0x000A 0x0005
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2011	ABS	●	●	●	○	0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0008 0x0029 0x002A 0x0030 0x00DD 0x00DE 0x00EB
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2011	ACM	●	●	●	●	0x0005
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2011	HCM	●	●	●	○	0x0032 0x0155 0x0156
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2011	PAM	●	●	●	○	0x0005
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00BC 0x0116 0x0117 0x0025
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2011	RCM	●	●	●	●	0x0102 0x00EA 0xF027 0xF031
Focus C-MAX	1.6L	DURATEC VCT	2002 - 2011	SRM	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2008	CMR	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2008	EPS	●	●	●	○	0x0005
Focus C-MAX	1.6L	DURATEC VCT	2011	AHCM	●	●	●	○	0x00CF
Focus C-MAX	1.6L	DURATEC VCT	2011	BCMii	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2011	DDM	●	●	●	○	0x00FB 0x0140
Focus C-MAX	1.6L	DURATEC VCT	2011	FCDIM	●	●	●	●	○
Focus C-MAX	1.6L	DURATEC VCT	2011	FDSM	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	HVAC	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	IPC	●	●	●	●	0xF020
Focus C-MAX	1.6L	DURATEC VCT	2011	IPM-A	●	●	●	○	0x00E5
Focus C-MAX	1.6L	DURATEC VCT	2011	IPM-B	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	PDM	●	●	●	○	0x00FC 0x0141
Focus C-MAX	1.6L	DURATEC VCT	2011	PSCM	●	●	●	○	0x00DC 0x00DF 0x00E0 0x00E1
Focus C-MAX	1.6L	DURATEC VCT	2011	RFA	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	RGTM	●	●	●	●	0x00FD 0x013D
Focus C-MAX	1.6L	DURATEC VCT	2011	SASM	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	SOD-L	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	SOD-R	●	●	●	○	○
Focus C-MAX	1.6L	DURATEC VCT	2011	TRM	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002	RL DCU	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002	RR DCU	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	EPB	●	●	●	●	0x001F
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	GDM	●	●	●	●	0x0005 0x0100
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	NAV	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	TCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	CDP	●	●	●	●	0x0005
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	D_DCU	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	EATC	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	EPS	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	FACM	●	●	●	●	0x0005 0x006B 0x0094 0x00A1
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	FFH	●	●	●	●	0x002D 0x002F
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	GEM	●	●	●	●	0x00ED 0xF026 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF03B 0xF03C 0xF03D
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	IC	●	●	●	●	0x0009
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	P_DCU	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RETM	●	●	●	●	0x0005
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RKE	●	●	●	●	0x0005 0x000A
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	ABS	●	●	●	●	0x0005 0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB 0x00EC 0x0053 0x00D9 0x00DB
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	ACM	●	●	●	●	0x0005
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	HCM	●	●	●	●	0x0155 0x0156 0x0032
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	PAM	●	●	●	●	0x0005
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0096 0x0097 0x0098 0x0099 0x009A 0x020A 0x00B1 0x00B3 0x00B9 0x00BC 0x00BD 0x00C1 0x00C3 0x00E7
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	RCM	●	●	●	●	0xF027 0xF031 0x00EA 0x0102
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	SRM	●	●	●	●	0xF037 0xF038 0xF039
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2008	CMR	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	AHCM	●	●	●	○	0x00CF
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	○	0x00FB 0x0140
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	FDSM	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	0xF020
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-A	●	●	●	○	0x00E5
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-B	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	○	0x00FC 0x0141
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	PSCM	●	●	●	○	0x00DC 0x00DF 0x00E0 0x00E1
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	RFA	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	RGTM	●	●	●	●	0x00FD 0x013D
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	SASM	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-L	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-R	●	●	●	○	○
Focus C-MAX	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	○	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	ABS	●	●	●	○	0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	ACM	●	●	●	●	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	AHCM	●	●	●	○	0x00CF
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	BCMii	●	●	●	●	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	DDM	●	●	●	○	0x00FB 0x0140
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	FCDIM	●	●	●	●	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	FDSM	●	●	●	○	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	HCM	●	●	●	○	0x0032
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	HVAC	●	●	●	○	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPC	●	●	●	●	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-A	●	●	●	○	0x00E5
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-B	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PAM	●	●	●	○	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x00C3 0x0114
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PDM	●	●	●	○	0x00FC 0x0141
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PSCM	●	●	●	○	0x00DC 0x00DF 0x00E0 0x00E1
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RCM	●	●	●	●	0x0102
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RFA	●	●	●	○	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RGTM	●	●	●	●	0x00FD 0x013D
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SASM	●	●	●	○	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-L	●	●	●	○	0xF026
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-R	●	●	●	○	0xF026
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SRM	●	●	●	●	○
Focus C-MAX	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	TRM	●	●	●	○	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002	RL DCU	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002	RR DCU	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2007	EPB	●	●	●	●	0x001F
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2007	GDM	●	●	●	●	0x0100
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2007	NAV	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2007	TCM	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	ACM	●	●	●	●	0x0005
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	CDP	●	●	●	●	0x0005
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	D DCU	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	EATC	●	●	●	●	0x0005
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	EPS	●	●	●	●	0x0005
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	FFH	●	●	●	●	0x002D 0x002F
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	GEM	●	●	●	●	0x0005 0x00ED 0xF025 0xF026 0xF02B 0xF02C 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF033 0xF034 0xF03B 0xF03C 0xF03D
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	HCM	●	●	●	●	0x0155 0x0156
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	IC	●	●	●	●	0x0009 0x0005 0xF01E 0xF020 0xF028 0xF032 0xF036 0xF03E
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	PAM	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	P DCU	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	RCM	●	●	●	●	0x0005 0xF027 0xF031 0x00EA
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	RETM	●	●	●	●	0x0005
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	RKE	●	●	●	●	0x000A
Focus C-MAX	1.8L	DURATEC-HE / I4	2002 - 2008	SRM	●	●	●	●	○
Focus C-MAX	1.8L	DURATEC-HE / I4	2008	CMR	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002	RL DCU	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002	RR DCU	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	EPB	●	●	●	●	0x001F
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	GDM	●	●	●	●	0x0100
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	NAV	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00E8 0x00DD 0x00DE 0x00EB 0x00EC 0x0005
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	ACM	●	●	●	●	0x0005
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	CDP	●	●	●	●	0x0005
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	D DCU	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	EATC	●	●	●	●	0x0005
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	EPS	●	●	●	●	0x0005

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	FFH	●	●	●	●	0x002D 0x002F
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	GEM	●	●	●	●	0x00ED 0x0005 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF034 0xF035 0xF03A 0xF03B 0xF03C 0xF03D
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	HCM	●	●	●	●	0x0155 0x0156
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	IC	●	●	●	●	0x0009 0x0005 0xF01E 0xF020 0xF028 0xF032 0xF03E
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	PAM	●	●	●	●	0x0005
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	PCM	●	●	●	●	0x006F 0x0080 0x0081 0x0082 0x0083 0x00B4
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	P DCU	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RCM	●	●	●	●	0x00EA 0xF027 0xF031
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RETM	●	●	●	●	0x0005
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RKE	●	●	●	●	0x000A 0x0005
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	SRM	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008	CMR	●	●	●	●	○
Focus C-MAX	1.8L	Duratorq Turbo Diesel Common Rail Injection	2008	FACM	●	●	●	●	0x0005 0x006B
Focus C-MAX	2.0L	DURATEC-HE / I4	2002	RL DCU	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002	RR DCU	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2007	EPB	●	●	●	●	0x001F
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2007	GDM	●	●	●	●	0x0100
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2007	NAV	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x00EB 0x00EC 0x0005
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	ACM	●	●	●	●	0x0005
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	CDP	●	●	●	●	0x0005
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	D DCU	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	EATC	●	●	●	●	0x0005
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	EPS	●	●	●	●	0x0005
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	FFH	●	●	●	●	0x002D 0x002F
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	GEM	●	●	●	●	0x0005 0x00ED 0xF025 0xF026 0xF02A 0xF02B 0xF02C 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF031 0xF034 0xF03B 0xF03C 0xF03D
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	HCM	●	●	●	●	0x0155 0x0156
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	IC	●	●	●	●	0x0009 0x0005 0xF01E 0xF028 0xF032 0xF03E
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	PAM	●	●	●	●	0x0005
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	P DCU	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	RCM	●	●	●	●	0x0005 0xF027 0xF031 0x00EA
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	RETM	●	●	●	●	0x0005
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	RKE	●	●	●	●	0x000A 0x0005
Focus C-MAX	2.0L	DURATEC-HE / I4	2002 - 2008	SRM	●	●	●	●	○
Focus C-MAX	2.0L	DURATEC-HE / I4	2008	CMR	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002	RL DCU	●	●	●	●	0xF026
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002	RR DCU	●	●	●	●	0xF026
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	EPB	●	●	●	●	0x0005 0x001F 0xF0B8
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	GDM	●	●	●	●	0x0005 0x0100
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	NAV	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	CDP	●	●	●	●	0x0005
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	D DCU	●	●	●	●	0x0005 0xF026
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	EATC	●	●	●	●	0x0005
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	EPS	●	●	●	●	0x0005
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	FACM	●	●	●	●	0x0005 0x006B 0x0094 0x00A1
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	FFH	●	●	●	●	0x002D 0x002F
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	GEM	●	●	●	●	0x0005 0x00ED 0xF026 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF035 0xF03A 0xF03B 0xF03C 0xF03D

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	IC	●	●	●	●	0x0009 0xF01E 0xF020 0xF028 0xF032 0xF03E
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	P_DCU	●	●	●	●	0x0005 0xF026
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RETM	●	●	●	●	0x0005
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2008	RKE	●	●	●	●	0x0005 0x000A
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	ABS	●	●	●	○	0x002B 0x002C 0x0053 0x00D9 0x00DB 0x00E8 0x0005 0x0008 0x0029 0x002A 0x0030 0x00DD 0x00DE 0x00EB 0x00EC
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	ACM	●	●	●	●	0x0005
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	HCM	●	●	●	○	0x0032 0x0155 0x0156
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	PAM	●	●	●	○	0x0005
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00A4 0x00B0 0x00B1 0x00B3 0x00B7 0x00B8 0x00B9 0x00BC 0x00BF 0x00C1 0x00E7 0x0116 0x013B 0x00AB
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	RCM	●	●	●	●	0x0102 0xF027 0xF031 0x00EA
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	SRM	●	●	●	●	0xF037 0xF039 0xF03F
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	CMR	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008 - 2011	TCM	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	AHCM	●	●	●	○	0x00CF
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	○	0x00FB 0x0140
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	FDSM	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	0xF020
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-A	●	●	●	○	0x00E5
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-B	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	○	0x00FC 0x0141
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	PSCM	●	●	●	○	0x00DC 0x00DF 0x00E0 0x00E1
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	RFA	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	RGTM	●	●	●	●	0x00FD 0x013D
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SASM	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-L	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-R	●	●	●	○	○
Focus C-MAX	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	○	○
Freestar / Monterey	3.9L	V6 OHV	2004 - 2005	ABS/TCS	●	●	●	●	0x0008 0x0012
Freestar / Monterey	3.9L	V6 OHV	2004 - 2007	DCSM	●	●	●	●	○
Freestar / Monterey	3.9L	V6 OHV	2004 - 2007	DSM	●	●	●	●	○
Freestar / Monterey	3.9L	V6 OHV	2004 - 2007	EATC	●	●	●	●	○
Freestar / Monterey	3.9L	V6 OHV	2004 - 2007	GEM	●	●	●	●	0x000A 0x000F
Freestar / Monterey	3.9L	V6 OHV	2004 - 2007	IC	●	●	●	●	○
Freestar / Monterey	3.9L	V6 OHV	2004 - 2007	LPSDM	●	●	●	●	○
Freestar / Monterey	3.9L	V6 OHV	2004 - 2007	LTM	●	●	●	●	○
Freestar / Monterey	3.9L	V6 OHV	2004 - 2007	NGSC	●	●	●	●	○
Freestar / Monterey	3.9L	V6 OHV	2004 - 2007	PAM	●	●	●	●	0x006C
Freestar / Monterey	3.9L	V6 OHV	2004 - 2007	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Freestar / Monterey	3.9L	V6 OHV	2004 - 2007	PCSM	●	●	●	●	○
Freestar / Monterey	3.9L	V6 OHV	2004 - 2007	RCM	●	●	●	●	0x000C
Freestar / Monterey	3.9L	V6 OHV	2004 - 2007	RPSDM	●	●	●	●	○
Freestar / Monterey	3.9L	V6 OHV	2005	TPM	●	●	●	●	○
Freestar / Monterey	3.9L	V6 OHV	2006 - 2007	ABS	●	●	●	●	0x0008 0x0012
Freestar / Monterey	4.2L	V6 OHV	2004 - 2005	ABS/TCS	●	●	●	●	0x0008 0x0012

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Freestar / Monterey	4. 2L	V6 OHV	2004 - 2007	DCSM	●	●	●	●	○
Freestar / Monterey	4. 2L	V6 OHV	2004 - 2007	DSM	●	●	●	●	○
Freestar / Monterey	4. 2L	V6 OHV	2004 - 2007	EATC	●	●	●	●	○
Freestar / Monterey	4. 2L	V6 OHV	2004 - 2007	GEM	●	●	●	●	0x000A 0x000F
Freestar / Monterey	4. 2L	V6 OHV	2004 - 2007	IC	●	●	●	●	○
Freestar / Monterey	4. 2L	V6 OHV	2004 - 2007	LPSDM	●	●	●	●	○
Freestar / Monterey	4. 2L	V6 OHV	2004 - 2007	LTM	●	●	●	●	○
Freestar / Monterey	4. 2L	V6 OHV	2004 - 2007	NGSC	●	●	●	●	○
Freestar / Monterey	4. 2L	V6 OHV	2004 - 2007	PAM	●	●	●	●	0x006C
Freestar / Monterey	4. 2L	V6 OHV	2004 - 2007	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Freestar / Monterey	4. 2L	V6 OHV	2004 - 2007	PCSM	●	●	●	●	○
Freestar / Monterey	4. 2L	V6 OHV	2004 - 2007	RCM	●	●	●	●	0x000C
Freestar / Monterey	4. 2L	V6 OHV	2004 - 2007	RPSDM	●	●	●	●	○
Freestar / Monterey	4. 2L	V6 OHV	2005	TPM	●	●	●	●	○
Freestar / Monterey	4. 2L	V6 OHV	2006 - 2007	ABS	●	●	●	●	0x0008 0x0012
Freestyle	3. 0L	4V	2005 - 2007	4X4	●	●	●	●	○
Freestyle	3. 0L	4V	2005 - 2007	ABS	●	●	●	●	0x0005 0xF046 0x0008
Freestyle	3. 0L	4V	2005 - 2007	ACM	●	●	●	●	0x0005 0xF05A 0xF062 0xF063 0xF07F 0x0016 0x0017 0x0018
Freestyle	3. 0L	4V	2005 - 2007	DSM	●	●	●	●	0x0005
Freestyle	3. 0L	4V	2005 - 2007	EATC	●	●	●	●	○
Freestyle	3. 0L	4V	2005 - 2007	GEM	●	●	●	●	0x0005 0xF042 0xF044 0xF048 0xF085 0x000A 0x000F
Freestyle	3. 0L	4V	2005 - 2007	IC	●	●	●	●	0x0005 0xF04D 0xF054 0xF099
Freestyle	3. 0L	4V	2005 - 2007	PAM	●	●	●	●	0x006C
Freestyle	3. 0L	4V	2005 - 2007	PCM	●	●	●	●	0x0009 0x0023 0x0024 0x0080 0x0081 0x0082 0x0083 0x0084 0x0025 0x00C5
Freestyle	3. 0L	4V	2005 - 2007	RCM	●	●	●	●	0x0005 0x006D 0xF05D 0x000C
Freestyle	3. 0L	4V	2005 - 2007	RETM	●	●	●	●	○
Freestyle	3. 0L	4V	2005 - 2007	TCM	●	●	●	●	○
Freestyle	3. 0L	4V	2007	SDARS	●	●	●	●	0x0019
Fusion	1. 25L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fusion	1. 25L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	0x0005 0xF02D 0xF030 0xF0A2 0xF0B3
Fusion	1. 25L	DURATEC 16V	2002 - 2006	IC	●	●	●	●	0x0005 0xF020
Fusion	1. 25L	DURATEC 16V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fusion	1. 25L	DURATEC 16V	2002 - 2006	RCM	●	●	○	○	○
Fusion	1. 25L	DURATEC 16V	2006	ACM	●	●	●	●	○
Fusion	1. 25L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fusion	1. 25L	DURATEC 16V	2006	SRM	●	●	●	●	○
Fusion	1. 4L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fusion	1. 4L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	0x0005 0xF02D 0xF030 0xF0A2 0xF0B3
Fusion	1. 4L	DURATEC 16V	2002 - 2006	IC	●	●	●	●	0x0005 0xF020
Fusion	1. 4L	DURATEC 16V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fusion	1. 4L	DURATEC 16V	2002 - 2006	RCM	●	●	○	○	○
Fusion	1. 4L	DURATEC 16V	2002 - 2006	TCM	●	●	●	●	0x003F
Fusion	1. 4L	DURATEC 16V	2006	ACM	●	●	●	●	○
Fusion	1. 4L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fusion	1. 4L	DURATEC 16V	2006	SRM	●	●	●	●	○
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	GEM	●	●	●	●	0xF02D 0xF030 0xF0A2 0xF0B3 0xF0B6 0xF0B7
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	IC	●	●	●	●	0xF020 0xF063 0xF0B5 0xF0B7
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Fusion	1. 4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	RCM	●	●	○	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	TCM	●	●	●	●	0x003F
Fusion	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	0x0005
Fusion	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006	EATC	●	●	●	●	○
Fusion	1.4L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	0xF037 0xF038 0xF039
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	APIM	●	●	●	●	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	DACM-C	●	●	●	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	DSM	●	●	●	●	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	DSP	●	●	●	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	FCDIM	●	●	●	●	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	FCIM	●	●	●	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	HUD	●	●	●	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x0108
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	RACM	●	●	○	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	RCM	●	●	○	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	RTM	●	●	○	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	SCCM	●	●	○	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	SCM-E	●	●	○	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	SOD-L	●	●	○	○	○
Fusion	1.5L	EcoBoost - Gas Turbocharged Direct Injection	2014	SOD-R	●	●	○	○	○
Fusion	1.6L	DURATEC 16V	2002	TCM	●	●	●	●	○
Fusion	1.6L	DURATEC 16V	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fusion	1.6L	DURATEC 16V	2002 - 2006	GEM	●	●	●	●	0xF02D 0xF030 0xF0A2 0xF0B3 0xF0B6 0xF0B7
Fusion	1.6L	DURATEC 16V	2002 - 2006	IC	●	●	●	●	0xF020 0xF063 0xF0B5
Fusion	1.6L	DURATEC 16V	2002 - 2006	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Fusion	1.6L	DURATEC 16V	2002 - 2006	RCM	●	●	○	○	○
Fusion	1.6L	DURATEC 16V	2006	ACM	●	●	●	●	0x0005
Fusion	1.6L	DURATEC 16V	2006	EATC	●	●	●	●	○
Fusion	1.6L	DURATEC 16V	2006	SRM	●	●	●	●	0xF037 0xF038 0xF039
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	EPS	●	●	●	●	○
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	GEM	●	●	●	●	○
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	IC	●	●	●	●	○
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0092 0x0096 0x0097 0x0099 0x009A 0x00AD 0x00AE
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2006	RCM	●	●	○	○	○
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006	EATC	●	●	●	●	○
Fusion	1.6L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	ABS	●	●	●	○	0x0008 0x0012 0x00F5 0x010A 0x020C
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	ACM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	●	0x000F 0x00D4 0x00D5 0x00FE 0x0112
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	C-CM	●	●	●	○	0x0046
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	DDM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	GFM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	GPSM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	GWM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	HCM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	HSWM	●	●	●	●	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPC	●	●	●	●	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPM-A	●	●	●	○	0x013E
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	OCSM	●	●	●	○	0x000C
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	PAM	●	●	○	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	PCM	●	●	●	●	0x0023 0x0024 0x0025 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0108
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	PDM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	PSCM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	RGTM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCM-G	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCM-H	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013	VDM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DACM-C	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSM	●	●	●	●	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSP	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	FCDIM	●	●	●	●	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	FCIM	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HUD	●	●	●	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RACM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RCM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RTM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SCCM	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SCM-E	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-L	●	●	○	○	○
Fusion	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-R	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	ABS	●	●	●	○	0x0008 0x0012 0x00F5 0x010A 0x020C
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	ACM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	●	0x000F 0x00D4 0x00D5 0x00FE 0x0112
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	C-CM	●	●	●	○	0x0046
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	DDM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	GFM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	GPSM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	GWM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	HCM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	HSWM	●	●	●	●	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPC	●	●	●	●	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPM-A	●	●	●	○	0x013E
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	OCSM	●	●	●	○	0x000C
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PAM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PDM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PSCM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	RGTM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCM-G	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCM-H	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	VDM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DACM-C	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSM	●	●	●	●	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSP	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	FCDIM	●	●	●	●	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	FCIM	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HUD	●	●	●	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	PCM	●	●	●	●	0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0108 0x0023 0x0025 0x0038
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RACM	●	●	○	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RCM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RTM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SCCM	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SCM-E	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-L	●	●	○	○	○
Fusion	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-R	●	●	○	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013	C-CM	●	●	●	○	0x0046
Fusion	2.0L	Full Hybrid Electric Vehicle	2013	GWM	●	●	●	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	ACCM#2	●	●	●	●	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	APIM	●	●	●	●	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	DACM-C	●	●	●	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	DSM	●	●	●	●	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	DSP	●	●	●	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	FCDIM	●	●	●	●	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	HUD	●	●	●	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	RACM	●	●	○	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	RCM	●	●	○	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	SCCM	●	●	○	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	SCM-E	●	●	○	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	SOD-L	●	●	○	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	SOD-R	●	●	○	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2014	FCIM	●	●	●	○	○
Fusion	2.0L	Full Hybrid Electric Vehicle	2014	RTM	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	ABS	●	●	●	○	0x0074
Fusion	2.0L	HEV / ATKINSON 4V	2013	ACCM#2	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	ACM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	APIM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	BCM#1	●	●	●	●	0x000F 0x00D4 0x00D5 0x00FE
Fusion	2.0L	HEV / ATKINSON 4V	2013	BECM	●	●	●	○	0x006E
Fusion	2.0L	HEV / ATKINSON 4V	2013	C-CM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	DACM-C	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	DCDC	●	●	●	●	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	DDM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	DSM	●	●	●	●	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	DSP	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	FCDIM	●	●	●	●	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	FCIM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	GFM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	GPSM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	GWM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	HCM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	HSWM	●	●	●	●	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	HUD	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	IPC	●	●	●	●	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	IPM-A	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	OCSM	●	●	●	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	PAM	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0108
Fusion	2.0L	HEV / ATKINSON 4V	2013	PDM	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	PSCM	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	RACM	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	RCM	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	RGTM	●	●	○	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	2.0L	HEV / ATKINSON 4V	2013	RTM	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	SCCM	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	SCM-E	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	SCM-G	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	SCM-H	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	SOBDM-C	●	●	●	●	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	SOD-L	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	SOD-R	●	●	○	○	○
Fusion	2.0L	HEV / ATKINSON 4V	2013	VDM	●	●	○	○	○
Fusion	2.0L	PHEV	2013	ABS	●	●	●	○	0x0074 0x00F5 0x010A 0x020C
Fusion	2.0L	PHEV	2013	ACM	●	●	●	○	○
Fusion	2.0L	PHEV	2013	BCM#1	●	●	●	●	0x000F 0x00D4 0x00D5 0x00FE 0x0112
Fusion	2.0L	PHEV	2013	C-CM	●	●	●	○	○
Fusion	2.0L	PHEV	2013	DDM	●	●	●	○	○
Fusion	2.0L	PHEV	2013	GPSM	●	●	●	○	○
Fusion	2.0L	PHEV	2013	GWM	●	●	●	○	○
Fusion	2.0L	PHEV	2013	HCM	●	●	●	○	○
Fusion	2.0L	PHEV	2013	HSWM	●	●	●	●	○
Fusion	2.0L	PHEV	2013	IPC	●	●	●	●	○
Fusion	2.0L	PHEV	2013	IPM-A	●	●	●	○	○
Fusion	2.0L	PHEV	2013	OCSM	●	●	●	○	0x000C
Fusion	2.0L	PHEV	2013	PAM	●	●	○	○	○
Fusion	2.0L	PHEV	2013	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0108
Fusion	2.0L	PHEV	2013	PDM	●	●	○	○	○
Fusion	2.0L	PHEV	2013	PSCM	●	●	○	○	○
Fusion	2.0L	PHEV	2013	RGTM	●	●	○	○	○
Fusion	2.0L	PHEV	2013	SCM-G	●	●	○	○	○
Fusion	2.0L	PHEV	2013	SCM-H	●	●	○	○	○
Fusion	2.0L	PHEV	2013	SOBDM-C	●	●	○	○	○
Fusion	2.0L	PHEV	2013	VDM	●	●	○	○	○
Fusion	2.0L	PHEV	2013 - 2014	ACCM#2	●	●	●	●	○
Fusion	2.0L	PHEV	2013 - 2014	APIM	●	●	●	○	○
Fusion	2.0L	PHEV	2013 - 2014	BECM	●	●	●	●	○
Fusion	2.0L	PHEV	2013 - 2014	DACM-C	●	●	●	○	○
Fusion	2.0L	PHEV	2013 - 2014	DSM	●	●	●	●	○
Fusion	2.0L	PHEV	2013 - 2014	DSP	●	●	●	○	○
Fusion	2.0L	PHEV	2013 - 2014	FCDIM	●	●	●	●	○
Fusion	2.0L	PHEV	2013 - 2014	FCIM	●	●	●	○	○
Fusion	2.0L	PHEV	2013 - 2014	GFM	●	●	●	○	○
Fusion	2.0L	PHEV	2013 - 2014	HUD	●	●	●	○	○
Fusion	2.0L	PHEV	2013 - 2014	RACM	●	●	○	○	○
Fusion	2.0L	PHEV	2013 - 2014	RCM	●	●	○	○	○
Fusion	2.0L	PHEV	2013 - 2014	RTM	●	●	○	○	○
Fusion	2.0L	PHEV	2013 - 2014	SCCM	●	●	○	○	○
Fusion	2.0L	PHEV	2013 - 2014	SCM-E	●	●	○	○	○
Fusion	2.0L	PHEV	2013 - 2014	SOBDM	●	●	●	●	○
Fusion	2.0L	PHEV	2013 - 2014	SOD-L	●	●	○	○	○
Fusion	2.0L	PHEV	2013 - 2014	SOD-R	●	●	○	○	○
Fusion	2.3L	DURATEC-HE / I4	2006 - 2007	EATC	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2006 - 2007	GEM	●	●	●	●	0xF044 0xF048 0xF04C 0xF057 0xF085
Fusion	2.3L	DURATEC-HE / I4	2006 - 2009	ABS	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2006 - 2009	ACM	●	●	●	●	0xF05A 0xF062 0xF07A

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	2.3L	DURATEC-HE / I4	2006 - 2009	IC	●	●	●	●	0x0009 0xF027
Fusion	2.3L	DURATEC-HE / I4	2006 - 2009	OCSM	●	●	●	○	0x006D
Fusion	2.3L	DURATEC-HE / I4	2006 - 2009	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083 0x0084
Fusion	2.3L	DURATEC-HE / I4	2006 - 2009	RCM	●	●	●	●	0x0005 0xF022 0xF05D
Fusion	2.3L	DURATEC-HE / I4	2006 - 2009	TBM	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2006 - 2009	TCM	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2007 - 2009	4X4	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2007 - 2009	SDARS	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2008 - 2009	APIM	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2008 - 2009	GEM / SJB	●	●	●	●	0x0042 0xF044 0xF048 0xF04C 0xF057 0xF085 0xF086
Fusion	2.3L	DURATEC-HE / I4	2008 - 2009	HVAC	●	●	●	●	○
Fusion	2.3L	DURATEC-HE / I4	2008 - 2009	PAM	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	4X4	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	ABS	●	●	●	●	0x0008 0x0012
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	ACM	●	●	●	●	0x0017 0x0018
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	APIM	●	●	●	●	0x0019 0x001C
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	DSP	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	FCIM	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	FDIM	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	GEM / SJB	●	●	●	●	0x000F 0x0042
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	GPSM	●	●	●	○	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	HVAC	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	IPC	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	OCSM	●	●	●	●	0x000C 0x0015 0x006D
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	PAM	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	PCM	●	●	●	●	0x0009 0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0023 0x0028 0x0031 0x0033
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	PSCM	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	RCM	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	SOD-L	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	SOD-R	●	●	●	●	○
Fusion	2.5L	DURATEC-HE / I4	2010 - 2012	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	4X4	●	●	●	●	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	ABS	●	●	●	●	0x0074
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	ACCM#2	●	●	●	●	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	ACM	●	●	●	●	0x0005 0x0017 0x0018
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	APIM	●	●	●	●	0x0019 0x001C
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	BECM	●	●	●	●	0x006E
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	DCDC	●	●	●	●	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	DSP	●	●	●	●	0x0005
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	FCIM	●	●	●	●	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	FDIM	●	●	●	●	0x0005
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	GPSM	●	●	●	○	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	HVAC	●	●	●	●	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	IPC	●	●	●	●	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	OCSM	●	●	●	●	0x000C 0x0015
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	PAM	●	●	●	●	0x0005
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	PSCM	●	●	●	●	0x0005
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	RCM	●	●	●	●	0x0005
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	SOD-L	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	SOD-R	●	●	●	●	○
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
Fusion	2.5L	HEV / ATKINSON 4V	2010 - 2012	TCM	●	●	●	●	○
Fusion	2.5L	IVCT	2013	ABS	●	●	●	○	0x0008 0x0012 0x00F5 0x010A 0x020C
Fusion	2.5L	IVCT	2013	ACM	●	●	●	○	○
Fusion	2.5L	IVCT	2013	BCM#1	●	●	●	●	0x00D4 0x00D5 0x0112
Fusion	2.5L	IVCT	2013	C-CM	●	●	●	○	0x0046
Fusion	2.5L	IVCT	2013	DDM	●	●	●	○	○
Fusion	2.5L	IVCT	2013	GFM	●	●	●	○	○
Fusion	2.5L	IVCT	2013	GPSM	●	●	●	○	○
Fusion	2.5L	IVCT	2013	GWM	●	●	●	○	○
Fusion	2.5L	IVCT	2013	HCM	●	●	●	○	○
Fusion	2.5L	IVCT	2013	HSWM	●	●	●	●	○
Fusion	2.5L	IVCT	2013	IPC	●	●	●	●	○
Fusion	2.5L	IVCT	2013	IPM-A	●	●	●	○	0x013E
Fusion	2.5L	IVCT	2013	OCSM	●	●	●	○	○
Fusion	2.5L	IVCT	2013	PAM	●	●	○	○	○
Fusion	2.5L	IVCT	2013	PDM	●	●	○	○	○
Fusion	2.5L	IVCT	2013	PSCM	●	●	○	○	○
Fusion	2.5L	IVCT	2013	RGTM	●	●	○	○	○
Fusion	2.5L	IVCT	2013	SCM-G	●	●	○	○	○
Fusion	2.5L	IVCT	2013	SCM-H	●	●	○	○	○
Fusion	2.5L	IVCT	2013	VDM	●	●	○	○	○
Fusion	2.5L	IVCT	2013 - 2014	APIM	●	●	●	○	○
Fusion	2.5L	IVCT	2013 - 2014	DACM-C	●	●	●	○	○
Fusion	2.5L	IVCT	2013 - 2014	DSM	●	●	●	●	○
Fusion	2.5L	IVCT	2013 - 2014	DSP	●	●	●	○	○
Fusion	2.5L	IVCT	2013 - 2014	FCDIM	●	●	●	●	○
Fusion	2.5L	IVCT	2013 - 2014	FCIM	●	●	●	○	○
Fusion	2.5L	IVCT	2013 - 2014	HUD	●	●	●	○	○
Fusion	2.5L	IVCT	2013 - 2014	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0108
Fusion	2.5L	IVCT	2013 - 2014	RACM	●	●	○	○	○
Fusion	2.5L	IVCT	2013 - 2014	RCM	●	●	○	○	○
Fusion	2.5L	IVCT	2013 - 2014	RTM	●	●	○	○	○
Fusion	2.5L	IVCT	2013 - 2014	SCCM	●	●	○	○	○
Fusion	2.5L	IVCT	2013 - 2014	SCM-E	●	●	○	○	○
Fusion	2.5L	IVCT	2013 - 2014	SOD-L	●	●	○	○	○
Fusion	2.5L	IVCT	2013 - 2014	SOD-R	●	●	○	○	○
Fusion	3.0L	4V	2006 - 2007	EATC	●	●	●	●	○
Fusion	3.0L	4V	2006 - 2007	GEM	●	●	●	●	○
Fusion	3.0L	4V	2006 - 2009	IC	●	●	●	●	0x0005 0xF027
Fusion	3.0L	4V	2006 - 2009	TCM	●	●	●	●	○
Fusion	3.0L	4V	2006 - 2012	ABS	●	●	●	●	0x0008 0x0012
Fusion	3.0L	4V	2006 - 2012	ACM	●	●	●	●	0x0017 0x0018
Fusion	3.0L	4V	2006 - 2012	OCSM	●	●	●	○	0x000C 0x0015
Fusion	3.0L	4V	2006 - 2012	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083 0x0084 0x0009 0x0024 0x0038 0x0067
Fusion	3.0L	4V	2006 - 2012	RCM	●	●	●	●	0x0005 0xF022 0xF05D
Fusion	3.0L	4V	2006 - 2012	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
Fusion	3.0L	4V	2007 - 2009	SDARS	●	●	●	●	0x0005
Fusion	3.0L	4V	2007 - 2012	4X4	●	●	●	●	○
Fusion	3.0L	4V	2008 - 2012	APIM	●	●	●	●	0x0019 0x001C

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Fusion	3.0L	4V	2008 - 2012	GEM / SJB	●	●	●	●	0x0005 0xF044 0xF048 0xF04C 0xF057 0xF085 0xF086 0xF08A 0x000F 0x0042
Fusion	3.0L	4V	2008 - 2012	HVAC	●	●	●	●	○
Fusion	3.0L	4V	2008 - 2012	PAM	●	●	●	●	0x0005
Fusion	3.0L	4V	2010 - 2012	DSP	●	●	●	●	○
Fusion	3.0L	4V	2010 - 2012	FCIM	●	●	●	●	○
Fusion	3.0L	4V	2010 - 2012	FDIM	●	●	●	●	○
Fusion	3.0L	4V	2010 - 2012	GPSM	●	●	●	○	○
Fusion	3.0L	4V	2010 - 2012	IPC	●	●	●	●	○
Fusion	3.0L	4V	2010 - 2012	PSCM	●	●	●	●	○
Fusion	3.0L	4V	2010 - 2012	SOD-L	●	●	●	●	○
Fusion	3.0L	4V	2010 - 2012	SOD-R	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	4X4	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	ABS	●	●	●	●	0x0005 0x0008 0x0012
Fusion	3.5L	4V	2010 - 2012	ACM	●	●	●	●	0x0018 0x0017
Fusion	3.5L	4V	2010 - 2012	APIM	●	●	●	●	0x0019 0x001C
Fusion	3.5L	4V	2010 - 2012	DSP	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	FCIM	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	FDIM	●	●	●	●	0x0005 0xF062
Fusion	3.5L	4V	2010 - 2012	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C 0xF08A
Fusion	3.5L	4V	2010 - 2012	GPSM	●	●	●	○	○
Fusion	3.5L	4V	2010 - 2012	HVAC	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	IPC	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	OCSM	●	●	●	●	0x000C 0x0015 0x006D
Fusion	3.5L	4V	2010 - 2012	PAM	●	●	●	●	0x0005
Fusion	3.5L	4V	2010 - 2012	PCM	●	●	●	●	0x0023 0x0024 0x0025 0x0037 0x0080 0x0081 0x0082 0x0083 0x0084
Fusion	3.5L	4V	2010 - 2012	PSCM	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	RCM	●	●	●	●	0x0005
Fusion	3.5L	4V	2010 - 2012	SOD-L	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	SOD-R	●	●	●	●	○
Fusion	3.5L	4V	2010 - 2012	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
Fusion	3.5L	4V	2010 - 2012	TCM	●	●	●	○	0x0038
Fusion	Other	Other	2012	4X4	●	●	●	●	○
Fusion	Other	Other	2012	ABS	●	●	●	●	○
Fusion	Other	Other	2012	ACM	●	●	●	○	○
Fusion	Other	Other	2012	APIM	●	●	●	●	○
Fusion	Other	Other	2012	DSP	●	●	●	●	○
Fusion	Other	Other	2012	FCIM	●	●	●	●	○
Fusion	Other	Other	2012	FDIM	●	●	●	●	○
Fusion	Other	Other	2012	GEM / SJB	●	●	●	●	0x0042
Fusion	Other	Other	2012	GPSM	●	●	●	●	○
Fusion	Other	Other	2012	HVAC	●	●	●	●	○
Fusion	Other	Other	2012	IPC	●	●	●	●	0x0009
Fusion	Other	Other	2012	OCSM	●	●	●	●	○
Fusion	Other	Other	2012	PAM	●	●	●	●	○
Fusion	Other	Other	2012	PSCM	●	●	●	●	○
Fusion	Other	Other	2012	RCM	●	●	●	●	○
Fusion	Other	Other	2012	SOD-L	●	●	●	●	○
Fusion	Other	Other	2012	SOD-R	●	●	●	●	○
Fusion	Other	Other	2012	TBM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	ACM	●	●	●	●	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	AHCM	●	●	●	●	0x00CF
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	BCMii	●	●	●	●	0x0009 0x011B 0x011C 0x0132 0x0153
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	CCMii	●	●	●	●	0x00F9
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	CDP	●	●	●	●	0x0005
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	CMR	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	DABM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	DDM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	DSM	●	●	●	○	0x00F2
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	HCM	●	●	●	●	0x0032
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	HVAC	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	IPC	●	●	●	●	0xF020
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	IPM-A	●	●	●	○	0x00E5
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	NAV	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	PAM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	PBM	●	●	●	○	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00B1 0x00B3 0x00B7 0x00B9 0x00BC 0x00BD 0x00C1 0x00C3
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	PDM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	PSCM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	RCM	●	●	●	○	0x00EF 0x0102
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	RFA	●	●	●	●	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	RGTM	●	●	●	●	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	RHVAC	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	SASM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	SOD-L	●	●	●	○	0xF026
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	SOD-R	●	●	●	○	0xF026
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	SRM	●	●	●	○	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	TRM	●	●	●	●	○
GALAXY\S-Max	1.6L	Duratorq Turbo Diesel Common Rail Injection	2010	VDM	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	ACM	●	●	●	●	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	AHCM	●	●	●	●	0x00CF
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	BCMii	●	●	●	●	0x0009 0x011B 0x011C 0x0132 0x0153
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	CCMii	●	●	●	●	0x00F9
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	CDP	●	●	●	●	0x0005
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	CMR	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	DABM	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	DDM	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	DSM	●	●	●	○	0x00F2
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	HCM	●	●	●	●	0x0032
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	HVAC	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	IPC	●	●	●	●	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	IPM-A	●	●	●	○	0x00E5
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	NAV	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	PAM	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	PBM	●	●	●	○	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x00C3 0x0114

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	PDM	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	PSCM	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	RCM	●	●	●	○	0x00EF 0x0102
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	RFA	●	●	●	●	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	RGTM	●	●	●	●	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	RHVAC	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	SASM	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	SOD-L	●	●	●	○	0xF026
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	SOD-R	●	●	●	○	0xF026
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	SRM	●	●	●	○	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	TRM	●	●	●	●	○
GALAXY\S-Max	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2010	VDM	●	●	●	○	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS	●	●	●	●	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	AHCM	●	●	●	○	0x00CF
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	BCMii	●	●	●	●	0x0009 0x011B 0x011C 0x0132 0x0153
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	CCMii	●	●	●	●	0x00F9
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	CDP	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	DDM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	GDM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	HCM	●	●	●	●	0x0032
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	HVAC	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	IPC	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	NAV	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	PAM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	PCM	●	●	●	●	0x006F 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AB 0x00AC 0x00B4 0x00C1 0x020A
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	PDM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	PSCM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	RCM	●	●	●	○	0x0102
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	RFA	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	RGTM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	RHVAC	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	SASM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	TRM	●	●	●	●	○
GALAXY\S-Max	1.8L	Duratorq Turbo Diesel Common Rail Injection	2006	VDM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006	GDM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	ABS	●	●	●	●	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	ACM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	AHCM	●	●	●	○	0x00CF
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	BCMii	●	●	●	●	0x0009 0x011B 0x011C 0x0132 0x0153
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	CCMii	●	●	●	●	0x00F9
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	CDP	●	●	●	●	0x0005
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	DDM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	HCM	●	●	●	●	0x0032
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	HVAC	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	IPC	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	NAV	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	PAM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00AC
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	PDM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	PSCM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	RCM	●	●	●	○	0x0102 0x00EF
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	RFA	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	RGTM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	RHVAC	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	SASM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	SRM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	TRM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2006 - 2010	VDM	●	●	●	●	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2010	CMR	●	●	●	○	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2010	DABM	●	●	●	○	○
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2010	DSM	●	●	●	○	0x00F2
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2010	IPM-A	●	●	●	○	0x00E5
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2010	SOD-L	●	●	●	○	0xF026
GALAXY\S-Max	2.0L	DURATEC-HE / I4	2010	SOD-R	●	●	●	○	0xF026
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006	GDM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006	PAM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	ABS	●	●	●	●	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	ACM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	AHCM	●	●	●	○	0x00CF
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	BCMii	●	●	●	●	0x0009 0x011B 0x011C 0x0132 0x0153
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	CCMii	●	●	●	●	0x00F9
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	CDP	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	DDM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	HCM	●	●	●	●	0x0032
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	HVAC	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	IPC	●	●	●	●	0xF020
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	NAV	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PCM	●	●	●	●	0x006F 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AB 0x00AC 0x00B4 0x00C1 0x020A
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PDM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PSCM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	RCM	●	●	●	○	0x0102 0x00EF
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	RFA	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	RGTM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	RHVAC	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	SASM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	SRM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	TCM	●	●	●	○	0x0121 0x0122 0x0123 0x0124 0x0125
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	TRM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	VDM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	CMR	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	DABM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	DSM	●	●	●	○	0x00F2
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	IPM-A	●	●	●	○	0x00E5
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	SOD-L	●	●	●	○	0xF026

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection	2010	SOD-R	●	●	●	○	0xF026
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	ACM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	AHCM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	BCMii	●	●	●	●	0x0009 0x011B 0x011C
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	CCMii	●	●	●	●	0x00F9
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	CDP	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	CMR	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	DABM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	DDM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	DSM	●	●	●	○	0x00F2
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	HCM	●	●	●	●	0x0032
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	HVAC	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	IPC	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	IPM-A	●	●	●	○	0x00E5
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	NAV	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	PAM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	PBM	●	●	●	○	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	PDM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	PSCM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	RCM	●	●	●	○	0x00EF
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	RFA	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	RGTM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	RHVAC	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	SASM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	SOD-L	●	●	●	○	0xF026
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	SOD-R	●	●	●	○	0xF026
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	SRM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	TCM	●	●	●	○	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	TRM	●	●	●	●	○
GALAXY\S-Max	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	VDM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	ACM	●	●	●	●	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	AHCM	●	●	●	●	0x00CF
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	BCMii	●	●	●	●	0x011B 0x011C 0x0132 0x0153
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	CCMii	●	●	●	●	0x00F9
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	CDP	●	●	●	●	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	CMR	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	DABM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	DDM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	DSM	●	●	●	○	0x00F2
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	HCM	●	●	●	●	0x0032
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	HVAC	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	IPC	●	●	●	●	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	IPM-A	●	●	●	○	0x00E5
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	NAV	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	PBM	●	●	●	○	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	PDM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	PSCM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	RCM	●	●	●	○	0x00EF 0x0102

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	RGTM	●	●	●	●	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	RHVAC	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	SASM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	SOD-L	●	●	●	○	0xF026
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	SOD-R	●	●	●	○	0xF026
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	SRM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	TCM	●	●	●	○	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	TRM	●	●	●	●	○
GALAXY\S-Max	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2010	VDM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	GDM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PAM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	RFA	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	ABS	●	●	●	●	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	ACM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	AHCM	●	●	●	○	0x00CF
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	BCMii	●	●	●	●	0x0009 0x011C 0x0132 0x0153 0x011B
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	CCMii	●	●	●	●	0x00F9
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	CDP	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	DDM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	HCM	●	●	●	●	0x0032
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	HVAC	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	IPC	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	NAV	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00A5 0x00AA 0x00AF 0x00B0 0x00B1 0x00B2 0x00B8 0x00B9 0x00BB 0x00C1
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PDM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	PSCM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	RCM	●	●	●	○	0x00EF 0x0102
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	RGTM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	RHVAC	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	SASM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	SRM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	TRM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006 - 2010	VDM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	CMR	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	DABM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	DSM	●	●	●	○	0x00F2
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	IPM-A	●	●	●	○	0x00E5
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	SOD-L	●	●	●	○	0xF026
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection	2010	SOD-R	●	●	●	○	0xF026
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	ACM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	AHCM	●	●	●	●	0x00CF
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	BCMii	●	●	●	●	0x011B 0x011C 0x0132 0x0153
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	CCMii	●	●	●	●	0x00F9
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	CDP	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	CMR	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	DABM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	DDM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	DSM	●	●	●	○	0x00F2
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	HCM	●	●	●	●	0x0032
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	HVAC	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	IPC	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	IPM-A	●	●	●	○	0x00E5
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	NAV	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	PBM	●	●	●	○	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	PDM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	PSCM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	RCM	●	●	●	○	0x00EF 0x0102
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	RGTM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	RHVAC	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	SASM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	SOD-L	●	●	●	○	0xF026
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	SOD-R	●	●	●	○	0xF026
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	SRM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	TCM	●	●	●	○	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	TRM	●	●	●	●	○
GALAXY\S-Max	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2010	VDM	●	●	●	○	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006	GDM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006	PAM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	ABS	●	●	●	●	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	ACM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	AHCM	●	●	●	○	0x00CF
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	BCMii	●	●	●	●	0x0009 0x011B 0x011C 0x0132 0x0153
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	CCMii	●	●	●	●	0x00F9
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	CDP	●	●	●	●	0x0005
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	DDM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	HCM	●	●	●	●	0x0032
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	HVAC	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	IPC	●	●	●	●	0xF020
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	NAV	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	PDM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	PSCM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	RCM	●	●	●	○	0x00EF 0x0102
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	RFA	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	RGTM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	RHVAC	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	SASM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	SRM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	TCM	●	●	●	●	0x0121 0x0123 0x0122 0x0124 0x0125
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	TRM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2006 - 2010	VDM	●	●	●	●	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2010	CMR	●	●	●	○	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2010	DABM	●	●	●	○	○
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2010	DSM	●	●	●	○	0x00F2
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2010	IPM-A	●	●	●	○	0x00E5
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2010	SOD-L	●	●	●	○	0xF026
GALAXY\S-Max	2.3L	DURATEC-HE / I4	2010	SOD-R	●	●	●	○	0xF026

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
GALAXY\S-Max	2.5L	I5	2006	ABS	●	●	●	●	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8 0x0129
GALAXY\S-Max	2.5L	I5	2006	ACM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	AHCM	●	●	●	○	0x00CF
GALAXY\S-Max	2.5L	I5	2006	BCMii	●	●	●	●	0x0009 0x011B 0x011C 0x0132 0x0153
GALAXY\S-Max	2.5L	I5	2006	CCMii	●	●	●	●	0x00F9
GALAXY\S-Max	2.5L	I5	2006	CDP	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	DDM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	GDM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	HCM	●	●	●	●	0x0032
GALAXY\S-Max	2.5L	I5	2006	HVAC	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	IPC	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	NAV	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	PAM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
GALAXY\S-Max	2.5L	I5	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
GALAXY\S-Max	2.5L	I5	2006	PDM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	PSCM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	RCM	●	●	●	○	0x0102
GALAXY\S-Max	2.5L	I5	2006	RFA	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	RGTM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	RHVAC	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	SASM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	SRM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	TRM	●	●	●	●	○
GALAXY\S-Max	2.5L	I5	2006	VDM	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001	FFH	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001	LHID	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001	MFSW	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001	PAM	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001	RADIO	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001	RCC	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001	RHID	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001	RNS	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001 - Other	ABS	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001 - Other	CCM	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001 - Other	CJB	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001 - Other	IC	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001 - Other	PATS	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001 - Other	PCM	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001 - Other	RCM	●	●	●	●	○
Galaxy	1.9L	EDC 1.9	2001 - Other	TCM	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	1995 - 2000	ABS	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	1995 - 2000	CCM	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	1995 - 2000	CJB	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	1995 - 2000	IC	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	1995 - 2000	PATS	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	1995 - 2000	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
Galaxy	2.0L	2.0 DOHC SFI (8V)	1995 - 2000	RCM	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	1995 - 2000	TCM	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	2000	LHID	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	2000	MFSW	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	2000	PAM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Galaxy	2.0L	2.0 DOHC SFI (8V)	2000	RADIO	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	2000	RCC	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	2000	RHID	●	●	●	●	○
Galaxy	2.0L	2.0 DOHC SFI (8V)	2000	RNS	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	1997 - 2000	ABS	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	1997 - 2000	CCM	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	1997 - 2000	CJB	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	1997 - 2000	IC	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	1997 - 2000	PATS	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	1997 - 2000	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
Galaxy	2.3L	DOHC SFI (16V)	1997 - 2000	RCM	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	1997 - 2000	TCM	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	2000	LHID	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	2000	MFSW	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	2000	PAM	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	2000	RADIO	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	2000	RCC	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	2000	RHID	●	●	●	●	○
Galaxy	2.3L	DOHC SFI (16V)	2000	RNS	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001	LHID	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001	MFSW	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001	PAM	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001	RADIO	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001	RCC	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001	RHID	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001	RNS	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001 - Other	ABS	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001 - Other	CCM	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001 - Other	CJB	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001 - Other	IC	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001 - Other	PATS	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001 - Other	PCM	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001 - Other	RCM	●	●	●	●	○
Galaxy	2.8L	2.8 CD-V6	2001 - Other	TCM	●	●	●	●	○
Granada / Scorpio	2.0L	2.0 DOHC SFI (8V)	1995 - 1997	ABS/TCS	●	●	●	●	○
Granada / Scorpio	2.0L	2.0 DOHC SFI (8V)	1995 - 1997	GEM	●	●	●	●	○
Granada / Scorpio	2.0L	2.0 DOHC SFI (8V)	1995 - 1997	PATS	○	○	●	○	○
Granada / Scorpio	2.0L	2.0 DOHC SFI (8V)	1995 - 1997	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Granada / Scorpio	2.0L	2.0 DOHC SFI (8V)	1995 - 1997	RCM	●	●	●	●	○
Granada / Scorpio	2.0L	DOHC SFI (16V)	1995	ABS/TCS	●	●	●	●	○
Granada / Scorpio	2.0L	DOHC SFI (16V)	1995	GEM	●	●	●	●	○
Granada / Scorpio	2.0L	DOHC SFI (16V)	1995	PATS	○	○	●	○	○
Granada / Scorpio	2.0L	DOHC SFI (16V)	1995	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Granada / Scorpio	2.0L	DOHC SFI (16V)	1995	RCM	●	●	●	●	○
Granada / Scorpio	2.0L	Other	1995	ABS/TCS	●	●	●	●	○
Granada / Scorpio	2.0L	Other	1995	GEM	●	●	●	●	○
Granada / Scorpio	2.0L	Other	1995	PATS	●	●	●	●	○
Granada / Scorpio	2.0L	Other	1995	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083
Granada / Scorpio	2.0L	Other	1995	RCM	●	●	●	●	○
Granada / Scorpio	2.3L	DOHC SFI (16V)	1996 - 1998	ABS/TCS	●	●	●	●	○
Granada / Scorpio	2.3L	DOHC SFI (16V)	1996 - 1998	GEM	●	●	●	●	○
Granada / Scorpio	2.3L	DOHC SFI (16V)	1996 - 1998	PATS	○	○	●	○	○
Granada / Scorpio	2.3L	DOHC SFI (16V)	1996 - 1998	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Granada / Scorpio	2.3L	DOHC SFI (16V)	1996 - 1998	RCM	●	●	●	●	○
Granada / Scorpio	2.5L	Other	Other	ABS/TCS	●	●	●	●	○
Granada / Scorpio	2.5L	Other	Other	GEM	●	●	●	●	○
Granada / Scorpio	2.5L	Other	Other	PATS	●	●	●	●	○
Granada / Scorpio	2.5L	Other	Other	PCM	●	●	●	●	○
Granada / Scorpio	2.5L	Other	Other	RCM	●	●	●	●	○
Granada / Scorpio	2.9L	2.9 V6 24V	1991 - 1998	ABS/TCS	●	●	●	●	○
Granada / Scorpio	2.9L	2.9 V6 24V	1991 - 1998	GEM	●	●	●	●	○
Granada / Scorpio	2.9L	2.9 V6 24V	1991 - 1998	PATS	●	●	●	●	○
Granada / Scorpio	2.9L	2.9 V6 24V	1991 - 1998	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0023
Granada / Scorpio	2.9L	2.9 V6 24V	1991 - 1998	RCM	●	●	●	●	○
Grand Marquis	4.6L	2V	1995 - 1997	DSM	●	●	●	●	○
Grand Marquis	4.6L	2V	1995 - 2004	ABS/TCS	●	●	●	●	0x0008
Grand Marquis	4.6L	2V	1995 - 2007	EATC	●	●	●	●	○
Grand Marquis	4.6L	2V	1995 - 2011	DDM	●	●	●	●	0x000F 0x000A 0x0005 0x0042 0xF044 0xF04C 0xF06A
Grand Marquis	4.6L	2V	1995 - 2011	LCM	●	●	●	●	0xF042 0xF043
Grand Marquis	4.6L	2V	1995 - 2011	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 0x0024 0x00C5
Grand Marquis	4.6L	2V	1996 - 1998	IAB	●	●	●	●	○
Grand Marquis	4.6L	2V	1998 - 2000	ECS	●	●	●	●	○
Grand Marquis	4.6L	2V	1998 - 2002	PATS	●	●	●	●	0x0009
Grand Marquis	4.6L	2V	2000 - 2011	RCM	●	●	●	●	0x000C
Grand Marquis	4.6L	2V	2003 - 2006	RASM	●	●	●	●	0x0013
Grand Marquis	4.6L	2V	2003 - 2006	VAPS	●	●	●	●	○
Grand Marquis	4.6L	2V	2004 - 2010	MC	●	●	●	●	○
Grand Marquis	4.6L	2V	2005 - 2011	ABS	●	●	●	●	0x0008
Grand Marquis	4.6L	2V	2006 - 2011	IC	●	●	●	●	0x0005
Grand Marquis	4.6L	2V	2007 - 2011	VDM	●	●	●	●	0x0005 0x0013 0x0014
Grand Marquis	4.6L	2V	2008 - 2011	HVAC	●	●	●	●	○
Grand Marquis	4.6L	2V NGV	1996	ABS/TCS	●	●	●	●	0x0008
Grand Marquis	4.6L	2V NGV	1996	DDM	●	●	●	●	0x000F
Grand Marquis	4.6L	2V NGV	1996	DSM	●	●	●	●	○
Grand Marquis	4.6L	2V NGV	1996	FIM	●	●	●	●	○
Grand Marquis	4.6L	2V NGV	1996	IAB	●	●	●	●	○
Grand Marquis	4.6L	2V NGV	1996	LCM	●	●	●	●	○
Grand Marquis	4.6L	2V NGV	1996	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083
Ikon	1.3L	HCS	2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Ikon	1.3L	Zetec Rocam	2003	ABS/TCS	●	●	●	●	0x0008
Ikon	1.3L	Zetec Rocam	2003	CSM	●	●	●	●	○
Ikon	1.3L	Zetec Rocam	2003	ECS	●	●	●	●	○
Ikon	1.3L	Zetec Rocam	2003	GEM	●	●	●	●	○
Ikon	1.3L	Zetec Rocam	2003	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Ikon	1.4L	Duratorq Turbo Diesel Common Rail Injection	2009	IC	●	●	●	○	○
Ikon	1.4L	Duratorq Turbo Diesel Common Rail Injection	2009	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Ikon	1.6L	Other	2001	ECS	●	●	●	●	○
Ikon	1.6L	Other	2001	HEC	●	●	●	●	○
Ikon	1.6L	Other	2001	PCM	●	●	●	●	○
Ikon	1.6L	Zetec Rocam	1999 - 2003	ECS	●	●	●	●	○
Ikon	1.6L	Zetec Rocam	1999 - 2003	HEC	●	●	●	●	○
Ikon	1.6L	Zetec Rocam	1999 - 2003	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Ikon	1.6L	Zetec Rocam	2003	ABS/TCS	●	●	●	●	0x0008
Ikon	1.6L	Zetec Rocam	2003	CSM	●	●	●	●	○
Ikon	1.6L	Zetec Rocam	2003	GEM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ikon	1.6L	Zetec Rocam	2003	TCM	●	●	●	●	○
KA	1.0L	HCS	1997	PATS	●	●	●	●	○
KA	1.0L	HCS	1997 - 1999	ABS/TCS	●	●	●	●	○
KA	1.0L	HCS	1997 - 1999	CSM	●	●	●	●	○
KA	1.0L	HCS	1997 - 1999	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0009
KA	1.0L	HCS	1999	ECS	●	●	●	●	○
KA	1.0L	Zetec Rocam	1999	ABS/TCS	●	●	●	●	○
KA	1.0L	Zetec Rocam	1999	CSM	●	●	●	●	○
KA	1.0L	Zetec Rocam	1999	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
KA	1.2L	DURATEC 8V	2009	ABS	●	●	●	●	○
KA	1.2L	DURATEC 8V	2009	BCMii	●	●	●	●	○
KA	1.2L	DURATEC 8V	2009	EATC	●	●	●	●	○
KA	1.2L	DURATEC 8V	2009	EPS	●	●	●	●	○
KA	1.2L	DURATEC 8V	2009	IPC	●	●	●	●	○
KA	1.2L	DURATEC 8V	2009	PAM	●	●	●	○	○
KA	1.2L	DURATEC 8V	2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
KA	1.2L	DURATEC 8V	2009	RCM	●	●	●	●	○
KA	1.3L	DURATEC 8V	2000	ABS/TCS	●	●	●	●	○
KA	1.3L	DURATEC 8V	2000	CSM	●	●	●	●	○
KA	1.3L	DURATEC 8V	2000	ECS	●	●	●	●	○
KA	1.3L	DURATEC 8V	2000	GEM	●	●	●	●	○
KA	1.3L	DURATEC 8V	2000	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
KA	1.3L	Duratorq-Turbo Diesel Common Rail Injection	2009	ABS	●	●	●	●	○
KA	1.3L	Duratorq-Turbo Diesel Common Rail Injection	2009	BCMii	●	●	●	●	○
KA	1.3L	Duratorq-Turbo Diesel Common Rail Injection	2009	EATC	●	●	●	●	○
KA	1.3L	Duratorq-Turbo Diesel Common Rail Injection	2009	EPS	●	●	●	●	○
KA	1.3L	Duratorq-Turbo Diesel Common Rail Injection	2009	IPC	●	●	●	●	○
KA	1.3L	Duratorq-Turbo Diesel Common Rail Injection	2009	PAM	●	●	●	○	○
KA	1.3L	Duratorq-Turbo Diesel Common Rail Injection	2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
KA	1.3L	Duratorq-Turbo Diesel Common Rail Injection	2009	RCM	●	●	●	●	○
KA	1.3L	Endura-E	1997 - 1998	PATS	●	●	●	●	○
KA	1.3L	Endura-E	1997 - 2000	ABS/TCS	●	●	●	●	○
KA	1.3L	Endura-E	1997 - 2000	CSM	●	●	●	●	○
KA	1.3L	Endura-E	1997 - 2000	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
KA	1.3L	Endura-E	1999 - 2000	ECS	●	●	●	●	○
KA	1.3L	Endura-E	2000	GEM	●	●	●	●	○
KA	1.6L	DURATEC 8V	2000	ABS/TCS	●	●	●	●	○
KA	1.6L	DURATEC 8V	2000	CSM	●	●	●	●	○
KA	1.6L	DURATEC 8V	2000	ECS	●	●	●	●	○
KA	1.6L	DURATEC 8V	2000	GEM	●	●	●	●	○
KA	1.6L	DURATEC 8V	2000	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
KA	1.6L	Zetec Rocam	2001	ABS/TCS	●	●	●	●	○
KA	1.6L	Zetec Rocam	2001	CSM	●	●	●	●	○
KA	1.6L	Zetec Rocam	2001	ECS	●	●	●	●	○
KA	1.6L	Zetec Rocam	2001	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
KA	Other	Other	2009	ABS	●	●	●	●	○
KA	Other	Other	2009	BCMii	●	●	●	●	○
KA	Other	Other	2009	EATC	●	●	●	●	○
KA	Other	Other	2009	EPS	●	●	●	●	○
KA	Other	Other	2009	IPC	●	●	●	●	○
KA	Other	Other	2009	PAM	●	●	●	○	○
KA	Other	Other	2009	PCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
KA	Other	Other	2009	RCM	●	●	●	●	○
Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013	ABS	●	●	●	●	0x0012 0x00E8
Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013	AHCM	●	●	●	○	0x00CF
Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013	APIM	●	●	●	●	0x0019
Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013	HCM	●	●	●	○	○
Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x00C3 0x0114
Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013	PDM	●	●	●	○	0x0141
Kuga	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2013	SOD-L	●	●	●	○	○
Kuga	1.6L	GTDI FGEC	2013	ABS	●	●	●	●	0x0012 0x00E8
Kuga	1.6L	GTDI FGEC	2013	AHCM	●	●	●	○	0x00CF
Kuga	1.6L	GTDI FGEC	2013	APIM	●	●	●	●	0x0019
Kuga	1.6L	GTDI FGEC	2013	HCM	●	●	●	○	○
Kuga	1.6L	GTDI FGEC	2013	PDM	●	●	●	○	0x0141
Kuga	1.6L	GTDI FGEC	2013	SOD-L	●	●	●	○	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	ABS	●	●	●	●	0x0005 0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00DD 0x00DE 0x00E8
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	ACM	●	●	●	●	0x011A
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	AWD	●	●	●	●	0x0005
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	CMR	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	D DCU	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	EATC	●	●	●	●	0x0005
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	EPS	●	●	●	○	0x0005
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	FFH	●	●	●	●	0x002F
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	GEM	●	●	●	●	0x0005 0x00ED 0xF025 0xF026 0xF02B 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF034 0xF035 0xF03A 0xF03D
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	HCM	●	●	●	●	0x0155 0x0156
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	IC	●	●	●	●	0x0005 0xF01E 0xF020 0xF028 0xF032 0xF036 0xF03E
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	PAM	●	●	●	●	0x0005
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	PCM	●	●	●	●	0x006F 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x00AB 0x00AC 0x00B4 0x00C1
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	P DCU	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	RCM	●	●	●	●	0x00EA 0xF027 0xF031
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	RETM	●	●	●	●	0x0005
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	RKE	●	●	●	●	0x0005
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection	2008	SRM	●	●	●	●	0x011D
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	ACM	●	●	●	●	0x0005 0x011A
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	AWD	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	CMR	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	D DCU	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	EATC	●	●	●	●	0x0005
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	EPS	●	●	●	○	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	FFH	●	●	●	●	0x002D 0x002F
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	GEM	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	IC	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	PAM	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	P DCU	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	RCM	●	●	●	●	0x00EA
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	RETM	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	RKE	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	SRM	●	●	●	●	○
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008	TCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008 - 2013	ABS	●	●	●	●	0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00DD 0x00DE 0x00E8 0x0012
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2008 - 2013	HCM	●	●	●	●	0x0155 0x0156
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2013	AHCM	●	●	●	○	0x00CF
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2013	APIM	●	●	●	●	0x0019
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2013	PDM	●	●	●	○	0x0141
Kuga	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2013	SOD-L	●	●	●	○	○
Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	ABS	●	●	●	●	0x0005 0x0012 0x00E8
Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	AHCM	●	●	●	○	0x0005 0x00CF
Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	APIM	●	●	●	●	0x0019
Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	HCM	●	●	●	○	0x0005
Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PCM	●	●	●	●	0x0067 0x0080 0x0081 0x0082 0x0083 0x0108
Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PDM	●	●	●	○	0x0005 0x0141
Kuga	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	SOD-L	●	●	●	○	0x0005
Kuga	2.5L	I5	2008	ABS	●	●	●	●	0x0005 0x0008 0x0029 0x002A 0x002B 0x002C 0x0030 0x00DD 0x00DE 0x00E8
Kuga	2.5L	I5	2008	ACM	●	●	●	●	0x0005 0x011A
Kuga	2.5L	I5	2008	AWD	●	●	●	●	0x0005
Kuga	2.5L	I5	2008	CMR	●	●	●	●	○
Kuga	2.5L	I5	2008	D DCU	●	●	●	●	○
Kuga	2.5L	I5	2008	EATC	●	●	●	●	0x0005
Kuga	2.5L	I5	2008	EPS	●	●	●	○	0x0005
Kuga	2.5L	I5	2008	FFH	●	●	●	●	0x002F
Kuga	2.5L	I5	2008	GEM	●	●	●	●	0x0005 0x00ED 0xF025 0xF026 0xF02B 0xF02D 0xF02E 0xF02F 0xF030 0xF032 0xF034 0xF035 0xF03A 0xF03D
Kuga	2.5L	I5	2008	HCM	●	●	●	●	0x0155 0x0156
Kuga	2.5L	I5	2008	IC	●	●	●	●	0x0005 0xF01E 0xF020 0xF028 0xF031 0xF032 0xF036 0xF03E
Kuga	2.5L	I5	2008	PAM	●	●	●	●	0x0005
Kuga	2.5L	I5	2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0126 0x0127
Kuga	2.5L	I5	2008	P DCU	●	●	●	●	○
Kuga	2.5L	I5	2008	RCM	●	●	●	●	0x0005 0x00EA 0xF027
Kuga	2.5L	I5	2008	RETM	●	●	●	●	0x0005
Kuga	2.5L	I5	2008	RKE	●	●	●	●	0x0005
Kuga	2.5L	I5	2008	SRM	●	●	●	●	0x011D
Kuga	2.5L	I5	2008	TCM	●	●	●	●	○
LASER / 323 / TIERRA	1.3L	B3	1996 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1.3L	B3	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	1.3L	B3	2000	ABS/TCS	●	●	●	●	○
LASER / 323 / TIERRA	1.3L	Other	Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	1.5L	Other	Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	1.5L	Z5	1996 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1.5L	Z5	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	1.5L	ZL	1998 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1.5L	ZL	1998 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	1.6L	B6	1996 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1.6L	B6	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	1.6L	Other	Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	1.6L	ZM	1998 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1.6L	ZM	1998 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	1.6L	ZM	2000	ABS/TCS	●	●	●	●	○
LASER / 323 / TIERRA	1.8L	BP	1996 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1.8L	BP	1996 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
LASER / 323 / TIERRA	1.8L	FP	1998 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	1.8L	FP	1998 - Other	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
LASER / 323 / TIERRA	1.8L	Other	Other	PCM	●	●	●	●	○
LASER / 323 / TIERRA	2.0L	FS	2000	ABS/TCS	●	●	●	●	○
LASER / 323 / TIERRA	2.0L	FS	2000 - 2001	ABS	●	●	●	●	○
LASER / 323 / TIERRA	2.0L	FS	2000 - 2001	PCM	●	●	●	●	○
LASER / 323 / TIERRA	2.0L	RF	1998	PCM	●	●	●	●	○
LASER / 323 / TIERRA	2.0L	RF	1998 - Other	ABS	●	●	●	●	○
LASER / 323 / TIERRA	2.0L	RF-T	1998 - 2000	PCM	●	●	●	●	○
LASER / 323 / TIERRA	2.0L	RF-T	2000	ABS	●	●	●	●	○
LS	3.0L	Other	2000 - 2002	CPM	●	●	●	●	○
LS	3.0L	Other	2000 - 2002	RESCU	●	●	●	●	○
LS	3.0L	Other	2000 - 2005	ABS/TCS	●	●	●	●	0x0008 0x0012
LS	3.0L	Other	2000 - 2005	ACM	●	●	●	●	○
LS	3.0L	Other	2000 - 2005	DDM	●	●	●	●	0x000A 0x000F
LS	3.0L	Other	2000 - 2005	DSM	●	●	●	●	0x0011
LS	3.0L	Other	2000 - 2005	EATC	●	●	●	●	○
LS	3.0L	Other	2000 - 2005	GEM	●	●	●	●	○
LS	3.0L	Other	2000 - 2005	HEC	●	●	●	●	0x0009 0x00C7
LS	3.0L	Other	2000 - 2005	MC	●	●	●	●	○
LS	3.0L	Other	2000 - 2005	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C6 0x00C7 0x0024
LS	3.0L	Other	2000 - 2005	RCM	●	●	●	●	0x000C
LS	3.0L	Other	2000 - 2005	REM	●	●	●	●	○
LS	3.0L	Other	2003	VEMS	●	●	●	●	○
LS	3.0L	Other	2003 - 2005	DCSM	●	●	●	●	○
LS	3.0L	Other	2003 - 2005	EPB	●	●	●	●	○
LS	3.0L	Other	2003 - 2005	NAV	●	●	●	●	0x0016 0x001D
LS	3.0L	Other	2003 - 2005	PAM	●	●	●	●	○
LS	3.0L	Other	2003 - 2005	PCSM	●	●	●	●	○
LS	3.0L	Other	2003 - 2005	SCLM	●	●	●	●	○
LS	3.9L	4V	2003	VEMS	●	●	●	●	○
LS	3.9L	4V	2003 - 2006	ABS/TCS	●	●	●	●	0x0008 0x0012
LS	3.9L	4V	2003 - 2006	ACM	●	●	●	●	○
LS	3.9L	4V	2003 - 2006	DCSM	●	●	●	●	○
LS	3.9L	4V	2003 - 2006	DDM	●	●	●	●	0x000A 0x000F
LS	3.9L	4V	2003 - 2006	DSM	●	●	●	●	0x0011
LS	3.9L	4V	2003 - 2006	EATC	●	●	●	●	○
LS	3.9L	4V	2003 - 2006	EPB	●	●	●	●	○
LS	3.9L	4V	2003 - 2006	GEM	●	●	●	●	○
LS	3.9L	4V	2003 - 2006	HEC	●	●	●	●	0x0009 0x00C7
LS	3.9L	4V	2003 - 2006	MC	●	●	●	●	○
LS	3.9L	4V	2003 - 2006	NAV	●	●	●	●	0x0016 0x001D
LS	3.9L	4V	2003 - 2006	PAM	●	●	●	●	○
LS	3.9L	4V	2003 - 2006	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C6 0x0024
LS	3.9L	4V	2003 - 2006	PCSM	●	●	●	●	○
LS	3.9L	4V	2003 - 2006	RCM	●	●	●	●	0x000C
LS	3.9L	4V	2003 - 2006	REM	●	●	●	●	○
LS	3.9L	4V	2003 - 2006	SCLM	●	●	●	●	○
LS	3.9L	Other	2000 - 2002	ABS/TCS	●	●	●	●	0x0008 0x0012
LS	3.9L	Other	2000 - 2002	ACM	●	●	●	●	○
LS	3.9L	Other	2000 - 2002	CPM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
LS	3.9L	Other	2000 - 2002	DDM	●	●	●	●	0x000A 0x000F
LS	3.9L	Other	2000 - 2002	DSM	●	●	●	●	0x0011
LS	3.9L	Other	2000 - 2002	EATC	●	●	●	●	○
LS	3.9L	Other	2000 - 2002	GEM	●	●	●	●	○
LS	3.9L	Other	2000 - 2002	HEC	●	●	●	●	0x0009
LS	3.9L	Other	2000 - 2002	MC	●	●	●	●	○
LS	3.9L	Other	2000 - 2002	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C6 0x00C7
LS	3.9L	Other	2000 - 2002	RCM	●	●	●	●	○
LS	3.9L	Other	2000 - 2002	REM	●	●	●	●	○
LS	3.9L	Other	2000 - 2002	RESCU	●	●	●	●	○
Liata	1.6L	Other	Other	PCM	●	●	●	●	○
Liata	1.8L	Other	Other	PCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005	GEM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	ABS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	EATC	●	●	●	●	0x0020
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	EPS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	IC	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	LPSDM	●	●	●	●	0x0022
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	RCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	RKE	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2005 - 2007	RPSDM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	1.8L	L8	2007	TCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005 - 2007	ABS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005 - 2007	EATC	●	●	●	●	0x0020
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005 - 2007	EPS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005 - 2007	GEM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005 - 2007	IC	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005 - 2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005 - 2007	RCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2005 - 2007	RKE	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	LPSDM	●	●	●	●	0x0022
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	RPSDM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	LF	2007	TCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2005 - 2007	ABS	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2005 - 2007	EATC	●	●	●	●	0x0020
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2005 - 2007	FFH	●	●	●	●	0x002D 0x002F
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2005 - 2007	GEM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2005 - 2007	IC	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2005 - 2007	PCM	●	●	●	●	0x0055 0x005C 0x0080 0x0081 0x0082 0x0083 0x0201
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2005 - 2007	RCM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2005 - 2007	RKE	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2007	LPSDM	●	●	●	●	0x0022
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2007	RPSDM	●	●	●	●	○
MAZDA5 (EURO STG3/4/5 and General Specs.) / i-MAX	2.0L	RF-T	2007	TCM	●	●	●	●	○
MILLENNIA / EUNOS 800	2.0L	KF	1998 - 2000	ABS	●	●	●	●	○
MILLENNIA / EUNOS 800	2.3L	KJ	1998 - 2000	ABS	●	●	●	●	○
MILLENNIA / EUNOS 800	2.5L	KL	1998 - 2000	ABS	●	●	●	●	○
MILLENNIA / EUNOS 800	2.5L	KL	2002	ABS/TCS	●	●	●	●	○
MILLENNIA / EUNOS 800	2.5L	KL	2002	PCM	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010	RETM	●	●	●	○	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	4X4	●	●	●	●	0x0108

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	FDIM	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	HD_LVL	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	I_LCM	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	SASM	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	ACM	●	●	●	●	0x0017 0x0018
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	C-CM	●	●	●	○	0x0046
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	HCM-2	●	●	●	○	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	IPC	●	●	●	●	0x00D0
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	OCSM	●	●	●	●	0x000C 0x0015
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	ABS	●	●	●	●	0x0008
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	APIM	●	●	●	●	0x0019 0x001C
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	DCSM	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	DDM	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	DSM	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	DSP	●	●	●	○	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	FCIM	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	GPSM	●	●	●	○	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	HCM	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	HUD	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	HVAC	●	●	●	○	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	PAM	●	●	●	○	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	PSCM	●	●	●	○	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	RCM	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	RFA	●	●	●	●	0x0064
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	SOD-L	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	SOD-R	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	○	0x0009 0x000A 0x000F 0x0042 0x00D4 0x00D5 0x00FE
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	FCDIM	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DACM-C	●	●	●	○	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HSWM	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	IPM-A	●	●	●	○	0x013E
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RACM	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RTM	●	●	●	○	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SCCM	●	●	●	●	○
MKS	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	VDM	●	●	●	●	0x000E
MKS	3.7L	4V	2009	SECM	●	●	○	○	○
MKS	3.7L	4V	2009 - 2012	4X4	●	●	●	●	0x0108
MKS	3.7L	4V	2009 - 2012	ABS	●	●	●	●	0x0005 0x0008
MKS	3.7L	4V	2009 - 2012	ACM	●	●	●	●	0x0005 0x0017 0x0018
MKS	3.7L	4V	2009 - 2012	APIM	●	●	●	●	0x0019 0x001C
MKS	3.7L	4V	2009 - 2012	C-CM	●	●	●	●	0x0046
MKS	3.7L	4V	2009 - 2012	DCSM	●	●	●	●	0x0005
MKS	3.7L	4V	2009 - 2012	DDM	●	●	●	●	○
MKS	3.7L	4V	2009 - 2012	DSM	●	●	●	●	0xF041 0xF087
MKS	3.7L	4V	2009 - 2012	DSP	●	●	●	○	0x0005
MKS	3.7L	4V	2009 - 2012	FCIM	●	●	●	●	○
MKS	3.7L	4V	2009 - 2012	FDIM	●	●	●	●	0x0005 0xF05A 0xF07F
MKS	3.7L	4V	2009 - 2012	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0xF042 0xF048 0xF04B 0xF04C 0xF05F 0xF088 0xF089 0xF08A

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MKS	3.7L	4V	2009 - 2012	HCM	●	●	●	●	○
MKS	3.7L	4V	2009 - 2012	HCM-2	●	●	●	●	0x0005
MKS	3.7L	4V	2009 - 2012	HD_LVL	●	●	●	●	○
MKS	3.7L	4V	2009 - 2012	HVAC	●	●	●	●	○
MKS	3.7L	4V	2009 - 2012	IPC	●	●	●	●	0x0005
MKS	3.7L	4V	2009 - 2012	OCSM	●	●	●	○	0x000C 0x0015 0x006D
MKS	3.7L	4V	2009 - 2012	PAM	●	●	●	●	○
MKS	3.7L	4V	2009 - 2012	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0009
MKS	3.7L	4V	2009 - 2012	RCM	●	●	●	●	0x0005 0xF022 0xF05D
MKS	3.7L	4V	2009 - 2012	RFA	●	●	●	●	0x0064
MKS	3.7L	4V	2010	RETM	●	●	●	○	○
MKS	3.7L	4V	2010 - 2012	GPSM	●	●	●	○	○
MKS	3.7L	4V	2010 - 2012	HUD	●	●	●	●	○
MKS	3.7L	4V	2010 - 2012	ILCM	●	●	●	●	○
MKS	3.7L	4V	2010 - 2012	PSCM	●	●	●	○	○
MKS	3.7L	4V	2010 - 2012	SASM	●	●	●	●	○
MKS	3.7L	4V	2010 - 2012	SOD-L	●	●	●	●	○
MKS	3.7L	4V	2010 - 2012	SOD-R	●	●	●	●	○
MKS	3.7L	TiVCT	2013	ACM	●	●	●	●	0x0018
MKS	3.7L	TiVCT	2013	BCM#1	●	●	●	○	0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE
MKS	3.7L	TiVCT	2013	C-CM	●	●	●	○	0x0046
MKS	3.7L	TiVCT	2013	FCDIM	●	●	●	●	○
MKS	3.7L	TiVCT	2013	HCM-2	●	●	●	○	○
MKS	3.7L	TiVCT	2013	IPC	●	●	●	●	○
MKS	3.7L	TiVCT	2013	OCSM	●	●	●	●	0x000C 0x0015
MKS	3.7L	TiVCT	2013	PCM	●	●	●	●	0x0010 0x0024 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108
MKS	3.7L	TiVCT	2013 - 2014	ABS	●	●	●	●	0x0008
MKS	3.7L	TiVCT	2013 - 2014	APIM	●	●	●	●	○
MKS	3.7L	TiVCT	2013 - 2014	DACM-C	●	●	●	○	○
MKS	3.7L	TiVCT	2013 - 2014	DCSM	●	●	●	●	○
MKS	3.7L	TiVCT	2013 - 2014	DDM	●	●	●	●	○
MKS	3.7L	TiVCT	2013 - 2014	DSM	●	●	●	●	○
MKS	3.7L	TiVCT	2013 - 2014	DSP	●	●	●	○	○
MKS	3.7L	TiVCT	2013 - 2014	FCIM	●	●	●	○	○
MKS	3.7L	TiVCT	2013 - 2014	GPSM	●	●	●	○	○
MKS	3.7L	TiVCT	2013 - 2014	HCM	●	●	●	●	○
MKS	3.7L	TiVCT	2013 - 2014	HSWM	●	●	●	●	○
MKS	3.7L	TiVCT	2013 - 2014	HUD	●	●	●	●	○
MKS	3.7L	TiVCT	2013 - 2014	HVAC	●	●	●	●	○
MKS	3.7L	TiVCT	2013 - 2014	IPM-A	●	●	●	○	0x013E
MKS	3.7L	TiVCT	2013 - 2014	PAM	●	●	●	○	○
MKS	3.7L	TiVCT	2013 - 2014	PSCM	●	●	●	○	○
MKS	3.7L	TiVCT	2013 - 2014	RACM	●	●	●	●	○
MKS	3.7L	TiVCT	2013 - 2014	RCM	●	●	●	○	○
MKS	3.7L	TiVCT	2013 - 2014	RFA	●	●	●	●	0x0064
MKS	3.7L	TiVCT	2013 - 2014	RTM	●	●	●	○	○
MKS	3.7L	TiVCT	2013 - 2014	SCCM	●	●	●	●	○
MKS	3.7L	TiVCT	2013 - 2014	SOD-L	●	●	●	○	○
MKS	3.7L	TiVCT	2013 - 2014	SOD-R	●	●	●	●	○
MKS	3.7L	TiVCT	2013 - 2014	VDM	●	●	●	●	0x000E

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MKS	Other	Other	2012	4X4	●	●	●	●	○
MKS	Other	Other	2012	ABS	●	●	●	●	○
MKS	Other	Other	2012	ACM	●	●	●	○	○
MKS	Other	Other	2012	APIM	●	●	●	●	○
MKS	Other	Other	2012	C-CM	●	●	●	●	○
MKS	Other	Other	2012	DCSM	●	●	●	●	○
MKS	Other	Other	2012	DDM	●	●	●	●	○
MKS	Other	Other	2012	DSM	●	●	●	●	○
MKS	Other	Other	2012	DSP	●	●	●	●	○
MKS	Other	Other	2012	FCIM	●	●	●	●	○
MKS	Other	Other	2012	FDIM	●	●	●	●	○
MKS	Other	Other	2012	GEM / SJB	●	●	●	●	0x0042
MKS	Other	Other	2012	GPSM	●	●	●	●	○
MKS	Other	Other	2012	HCM	●	●	●	●	○
MKS	Other	Other	2012	HCM-2	●	●	●	○	○
MKS	Other	Other	2012	HD_LVL	●	●	●	●	○
MKS	Other	Other	2012	HUD	●	●	●	●	○
MKS	Other	Other	2012	HVAC	●	●	●	●	○
MKS	Other	Other	2012	IILCM	●	●	●	●	○
MKS	Other	Other	2012	IPC	●	●	●	●	○
MKS	Other	Other	2012	OCSM	●	●	●	●	○
MKS	Other	Other	2012	PAM	●	●	●	○	○
MKS	Other	Other	2012	PSCM	●	●	●	○	○
MKS	Other	Other	2012	RCM	●	●	●	●	○
MKS	Other	Other	2012	RFA	●	●	●	●	○
MKS	Other	Other	2012	SASM	●	●	●	●	○
MKS	Other	Other	2012	SOD-L	●	●	●	●	○
MKS	Other	Other	2012	SOD-R	●	●	●	●	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	○	0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	C-CM	●	●	●	○	0x0046
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	DCSM	●	●	●	●	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPC	●	●	●	○	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPM-A	●	●	●	○	0x013E
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	OCSM	●	●	●	●	0x000C 0x0015
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	PCM	●	●	●	●	0x0010 0x0024 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	ABS	●	●	●	●	0x0008
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	ACM	●	●	●	●	0x0017 0x0018
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●	●	0x0019
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DDM	●	●	●	●	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSM	●	●	●	○	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSP	●	●	●	○	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	FCIM	●	●	●	○	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	GPSM	●	●	●	○	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HCM	●	●	●	●	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HSWM	●	●	●	●	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HUD	●	●	●	●	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HVAC	●	●	●	●	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	LTM	●	●	●	○	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	PAM	●	●	●	○	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	PCSM-2	●	●	●	●	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	PSCM	●	●	●	○	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RACM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RCM	●	●	●	●	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RFA	●	●	●	●	0x0064
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RHVAC	●	●	●	●	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RTM	●	●	●	○	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SCCM	●	●	●	●	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-L	●	●	●	○	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-R	●	●	●	●	○
MKT	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	VDM	●	●	●	●	0x000E
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	4X4	●	●	●	●	0x0108
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	HCM-2	●	●	●	○	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	IHCM	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	RETM	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	SASM	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	C-CM	●	●	●	○	0x0046
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	DCSM	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	IPC	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	OCSM	●	●	●	●	0x000C 0x0015
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	ABS	●	●	●	●	0x0008 0x0012
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	ACM	●	●	●	●	0x0017 0x0018
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	APIM	●	●	●	●	0x0019 0x001C
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	DDM	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	DSM	●	●	●	●	0x0005
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	DSP	●	●	●	○	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	FCIM	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	HCM	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	HUD	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	HVAC	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	LTM	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	PAM	●	●	●	○	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	PCSM-2	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	PSCM	●	●	●	○	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	RCM	●	●	●	●	0x0005
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	RFA	●	●	●	●	0x0064
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	RHVAC	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	SOD-L	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	SOD-R	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2014	GPSM	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	○	0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPM-A	●	●	●	○	0x013E
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HSWM	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RACM	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RTM	●	●	●	○	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SCCM	●	●	●	●	○
MKT	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	VDM	●	●	●	●	0x000E
MKT	3.7L	4V	2010 - 2012	4X4	●	●	●	●	0x0108
MKT	3.7L	4V	2010 - 2012	ABS	●	●	●	●	0x0008 0x0012
MKT	3.7L	4V	2010 - 2012	ACM	●	●	●	●	0x0017 0x0018
MKT	3.7L	4V	2010 - 2012	APIM	●	●	●	●	0x0019 0x001C
MKT	3.7L	4V	2010 - 2012	C-CM	●	●	●	○	0x0046

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MKT	3. 7L	4V	2010 - 2012	DCSM	●	●	●	●	○
MKT	3. 7L	4V	2010 - 2012	DDM	●	●	●	●	○
MKT	3. 7L	4V	2010 - 2012	DSM	●	●	●	●	○
MKT	3. 7L	4V	2010 - 2012	DSP	●	●	●	○	○
MKT	3. 7L	4V	2010 - 2012	FCIM	●	●	●	●	○
MKT	3. 7L	4V	2010 - 2012	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
MKT	3. 7L	4V	2010 - 2012	HCM	●	●	●	●	○
MKT	3. 7L	4V	2010 - 2012	HCM-2	●	●	●	○	○
MKT	3. 7L	4V	2010 - 2012	HUD	●	●	●	●	○
MKT	3. 7L	4V	2010 - 2012	HVAC	●	●	●	●	○
MKT	3. 7L	4V	2010 - 2012	IHCM	●	●	●	●	○
MKT	3. 7L	4V	2010 - 2012	IPC	●	●	●	●	○
MKT	3. 7L	4V	2010 - 2012	LTM	●	●	●	●	○
MKT	3. 7L	4V	2010 - 2012	OCSM	●	●	●	●	0x000C 0x0015 0x006D
MKT	3. 7L	4V	2010 - 2012	PAM	●	●	●	○	○
MKT	3. 7L	4V	2010 - 2012	PCM	●	●	●	●	0x0024 0x0025 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0023 0x0028 0x0031 0x0033
MKT	3. 7L	4V	2010 - 2012	PCSM-2	●	●	●	●	○
MKT	3. 7L	4V	2010 - 2012	PSCM	●	●	●	○	○
MKT	3. 7L	4V	2010 - 2012	RCM	●	●	●	●	○
MKT	3. 7L	4V	2010 - 2012	RETM	●	●	●	●	○
MKT	3. 7L	4V	2010 - 2012	RFA	●	●	●	●	0x0064
MKT	3. 7L	4V	2010 - 2012	RHVAC	●	●	●	●	○
MKT	3. 7L	4V	2010 - 2012	SASM	●	●	●	●	○
MKT	3. 7L	4V	2010 - 2012	SOD-L	●	●	●	●	○
MKT	3. 7L	4V	2010 - 2012	SOD-R	●	●	●	●	○
MKT	3. 7L	4V	2011 - 2012	GPSM	●	●	●	●	○
MKT	3. 7L	TivCT	2013	BCM#1	●	●	●	○	0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE
MKT	3. 7L	TivCT	2013	C-CM	●	●	●	○	0x0046
MKT	3. 7L	TivCT	2013	DCSM	●	●	●	●	○
MKT	3. 7L	TivCT	2013	IPC	●	●	●	●	○
MKT	3. 7L	TivCT	2013	IPM-A	●	●	●	○	0x013E
MKT	3. 7L	TivCT	2013	OCSM	●	●	●	●	0x000C 0x0015
MKT	3. 7L	TivCT	2013	PCM	●	●	●	●	0x0010 0x0024 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108
MKT	3. 7L	TivCT	2013 - 2014	ABS	●	●	●	●	0x0008
MKT	3. 7L	TivCT	2013 - 2014	ACM	●	●	●	●	0x0017 0x0018
MKT	3. 7L	TivCT	2013 - 2014	APIM	●	●	●	●	0x0019
MKT	3. 7L	TivCT	2013 - 2014	DDM	●	●	●	●	○
MKT	3. 7L	TivCT	2013 - 2014	DSM	●	●	●	●	○
MKT	3. 7L	TivCT	2013 - 2014	DSP	●	●	●	○	○
MKT	3. 7L	TivCT	2013 - 2014	FCIM	●	●	●	○	○
MKT	3. 7L	TivCT	2013 - 2014	GPSM	●	●	●	○	○
MKT	3. 7L	TivCT	2013 - 2014	HCM	●	●	●	●	○
MKT	3. 7L	TivCT	2013 - 2014	HSWM	●	●	●	●	○
MKT	3. 7L	TivCT	2013 - 2014	HUD	●	●	●	●	○
MKT	3. 7L	TivCT	2013 - 2014	HVAC	●	●	●	●	○
MKT	3. 7L	TivCT	2013 - 2014	LTM	●	●	●	●	○
MKT	3. 7L	TivCT	2013 - 2014	PAM	●	●	●	○	○
MKT	3. 7L	TivCT	2013 - 2014	PCSM-2	●	●	●	●	○
MKT	3. 7L	TivCT	2013 - 2014	PSCM	●	●	●	○	○
MKT	3. 7L	TivCT	2013 - 2014	RACM	●	●	●	●	○
MKT	3. 7L	TivCT	2013 - 2014	RCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MKT	3. 7L	TiVCT	2013 - 2014	RFA	●	●	●	●	0x0064
MKT	3. 7L	TiVCT	2013 - 2014	RHVAC	●	●	●	●	○
MKT	3. 7L	TiVCT	2013 - 2014	RTM	●	●	●	○	○
MKT	3. 7L	TiVCT	2013 - 2014	SCCM	●	●	●	●	○
MKT	3. 7L	TiVCT	2013 - 2014	SOD-L	●	●	●	○	○
MKT	3. 7L	TiVCT	2013 - 2014	SOD-R	●	●	●	●	○
MKT	3. 7L	TiVCT	2013 - 2014	VDM	●	●	●	●	○
MKT	Other	Other	2012	4X4	●	●	●	●	○
MKT	Other	Other	2012	C-CM	●	●	●	●	○
MKT	Other	Other	2012	DCSM	●	●	●	●	○
MKT	Other	Other	2012	GEM / SJB	●	●	●	●	0x0042
MKT	Other	Other	2012	HCM-2	●	●	●	○	○
MKT	Other	Other	2012	ILCM	●	●	●	●	○
MKT	Other	Other	2012	IPC	●	●	●	●	○
MKT	Other	Other	2012	OCSM	●	●	●	●	○
MKT	Other	Other	2012	RETM	●	●	●	●	○
MKT	Other	Other	2012	SASM	●	●	●	●	○
MKT	Other	Other	2012 - 2014	ABS	●	●	●	●	○
MKT	Other	Other	2012 - 2014	ACM	●	●	●	●	○
MKT	Other	Other	2012 - 2014	APIM	●	●	●	●	○
MKT	Other	Other	2012 - 2014	DDM	●	●	●	●	○
MKT	Other	Other	2012 - 2014	DSM	●	●	●	●	○
MKT	Other	Other	2012 - 2014	DSP	●	●	●	●	○
MKT	Other	Other	2012 - 2014	FCIM	●	●	●	●	○
MKT	Other	Other	2012 - 2014	GPSM	●	●	●	●	○
MKT	Other	Other	2012 - 2014	HCM	●	●	●	●	○
MKT	Other	Other	2012 - 2014	HUD	●	●	●	●	○
MKT	Other	Other	2012 - 2014	HVAC	●	●	●	●	○
MKT	Other	Other	2012 - 2014	LTM	●	●	●	●	○
MKT	Other	Other	2012 - 2014	PAM	●	●	●	○	○
MKT	Other	Other	2012 - 2014	PCSM-2	●	●	●	●	○
MKT	Other	Other	2012 - 2014	PSCM	●	●	●	○	○
MKT	Other	Other	2012 - 2014	RCM	●	●	●	●	○
MKT	Other	Other	2012 - 2014	RFA	●	●	●	●	○
MKT	Other	Other	2012 - 2014	RHVAC	●	●	●	●	○
MKT	Other	Other	2012 - 2014	SOD-L	●	●	●	●	○
MKT	Other	Other	2012 - 2014	SOD-R	●	●	●	●	○
MKT	Other	Other	2014	HSWM	●	●	●	●	○
MKT	Other	Other	2014	RACM	●	●	●	●	○
MKT	Other	Other	2014	RTM	●	●	●	○	○
MKT	Other	Other	2014	SCCM	●	●	●	●	○
MKT	Other	Other	2014	VDM	●	●	●	●	○
MKX	3. 5L	4V	2007	EATC	●	●	●	●	○
MKX	3. 5L	4V	2007	GEM	●	●	●	●	0x000A 0x000F 0x001A
MKX	3. 5L	4V	2007 - 2010	4X4	●	●	●	●	○
MKX	3. 5L	4V	2007 - 2010	ABS	●	●	●	●	0x0008 0x0012 0x0005
MKX	3. 5L	4V	2007 - 2010	ACM	●	●	●	●	0x0016 0x0017 0x0018 0x0019 0x0005
MKX	3. 5L	4V	2007 - 2010	DCSM	●	●	●	●	○
MKX	3. 5L	4V	2007 - 2010	DSM	●	●	●	●	0x0005
MKX	3. 5L	4V	2007 - 2010	DSP	●	●	●	○	0x0005
MKX	3. 5L	4V	2007 - 2010	HCM	●	●	●	●	○
MKX	3. 5L	4V	2007 - 2010	IC	●	●	●	●	0x0009 0x0005 0xF027 0xF047 0xF04A
MKX	3. 5L	4V	2007 - 2010	LTM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MKX	3.5L	4V	2007 - 2010	OCSM	●	●	●	○	0x000C 0x0015 0x006D
MKX	3.5L	4V	2007 - 2010	PAM	●	●	●	●	0x0005
MKX	3.5L	4V	2007 - 2010	PCM	●	●	●	●	0x0024 0x0025 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x0202 0x0010 0x0023 0x0028 0x0031 0x0033 0x00C5
MKX	3.5L	4V	2007 - 2010	RCM	●	●	●	●	0x0005
MKX	3.5L	4V	2007 - 2010	RETM	●	●	●	●	0x0005 0xF04D
MKX	3.5L	4V	2007 - 2010	SASM	●	●	●	●	○
MKX	3.5L	4V	2007 - 2010	SDARS	●	●	●	●	0x0019 0x0005
MKX	3.5L	4V	2008 - 2010	APIM	●	●	●	●	0x0019 0x001C
MKX	3.5L	4V	2008 - 2010	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0xF042 0xF048 0xF049 0xF04B 0xF04C
MKX	3.5L	4V	2008 - 2010	HVAC	●	●	●	●	○
MKX	3.5L	4V	2010	GPSM	●	●	●	○	○
MKX	3.7L	TiVCT	2011 - 2012	TPM	●	●	●	○	○
MKX	3.7L	TiVCT	2011 - 2013	C-CM	●	●	●	○	0x0046
MKX	3.7L	TiVCT	2011 - 2013	HVAC	●	●	●	●	○
MKX	3.7L	TiVCT	2011 - 2013	OCSM	●	●	●	●	0x000C 0x0015
MKX	3.7L	TiVCT	2011 - 2013	PCM	●	●	●	●	0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0108
MKX	3.7L	TiVCT	2011 - 2013	RCM	●	●	●	○	○
MKX	3.7L	TiVCT	2011 - 2013	SCCM	●	●	●	●	○
MKX	3.7L	TiVCT	2011 - 2014	ABS	●	●	●	●	0x0008 0x0012
MKX	3.7L	TiVCT	2011 - 2014	ACM	●	●	●	○	○
MKX	3.7L	TiVCT	2011 - 2014	APIM	●	●	●	○	0x00D6
MKX	3.7L	TiVCT	2011 - 2014	BCM#1	●	●	●	●	0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE 0x000A 0x0112
MKX	3.7L	TiVCT	2011 - 2014	DCSM	●	●	●	●	○
MKX	3.7L	TiVCT	2011 - 2014	DSM	●	●	●	●	○
MKX	3.7L	TiVCT	2011 - 2014	DSP	●	●	●	●	○
MKX	3.7L	TiVCT	2011 - 2014	FCDIM	●	●	●	●	○
MKX	3.7L	TiVCT	2011 - 2014	FCIM	●	●	●	○	○
MKX	3.7L	TiVCT	2011 - 2014	FLM	●	●	●	●	○
MKX	3.7L	TiVCT	2011 - 2014	GPSM	●	●	●	●	○
MKX	3.7L	TiVCT	2011 - 2014	HCM	●	●	●	●	○
MKX	3.7L	TiVCT	2011 - 2014	HSWM	●	●	●	●	○
MKX	3.7L	TiVCT	2011 - 2014	HUD	●	●	●	●	○
MKX	3.7L	TiVCT	2011 - 2014	IPC	●	●	●	●	0x00D0
MKX	3.7L	TiVCT	2011 - 2014	LTM	●	●	●	●	○
MKX	3.7L	TiVCT	2011 - 2014	PAM	●	●	●	●	○
MKX	3.7L	TiVCT	2011 - 2014	RFA	●	●	●	●	0x0064
MKX	3.7L	TiVCT	2011 - 2014	SOD-L	●	●	●	●	○
MKX	3.7L	TiVCT	2011 - 2014	SOD-R	●	●	●	●	○
MKX	3.7L	TiVCT	2013 - 2014	RTM	●	●	●	○	○
MKX	Other	Other	2014	ABS	●	●	●	●	○
MKX	Other	Other	2014	ACM	●	●	●	●	○
MKX	Other	Other	2014	APIM	●	●	●	○	○
MKX	Other	Other	2014	BCM#1	●	●	●	○	○
MKX	Other	Other	2014	DCSM	●	●	●	●	○
MKX	Other	Other	2014	DSM	●	●	●	●	○
MKX	Other	Other	2014	DSP	●	●	●	○	○
MKX	Other	Other	2014	FCDIM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MKX	Other	Other	2014	FCIM	●	●	●	○	○
MKX	Other	Other	2014	FLM	●	●	●	●	○
MKX	Other	Other	2014	GPSM	●	●	●	○	○
MKX	Other	Other	2014	HCM	●	●	●	●	○
MKX	Other	Other	2014	HSWM	●	●	●	●	○
MKX	Other	Other	2014	HUD	●	●	●	●	○
MKX	Other	Other	2014	IPC	●	●	●	●	○
MKX	Other	Other	2014	LTM	●	●	●	●	○
MKX	Other	Other	2014	PAM	●	●	●	○	○
MKX	Other	Other	2014	RFA	●	●	●	●	○
MKX	Other	Other	2014	RTM	●	●	●	○	○
MKX	Other	Other	2014	SOD-L	●	●	●	●	○
MKX	Other	Other	2014	SOD-R	●	●	●	●	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	C-CM	●	●	●	○	0x0046
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	GWM	●	●	●	○	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCM-G	●	●	○	○	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCM-H	●	●	○	○	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●	●	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DACM-C	●	●	●	○	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSM	●	●	●	●	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSP	●	●	●	○	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	FCDIM	●	●	●	●	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	GFM	●	●	●	○	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HSWM	●	●	●	●	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HUD	●	●	●	○	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0038 0x0108
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RACM	●	●	○	○	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RCM	●	●	○	○	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RGTM	●	●	○	○	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SCCM	●	●	○	○	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SCM-E	●	●	○	○	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-L	●	●	○	○	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-R	●	●	○	○	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	VDM	●	●	○	○	0x000E
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	ACM	●	●	●	○	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	FCIM	●	●	●	○	○
MKZ	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2014	RTM	●	●	○	○	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013	C-CM	●	●	●	○	0x0046
MKZ	2.0L	Full Hybrid Electric Vehicle	2013	GWM	●	●	●	○	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013	SCM-G	●	●	○	○	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013	SCM-H	●	●	○	○	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	ACCM#2	●	●	●	●	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	APIM	●	●	●	●	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	DACM-C	●	●	●	○	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	DSM	●	●	●	●	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	DSP	●	●	●	○	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	FCDIM	●	●	●	●	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	GFM	●	●	●	○	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	HSWM	●	●	●	●	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	HUD	●	●	●	○	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	RACM	●	●	○	○	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	RCM	●	●	○	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	RGTM	●	●	○	○	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	SCCM	●	●	○	○	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	SCM-E	●	●	○	○	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	SOD-L	●	●	○	○	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	SOD-R	●	●	○	○	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2013 - 2014	VDM	●	●	○	○	0x000E
MKZ	2.0L	Full Hybrid Electric Vehicle	2014	ACM	●	●	●	○	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2014	FCIM	●	●	●	○	○
MKZ	2.0L	Full Hybrid Electric Vehicle	2014	RTM	●	●	○	○	○
MKZ	3.7L	TiVCT	2013	C-CM	●	●	●	○	0x0046
MKZ	3.7L	TiVCT	2013	GWM	●	●	●	○	○
MKZ	3.7L	TiVCT	2013	SCM-G	●	●	○	○	○
MKZ	3.7L	TiVCT	2013	SCM-H	●	●	○	○	○
MKZ	3.7L	TiVCT	2013 - 2014	APIM	●	●	●	●	○
MKZ	3.7L	TiVCT	2013 - 2014	DACM-C	●	●	●	○	○
MKZ	3.7L	TiVCT	2013 - 2014	DSM	●	●	●	●	○
MKZ	3.7L	TiVCT	2013 - 2014	DSP	●	●	●	○	○
MKZ	3.7L	TiVCT	2013 - 2014	FCDIM	●	●	●	●	○
MKZ	3.7L	TiVCT	2013 - 2014	GFM	●	●	●	○	○
MKZ	3.7L	TiVCT	2013 - 2014	HSWM	●	●	●	●	○
MKZ	3.7L	TiVCT	2013 - 2014	HUD	●	●	●	○	○
MKZ	3.7L	TiVCT	2013 - 2014	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0108 0x0038
MKZ	3.7L	TiVCT	2013 - 2014	RACM	●	●	○	○	○
MKZ	3.7L	TiVCT	2013 - 2014	RCM	●	●	○	○	○
MKZ	3.7L	TiVCT	2013 - 2014	RGTM	●	●	○	○	○
MKZ	3.7L	TiVCT	2013 - 2014	SCCM	●	●	○	○	○
MKZ	3.7L	TiVCT	2013 - 2014	SCM-E	●	●	○	○	○
MKZ	3.7L	TiVCT	2013 - 2014	SOD-L	●	●	○	○	○
MKZ	3.7L	TiVCT	2013 - 2014	SOD-R	●	●	○	○	○
MKZ	3.7L	TiVCT	2013 - 2014	VDM	●	●	○	○	0x000E
MKZ	3.7L	TiVCT	2014	ACM	●	●	●	○	○
MKZ	3.7L	TiVCT	2014	FCIM	●	●	●	○	○
MKZ	3.7L	TiVCT	2014	RTM	●	●	○	○	○
MKZ	Other	Other	2013	APIM	●	●	●	●	○
MKZ	Other	Other	2013	C-CM	●	●	●	○	○
MKZ	Other	Other	2013	DACM-C	●	●	●	○	○
MKZ	Other	Other	2013	DSM	●	●	●	●	○
MKZ	Other	Other	2013	DSP	●	●	●	○	○
MKZ	Other	Other	2013	FCDIM	●	●	●	●	○
MKZ	Other	Other	2013	GFM	●	●	●	○	○
MKZ	Other	Other	2013	GWM	●	●	●	○	○
MKZ	Other	Other	2013	HSWM	●	●	●	●	○
MKZ	Other	Other	2013	HUD	●	●	●	○	○
MKZ	Other	Other	2013	RACM	●	●	○	○	○
MKZ	Other	Other	2013	RCM	●	●	○	○	○
MKZ	Other	Other	2013	RGTM	●	●	○	○	○
MKZ	Other	Other	2013	SCCM	●	●	○	○	○
MKZ	Other	Other	2013	SCM-E	●	●	○	○	○
MKZ	Other	Other	2013	SCM-G	●	●	○	○	○
MKZ	Other	Other	2013	SCM-H	●	●	○	○	○
MKZ	Other	Other	2013	SOD-L	●	●	○	○	○
MKZ	Other	Other	2013	SOD-R	●	●	○	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MKZ	Other	Other	2013	VDM	●	●	○	○	○
MONDEO	1.5L	EcoBoost – Gas Turbocharged Direct Injection	2013	APIM	●	●	●	●	○
MONDEO	1.5L	EcoBoost – Gas Turbocharged Direct Injection	2013	C-CM	●	●	●	○	0x0046
MONDEO	1.5L	EcoBoost – Gas Turbocharged Direct Injection	2013	DSP	●	●	●	○	○
MONDEO	1.5L	EcoBoost – Gas Turbocharged Direct Injection	2013	FCIM	●	●	●	○	○
MONDEO	1.5L	EcoBoost – Gas Turbocharged Direct Injection	2013	GPSM	●	●	●	○	○
MONDEO	1.5L	EcoBoost – Gas Turbocharged Direct Injection	2013	GWM	●	●	●	○	○
MONDEO	1.5L	EcoBoost – Gas Turbocharged Direct Injection	2013	HCM	●	●	●	○	○
MONDEO	1.5L	EcoBoost – Gas Turbocharged Direct Injection	2013	HUD	●	●	●	○	○
MONDEO	1.5L	EcoBoost – Gas Turbocharged Direct Injection	2013	RACM	●	●	○	○	○
MONDEO	1.5L	EcoBoost – Gas Turbocharged Direct Injection	2013	RCM	●	●	○	○	○
MONDEO	1.5L	EcoBoost – Gas Turbocharged Direct Injection	2013	RTM	●	●	○	○	○
MONDEO	1.5L	EcoBoost – Gas Turbocharged Direct Injection	2013	SCCM	●	●	○	○	○
MONDEO	1.5L	EcoBoost – Gas Turbocharged Direct Injection	2013	SCM-E	●	●	○	○	○
MONDEO	1.5L	EcoBoost – Gas Turbocharged Direct Injection	2013	SOD-L	●	●	○	○	○
MONDEO	1.6L	DURATEC VCT	2007 – 2011	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	1.6L	DURATEC VCT	2007 – 2011	ACM	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 – 2011	AHCM	●	●	●	○	0x00CF
MONDEO	1.6L	DURATEC VCT	2007 – 2011	BCMii	●	●	●	●	0x011B 0x011C 0x0132 0x0153 0x0009
MONDEO	1.6L	DURATEC VCT	2007 – 2011	CCMii	●	●	●	●	0x00F9
MONDEO	1.6L	DURATEC VCT	2007 – 2011	CDP	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 – 2011	CMR	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 – 2011	DDM	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 – 2011	DSM	●	●	●	○	0x00F2
MONDEO	1.6L	DURATEC VCT	2007 – 2011	HCM	●	●	●	○	0x0032
MONDEO	1.6L	DURATEC VCT	2007 – 2011	HVAC	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 – 2011	IPC	●	●	●	●	○
MONDEO	1.6L	DURATEC VCT	2007 – 2011	PAM	●	●	●	●	○
MONDEO	1.6L	DURATEC VCT	2007 – 2011	PBM	●	●	●	●	0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00EE 0x00F8
MONDEO	1.6L	DURATEC VCT	2007 – 2011	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083 0x0025 0x00BC
MONDEO	1.6L	DURATEC VCT	2007 – 2011	PDM	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 – 2011	PSCM	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 – 2011	RCM	●	●	●	●	0x00EF 0x0102
MONDEO	1.6L	DURATEC VCT	2007 – 2011	RFA	●	●	●	●	○
MONDEO	1.6L	DURATEC VCT	2007 – 2011	SASM	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 – 2011	SRM	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2007 – 2011	TRM	●	●	●	●	○
MONDEO	1.6L	DURATEC VCT	2007 – 2011	VDM	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2011	DABM	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2011	IPM-A	●	●	●	○	0x00E5
MONDEO	1.6L	DURATEC VCT	2011	RGTM	●	●	●	●	○
MONDEO	1.6L	DURATEC VCT	2011	RHVAC	●	●	●	○	○
MONDEO	1.6L	DURATEC VCT	2011	SOD-L	●	●	●	○	0x00BC 0xF026
MONDEO	1.6L	DURATEC VCT	2011	SOD-R	●	●	●	○	0xF026
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	●	●	●	○	○
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	AHCM	●	●	●	○	0x00CF
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	0x011C 0x0132 0x0153
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	CCMii	●	●	●	○	0x00F9
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	CDP	●	●	●	○	○
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	CMR	●	●	●	○	○
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	DABM	●	●	●	○	○
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	DSM	●	●	●	○	0x00F2
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	HCM	●	●	●	○	0x0032
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	○	○
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-A	●	●	●	○	0x00E5
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	PAM	●	●	●	●	○
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	PBM	●	●	●	●	0x00F3 0x00F4 0x00F5 0x00F6
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00B1 0x00B7 0x00B9 0x00BC 0x00BD 0x00C1 0x00C3
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	○	○
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	PSCM	●	●	●	○	○
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	●	●	●	●	0x00EF 0x0102
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	RFA	●	●	●	●	○
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	RGTM	●	●	●	●	○
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	RHVAC	●	●	●	○	○
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	SASM	●	●	●	○	○
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-L	●	●	●	○	0xF026
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-R	●	●	●	○	0xF026
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	●	●	●	○	○
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
MONDEO	1.6L	Duratorq Turbo Diesel Common Rail Injection	2011	VDM	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	ACM	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	AHCM	●	●	●	○	0x00CF
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	BCMii	●	●	●	●	0x011B 0x011C 0x0132 0x0153
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	CCMii	●	●	●	●	0x00F9
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	CDP	●	●	●	○	0x0005
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	CMR	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	DABM	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	DDM	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	DSM	●	●	●	○	0x00F2
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	HCM	●	●	●	○	0x0032
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	HVAC	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPC	●	●	●	●	0xF020
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-A	●	●	●	○	0x00E5
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PAM	●	●	●	●	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PBM	●	●	●	●	0x00F3 0x00F4 0x00F5 0x00F6 0x00F7
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x00C3 0x0114
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PDM	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	PSCM	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RCM	●	●	●	●	0x00EF 0x0102
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RFA	●	●	●	●	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RGTM	●	●	●	●	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	RHVAC	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SASM	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-L	●	●	●	○	0xF026
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-R	●	●	●	○	0xF026
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	SRM	●	●	●	○	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	TRM	●	●	●	●	○
MONDEO	1.6L	EcoBoost - Gas Turbocharged Direct Injection	2011	VDM	●	●	●	○	○
MONDEO	1.6L	Zetec	1993 - 1999	ABS	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	1.6L	Zetec	1993 - 1999	CSM	●	●	●	●	○
MONDEO	1.6L	Zetec	1993 - 1999	PATS	●	●	●	●	○
MONDEO	1.6L	Zetec	1997 - 1999	FFH	●	●	●	●	○
MONDEO	1.6L	Zetec	1997 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
MONDEO	1.6L	Zetec	1998 - 1999	ABS/TCS	●	●	●	●	○
MONDEO	1.8L	DURATEC-HE / I4	2001	ABS	●	●	●	●	0x0008 0x00F1
MONDEO	1.8L	DURATEC-HE / I4	2001	ABS/TCS	●	●	●	●	0x0008 0x00F1
MONDEO	1.8L	DURATEC-HE / I4	2001	ACM	●	●	●	●	○
MONDEO	1.8L	DURATEC-HE / I4	2001	CDP	●	●	●	●	○
MONDEO	1.8L	DURATEC-HE / I4	2001	CSM	●	●	●	●	○
MONDEO	1.8L	DURATEC-HE / I4	2001	EATC	●	●	●	●	○
MONDEO	1.8L	DURATEC-HE / I4	2001	GDM	●	●	●	●	○
MONDEO	1.8L	DURATEC-HE / I4	2001	GEM	●	●	●	●	0x0005 0xF027 0xF02D 0xF02F 0xF030 0xF03A 0xF09D 0xF09E 0xF09F 0xF0A0 0xF0A1 0xF0A2 0xF0A3 0xF0A4 0xF0A5
MONDEO	1.8L	DURATEC-HE / I4	2001	HEC	●	●	●	●	0x0005
MONDEO	1.8L	DURATEC-HE / I4	2001	LHID	●	●	●	●	0x0005 0x0032
MONDEO	1.8L	DURATEC-HE / I4	2001	NAV	●	●	●	●	○
MONDEO	1.8L	DURATEC-HE / I4	2001	PATS	●	●	●	●	○
MONDEO	1.8L	DURATEC-HE / I4	2001	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
MONDEO	1.8L	DURATEC-HE / I4	2001	RCM	●	●	●	●	○
MONDEO	1.8L	DURATEC-HE / I4	2001	RETM	●	●	●	●	○
MONDEO	1.8L	DURATEC-HE / I4	2001	RHID	●	●	●	●	0x0005
MONDEO	1.8L	DURATEC-HE / I4	2001	SRM	●	●	●	●	○
MONDEO	1.8L	DURATEC-Sci	2001	ABS	●	●	●	●	0x00F1
MONDEO	1.8L	DURATEC-Sci	2001	ABS/TCS	●	●	●	●	0x0008 0x00F1
MONDEO	1.8L	DURATEC-Sci	2001	ACM	●	●	●	●	○
MONDEO	1.8L	DURATEC-Sci	2001	CDP	●	●	●	●	○
MONDEO	1.8L	DURATEC-Sci	2001	CSM	●	●	●	●	○
MONDEO	1.8L	DURATEC-Sci	2001	EATC	●	●	●	●	○
MONDEO	1.8L	DURATEC-Sci	2001	GDM	●	●	●	●	0x0100
MONDEO	1.8L	DURATEC-Sci	2001	GEM	●	●	●	●	○
MONDEO	1.8L	DURATEC-Sci	2001	HEC	●	●	●	●	○
MONDEO	1.8L	DURATEC-Sci	2001	LHID	●	●	●	●	0x0032
MONDEO	1.8L	DURATEC-Sci	2001	NAV	●	●	●	●	○
MONDEO	1.8L	DURATEC-Sci	2001	PATS	●	●	●	●	○
MONDEO	1.8L	DURATEC-Sci	2001	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
MONDEO	1.8L	DURATEC-Sci	2001	RCM	●	●	●	●	○
MONDEO	1.8L	DURATEC-Sci	2001	RETM	●	●	●	●	○
MONDEO	1.8L	DURATEC-Sci	2001	RHID	●	●	●	●	○
MONDEO	1.8L	DURATEC-Sci	2001	SRM	●	●	●	●	○
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	ACM	●	●	○	○	○
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	AHCM	●	●	●	○	0x00CF
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	BCMii	●	●	●	●	0x0009 0x011B 0x011C 0x0132 0x0153
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	CCMii	●	●	●	●	0x00F9
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	CDP	●	●	●	●	○
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	CMR	●	●	●	●	○
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	DDM	●	●	●	●	○
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	DSM	●	●	●	●	0x00F2
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	HCM	●	●	●	●	0x0032
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	HVAC	●	●	●	●	○
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	IPC	●	●	●	●	0xF020

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	PAM	●	●	●	●	○
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	PCM	●	●	●	●	0x006F 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AB 0x00AC 0x00B4 0x00C1
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	PDM	●	●	●	●	○
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	PSCM	●	●	●	●	○
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	RCM	●	●	●	●	0x00EF 0x0102
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	RFA	●	●	●	○	○
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	SASM	●	●	●	●	○
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	SRM	●	●	●	●	○
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	TRM	●	●	●	●	○
MONDEO	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007	VDM	●	●	●	○	○
MONDEO	1.8L	Endura-DE	1997	FFH	●	●	●	●	○
MONDEO	1.8L	Endura-DE	1997	PCM	○	○	●	○	○
MONDEO	1.8L	Endura-DE	1997 - Other	ABS	●	●	●	●	○
MONDEO	1.8L	Endura-DE	1997 - Other	CSM	●	●	●	●	○
MONDEO	1.8L	Endura-DE	1997 - Other	PATS	●	●	●	●	○
MONDEO	1.8L	Zetec	1993 - 2000	ABS	●	●	●	●	○
MONDEO	1.8L	Zetec	1993 - 2000	CSM	●	●	●	●	○
MONDEO	1.8L	Zetec	1993 - 2000	PATS	●	●	●	●	○
MONDEO	1.8L	Zetec	1997 - 1999	FFH	●	●	●	●	○
MONDEO	1.8L	Zetec	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084
MONDEO	1.8L	Zetec	1998 - 2000	ABS/TCS	●	●	●	●	○
MONDEO	1.8L	Zetec	2000	AFCM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2001	ABS/TCS	●	●	●	●	0x0008 0x00F1
MONDEO	2.0L	DURATEC-HE / I4	2001	CSM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2001	EATC	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2001	GDM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2001	GEM	●	●	●	●	0x0005 0xF027 0xF02D 0xF02F 0xF030 0xF03A 0xF09D 0xF09E 0xF09F 0xF0A0 0xF0A1 0xF0A2 0xF0A3 0xF0A4 0xF0A5
MONDEO	2.0L	DURATEC-HE / I4	2001	HEC	●	●	●	●	0x0005
MONDEO	2.0L	DURATEC-HE / I4	2001	LHID	●	●	●	●	0x0005 0x0032
MONDEO	2.0L	DURATEC-HE / I4	2001	NAV	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2001	PATS	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2001	RETM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2001	RHID	●	●	●	●	0x0005
MONDEO	2.0L	DURATEC-HE / I4	2001 - 2007	ABS	●	●	●	●	0x0008 0x00F1 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	2.0L	DURATEC-HE / I4	2001 - 2007	ACM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2001 - 2007	CDP	●	●	●	●	0x0005
MONDEO	2.0L	DURATEC-HE / I4	2001 - 2007	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x00AC
MONDEO	2.0L	DURATEC-HE / I4	2001 - 2007	RCM	●	●	●	●	0x00EF 0x0102
MONDEO	2.0L	DURATEC-HE / I4	2001 - 2007	SRM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	AHCM	●	●	●	○	0x00CF
MONDEO	2.0L	DURATEC-HE / I4	2007	BCMii	●	●	●	●	0x0009 0x011B 0x011C 0x0132 0x0153
MONDEO	2.0L	DURATEC-HE / I4	2007	CCMii	●	●	●	●	0x00F9
MONDEO	2.0L	DURATEC-HE / I4	2007	CMR	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	DDM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	DSM	●	●	●	●	0x00F2
MONDEO	2.0L	DURATEC-HE / I4	2007	HCM	●	●	●	●	0x0032
MONDEO	2.0L	DURATEC-HE / I4	2007	HVAC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	2.0L	DURATEC-HE / I4	2007	IPC	●	●	●	●	0xF020
MONDEO	2.0L	DURATEC-HE / I4	2007	PAM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
MONDEO	2.0L	DURATEC-HE / I4	2007	PDM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	PSCM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	RFA	●	●	●	○	○
MONDEO	2.0L	DURATEC-HE / I4	2007	SASM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	TRM	●	●	●	●	○
MONDEO	2.0L	DURATEC-HE / I4	2007	VDM	●	●	●	○	○
MONDEO	2.0L	DURATORQ DI	2001	ABS	●	●	●	○	0x0008 0x00F1
MONDEO	2.0L	DURATORQ DI	2001	ABS/TCS	●	●	●	●	0x00F1
MONDEO	2.0L	DURATORQ DI	2001	ACM	●	●	●	●	○
MONDEO	2.0L	DURATORQ DI	2001	CDP	●	●	●	●	○
MONDEO	2.0L	DURATORQ DI	2001	CSM	●	●	●	●	○
MONDEO	2.0L	DURATORQ DI	2001	EATC	●	●	●	●	○
MONDEO	2.0L	DURATORQ DI	2001	FFH	●	●	●	●	0x00CF
MONDEO	2.0L	DURATORQ DI	2001	FIP	●	●	●	●	○
MONDEO	2.0L	DURATORQ DI	2001	GDM	●	●	●	●	○
MONDEO	2.0L	DURATORQ DI	2001	GEM	●	●	●	●	○
MONDEO	2.0L	DURATORQ DI	2001	HEC	●	●	●	●	○
MONDEO	2.0L	DURATORQ DI	2001	LHID	●	●	●	●	0x0032
MONDEO	2.0L	DURATORQ DI	2001	NAV	●	●	●	●	○
MONDEO	2.0L	DURATORQ DI	2001	PATS	●	●	●	●	○
MONDEO	2.0L	DURATORQ DI	2001	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
MONDEO	2.0L	DURATORQ DI	2001	RCM	●	●	●	●	○
MONDEO	2.0L	DURATORQ DI	2001	RETM	●	●	●	●	○
MONDEO	2.0L	DURATORQ DI	2001	RHID	●	●	●	●	○
MONDEO	2.0L	DURATORQ DI	2001	SRM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	ABS/TCS	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	CSM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	EATC	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	FFH	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	GDM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	GEM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	HEC	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	ICU	○	○	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	LHID	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	NAV	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	PATS	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	RETM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	RHID	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	ACM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	CDP	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	PCM	●	●	●	●	0x006F 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00AB 0x00AC 0x00B4 0x00C1
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	RCM	●	●	●	●	0x00EF 0x0102
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	SRM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	TCM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007	PAM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	AHCM	●	●	●	○	0x00CF
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	BCMii	●	●	●	●	0x0009 0x011B 0x011C 0x0132 0x0153
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	CCMii	●	●	●	●	0x00F9

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	CMR	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	DDM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	DSM	●	●	●	●	0x00F2
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	HCM	●	●	●	●	0x0032
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	HVAC	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	IPC	●	●	●	●	0xF020
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	PDM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	PSCM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	RFA	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	SASM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	TRM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	VDM	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	DABM	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-A	●	●	●	○	0x00E5
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	RGTM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	RHVAC	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-L	●	●	●	○	0xF026
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-R	●	●	●	○	0xF026
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007	PAM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007	RFA	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	ACM	●	●	○	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	AHCM	●	●	●	○	0x00CF
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	BCMii	●	●	●	●	0x0009 0x011C 0x0132 0x0153
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	CCMi	●	●	●	●	0x00F9
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	CDP	●	●	●	●	0x0005
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	CMR	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	DDM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	DSM	●	●	●	●	0x00F2
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	HCM	●	●	●	●	0x0032
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	HVAC	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	IPC	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	PDM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	PSCM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	RCM	●	●	●	●	0x00EF 0x0102
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	SASM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	SRM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	TCM	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	TRM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2007 - 2011	VDM	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	DABM	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	IPM-A	●	●	●	○	0x00E5
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	RGTM	●	●	●	●	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	RHVAC	●	●	●	○	○
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	SOD-L	●	●	●	○	0xF026
MONDEO	2.0L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	SOD-R	●	●	●	○	0xF026
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007	PAM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007	RFA	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007	TCM	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	ACM	●	●	○	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	AHCM	●	●	●	○	0x00CF
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	BCMii	●	●	●	●	0x0009 0x011C 0x0132 0x0153
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	CCMii	●	●	●	●	0x00F9
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	CDP	●	●	●	●	0x0005
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	CMR	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	DDM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	DSM	●	●	●	●	0x00F2
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	HVAC	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	IPC	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	PDM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	PSCM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	SASM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	SRM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	TRM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2011	VDM	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2013	HCM	●	●	●	●	0x0032
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2013	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083 0x0095 0x0108
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2007 - 2013	RCM	●	●	●	●	0x00EF 0x0102
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	DABM	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	IPM-A	●	●	●	○	0x00E5
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	RGTM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	RHVAC	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011	SOD-R	●	●	●	○	0xF026
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2011 - 2013	SOD-L	●	●	●	○	0xF026
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	APIM	●	●	●	●	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	C-CM	●	●	●	○	0x0046
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	DSP	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	FCIM	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	GPSM	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	GWM	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	HUD	●	●	●	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	RACM	●	●	○	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	RTM	●	●	○	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCCM	●	●	○	○	○
MONDEO	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	SCM-E	●	●	○	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007	PAM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007	RFA	●	●	●	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007	TCM	●	●	●	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	ACM	●	●	○	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	AHCM	●	●	●	○	0x00CF
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	BCMii	●	●	●	●	0x0009 0x0132 0x0153
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	CCMii	●	●	●	●	0x00F9
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	CDP	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	CMR	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	DDM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	DSM	●	●	●	●	0x00F2
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	HCM	●	●	●	●	0x0032
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	HVAC	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	IPC	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	PDM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	PSCM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	RCM	●	●	●	●	0x00EF 0x0102
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	SASM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	SRM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	TRM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2007 - 2011	VDM	●	●	●	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2011	DABM	●	●	●	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2011	IPM-A	●	●	●	○	0x00E5
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2011	RGTM	●	●	●	●	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2011	RHVAC	●	●	●	○	○
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2011	SOD-L	●	●	●	○	0xF026
MONDEO	2.0L	Ecoboost GTDI Chinese market only	2011	SOD-R	●	●	●	○	0xF026
MONDEO	2.0L	Zetec	1993 - 2000	ABS	●	●	●	●	○
MONDEO	2.0L	Zetec	1993 - 2000	CSM	●	●	●	●	○
MONDEO	2.0L	Zetec	1993 - 2000	PATS	●	●	●	●	○
MONDEO	2.0L	Zetec	1997 - 1999	FFH	●	●	●	●	○
MONDEO	2.0L	Zetec	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084
MONDEO	2.0L	Zetec	1998 - 2000	ABS/TCS	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	ABS/TCS	●	●	●	●	0x00F1
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	CSM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	EATC	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	FFH	●	●	●	●	0x00CF
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	GDM	●	●	●	●	0x0100
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	GEM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	HEC	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	ICU	○	○	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	LHID	●	●	●	●	0x0032
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	NAV	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	PATS	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	RETM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001	RHID	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2007	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0092 0x0090 0x0098 0x0099 0x009A 0x00A5 0x00AA 0x00AF 0x00B0 0x00B1 0x00B2 0x00B8 0x00B9 0x00C1
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	ABS	●	●	●	○	0x0008 0x00F1 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	ACM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	CDP	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	RCM	●	●	●	●	0x00EF 0x0102
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2001 - 2011	SRM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007	PAM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007	RFA	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	AHCM	●	●	●	○	0x00CF
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	BCMii	●	●	●	●	0x0009 0x011C 0x0132 0x0153
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	CCMii	●	●	●	●	0x00F9
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	CMR	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	DDM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	DSM	●	●	●	●	0x00F2
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	HCM	●	●	●	●	0x0032
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	HVAC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	IPC	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6 0x00F7 0x00F8
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	PDM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	PSCM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	SASM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	TRM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2011	VDM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	DABM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPM-A	●	●	●	○	0x00E5
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RGTM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RHVAC	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-L	●	●	●	○	0xF026
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SOD-R	●	●	●	○	0xF026
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	ACM	●	●	○	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	AHCM	●	●	●	○	0x00CF
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	BCMii	●	●	●	●	0x0009 0x011B 0x011C 0x0132 0x0153
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	CCMii	●	●	●	●	0x00F9
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	CDP	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	CMR	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	DABM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	DDM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	DSM	●	●	●	○	0x00F2
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	HCM	●	●	●	○	0x0032
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	HVAC	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	IPC	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	IPM-A	●	●	●	○	0x00E5
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	PBM	●	●	●	●	0x00F3 0x00F4 0x00F5 0x00F7
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	PDM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	PSCM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	RCM	●	●	●	●	0x00EF 0x0102
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	RGTM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	RHVAC	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	SASM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	SOD-L	●	●	●	○	0xF026
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	SOD-R	●	●	●	○	0xF026
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	SRM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	TCM	●	●	●	○	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	TRM	●	●	●	●	○
MONDEO	2.2L	Duratorq Turbo Diesel Common Rail Injection StgV	2011	VDM	●	●	●	○	○
MONDEO	2.3L	DURATEC-HE / I4	2007	PAM	●	●	●	●	○
MONDEO	2.3L	DURATEC-HE / I4	2007 - 2011	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	2.3L	DURATEC-HE / I4	2007 - 2011	ACM	●	●	○	○	○
MONDEO	2.3L	DURATEC-HE / I4	2007 - 2011	AHCM	●	●	●	○	0x00CF
MONDEO	2.3L	DURATEC-HE / I4	2007 - 2011	BCMii	●	●	●	●	0x0009 0x011B 0x011C 0x0132 0x0153
MONDEO	2.3L	DURATEC-HE / I4	2007 - 2011	CCMii	●	●	●	●	0x00F9
MONDEO	2.3L	DURATEC-HE / I4	2007 - 2011	CDP	●	●	●	●	0x0005
MONDEO	2.3L	DURATEC-HE / I4	2007 - 2011	CMR	●	●	●	○	○
MONDEO	2.3L	DURATEC-HE / I4	2007 - 2011	DDM	●	●	●	●	○
MONDEO	2.3L	DURATEC-HE / I4	2007 - 2011	DSM	●	●	●	●	0x00F2
MONDEO	2.3L	DURATEC-HE / I4	2007 - 2011	HCM	●	●	●	●	0x0032
MONDEO	2.3L	DURATEC-HE / I4	2007 - 2011	HVAC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	IPC	●	●	●	●	0xF020
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	PBM	●	●	●	●	0x00EE 0x00F3 0x00F4 0x00F5 0x00F6
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x00AC
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	PDM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	PSCM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	RCM	●	●	●	●	0x00EF 0x0102
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	RFA	●	●	●	○	0x000A
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	SASM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	SRM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	TCM	●	●	●	●	0x0121 0x0122 0x0123 0x0124 0x0125
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	TRM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2007 - 2011	VDM	●	●	●	○	○
MONDEO	2. 3L	DURATEC-HE / I4	2011	DABM	●	●	●	○	○
MONDEO	2. 3L	DURATEC-HE / I4	2011	IPM-A	●	●	●	○	0x00E5
MONDEO	2. 3L	DURATEC-HE / I4	2011	RGTM	●	●	●	●	○
MONDEO	2. 3L	DURATEC-HE / I4	2011	RHVAC	●	●	●	○	○
MONDEO	2. 3L	DURATEC-HE / I4	2011	SOD-L	●	●	●	○	0xF026
MONDEO	2. 3L	DURATEC-HE / I4	2011	SOD-R	●	●	●	○	0xF026
MONDEO	2. 5L	Duratec-VE	1994 - 2001	ABS	●	●	●	●	0x0008 0x00F1
MONDEO	2. 5L	Duratec-VE	1994 - 2001	CSM	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	1994 - 2001	PATS	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	1997 - 1999	FFH	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	1997 - 2001	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0083 0x0009 0x0084
MONDEO	2. 5L	Duratec-VE	1998 - 2001	ABS/TCS	●	●	●	●	0x0008 0x00F1
MONDEO	2. 5L	Duratec-VE	2001	ACM	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	2001	CDP	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	2001	EATC	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	2001	GDM	●	●	●	●	0x0100
MONDEO	2. 5L	Duratec-VE	2001	GEM	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	2001	HEC	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	2001	LHID	●	●	●	●	0x0032
MONDEO	2. 5L	Duratec-VE	2001	NAV	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	2001	RCM	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	2001	RETM	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	2001	RHID	●	●	●	●	○
MONDEO	2. 5L	Duratec-VE	2001	SRM	●	●	●	●	○
MONDEO	2. 5L	I5	2007	ABS	●	●	●	○	0x0008 0x002B 0x0053 0x0054 0x00D9 0x00E2 0x00E8
MONDEO	2. 5L	I5	2007	ACM	●	●	○	○	○
MONDEO	2. 5L	I5	2007	AHCM	●	●	●	○	0x00CF
MONDEO	2. 5L	I5	2007	BCMii	●	●	●	●	0x0009 0x011B 0x011C 0x0132 0x0153
MONDEO	2. 5L	I5	2007	CCMi	●	●	●	●	0x00F9
MONDEO	2. 5L	I5	2007	CDP	●	●	●	●	○
MONDEO	2. 5L	I5	2007	CMR	●	●	●	●	○
MONDEO	2. 5L	I5	2007	DDM	●	●	●	●	○
MONDEO	2. 5L	I5	2007	DSM	●	●	●	●	0x00F2
MONDEO	2. 5L	I5	2007	HCM	●	●	●	●	0x0032
MONDEO	2. 5L	I5	2007	HVAC	●	●	●	●	○
MONDEO	2. 5L	I5	2007	IPC	●	●	●	●	○
MONDEO	2. 5L	I5	2007	PAM	●	●	●	●	○
MONDEO	2. 5L	I5	2007	PBM	●	●	●	●	0x00F3 0x00F4 0x00F5 0x00F6 0x00F7
MONDEO	2. 5L	I5	2007	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
MONDEO	2. 5L	I5	2007	PDM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
MONDEO	2.5L	I5	2007	PSCM	●	●	●	●	○
MONDEO	2.5L	I5	2007	RCM	●	●	●	●	0x00EF 0x0102
MONDEO	2.5L	I5	2007	RFA	●	●	●	○	○
MONDEO	2.5L	I5	2007	SASM	●	●	●	●	○
MONDEO	2.5L	I5	2007	SRM	●	●	●	●	○
MONDEO	2.5L	I5	2007	TRM	●	●	●	●	○
MONDEO	2.5L	I5	2007	VDM	●	●	●	○	○
MONDEO	3.0L	Duratec SE	2001	ABS	●	●	●	●	0x0008 0x00F1
MONDEO	3.0L	Duratec SE	2001	ABS/TCS	●	●	●	●	0x0008 0x00F1
MONDEO	3.0L	Duratec SE	2001	ACM	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	CDP	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	CSM	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	EATC	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	GDM	●	●	●	●	0x0100
MONDEO	3.0L	Duratec SE	2001	GEM	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	HEC	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	LHID	●	●	●	●	0x0032
MONDEO	3.0L	Duratec SE	2001	NAV	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	PATS	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
MONDEO	3.0L	Duratec SE	2001	RCM	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	RETM	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	RHID	●	●	●	●	○
MONDEO	3.0L	Duratec SE	2001	SRM	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	ABS	●	●	●	●	0x0008 0x00F1
MONDEO	3.0L	Duratec-ST	2001	ABS/TCS	●	●	●	●	0x0008 0x00F1
MONDEO	3.0L	Duratec-ST	2001	ACM	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	CDP	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	CSM	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	EATC	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	GDM	●	●	●	●	0x0100
MONDEO	3.0L	Duratec-ST	2001	GEM	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	HEC	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	LHID	●	●	●	●	0x0032
MONDEO	3.0L	Duratec-ST	2001	NAV	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	PATS	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
MONDEO	3.0L	Duratec-ST	2001	RCM	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	RETM	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	RHID	●	●	●	●	○
MONDEO	3.0L	Duratec-ST	2001	SRM	●	●	●	●	○
Marauder	4.6L	4V	2003 - 2004	ABS/TCS	●	●	●	●	○
Marauder	4.6L	4V	2003 - 2004	DDM	●	●	●	●	0x000A 0x000F
Marauder	4.6L	4V	2003 - 2004	EATC	●	●	●	●	○
Marauder	4.6L	4V	2003 - 2004	LCM	●	●	●	●	○
Marauder	4.6L	4V	2003 - 2004	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024
Marauder	4.6L	4V	2003 - 2004	RASM	●	●	●	●	0x0013
Marauder	4.6L	4V	2003 - 2004	RCM	●	●	●	●	0x000C
Marauder	4.6L	4V	2003 - 2004	VAPS	●	●	●	●	○
Mariner	2.3L	DURATEC-HE / I4	2006 - 2007	4X4	●	●	●	●	○
Mariner	2.3L	DURATEC-HE / I4	2006 - 2007	ABS	●	●	●	●	0x0008
Mariner	2.3L	DURATEC-HE / I4	2006 - 2007	GEM	●	●	●	●	0x000A 0x000F

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Mariner	2.3L	DURATEC-HE / I4	2006 - 2007	IC	●	●	●	●	○
Mariner	2.3L	DURATEC-HE / I4	2006 - 2007	PAM	●	●	●	●	○
Mariner	2.3L	DURATEC-HE / I4	2006 - 2007	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5
Mariner	2.3L	DURATEC-HE / I4	2006 - 2007	RCM	●	●	●	●	0x000C
Mariner	3.0L	4V	2006 - 2007	4X4	●	●	●	●	○
Mariner	3.0L	4V	2006 - 2007	ABS	●	●	●	●	0x0005 0x0008
Mariner	3.0L	4V	2006 - 2007	GEM	●	●	●	●	0x000A 0x000F 0xF042 0xF04E 0xF04F 0xF050 0xF051 0xF056 0xF057 0xF058 0xF059 0xF090
Mariner	3.0L	4V	2006 - 2007	IC	●	●	●	●	0x0005 0xF040 0xF043 0xF04D 0xF052 0xF053 0xF054 0xF055
Mariner	3.0L	4V	2006 - 2007	PAM	●	●	●	●	○
Mariner	3.0L	4V	2006 - 2007	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0202
Mariner	3.0L	4V	2006 - 2007	RCM	●	●	●	●	0x000C 0x006D
Mark LT	5.4L	3V	2006 - 2007	EATC	●	●	●	●	○
Mark LT	5.4L	3V	2006 - 2008	4X4	●	●	●	●	○
Mark LT	5.4L	3V	2006 - 2008	ABS	●	●	●	●	0x0008 0x000B 0x0005
Mark LT	5.4L	3V	2006 - 2008	DSM	●	●	●	●	○
Mark LT	5.4L	3V	2006 - 2008	IC	●	●	●	●	○
Mark LT	5.4L	3V	2006 - 2008	PAM	●	●	●	●	○
Mark LT	5.4L	3V	2006 - 2008	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Mark LT	5.4L	3V	2006 - 2008	RCM	●	●	●	●	0x000C
Mark LT	5.4L	3V	2006 - 2008	VSM	●	●	●	●	0x000A 0x000F
Mark LT	5.4L	3V	2008	HVAC	●	●	●	●	○
Mark LT	5.4L	3V	2008	RETM	●	●	●	●	0x0018
Mark VIII	4.6L	4V	1996 - 1998	ABS/TCS	●	●	●	●	0x0008
Mark VIII	4.6L	4V	1996 - 1998	CPM	●	●	●	●	○
Mark VIII	4.6L	4V	1996 - 1998	DDM	●	●	●	●	0x000F
Mark VIII	4.6L	4V	1996 - 1998	DSM	●	●	●	●	○
Mark VIII	4.6L	4V	1996 - 1998	HEC	●	●	●	●	○
Mark VIII	4.6L	4V	1996 - 1998	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Mark VIII	4.6L	4V	1996 - 1998	PSM	●	●	●	●	○
Mark VIII	4.6L	4V	1996 - 1998	SCIL	●	●	●	●	0x0009
Mark VIII	4.6L	4V	1997 - 1998	EATC	●	●	●	●	○
Mark VIII	4.6L	4V	1997 - 1998	MC	●	●	●	●	○
Milan	2.3L	DURATEC-HE / I4	2006 - 2007	EATC	●	●	●	●	○
Milan	2.3L	DURATEC-HE / I4	2006 - 2007	GEM	●	●	●	●	0xF044 0xF048 0xF04C 0xF057 0xF085
Milan	2.3L	DURATEC-HE / I4	2006 - 2009	ABS	●	●	●	●	○
Milan	2.3L	DURATEC-HE / I4	2006 - 2009	ACM	●	●	●	●	0xF05A 0xF062 0xF07A
Milan	2.3L	DURATEC-HE / I4	2006 - 2009	IC	●	●	●	●	0x0009 0xF027
Milan	2.3L	DURATEC-HE / I4	2006 - 2009	OCSM	●	●	●	○	0x006D
Milan	2.3L	DURATEC-HE / I4	2006 - 2009	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083 0x0084
Milan	2.3L	DURATEC-HE / I4	2006 - 2009	RCM	●	●	●	●	0x0005 0xF022 0xF05D
Milan	2.3L	DURATEC-HE / I4	2006 - 2009	TCM	●	●	●	●	○
Milan	2.3L	DURATEC-HE / I4	2007 - 2009	4X4	●	●	●	●	○
Milan	2.3L	DURATEC-HE / I4	2007 - 2009	SDARS	●	●	●	●	○
Milan	2.3L	DURATEC-HE / I4	2008 - 2009	APIM	●	●	●	●	○
Milan	2.3L	DURATEC-HE / I4	2008 - 2009	GEM / SJB	●	●	●	●	0x0042 0xF044 0xF048 0xF04C 0xF057 0xF085 0xF086
Milan	2.3L	DURATEC-HE / I4	2008 - 2009	HVAC	●	●	●	●	○
Milan	2.3L	DURATEC-HE / I4	2008 - 2009	PAM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	4X4	●	●	●	●	○
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	ABS	●	●	●	●	0x0008 0x0012
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	ACM	●	●	●	●	0x0017 0x0018
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	APIM	●	●	●	●	0x0019 0x001C
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	DSP	●	●	●	●	○
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	FCIM	●	●	●	●	○
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	FDIM	●	●	●	●	○
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	GEM / SJB	●	●	●	●	0x000F 0x0042
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	GPSM	●	●	●	○	○
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	HVAC	●	●	●	●	○
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	IPC	●	●	●	●	○
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	OCSM	●	●	●	●	0x000C 0x0015 0x006D
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	PAM	●	●	●	●	○
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	PCM	●	●	●	●	0x0009 0x0024 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0023 0x0028 0x0031 0x0033
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	PSCM	●	●	●	●	○
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	RCM	●	●	●	●	○
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	SOD-L	●	●	●	●	○
Milan	2.5L	DURATEC-HE / I4	2010 - 2011	SOD-R	●	●	●	●	○
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	4X4	●	●	●	●	○
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	ABS	●	●	●	●	0x0074
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	ACCM#2	●	●	●	●	○
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	ACM	●	●	●	●	0x0017 0x0018
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	APIM	●	●	●	●	0x0019 0x001C
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	BECM	●	●	●	●	0x006E
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	DCDC	●	●	●	●	○
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	DSP	●	●	●	●	0x0005
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	FCIM	●	●	●	●	○
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	FDIM	●	●	●	●	0x0005
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	GPSM	●	●	●	○	○
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	HVAC	●	●	●	●	○
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	IPC	●	●	●	●	○
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	OCSM	●	●	●	●	0x000C 0x0015
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	PAM	●	●	●	●	0x0005
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	PSCM	●	●	●	●	0x0005
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	RCM	●	●	●	●	0x0005
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	SOD-L	●	●	●	●	○
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	SOD-R	●	●	●	●	○
Milan	2.5L	HEV / ATKINSON 4V	2010 - 2011	TCM	●	●	●	●	○
Milan	3.0L	4V	2006 - 2007	EATC	●	●	●	●	○
Milan	3.0L	4V	2006 - 2007	GEM	●	●	●	●	○
Milan	3.0L	4V	2006 - 2009	IC	●	●	●	●	0x0005 0xF027
Milan	3.0L	4V	2006 - 2009	TCM	●	●	●	●	○
Milan	3.0L	4V	2006 - 2011	ABS	●	●	●	●	0x0008 0x0012
Milan	3.0L	4V	2006 - 2011	ACM	●	●	●	●	0x0017 0x0018
Milan	3.0L	4V	2006 - 2011	OCSM	●	●	●	○	0x000C 0x0015
Milan	3.0L	4V	2006 - 2011	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083 0x0084 0x0009 0x0024 0x0038 0x0067
Milan	3.0L	4V	2006 - 2011	RCM	●	●	●	●	0x0005 0xF022 0xF05D
Milan	3.0L	4V	2007 - 2009	SDARS	●	●	●	●	0x0005

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Milan	3.0L	4V	2007 - 2011	4X4	●	●	●	●	○
Milan	3.0L	4V	2008 - 2011	APIM	●	●	●	●	0x0019 0x001C
Milan	3.0L	4V	2008 - 2011	GEM / SJB	●	●	●	●	0x0005 0xF044 0xF048 0xF04C 0xF057 0xF085 0xF086 0xF08A 0x000F 0x0042
Milan	3.0L	4V	2008 - 2011	HVAC	●	●	●	●	○
Milan	3.0L	4V	2008 - 2011	PAM	●	●	●	●	0x0005
Milan	3.0L	4V	2010 - 2011	DSP	●	●	●	●	○
Milan	3.0L	4V	2010 - 2011	FCIM	●	●	●	●	○
Milan	3.0L	4V	2010 - 2011	FDIM	●	●	●	●	○
Milan	3.0L	4V	2010 - 2011	GPSM	●	●	●	○	○
Milan	3.0L	4V	2010 - 2011	IPC	●	●	●	●	○
Milan	3.0L	4V	2010 - 2011	PSCM	●	●	●	●	○
Milan	3.0L	4V	2010 - 2011	SOD-L	●	●	●	●	○
Milan	3.0L	4V	2010 - 2011	SOD-R	●	●	●	●	○
Montego	3.0L	4V	2006 - 2007	4X4	●	●	●	●	○
Montego	3.0L	4V	2006 - 2007	ABS	●	●	●	●	0x0005 0xF046
Montego	3.0L	4V	2006 - 2007	ACM	●	●	●	●	0x0005 0xF05A 0xF062 0xF063 0xF07F
Montego	3.0L	4V	2006 - 2007	DSM	●	●	●	●	0x0005
Montego	3.0L	4V	2006 - 2007	EATC	●	●	●	●	○
Montego	3.0L	4V	2006 - 2007	GEM	●	●	●	●	0x0005 0xF042 0xF044 0xF048 0xF085
Montego	3.0L	4V	2006 - 2007	IC	●	●	●	●	0x0005 0xF04D 0xF054 0xF099
Montego	3.0L	4V	2006 - 2007	PAM	●	●	●	●	○
Montego	3.0L	4V	2006 - 2007	PCM	●	●	●	●	0x0009 0x0023 0x0024 0x0080 0x0081 0x0082 0x0083 0x0084
Montego	3.0L	4V	2006 - 2007	RCM	●	●	●	●	0x0005 0x006D 0xF05D
Montego	3.0L	4V	2006 - 2007	RETM	●	●	●	●	○
Montego	3.0L	4V	2006 - 2007	TCM	●	●	●	●	○
Montego	3.0L	4V	2007	SDARS	●	●	●	●	○
Motorhome / Stripped Chassis / Step Van	6.8L	2V	2004	ABS/TCS	●	●	●	●	0x0008
Motorhome / Stripped Chassis / Step Van	6.8L	2V	2004	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Motorhome / Stripped Chassis / Step Van	6.8L	3V	2006 - 2011	ABS/TCS	●	●	●	●	0x0008 0x001B
Motorhome / Stripped Chassis / Step Van	6.8L	3V	2006 - 2012	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0024 0x0067
Motorhome / Stripped Chassis / Step Van	6.8L	3V	2006 - 2014	IC	●	●	●	●	○
Motorhome / Stripped Chassis / Step Van	6.8L	3V	2012	ABS	●	●	●	●	○
Motorhome / Stripped Chassis / Step Van	Other	Other	2014	IC	●	●	●	●	○
Mountaineer	4.0L	2V	2006 - 2007	EATC	●	●	●	●	○
Mountaineer	4.0L	2V	2006 - 2007	GEM	●	●	●	●	0x0005 0x000A 0x000F 0xF042 0xF044 0xF04C
Mountaineer	4.0L	2V	2006 - 2010	4X4	●	●	●	●	○
Mountaineer	4.0L	2V	2006 - 2010	ABS	●	●	●	●	0x0005 0x0008 0x0012
Mountaineer	4.0L	2V	2006 - 2010	ACM	●	●	●	●	0x0016 0x0017 0x0018
Mountaineer	4.0L	2V	2006 - 2010	DSM	●	●	●	●	0xF041 0xF074 0xF075 0x0005
Mountaineer	4.0L	2V	2006 - 2010	IC	●	●	●	●	0x0009 0xF027 0xF040 0xF044 0xF04D 0xF054 0xF06B 0x0005
Mountaineer	4.0L	2V	2006 - 2010	OCSM	●	●	●	○	0x000C 0x0015 0x006D
Mountaineer	4.0L	2V	2006 - 2010	PAM	●	●	●	●	○
Mountaineer	4.0L	2V	2006 - 2010	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x00C6
Mountaineer	4.0L	2V	2006 - 2010	PRB	●	●	●	●	○
Mountaineer	4.0L	2V	2006 - 2010	RCM	●	●	●	●	0x0005 0xF022 0xF05D
Mountaineer	4.0L	2V	2006 - 2010	RETM	●	●	●	●	0xF04D 0xF05A 0xF076
Mountaineer	4.0L	2V	2006 - 2010	SDARS	●	●	●	●	0x0005 0x0019

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Mountaineer	4. 0L	2V	2008 – 2010	APIM	●	●	●	●	0x0019 0x001C
Mountaineer	4. 0L	2V	2008 – 2010	GEM / SJB	●	●	●	●	0x0005 0x000A 0x000F 0x0042 0xF042 0xF044 0xF04C
Mountaineer	4. 0L	2V	2008 – 2010	HVAC	●	●	●	●	0x0005
Mountaineer	4. 0L	2V	2010	GPSM	●	●	●	○	○
Mountaineer	4. 0L	V6 SOHC	1998 – 2000	ARC	●	●	●	●	0x000E
Mountaineer	4. 0L	V6 SOHC	1998 – 2000	IAB	●	●	●	●	○
Mountaineer	4. 0L	V6 SOHC	1998 – 2000	PATS	●	●	●	●	0x0009
Mountaineer	4. 0L	V6 SOHC	1998 – 2000	RAP	●	●	●	●	0x000A 0x000F
Mountaineer	4. 0L	V6 SOHC	1998 – 2002	GEM	●	●	●	●	0x0203 0x0204
Mountaineer	4. 0L	V6 SOHC	1998 – 2003	ABS/TCS	●	●	●	●	0x0008 0x0012
Mountaineer	4. 0L	V6 SOHC	1998 – 2005	DSM	●	●	●	●	○
Mountaineer	4. 0L	V6 SOHC	1998 – 2005	EATC	●	●	●	●	0x0005
Mountaineer	4. 0L	V6 SOHC	1998 – 2005	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 0x00C6 0x0024
Mountaineer	4. 0L	V6 SOHC	1999 – 2005	PAM	●	●	●	●	○
Mountaineer	4. 0L	V6 SOHC	2002	CSM	●	●	●	●	0x000F
Mountaineer	4. 0L	V6 SOHC	2002 – 2003	HEC	●	●	●	●	○
Mountaineer	4. 0L	V6 SOHC	2002 – 2005	4X4	●	●	●	●	0x0111
Mountaineer	4. 0L	V6 SOHC	2002 – 2005	IC	●	●	●	●	0x0005 0xF027 0xF044 0xF04D 0xF054 0xF071 0xF072
Mountaineer	4. 0L	V6 SOHC	2002 – 2005	RCM	●	●	●	●	0x000C 0x006D
Mountaineer	4. 0L	V6 SOHC	2002 – 2005	TPM	●	●	●	●	0x0005
Mountaineer	4. 0L	V6 SOHC	2003 – 2005	VSM	●	●	●	●	0x000A 0x000F
Mountaineer	4. 0L	V6 SOHC	2004 – 2005	ABS	●	●	●	●	0x0005 0x0008 0x0012
Mountaineer	4. 6L	2V	2002	CSM	●	●	●	●	0x000F
Mountaineer	4. 6L	2V	2002	GEM	●	●	●	●	0x0203 0x0204
Mountaineer	4. 6L	2V	2002 – 2003	ABS/TCS	●	●	●	●	0x0008 0x0012
Mountaineer	4. 6L	2V	2002 – 2003	HEC	●	●	●	●	○
Mountaineer	4. 6L	2V	2002 – 2005	4X4	●	●	●	●	○
Mountaineer	4. 6L	2V	2002 – 2005	DSM	●	●	●	●	○
Mountaineer	4. 6L	2V	2002 – 2005	EATC	●	●	●	●	0x0005
Mountaineer	4. 6L	2V	2002 – 2005	IC	●	●	●	●	0x0005
Mountaineer	4. 6L	2V	2002 – 2005	PAM	●	●	●	●	○
Mountaineer	4. 6L	2V	2002 – 2005	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C6 0x0024
Mountaineer	4. 6L	2V	2002 – 2005	RCM	●	●	●	●	0x000C
Mountaineer	4. 6L	2V	2002 – 2005	TPM	●	●	●	●	0x0005
Mountaineer	4. 6L	2V	2003 – 2005	VSM	●	●	●	●	0x000A 0x000F
Mountaineer	4. 6L	2V	2004 – 2005	ABS	●	●	●	●	0x0005 0x0008 0x0012
Mountaineer	4. 6L	3V	2006 – 2007	EATC	●	●	●	●	0x0005
Mountaineer	4. 6L	3V	2006 – 2007	GEM	●	●	●	●	0x0005 0x000A 0x000F 0xF042 0xF044 0xF04C
Mountaineer	4. 6L	3V	2006 – 2010	4X4	●	●	●	●	○
Mountaineer	4. 6L	3V	2006 – 2010	ABS	●	●	●	●	0x0005 0x0008 0x0012
Mountaineer	4. 6L	3V	2006 – 2010	ACM	●	●	●	●	0x0016 0x0017 0x0018 0x0005
Mountaineer	4. 6L	3V	2006 – 2010	DSM	●	●	●	●	0x0005 0xF041 0xF074 0xF075
Mountaineer	4. 6L	3V	2006 – 2010	IC	●	●	●	●	0x0009 0xF044 0x0005 0xF027 0xF04D 0xF054
Mountaineer	4. 6L	3V	2006 – 2010	OCSM	●	●	●	○	0x000C 0x0015 0x006D
Mountaineer	4. 6L	3V	2006 – 2010	PAM	●	●	●	●	0x0005
Mountaineer	4. 6L	3V	2006 – 2010	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x00C6
Mountaineer	4. 6L	3V	2006 – 2010	PRB	●	●	●	●	○
Mountaineer	4. 6L	3V	2006 – 2010	RCM	●	●	●	●	0x0005 0xF022 0xF05D
Mountaineer	4. 6L	3V	2006 – 2010	RETM	●	●	●	●	0x0005 0xF04D 0xF05A 0xF076
Mountaineer	4. 6L	3V	2006 – 2010	SDARS	●	●	●	●	0x0005 0x0019

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Mountaineer	4.6L	3V	2006 - 2010	TCM	●	●	●	●	0x00CE
Mountaineer	4.6L	3V	2008 - 2010	APIM	●	●	●	●	0x0019 0x001C
Mountaineer	4.6L	3V	2008 - 2010	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0x0005 0xF042 0xF044 0xF04C
Mountaineer	4.6L	3V	2008 - 2010	HVAC	●	●	●	●	0x0005
Mountaineer	4.6L	3V	2010	GPSM	●	●	●	○	○
Mountaineer	5.0L	Other	1997 - 2000	ABS/TCS	●	●	●	●	0x0008 0x0005
Mountaineer	5.0L	Other	1997 - 2000	ARC	●	●	●	●	0x000E
Mountaineer	5.0L	Other	1997 - 2000	GEM	●	●	●	●	0x0203 0x0005 0x0204
Mountaineer	5.0L	Other	1997 - 2000	IAB	●	●	●	●	○
Mountaineer	5.0L	Other	1997 - 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084
Mountaineer	5.0L	Other	1997 - 2000	RAP	●	●	●	●	0x000F 0x000A 0x0005 0xF044
Mountaineer	5.0L	Other	1998 - 2000	DSM	●	●	●	●	○
Mountaineer	5.0L	Other	1998 - 2000	EATC	●	●	●	●	○
Mountaineer	5.0L	Other	1998 - 2000	PATS	●	●	●	●	0x0009
Mountaineer	5.0L	Other	1999 - 2000	PAM	●	●	●	●	○
Mustang	3.7L	TiVCT	2011 - 2013	ACM	●	●	●	○	0x0017 0x0018
Mustang	3.7L	TiVCT	2011 - 2013	PSCM	●	●	●	○	0x00CB
Mustang	3.7L	TiVCT	2011 - 2014	ABS	●	●	●	●	0x0008 0x0012
Mustang	3.7L	TiVCT	2011 - 2014	APIM	●	●	●	●	0x0019
Mustang	3.7L	TiVCT	2011 - 2014	BCM-B	●	●	●	●	0x0109
Mustang	3.7L	TiVCT	2011 - 2014	FCIM	●	●	●	●	○
Mustang	3.7L	TiVCT	2011 - 2014	FDIM	●	●	●	●	○
Mustang	3.7L	TiVCT	2011 - 2014	GEM / SJB	●	●	●	●	0x000A 0x0042
Mustang	3.7L	TiVCT	2011 - 2014	GPSM	●	●	●	●	○
Mustang	3.7L	TiVCT	2011 - 2014	HVAC	●	●	●	●	○
Mustang	3.7L	TiVCT	2011 - 2014	IPC	●	●	●	●	0x0009
Mustang	3.7L	TiVCT	2011 - 2014	OCSM	●	●	●	○	0x000C 0x006D
Mustang	3.7L	TiVCT	2011 - 2014	PCM	●	●	●	●	0x0009 0x0024 0x0025 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0028 0x0031 0x0033
Mustang	3.7L	TiVCT	2011 - 2014	RCM	●	●	●	●	○
Mustang	3.7L	TiVCT	2012 - 2013	PAM	●	●	●	●	○
Mustang	3.8L	Other	1994 - 2004	ABS/TCS	●	●	●	●	0x0008
Mustang	3.8L	Other	1994 - 2004	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0024
Mustang	3.8L	Other	1996 - 1998	IAB	●	●	●	●	○
Mustang	3.8L	Other	1996 - 1998	PATS	●	●	●	●	0x0009 0x000A
Mustang	3.8L	Other	1999 - 2004	GEM	●	●	●	●	0x000A
Mustang	3.8L	Other	1999 - 2004	HEC	●	●	●	●	0x0009
Mustang	3.8L	Other	1999 - 2004	RCM	●	●	●	●	○
Mustang	3.9L	Other	2004	ABS/TCS	●	●	●	●	0x0008
Mustang	3.9L	Other	2004	GEM	●	●	●	●	0x000A
Mustang	3.9L	Other	2004	HEC	●	●	●	●	0x0009
Mustang	3.9L	Other	2004	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Mustang	3.9L	Other	2004	RCM	●	●	●	●	○
Mustang	4.0L	V6 SOHC	2005 - 2007	GEM	●	●	●	●	0x000A 0x0005
Mustang	4.0L	V6 SOHC	2005 - 2009	IC	●	●	●	●	0x0005
Mustang	4.0L	V6 SOHC	2005 - 2010	ABS	●	●	●	●	0x0008 0x0012
Mustang	4.0L	V6 SOHC	2005 - 2010	ACM	●	●	●	●	0x0005 0x0016 0x0017 0x0018
Mustang	4.0L	V6 SOHC	2005 - 2010	PCM	●	●	●	●	0x0009 0x0023 0x0024 0x0025 0x0080 0x0081 0x0081 0x0082 0x0083 0x0084 0x0010 0x0028 0x0031 0x0033 0x00C5 0x00C6

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Mustang	4. 0L	V6 SOHC	2005 - 2010	RCM	●	●	●	●	0x000C
Mustang	4. 0L	V6 SOHC	2007 - 2009	SDARS	●	●	●	●	0x0019
Mustang	4. 0L	V6 SOHC	2008 - 2010	GEM / SJB	●	●	●	●	0x000A 0x0042
Mustang	4. 0L	V6 SOHC	2009 - 2010	APIM	●	●	●	●	0x0019
Mustang	4. 0L	V6 SOHC	2010	BCM-B	●	●	●	●	0x0109
Mustang	4. 0L	V6 SOHC	2010	FCIM	●	●	●	○	○
Mustang	4. 0L	V6 SOHC	2010	FDIM	●	●	●	●	○
Mustang	4. 0L	V6 SOHC	2010	GPSM	●	●	●	○	○
Mustang	4. 0L	V6 SOHC	2010	HVAC	●	●	●	●	○
Mustang	4. 0L	V6 SOHC	2010	IPC	●	●	●	●	○
Mustang	4. 0L	V6 SOHC	2010	OCSM	●	●	●	○	0x000C
Mustang	4. 6L	2V	1996 - 1998	IAB	●	●	●	●	○
Mustang	4. 6L	2V	1996 - 1998	PATS	●	●	●	●	0x0009 0x000A
Mustang	4. 6L	2V	1996 - 2004	ABS/TCS	●	●	●	●	0x0008
Mustang	4. 6L	2V	1996 - 2004	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0024
Mustang	4. 6L	2V	1999 - 2004	GEM	●	●	●	●	0x000A
Mustang	4. 6L	2V	1999 - 2004	HEC	●	●	●	●	0x0009
Mustang	4. 6L	2V	1999 - 2004	RCM	●	●	●	●	○
Mustang	4. 6L	3V	2005 - 2007	GEM	●	●	●	●	0x000A
Mustang	4. 6L	3V	2005 - 2009	IC	●	●	●	●	0x0005
Mustang	4. 6L	3V	2005 - 2010	ABS	●	●	●	●	0x0008 0x0012
Mustang	4. 6L	3V	2005 - 2010	ACM	●	●	●	●	0x0016 0x0017 0x0018
Mustang	4. 6L	3V	2005 - 2010	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C6 0x00C5
Mustang	4. 6L	3V	2005 - 2010	RCM	●	●	●	●	0x000C
Mustang	4. 6L	3V	2007 - 2009	SDARS	●	●	●	●	0x0019
Mustang	4. 6L	3V	2008 - 2010	GEM / SJB	●	●	●	●	0x000A 0x0042
Mustang	4. 6L	3V	2009 - 2010	APIM	●	●	●	●	0x0019
Mustang	4. 6L	3V	2010	BCM-B	●	●	●	●	0x0109
Mustang	4. 6L	3V	2010	FCIM	●	●	●	○	○
Mustang	4. 6L	3V	2010	FDIM	●	●	●	●	○
Mustang	4. 6L	3V	2010	GPSM	●	●	●	○	○
Mustang	4. 6L	3V	2010	HVAC	●	●	●	●	○
Mustang	4. 6L	3V	2010	IPC	●	●	●	●	○
Mustang	4. 6L	3V	2010	OCSM	●	●	●	○	0x000C
Mustang	4. 6L	4V	1996 - 1998	IAB	●	●	●	●	○
Mustang	4. 6L	4V	1996 - 1998	PATS	●	●	●	●	0x0009 0x000A
Mustang	4. 6L	4V	1996 - 2004	ABS/TCS	●	●	●	●	0x0008
Mustang	4. 6L	4V	1996 - 2004	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0028 0x0031 0x0033 0x0024
Mustang	4. 6L	4V	1999 - 2004	GEM	●	●	●	●	0x000A
Mustang	4. 6L	4V	1999 - 2004	HEC	●	●	●	●	0x0009
Mustang	4. 6L	4V	1999 - 2004	RCM	●	●	●	●	○
Mustang	4. 6L	Other	1996 - 1997	ABS/TCS	●	●	●	●	○
Mustang	4. 6L	Other	1996 - 1997	PATS	●	●	●	●	0x0009 0x000A
Mustang	4. 6L	Other	1996 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Mustang	5. 0L	BOSS	2012 - 2013	ABS	●	●	●	●	0x0008 0x0012
Mustang	5. 0L	BOSS	2012 - 2013	ACM	●	●	●	●	○
Mustang	5. 0L	BOSS	2012 - 2013	APIM	●	●	●	●	0x0019
Mustang	5. 0L	BOSS	2012 - 2013	BCM-B	●	●	●	●	0x0109
Mustang	5. 0L	BOSS	2012 - 2013	FCIM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Mustang	5.0L	BOSS	2012 - 2013	FDIM	●	●	●	●	○
Mustang	5.0L	BOSS	2012 - 2013	GEM / SJB	●	●	●	●	0x000A 0x0042
Mustang	5.0L	BOSS	2012 - 2013	GPSM	●	●	●	○	○
Mustang	5.0L	BOSS	2012 - 2013	HVAC	●	●	●	●	○
Mustang	5.0L	BOSS	2012 - 2013	IPC	●	●	●	●	0x00FA 0x0009
Mustang	5.0L	BOSS	2012 - 2013	OCSM	●	●	●	○	0x000C
Mustang	5.0L	BOSS	2012 - 2013	PAM	●	●	●	●	○
Mustang	5.0L	BOSS	2012 - 2013	PCM	●	●	●	●	0x0009 0x0010 0x0024 0x0025 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084
Mustang	5.0L	BOSS	2012 - 2013	PSCM	●	●	●	○	0x00CB
Mustang	5.0L	BOSS	2012 - 2013	RCM	●	●	●	●	○
Mustang	5.0L	TiVCT	2011 - 2013	ACM	●	●	●	○	0x0017 0x0018
Mustang	5.0L	TiVCT	2011 - 2013	PSCM	●	●	●	○	0x00CB
Mustang	5.0L	TiVCT	2011 - 2014	ABS	●	●	●	●	0x0008 0x0012
Mustang	5.0L	TiVCT	2011 - 2014	APIM	●	●	●	●	0x0019
Mustang	5.0L	TiVCT	2011 - 2014	BCM-B	●	●	●	●	0x0109
Mustang	5.0L	TiVCT	2011 - 2014	FCIM	●	●	●	●	○
Mustang	5.0L	TiVCT	2011 - 2014	FDIM	●	●	●	●	○
Mustang	5.0L	TiVCT	2011 - 2014	GEM / SJB	●	●	●	●	0x0042 0x000A
Mustang	5.0L	TiVCT	2011 - 2014	GPSM	●	●	●	●	○
Mustang	5.0L	TiVCT	2011 - 2014	HVAC	●	●	●	●	○
Mustang	5.0L	TiVCT	2011 - 2014	IPC	●	●	●	●	0x0009
Mustang	5.0L	TiVCT	2011 - 2014	OCSM	●	●	●	○	0x000C
Mustang	5.0L	TiVCT	2011 - 2014	PCM	●	●	●	●	0x0009 0x0010 0x0024 0x0028 0x0031 0x0033 0x0038 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0023 0x0025
Mustang	5.0L	TiVCT	2011 - 2014	RCM	●	●	●	●	○
Mustang	5.0L	TiVCT	2012 - 2013	PAM	●	●	●	●	○
Mustang	5.4L	4V	2007	GEM	●	●	●	●	○
Mustang	5.4L	4V	2007 - 2009	IC	●	●	●	●	○
Mustang	5.4L	4V	2007 - 2009	SDARS	●	●	●	●	0x0019
Mustang	5.4L	4V	2007 - 2012	ABS	●	●	●	●	0x0008 0x0012
Mustang	5.4L	4V	2007 - 2012	ACM	●	●	●	●	0x0016 0x0017 0x0018
Mustang	5.4L	4V	2007 - 2012	PCM	●	●	●	●	0x0023 0x0024 0x0025 0x0080 0x0081 0x0081 0x0082 0x0083 0x0084 0x0009 0x0010 0x0028 0x0031 0x0033 0x0067
Mustang	5.4L	4V	2007 - 2012	RCM	●	●	●	●	0x000C
Mustang	5.4L	4V	2008 - 2012	GEM / SJB	●	●	●	●	0x000A 0x0042
Mustang	5.4L	4V	2009 - 2012	APIM	●	●	●	●	0x0019
Mustang	5.4L	4V	2010 - 2012	BCM-B	●	●	●	●	0x0109
Mustang	5.4L	4V	2010 - 2012	FCIM	●	●	●	○	○
Mustang	5.4L	4V	2010 - 2012	FDIM	●	●	●	●	○
Mustang	5.4L	4V	2010 - 2012	GPSM	●	●	●	○	○
Mustang	5.4L	4V	2010 - 2012	HVAC	●	●	●	●	○
Mustang	5.4L	4V	2010 - 2012	IPC	●	●	●	●	○
Mustang	5.4L	4V	2010 - 2012	OCSM	●	●	●	○	0x000C
Mustang	5.4L	4V	2011 - 2012	PSCM	●	●	●	○	0x00CB
Mustang	5.4L	4V	2012	PAM	●	●	●	●	○
Mustang	5.4L	Other	2000	ABS/TCS	●	●	●	●	0x0008
Mustang	5.4L	Other	2000	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
Mustang	5.8L	4V	2013	ABS	●	●	●	●	0x0008 0x0012
Mustang	5.8L	4V	2013	ACM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Mustang	5. 8L	4V	2013	APIM	●	●	●	●	0x0019
Mustang	5. 8L	4V	2013	BCM-B	●	●	●	●	0x0109
Mustang	5. 8L	4V	2013	FCIM	●	●	●	●	○
Mustang	5. 8L	4V	2013	FDIM	●	●	●	●	○
Mustang	5. 8L	4V	2013	GEM / SJB	●	●	●	●	0x000A 0x0042
Mustang	5. 8L	4V	2013	GPSM	●	●	●	○	○
Mustang	5. 8L	4V	2013	HVAC	●	●	●	●	○
Mustang	5. 8L	4V	2013	IPC	●	●	●	●	0x0009
Mustang	5. 8L	4V	2013	OCSM	●	●	●	○	0x000C
Mustang	5. 8L	4V	2013	PAM	●	●	●	●	○
Mustang	5. 8L	4V	2013	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084
Mustang	5. 8L	4V	2013	PSCM	●	●	●	○	0x00CB
Mustang	5. 8L	4V	2013	RCM	●	●	●	○	○
Mustang	5. 8L	4V	2013	VDM	●	●	●	●	○
Mustang	Other	Other	2014	ABS	●	●	●	●	○
Mustang	Other	Other	2014	APIM	●	●	●	●	○
Mustang	Other	Other	2014	BCM-B	●	●	●	●	○
Mustang	Other	Other	2014	FCIM	●	●	●	●	○
Mustang	Other	Other	2014	FDIM	●	●	●	●	○
Mustang	Other	Other	2014	GEM / SJB	●	●	●	●	○
Mustang	Other	Other	2014	GPSM	●	●	●	○	○
Mustang	Other	Other	2014	HVAC	●	●	●	●	○
Mustang	Other	Other	2014	IPC	●	●	●	○	○
Mustang	Other	Other	2014	OCSM	●	●	●	○	○
Mustang	Other	Other	2014	PCM	●	●	●	●	○
Mustang	Other	Other	2014	RCM	●	●	●	○	○
Mystique	2. 0L	Zetec	1996 – 2000	ABS/TCS	●	●	●	●	0x0008
Mystique	2. 0L	Zetec	1996 – 2000	CSM	●	●	●	●	○
Mystique	2. 0L	Zetec	1996 – 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084
Mystique	2. 0L	Zetec	1997 – 1998	PATS	●	●	●	●	0x0009
Mystique	2. 0L	Zetec	1999 – 2000	RCM	●	●	●	●	○
Mystique	2. 5L	Duratec-VE	1996 – 2000	ABS/TCS	●	●	●	●	0x0008
Mystique	2. 5L	Duratec-VE	1996 – 2000	CSM	●	●	●	●	○
Mystique	2. 5L	Duratec-VE	1996 – 2000	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0084
Mystique	2. 5L	Duratec-VE	1997 – 1998	PATS	●	●	●	●	0x0009
Mystique	2. 5L	Duratec-VE	1999 – 2000	RCM	●	●	●	●	○
NOVO KA	1. 0L	FFV	2008 – 2011	IC	●	●	●	●	○
NOVO KA	1. 0L	FFV	2008 – 2011	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x012E
NOVO KA	1. 0L	FFV	2008 – 2011	RCM	●	●	●	●	○
NOVO KA	1. 0L	FFV	2008 – 2011	RKE	●	●	●	●	0x000A
NOVO KA	1. 0L	FFV	2009 – 2011	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
NOVO KA	1. 0L	Zetec Rocam	2008 – 2009	IC	●	●	●	●	○
NOVO KA	1. 0L	Zetec Rocam	2008 – 2009	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
NOVO KA	1. 0L	Zetec Rocam	2008 – 2009	RCM	●	●	●	●	○
NOVO KA	1. 0L	Zetec Rocam	2008 – 2009	RKE	●	●	●	●	0x000A
NOVO KA	1. 0L	Zetec Rocam	2009	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
NOVO KA	1. 6L	FFV	2008 – 2011	IC	●	●	●	●	○
NOVO KA	1. 6L	FFV	2008 – 2011	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x012E

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
NOVO KA	1. 6L	FFV	2008 – 2011	RCM	●	●	●	●	○
NOVO KA	1. 6L	FFV	2008 – 2011	RKE	●	●	●	●	0x000A
NOVO KA	1. 6L	FFV	2009 – 2011	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
NOVO KA	1. 6L	Zetec Rocam	2008 – 2009	IC	●	●	●	●	○
NOVO KA	1. 6L	Zetec Rocam	2008 – 2009	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
NOVO KA	1. 6L	Zetec Rocam	2008 – 2009	RCM	●	●	●	●	○
NOVO KA	1. 6L	Zetec Rocam	2008 – 2009	RKE	●	●	●	●	0x000A
NOVO KA	1. 6L	Zetec Rocam	2009	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
NOVO KA	Other	Other	2008	IC	●	●	●	●	0x0009
NOVO KA	Other	Other	2008	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
NOVO KA	Other	Other	2008	RCM	●	●	●	●	○
NOVO KA	Other	Other	2008	RKE	●	●	●	●	0x000A
Navigator	5. 4L	3V	2005 – 2006	NAV	●	●	●	●	○
Navigator	5. 4L	3V	2005 – 2006	VSM	●	●	●	●	0x0005 0xF044
Navigator	5. 4L	3V	2005 – 2007	EATC	●	●	●	●	0x0005
Navigator	5. 4L	3V	2005 – 2010	4X4	●	●	●	●	○
Navigator	5. 4L	3V	2005 – 2011	TCM	●	●	●	●	○
Navigator	5. 4L	3V	2005 – 2012	PAM	●	●	●	●	○
Navigator	5. 4L	3V	2005 – 2014	ABS	●	●	●	●	0x0005 0x0008 0x0012
Navigator	5. 4L	3V	2005 – 2014	DCSM	●	●	●	●	0xF070
Navigator	5. 4L	3V	2005 – 2014	DSM	●	●	●	●	0xF041 0xF06C 0xF06D 0xF06F 0x0005
Navigator	5. 4L	3V	2005 – 2014	IC	●	●	●	●	0x0005 0xF027 0xF041 0xF044 0xF04A 0xF04C 0xF04D 0xF06B 0xF06E 0x0009
Navigator	5. 4L	3V	2005 – 2014	LTM	●	●	●	●	0x0005
Navigator	5. 4L	3V	2005 – 2014	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0082 0x0083 0x0084 0x0010 0x0028 0x0031 0x0033 0x00C5 0x0024 0x0067
Navigator	5. 4L	3V	2005 – 2014	RCM	●	●	●	●	0xF022 0xF05D 0x0005
Navigator	5. 4L	3V	2005 – 2014	VDM	●	●	●	●	0x000E 0x0013 0x0014
Navigator	5. 4L	3V	2007	GEM	●	●	●	●	0xF042 0xF049 0xF04B 0xF04C 0xF05C 0xF060
Navigator	5. 4L	3V	2007 – 2012	RETM	●	●	●	●	0x0005 0xF04D 0xF05A
Navigator	5. 4L	3V	2007 – 2014	ACM	●	●	●	○	0x0005 0xF063 0x0016 0x0017 0x0018
Navigator	5. 4L	3V	2007 – 2014	DSP	●	●	●	●	0x0005
Navigator	5. 4L	3V	2007 – 2014	PRB	●	●	●	●	○
Navigator	5. 4L	3V	2007 – 2014	RCU	●	●	●	●	0xF05A
Navigator	5. 4L	3V	2007 – 2014	SDARS	●	●	●	●	0x0005
Navigator	5. 4L	3V	2008 – 2014	APIM	●	●	●	●	0x0019 0x001C
Navigator	5. 4L	3V	2008 – 2014	GEM / SJB	●	●	●	●	0x000F 0x0042 0x000A
Navigator	5. 4L	3V	2008 – 2014	HVAC	●	●	●	●	○
Navigator	5. 4L	3V	2010 – 2012	GPSM	●	●	●	○	○
Navigator	5. 4L	3V	2010 – 2014	TCCM	●	●	●	●	○
Navigator	5. 4L	3V	2013 – 2014	TBC	●	●	●	●	○
Navigator	5. 4L	4V	1999 – 2000	4WAS	●	●	●	●	0x000E
Navigator	5. 4L	4V	1999 – 2000	GEM	●	●	●	●	○
Navigator	5. 4L	4V	1999 – 2000	RAP	●	●	●	●	0x000A 0x000F
Navigator	5. 4L	4V	1999 – 2004	ABS/TCS	●	●	●	●	0x0008 0x0012
Navigator	5. 4L	4V	1999 – 2004	DSM	●	●	●	●	○
Navigator	5. 4L	4V	1999 – 2004	EATC	●	●	●	●	○
Navigator	5. 4L	4V	1999 – 2004	HEC	●	●	●	●	0x0009
Navigator	5. 4L	4V	1999 – 2004	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 0x0024
Navigator	5. 4L	4V	1999 – 2004	RCM	●	●	●	●	0x000C
Navigator	5. 4L	4V	2000 – 2004	PAM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Navigator	5.4L	4V	2003 - 2004	4X4	●	●	●	●	○
Navigator	5.4L	4V	2003 - 2004	DCSM	●	●	●	●	○
Navigator	5.4L	4V	2003 - 2004	LTM	●	●	●	●	○
Navigator	5.4L	4V	2003 - 2004	NAV	●	●	●	●	○
Navigator	5.4L	4V	2003 - 2004	PCSM	●	●	●	●	○
Navigator	5.4L	4V	2003 - 2004	TPM	●	●	●	●	0x0023
Navigator	5.4L	4V	2003 - 2004	VDM	●	●	●	●	0x000E 0x0013 0x0014
Navigator	5.4L	4V	2003 - 2004	VSM	●	●	●	●	0x000A 0x000F
Navigator	5.4L	Other	1998	4WAS	●	●	●	●	○
Navigator	5.4L	Other	1998	ABS/TCS	●	●	●	●	0x0008
Navigator	5.4L	Other	1998	DSM	●	●	●	●	○
Navigator	5.4L	Other	1998	GEM	●	●	●	●	○
Navigator	5.4L	Other	1998	IAB	●	●	●	●	○
Navigator	5.4L	Other	1998	PATS	●	●	●	●	0x0009
Navigator	5.4L	Other	1998	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Navigator	5.4L	Other	1998	RAP	●	●	●	●	0x000A 0x000F
Navigator	5.4L	Other	1998	RCC	●	●	●	●	○
Navigator	Other	Other	2013	ABS	●	●	●	●	○
Navigator	Other	Other	2013	ACM	●	●	●	●	○
Navigator	Other	Other	2013	APIM	●	●	●	●	○
Navigator	Other	Other	2013	DCSM	●	●	●	●	○
Navigator	Other	Other	2013	DSM	●	●	●	●	○
Navigator	Other	Other	2013	DSP	●	●	●	●	○
Navigator	Other	Other	2013	GEM / SJB	●	●	●	●	○
Navigator	Other	Other	2013	HVAC	●	●	●	●	○
Navigator	Other	Other	2013	IC	●	●	●	●	○
Navigator	Other	Other	2013	LTM	●	●	●	●	○
Navigator	Other	Other	2013	PCM	●	●	●	●	○
Navigator	Other	Other	2013	PRB	●	●	●	●	○
Navigator	Other	Other	2013	RCM	●	●	●	●	○
Navigator	Other	Other	2013	RCU	●	●	●	●	○
Navigator	Other	Other	2013	SDARS	●	●	●	●	○
Navigator	Other	Other	2013	TBC	●	●	●	●	○
Navigator	Other	Other	2013	TCCM	●	●	●	●	○
Navigator	Other	Other	2013	VDM	●	●	●	●	○
Navigator L	5.4L	3V	2007	EATC	●	●	●	●	○
Navigator L	5.4L	3V	2007	GEM	●	●	●	●	0xF042 0xF049 0xF04B 0xF04C 0xF05C 0xF060
Navigator L	5.4L	3V	2007 - 2010	4X4	●	●	●	●	○
Navigator L	5.4L	3V	2007 - 2011	TCM	●	●	●	●	○
Navigator L	5.4L	3V	2007 - 2012	PAM	●	●	●	●	○
Navigator L	5.4L	3V	2007 - 2012	PCM	●	●	●	●	0x0010 0x0023 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5 0x0024 0x0067 0x0025
Navigator L	5.4L	3V	2007 - 2012	RETM	●	●	●	●	0x0005 0xF04D 0xF05A
Navigator L	5.4L	3V	2007 - 2014	ABS	●	●	●	●	0x0005 0x0008 0x0012
Navigator L	5.4L	3V	2007 - 2014	ACM	●	●	●	●	0x0016 0x0017 0x0018
Navigator L	5.4L	3V	2007 - 2014	DCSM	●	●	●	●	0xF070
Navigator L	5.4L	3V	2007 - 2014	DSM	●	●	●	●	○
Navigator L	5.4L	3V	2007 - 2014	DSP	●	●	●	●	0x0005
Navigator L	5.4L	3V	2007 - 2014	IC	●	●	●	●	0xF027 0xF041 0xF044 0xF04A 0xF04C 0xF04D 0xF06B 0xF06E 0x0009
Navigator L	5.4L	3V	2007 - 2014	LTM	●	●	●	●	○
Navigator L	5.4L	3V	2007 - 2014	PRB	●	●	●	●	○
Navigator L	5.4L	3V	2007 - 2014	RCM	●	●	●	●	0xF022 0xF05D

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Navigator L	5. 4L	3V	2007 – 2014	RCU	●	●	●	●	0xF05A
Navigator L	5. 4L	3V	2007 – 2014	SDARS	●	●	●	●	○
Navigator L	5. 4L	3V	2007 – 2014	VDM	●	●	●	●	0x000E 0x0013 0x0014
Navigator L	5. 4L	3V	2008 – 2014	APIM	●	●	●	●	0x0019 0x001C
Navigator L	5. 4L	3V	2008 – 2014	GEM / SJB	●	●	●	●	0x000F 0x0042 0x000A
Navigator L	5. 4L	3V	2008 – 2014	HVAC	●	●	●	●	○
Navigator L	5. 4L	3V	2010 – 2012	GPSM	●	●	●	○	○
Navigator L	5. 4L	3V	2010 – 2014	TCCM	●	●	●	●	○
Navigator L	5. 4L	3V	2013 – 2014	TBC	●	●	●	●	○
Navigator L	Other	Other	2013	ABS	●	●	●	●	○
Navigator L	Other	Other	2013	ACM	●	●	●	●	○
Navigator L	Other	Other	2013	APIM	●	●	●	●	○
Navigator L	Other	Other	2013	DCSM	●	●	●	●	○
Navigator L	Other	Other	2013	DSM	●	●	●	●	○
Navigator L	Other	Other	2013	DSP	●	●	●	●	○
Navigator L	Other	Other	2013	GEM / SJB	●	●	●	●	○
Navigator L	Other	Other	2013	HVAC	●	●	●	●	○
Navigator L	Other	Other	2013	IC	●	●	●	●	○
Navigator L	Other	Other	2013	LTM	●	●	●	●	○
Navigator L	Other	Other	2013	PRB	●	●	●	●	○
Navigator L	Other	Other	2013	RCM	●	●	●	●	○
Navigator L	Other	Other	2013	RCU	●	●	●	●	○
Navigator L	Other	Other	2013	SDARS	●	●	●	●	○
Navigator L	Other	Other	2013	TBC	●	●	●	●	○
Navigator L	Other	Other	2013	TCCM	●	●	●	●	○
Navigator L	Other	Other	2013	VDM	●	●	●	●	○
PREMACY / IXION	1. 8L	FP	1999	ABS	●	●	●	●	○
PREMACY / IXION	1. 8L	FP	1999 – 2002	PCM	●	●	●	●	○
PREMACY / IXION	1. 8L	FP	2002	ABS/TCS	●	●	●	●	○
PREMACY / IXION	1. 8L	FP DE	1999	ABS	●	●	●	●	○
PREMACY / IXION	1. 8L	FP DE	1999	PCM	●	●	●	●	○
PREMACY / IXION	2. 0L	FS	2001	ABS/TCS	●	●	●	●	○
PREMACY / IXION	2. 0L	FS	2001	PCM	●	●	●	●	○
PREMACY / IXION	2. 0L	RF-T	1999	ABS	●	●	●	●	○
PREMACY / IXION	2. 0L	RF-T	1999	PCM	●	●	●	●	○
PROBE / MX-6	2. 0L	Other	1996 – 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
PROBE / MX-6	2. 5L	KL	1996 – 1997	PCM	●	●	●	●	○
Puma	1. 4L	Zetec-SE	1998 – 1999	ABS/TCS	●	●	●	●	○
Puma	1. 4L	Zetec-SE	1998 – 1999	HEC	●	●	●	●	○
Puma	1. 4L	Zetec-SE	1998 – 1999	PATS	○	○	●	○	○
Puma	1. 4L	Zetec-SE	1998 – 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Puma	1. 4L	Zetec-SE	1999	GEM	●	●	●	●	○
Puma	1. 6L	Zetec-SE	2001	ABS/TCS	●	●	●	●	○
Puma	1. 6L	Zetec-SE	2001	GEM	●	●	●	●	○
Puma	1. 6L	Zetec-SE	2001	HEC	●	●	●	●	○
Puma	1. 6L	Zetec-SE	2001	PATS	●	●	●	●	○
Puma	1. 6L	Zetec-SE	2001	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
Puma	1. 7L	Zetec-SE	1997 – 2001	ABS/TCS	●	●	●	●	○
Puma	1. 7L	Zetec-SE	1997 – 2001	HEC	●	●	●	●	○
Puma	1. 7L	Zetec-SE	1997 – 2001	PATS	●	●	●	●	○
Puma	1. 7L	Zetec-SE	1997 – 2001	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
Puma	1. 7L	Zetec-SE	1999 – 2001	GEM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
ROADSTER / MX-5	1.6L	B6	2000	ABS	●	●	●	●	○
ROADSTER / MX-5	1.6L	B6	2002	ABS/TCS	●	●	●	●	○
ROADSTER / MX-5	1.6L	B6	2002	PCM	●	●	●	●	○
ROADSTER / MX-5	1.8L	BP	2000	ABS	●	●	●	●	○
ROADSTER / MX-5	1.8L	BP	2002	ABS/TCS	●	●	●	●	○
ROADSTER / MX-5	1.8L	BP	2002	PCM	●	●	●	●	○
ROADSTER / MX-5	1.8L	BP Turbo	2003	ABS/TCS	●	●	●	●	○
ROADSTER / MX-5	1.8L	BP Turbo	2003	PCM	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	ABS	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	IC	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
ROADSTER / MX-5	2.0L	LF	2005 - 2008	RCM	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	RHT	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	RKE	●	●	●	●	○
ROADSTER / MX-5	2.0L	LF	2005 - 2008	TCM	●	●	●	●	○
Ranger	2.3L	DURATEC-HE / I4	2006 - 2009	4X4	●	●	●	●	○
Ranger	2.3L	DURATEC-HE / I4	2006 - 2009	ABS/TCS	●	●	●	●	0x0008
Ranger	2.3L	DURATEC-HE / I4	2006 - 2009	GEM	●	●	●	●	0x000A 0x0063
Ranger	2.3L	DURATEC-HE / I4	2006 - 2009	IC	●	●	●	●	0x0009
Ranger	2.3L	DURATEC-HE / I4	2006 - 2009	PCM	●	●	●	●	0x0009 0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
Ranger	2.3L	DURATEC-HE / I4	2006 - 2009	RCM	●	●	●	●	0x000C
Ranger	2.3L	DURATEC-HE / I4	2009	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
Ranger	3.0L	I4 DSL Electronic	2005	4X4	●	●	●	●	○
Ranger	3.0L	I4 DSL Electronic	2005	ABS/TCS	●	●	●	●	0x0008
Ranger	3.0L	I4 DSL Electronic	2005	GEM	●	●	●	●	0x0063
Ranger	3.0L	I4 DSL Electronic	2005	IC	●	●	●	●	○
Ranger	3.0L	I4 DSL Electronic	2005	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Ranger	3.0L	I4 DSL Electronic	2005	RCM	●	●	●	●	○
Ranger	3.0L	I4 DSL Electronic	2005	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	ABS/TCS	●	●	●	●	0x0008
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	ESOF	●	●	●	●	○
Ranger / Courier / Mazda B Series /Bravo	4.0L	V6 SOHC	2003	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	●	●	●	●	0x0008 0x001E 0x00CA
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	0x00D5
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PAM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x0099 0x009A 0x00B0 0x00B1 0x00B3 0x00B9 0x00BC 0x00BD 0x00C1 0x00E7
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	●	●	●	●	0x0038
Ranger / Mazda B-Series / Courier	2.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2007	GEM	●	●	●	●	0x000A 0x0203
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2009	ABS/TCS	●	●	●	●	0x0008

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2011	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2011	IC	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2011	PCM	●	●	●	●	0x0009 0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0024 0x0028 0x0031 0x0033
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2004 - 2011	RCM	●	●	●	●	0x000C
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2005	TPM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2007 - 2011	QCSM	●	●	●	○	0x000C
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2007 - 2011	SDARS	●	●	●	●	0x0019
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2008 - 2011	GEM / SJB	●	●	●	●	0x000A 0x0042
Ranger / Mazda B-Series / Courier	2.3L	DURATEC-HE / I4	2010 - 2011	ABS	●	●	●	●	0x0008 0x0012
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995 - 1997	ABS/TCS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995 - 1997	GEM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	2.3L	OHC	1995 - 1997	RAP	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.3L	OHC	1996 - 1997	IAB	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 - 2003	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 - 2003	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	2.3L	Other	1996 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0028 0x0031 0x0033 0x0084
Ranger / Mazda B-Series / Courier	2.3L	Other	2001	PATS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 - 2003	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 - 2003	RAP	●	●	●	●	0x000A 0x000F
Ranger / Mazda B-Series / Courier	2.3L	Other	2001 - 2003	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	ABS	●	●	●	●	0x0008 0x001E 0x00CA
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	ACM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	BCMi i	●	●	●	●	0x00D5
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	DDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	HVAC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	IPC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	PAM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	PDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	RCM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	SRM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	TCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	DURATEC-HE / I4	2011	TRM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	Other	1998	IAB	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 - 2001	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 - 2001	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 - 2001	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009
Ranger / Mazda B-Series / Courier	2.5L	Other	1998 - 2001	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 - 2001	PATS	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	2.5L	Other	1999 - 2001	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.5L	Other	2001	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	PATS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	RAP	●	●	●	●	0x000A

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B-Series / Courier	2.8L	Other	2001	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 – 2000	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 – 2000	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 – 2000	PATS	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 – 2000	PCM	●	●	●	●	0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 – 2000	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	3.0L	FFV	1999 – 2000	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 – 2003	RAP	●	●	●	●	0x000A
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 – 2007	GEM	●	●	●	●	0x0203 0x000A
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 – 2008	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	3.0L	Other	1995 – 2008	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 0x0024
Ranger / Mazda B-Series / Courier	3.0L	Other	1996 – 1998	IAB	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	Other	1999 – 2008	RCM	●	●	●	●	0x000C
Ranger / Mazda B-Series / Courier	3.0L	Other	2000 – 2001	PATS	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	3.0L	Other	2001 – 2008	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	Other	2004 – 2008	IC	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	3.0L	Other	2005	TPM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 – 2008	OCSM	●	●	●	○	0x000C
Ranger / Mazda B-Series / Courier	3.0L	Other	2007 – 2008	SDARS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.0L	Other	2008	GEM / SJB	●	●	●	●	0x000A 0x0042
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ABS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	ACM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	BCMii	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	DDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	HVAC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	IPC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PAM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	PDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	RCM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	SRM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TBM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	3.2L	Duratorq Turbo Diesel Common Rail Injection	2011	TRM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	Other	1995 – 2002	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	4.0L	Other	1995 – 2002	GEM	●	●	●	●	0x0203
Ranger / Mazda B-Series / Courier	4.0L	Other	1995 – 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009
Ranger / Mazda B-Series / Courier	4.0L	Other	1995 – 2002	RAP	●	●	●	●	0x000A 0x000F
Ranger / Mazda B-Series / Courier	4.0L	Other	1996 – 1998	IAB	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 – 2001	PATS	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	4.0L	Other	1999 – 2002	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	Other	2001 – 2002	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003	RAP	●	●	●	●	0x000A 0x000F
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 – 2007	GEM	●	●	●	●	0x0203 0x000A
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 – 2009	ABS/TCS	●	●	●	●	0x0008
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 – 2011	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 – 2011	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2003 – 2011	RCM	●	●	●	●	0x000C

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2004 - 2011	IC	●	●	●	●	0x0009
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2005	TPM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2007 - 2011	OCSM	●	●	●	○	0x000C
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2007 - 2011	SDARS	●	●	●	●	0x0019
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2008 - 2011	GEM / SJB	●	●	●	●	0x000A 0x0042
Ranger / Mazda B-Series / Courier	4.0L	V6 SOHC	2010 - 2011	ABS	●	●	●	●	0x0008 0x0012
Ranger / Mazda B-Series / Courier	Other	Other	2004	4X4	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004	ABS/TCS	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004	GEM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004	IC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004	PCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2004 - 2011	RCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	ABS	●	●	●	●	0x00CA
Ranger / Mazda B-Series / Courier	Other	Other	2011	ACM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	BCMii	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	DDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	FCDIM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	HVAC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	IPC	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	PAM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	PDM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	SRM	●	●	●	○	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
Ranger / Mazda B-Series / Courier	Other	Other	2011	TCM	●	●	●	●	○
Ranger / Mazda B-Series / Courier	Other	Other	2011	TRM	●	●	●	●	○
S. A. Courier	1.6L	FFV	2007 - 2011	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x012E
S. A. Courier	1.6L	FFV	2009 - 2011	IC	●	●	●	●	○
S. A. Courier	1.6L	FFV	2009 - 2011	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
S. A. Courier	1.6L	Zetec Rocam	2009	IC	●	●	●	●	○
S. A. Courier	1.6L	Zetec Rocam	2009	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
S. A. Courier	1.6L	Zetec Rocam	2009	TBM	●	●	●	●	0x00D1 0x00D2 0x00D3
S. A. Fiesta	1.0L	FFV	2006 - 2010	ABS/TCS	●	●	●	●	0x000B 0x0008
S. A. Fiesta	1.0L	FFV	2006 - 2010	IC	●	●	●	●	○
S. A. Fiesta	1.0L	FFV	2006 - 2010	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x012E
S. A. Fiesta	1.0L	FFV	2006 - 2010	RCM	●	●	●	●	○
S. A. Fiesta	1.0L	FFV	2006 - 2010	RKE	●	●	●	●	0x000A
S. A. Fiesta	1.0L	FFV	2010	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3
S. A. Fiesta	1.0L	Zetec Rocam	2002	ABS/TCS	●	●	●	●	○
S. A. Fiesta	1.0L	Zetec Rocam	2002	IC	●	●	●	●	○
S. A. Fiesta	1.0L	Zetec Rocam	2002	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
S. A. Fiesta	1.0L	Zetec Rocam	2002	RCM	●	●	●	●	○
S. A. Fiesta	1.0L	Zetec Rocam	2002	RKE	●	●	●	●	○
S. A. Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	ABS/TCS	●	●	●	●	0x0008
S. A. Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	IC	●	●	●	●	○
S. A. Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0025
S. A. Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	RCM	●	●	●	●	○
S. A. Fiesta	1.4L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2011	RKE	●	●	●	●	○
S. A. Fiesta	1.6L	FFV	2002 - 2011	ABS/TCS	●	●	●	●	0x000B 0x0008
S. A. Fiesta	1.6L	FFV	2002 - 2011	IC	●	●	●	●	○
S. A. Fiesta	1.6L	FFV	2002 - 2011	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083 0x012E
S. A. Fiesta	1.6L	FFV	2002 - 2011	RCM	●	●	●	●	○
S. A. Fiesta	1.6L	FFV	2002 - 2011	RKE	●	●	●	●	0x000A
S. A. Fiesta	1.6L	FFV	2011	TBM	●	●	●	○	0x00D1 0x00D2 0x00D3

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
S. A. Fiesta	1.6L	Zetec Rocam	2002 - 2009	ABS/TCS	●	●	●	●	0x0008
S. A. Fiesta	1.6L	Zetec Rocam	2002 - 2009	IC	●	●	●	●	○
S. A. Fiesta	1.6L	Zetec Rocam	2002 - 2009	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
S. A. Fiesta	1.6L	Zetec Rocam	2002 - 2009	RCM	●	●	●	●	○
S. A. Fiesta	1.6L	Zetec Rocam	2002 - 2009	RKE	●	●	●	●	0x000A
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	ABS	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	PCM	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A	2005	RCM	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A T	2005	ABS	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A T	2005	PCM	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A T	2005	RCM	●	●	●	●	○
SCRUM (2005 / 9) DG64V / DG64W	660cc	K6A T	2005	TCM	●	●	●	●	○
Sable	3.0L	2V	2003	ABS/TCS	●	●	●	●	0x0008
Sable	3.0L	2V	2003 - 2005	EATC	●	●	●	●	○
Sable	3.0L	2V	2003 - 2005	GEM	●	●	●	●	0x000A 0x000F 0x0203
Sable	3.0L	2V	2003 - 2005	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024
Sable	3.0L	2V	2003 - 2005	RCM	●	●	●	●	0x000C 0x006D
Sable	3.0L	2V	2004 - 2005	ABS	●	●	●	●	0x0008
Sable	3.0L	2V	2004 - 2005	IC	●	●	●	●	0x0005
Sable	3.0L	4V	1996 - 1999	IAB	●	●	●	●	○
Sable	3.0L	4V	1996 - 1999	PATS	●	●	●	●	0x0009
Sable	3.0L	4V	1996 - 1999	RAP	●	●	●	●	0x000A 0x000F
Sable	3.0L	4V	1996 - 1999	RCC	●	●	●	●	○
Sable	3.0L	4V	1996 - 2003	ABS/TCS	●	●	●	●	0x0008
Sable	3.0L	4V	1996 - 2005	GEM	●	●	●	●	0x0203 0x000A 0x000F
Sable	3.0L	4V	1996 - 2005	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0028 0x0031 0x0033 0x0084 0x0024
Sable	3.0L	4V	2000 - 2005	EATC	●	●	●	●	○
Sable	3.0L	4V	2000 - 2005	RCM	●	●	●	●	0x000C
Sable	3.0L	4V	2004 - 2005	ABS	●	●	●	●	0x0008
Sable	3.0L	4V	2004 - 2005	IC	●	●	●	●	0x0005
Sable	3.0L	FFV	2000 - 2003	ABS/TCS	●	●	●	●	0x0008
Sable	3.0L	FFV	2000 - 2003	EATC	●	●	●	●	○
Sable	3.0L	FFV	2000 - 2003	GEM	●	●	●	●	0x000A 0x000F 0x0203
Sable	3.0L	FFV	2000 - 2003	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Sable	3.0L	FFV	2000 - 2003	RCM	●	●	●	●	○
Sable	3.0L	Other	1996 - 1999	IAB	●	●	●	●	○
Sable	3.0L	Other	1996 - 1999	PATS	●	●	●	●	0x0009
Sable	3.0L	Other	1996 - 1999	RAP	●	●	●	●	0x000A 0x000F
Sable	3.0L	Other	1996 - 1999	RCC	●	●	●	●	○
Sable	3.0L	Other	1996 - 2002	ABS/TCS	●	●	●	●	0x0008
Sable	3.0L	Other	1996 - 2002	GEM	●	●	●	●	0x0203 0x000A 0x000F
Sable	3.0L	Other	1996 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0028 0x0031 0x0033 0x0084
Sable	3.0L	Other	2000 - 2002	EATC	●	●	●	●	○
Sable	3.0L	Other	2000 - 2002	RCM	●	●	●	●	○
Sable	3.5L	4V	2008 - 2009	4X4	●	●	●	●	○
Sable	3.5L	4V	2008 - 2009	ABS	●	●	●	●	0x0008
Sable	3.5L	4V	2008 - 2009	ACM	●	●	●	●	0x0016 0x0017 0x0018
Sable	3.5L	4V	2008 - 2009	APIM	●	●	●	●	0x0019 0x001C
Sable	3.5L	4V	2008 - 2009	DSM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Sable	3.5L	4V	2008 - 2009	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0x0203
Sable	3.5L	4V	2008 - 2009	HVAC	●	●	●	●	○
Sable	3.5L	4V	2008 - 2009	IC	●	●	●	●	0x0009
Sable	3.5L	4V	2008 - 2009	OCSM	●	●	●	○	0x000C
Sable	3.5L	4V	2008 - 2009	PAM	●	●	●	●	0x006C
Sable	3.5L	4V	2008 - 2009	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5
Sable	3.5L	4V	2008 - 2009	RCM	●	●	●	●	○
Sable	3.5L	4V	2008 - 2009	RETM	●	●	●	●	○
Sable	3.5L	4V	2008 - 2009	SDARS	●	●	●	●	○
Sable	3.5L	4V	2008 - 2009	SECM	●	●	●	●	○
Street Ka	1.6L	DURATEC 8V	2003	ABS/TCS	●	●	●	●	○
Street Ka	1.6L	DURATEC 8V	2003	CSM	●	●	●	●	○
Street Ka	1.6L	DURATEC 8V	2003	ECS	●	●	○	○	○
Street Ka	1.6L	DURATEC 8V	2003	GEM	●	●	●	●	○
Street Ka	1.6L	DURATEC 8V	2003	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
TITAN (Isuzu OEM)	3.0L	4JJ1 T	2007 - 2011	ABS	●	●	●	●	○
TITAN (Isuzu OEM)	3.0L	4JJ1 T	2007 - 2011	GEM	●	●	●	●	0x0148
TITAN (Isuzu OEM)	3.0L	4JJ1 T	2007 - 2011	PATS	●	●	●	●	○
TITAN (Isuzu OEM)	3.0L	4JJ1 T	2007 - 2011	PCM	●	●	●	●	0x0144 0x0149 0x015C
TITAN (Isuzu OEM)	3.0L	4JJ1 T	2007 - 2011	RCM	●	●	●	●	○
TITAN (Isuzu OEM)	3.0L	4JJ1 T	2007 - 2011	TCM	●	●	●	●	○
TITAN (Isuzu OEM)	3.1L	4JG2	2004	PCM	●	●	●	●	0x0144
TITAN (Isuzu OEM)	3.1L	4JG2 LPG	2004	PCM	●	●	●	●	0x0144
TITAN (Isuzu OEM)	4.3L	4HF1 CNG	2004	PCM	●	●	●	●	0x0144 0x0149 0x015C
TITAN (Isuzu OEM)	4.6L	4HG1 LPG	2004	PCM	●	●	●	●	0x0144 0x0149 0x015C
TITAN (Isuzu OEM)	4.6L	4HV1 CNG	2004 - 2011	PCM	●	●	●	●	0x0144
TITAN (Isuzu OEM)	4.6L	4HV1 CNG	2004 - 2011	TCM	●	●	●	●	○
TITAN (Isuzu OEM)	4.6L	4HV1 CNG	2007 - 2011	ABS	●	●	●	●	○
TITAN (Isuzu OEM)	4.6L	4HV1 CNG	2007 - 2011	GEM	●	●	●	●	0x0148
TITAN (Isuzu OEM)	4.6L	4HV1 CNG	2007 - 2011	RCM	●	●	●	●	○
TITAN (Isuzu OEM)	4.8L	4HL1	2004	PCM	●	●	●	●	0x0144 0x0149 0x015C
TITAN (Isuzu OEM)	4.8L	4HL1	2004	TCM	●	●	●	●	○
TITAN (Isuzu OEM)	4.8L	4HL1 T	2004	PCM	●	●	●	●	0x0144 0x0149 0x015C
TITAN (Isuzu OEM)	4.8L	4HL1 T	2004	TCM	●	●	●	●	○
TITAN (Isuzu OEM)	5.2L	4HK1 T	2007	ABS	●	●	●	●	○
TITAN (Isuzu OEM)	5.2L	4HK1 T	2007	GEM	●	●	●	●	0x0148
TITAN (Isuzu OEM)	5.2L	4HK1 T	2007	PATS	●	●	●	●	○
TITAN (Isuzu OEM)	5.2L	4HK1 T	2007	PCM	●	●	●	●	0x0144 0x0149 0x015C
TITAN (Isuzu OEM)	5.2L	4HK1 T	2007	RCM	●	●	●	●	○
TITAN (Isuzu OEM)	5.2L	4HK1 T	2007	TCM	●	●	●	●	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	ACM	●	●	●	●	0x0018
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	○	0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	C-CM	●	●	●	○	0x0046
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	FCDIM	●	●	●	●	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	HCM	●	●	●	●	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	IPC	●	●	●	●	0x00D0
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013	OCSM	●	●	●	○	0x000C 0x0015
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	ABS	●	●	●	●	0x0008
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	APIM	●	●	●	●	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DCSM	●	●	●	●	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DDM	●	●	●	●	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	DSP	●	●	●	●	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	FCIM	●	●	●	○	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	GFM	●	●	●	●	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	GPSM	●	●	●	○	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HSWM	●	●	●	●	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HUD	●	●	●	●	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HVAC	●	●	●	●	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	IPM-A	●	●	●	○	0x013E
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	PAM	●	●	●	○	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	PCM	●	●	●	●	0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	PSCM	●	●	●	○	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RACM	●	●	●	●	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RCM	●	●	●	○	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RFA	●	●	●	●	0x0064
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RTM	●	●	●	○	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SCCM	●	●	●	●	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-L	●	●	●	○	○
Taurus	2.0L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SOD-R	●	●	●	●	○
Taurus	3.0L	2V	2003	ABS/TCS	●	●	●	●	0x0008
Taurus	3.0L	2V	2003 - 2007	EATC	●	●	●	●	○
Taurus	3.0L	2V	2003 - 2007	GEM	●	●	●	●	0x000A 0x000F 0x0203
Taurus	3.0L	2V	2003 - 2007	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024
Taurus	3.0L	2V	2003 - 2007	RCM	●	●	●	●	0x000C 0x006D
Taurus	3.0L	2V	2004 - 2007	ABS	●	●	●	●	0x0008
Taurus	3.0L	2V	2004 - 2007	IC	●	●	●	●	0x0005
Taurus	3.0L	4V	1996 - 1999	IAB	●	●	●	●	○
Taurus	3.0L	4V	1996 - 1999	PATS	●	●	●	●	0x0009
Taurus	3.0L	4V	1996 - 1999	RAP	●	●	●	●	0x000A 0x000F
Taurus	3.0L	4V	1996 - 1999	RCC	●	●	●	●	○
Taurus	3.0L	4V	1996 - 2003	ABS/TCS	●	●	●	●	0x0008
Taurus	3.0L	4V	1996 - 2005	GEM	●	●	●	●	0x0203 0x000A 0x000F
Taurus	3.0L	4V	1996 - 2005	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0028 0x0031 0x0033 0x0084 0x0024
Taurus	3.0L	4V	2000 - 2005	EATC	●	●	●	●	○
Taurus	3.0L	4V	2000 - 2005	RCM	●	●	●	●	0x000C
Taurus	3.0L	4V	2004 - 2005	ABS	●	●	●	●	0x0008
Taurus	3.0L	4V	2004 - 2005	IC	●	●	●	●	0x0005
Taurus	3.0L	FFV	1996 - 1999	IAB	●	●	●	●	○
Taurus	3.0L	FFV	1996 - 1999	PATS	●	●	●	●	0x0009
Taurus	3.0L	FFV	1996 - 1999	RAP	●	●	●	●	0x000A 0x000F
Taurus	3.0L	FFV	1996 - 1999	RCC	●	●	●	●	○
Taurus	3.0L	FFV	1996 - 2003	ABS/TCS	●	●	●	●	0x0008
Taurus	3.0L	FFV	1996 - 2003	GEM	●	●	●	●	0x000A 0x000F 0x0203
Taurus	3.0L	FFV	1996 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0028 0x0031 0x0033 0x0084
Taurus	3.0L	FFV	2000 - 2003	EATC	●	●	●	●	○
Taurus	3.0L	FFV	2000 - 2003	RCM	●	●	●	●	○
Taurus	3.0L	Other	1996 - 1999	IAB	●	●	●	●	○
Taurus	3.0L	Other	1996 - 1999	PATS	●	●	●	●	0x0009
Taurus	3.0L	Other	1996 - 1999	RAP	●	●	●	●	0x000A 0x000F
Taurus	3.0L	Other	1996 - 1999	RCC	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Taurus	3.0L	Other	1996 - 2002	ABS/TCS	●	●	●	●	0x0008
Taurus	3.0L	Other	1996 - 2002	GEM	●	●	●	●	0x0203 0x000A 0x000F
Taurus	3.0L	Other	1996 - 2002	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0009 0x0010 0x0028 0x0031 0x0033 0x0084
Taurus	3.0L	Other	2000 - 2002	EATC	●	●	●	●	○
Taurus	3.0L	Other	2000 - 2002	RCM	●	●	●	●	○
Taurus	3.4L	Other	1997	ABS/TCS	●	●	●	●	0x0008
Taurus	3.4L	Other	1997	GEM	●	●	●	●	0x0203
Taurus	3.4L	Other	1997	PATS	●	●	●	●	0x0009
Taurus	3.4L	Other	1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Taurus	3.4L	SHO	1996 - 1998	GEM	●	●	●	●	○
Taurus	3.4L	SHO	1996 - 1998	IAB	●	●	●	●	○
Taurus	3.4L	SHO	1996 - 1998	SARC	●	●	●	●	○
Taurus	3.4L	SHO	1996 - 1999	ABS/TCS	●	●	●	●	0x0008
Taurus	3.4L	SHO	1996 - 1999	PATS	●	●	●	●	0x0009
Taurus	3.4L	SHO	1996 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Taurus	3.4L	SHO	1996 - 1999	RAP	●	●	●	●	0x000A 0x000F
Taurus	3.4L	SHO	1996 - 1999	RCC	●	●	●	●	○
Taurus	3.5L	4V	2008 - 2009	IC	●	●	●	●	0x0009
Taurus	3.5L	4V	2008 - 2009	SDARS	●	●	●	●	○
Taurus	3.5L	4V	2008 - 2009	SECM	●	●	●	●	○
Taurus	3.5L	4V	2008 - 2012	4X4	●	●	●	●	0x0108
Taurus	3.5L	4V	2008 - 2012	ABS	●	●	●	●	0x0008
Taurus	3.5L	4V	2008 - 2012	ACM	●	●	●	●	0x0016 0x0017 0x0018
Taurus	3.5L	4V	2008 - 2012	APIM	●	●	●	●	0x0019 0x001C
Taurus	3.5L	4V	2008 - 2012	DSM	●	●	●	●	○
Taurus	3.5L	4V	2008 - 2012	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042 0x0203
Taurus	3.5L	4V	2008 - 2012	HVAC	●	●	●	●	○
Taurus	3.5L	4V	2008 - 2012	OCSM	●	●	●	○	0x000C 0x006D
Taurus	3.5L	4V	2008 - 2012	PAM	●	●	●	●	0x006C
Taurus	3.5L	4V	2008 - 2012	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5
Taurus	3.5L	4V	2008 - 2012	RCM	●	●	●	●	○
Taurus	3.5L	4V	2008 - 2012	RETM	●	●	●	●	○
Taurus	3.5L	4V	2010 - 2012	C-CM	●	●	●	○	0x0046
Taurus	3.5L	4V	2010 - 2012	DCSM	●	●	●	●	○
Taurus	3.5L	4V	2010 - 2012	DDM	●	●	●	●	○
Taurus	3.5L	4V	2010 - 2012	DSP	●	●	●	○	○
Taurus	3.5L	4V	2010 - 2012	FCIM	●	●	●	●	○
Taurus	3.5L	4V	2010 - 2012	FDIM	●	●	●	●	○
Taurus	3.5L	4V	2010 - 2012	GPSM	●	●	●	○	○
Taurus	3.5L	4V	2010 - 2012	HCM	●	●	●	●	○
Taurus	3.5L	4V	2010 - 2012	HCM-2	●	●	●	○	○
Taurus	3.5L	4V	2010 - 2012	HUD	●	●	●	●	○
Taurus	3.5L	4V	2010 - 2012	IHCM	●	●	●	●	○
Taurus	3.5L	4V	2010 - 2012	IPC	●	●	●	●	○
Taurus	3.5L	4V	2010 - 2012	PSCM	●	●	●	○	○
Taurus	3.5L	4V	2010 - 2012	RFA	●	●	●	●	0x0064
Taurus	3.5L	4V	2010 - 2012	SASM	●	●	●	●	○
Taurus	3.5L	4V	2010 - 2012	SOD-L	●	●	●	●	○
Taurus	3.5L	4V	2010 - 2012	SOD-R	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	4X4	●	●	●	●	0x0108
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	FDIM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	HCM-2	●	●	●	○	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	I LCM	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	RETM	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2012	SASM	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	ACM	●	●	●	●	0x0017 0x0018
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	C-CM	●	●	●	○	0x0046
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	HCM	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	IPC	●	●	●	●	0x00D0
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2013	OCSM	●	●	●	●	0x000C 0x0015
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	ABS	●	●	●	●	0x0008
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	APIM	●	●	●	●	0x0019 0x001C
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	DCSM	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	DDM	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	DSM	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	DSP	●	●	●	○	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	FCIM	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	GPSM	●	●	●	○	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	HUD	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	HVAC	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	PAM	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0009 0x0024 0x0025 0x0038 0x0067 0x0084 0x0010 0x0028 0x0031 0x0033 0x0095 0x0108
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	PSCM	●	●	●	○	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	RCM	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	RFA	●	●	●	●	0x0064
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	SOD-L	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2010 - 2014	SOD-R	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	BCM#1	●	●	●	○	0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013	FCDIM	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	GFM	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	HSWM	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	IPM-A	●	●	●	○	0x013E
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RACM	●	●	●	●	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	RTM	●	●	●	○	○
Taurus	3.5L	EcoBoost - Gas Turbocharged Direct Injection	2013 - 2014	SCCM	●	●	●	●	○
Taurus	3.5L	TiVCT	2013	ACM	●	●	●	●	0x0018
Taurus	3.5L	TiVCT	2013	BCM#1	●	●	●	○	0x0009 0x000F 0x0042 0x00D4 0x00D5 0x00FE
Taurus	3.5L	TiVCT	2013	C-CM	●	●	●	○	0x0046
Taurus	3.5L	TiVCT	2013	FCDIM	●	●	●	●	○
Taurus	3.5L	TiVCT	2013	HCM	●	●	●	●	○
Taurus	3.5L	TiVCT	2013	IPC	●	●	●	●	0x00D0
Taurus	3.5L	TiVCT	2013	OCSM	●	●	●	○	0x000C 0x0015
Taurus	3.5L	TiVCT	2013 - 2014	ABS	●	●	●	●	0x0008
Taurus	3.5L	TiVCT	2013 - 2014	APIM	●	●	●	●	○
Taurus	3.5L	TiVCT	2013 - 2014	DCSM	●	●	●	●	○
Taurus	3.5L	TiVCT	2013 - 2014	DDM	●	●	●	●	○
Taurus	3.5L	TiVCT	2013 - 2014	DSM	●	●	●	●	○
Taurus	3.5L	TiVCT	2013 - 2014	DSP	●	●	●	●	○
Taurus	3.5L	TiVCT	2013 - 2014	FCIM	●	●	●	○	○
Taurus	3.5L	TiVCT	2013 - 2014	GFM	●	●	●	●	○
Taurus	3.5L	TiVCT	2013 - 2014	GPSM	●	●	●	○	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Taurus	3.5L	TiVCT	2013 - 2014	HSWM	●	●	●	●	○
Taurus	3.5L	TiVCT	2013 - 2014	HUD	●	●	●	●	○
Taurus	3.5L	TiVCT	2013 - 2014	HVAC	●	●	●	●	○
Taurus	3.5L	TiVCT	2013 - 2014	IPM-A	●	●	●	○	0x013E
Taurus	3.5L	TiVCT	2013 - 2014	PAM	●	●	●	○	○
Taurus	3.5L	TiVCT	2013 - 2014	PCM	●	●	●	●	0x0010 0x0024 0x0028 0x0031 0x0033 0x0067 0x0080 0x0081 0x0082 0x0083 0x0084 0x0095 0x0108
Taurus	3.5L	TiVCT	2013 - 2014	PSCM	●	●	●	○	○
Taurus	3.5L	TiVCT	2013 - 2014	RACM	●	●	●	●	○
Taurus	3.5L	TiVCT	2013 - 2014	RCM	●	●	●	○	○
Taurus	3.5L	TiVCT	2013 - 2014	RFA	●	●	●	●	0x0064
Taurus	3.5L	TiVCT	2013 - 2014	RTM	●	●	●	○	○
Taurus	3.5L	TiVCT	2013 - 2014	SCCM	●	●	●	●	○
Taurus	3.5L	TiVCT	2013 - 2014	SOD-L	●	●	●	○	○
Taurus	3.5L	TiVCT	2013 - 2014	SOD-R	●	●	●	○	○
Taurus	3.7L	TiVCT	2013	C-CM	●	●	●	○	0x0046
Taurus	3.7L	TiVCT	2013 - 2014	ABS	●	●	●	●	0x0008
Taurus	3.7L	TiVCT	2013 - 2014	APIM	●	●	●	●	○
Taurus	3.7L	TiVCT	2013 - 2014	DCSM	●	●	●	●	○
Taurus	3.7L	TiVCT	2013 - 2014	DDM	●	●	●	●	○
Taurus	3.7L	TiVCT	2013 - 2014	DSM	●	●	●	●	○
Taurus	3.7L	TiVCT	2013 - 2014	DSP	●	●	●	●	○
Taurus	3.7L	TiVCT	2013 - 2014	FCIM	●	●	●	○	○
Taurus	3.7L	TiVCT	2013 - 2014	GFM	●	●	●	●	○
Taurus	3.7L	TiVCT	2013 - 2014	HSWM	●	●	●	●	○
Taurus	3.7L	TiVCT	2013 - 2014	HUD	●	●	●	●	○
Taurus	3.7L	TiVCT	2013 - 2014	HVAC	●	●	●	●	○
Taurus	3.7L	TiVCT	2013 - 2014	PAM	●	●	●	○	○
Taurus	3.7L	TiVCT	2013 - 2014	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Taurus	3.7L	TiVCT	2013 - 2014	PSCM	●	●	●	○	○
Taurus	3.7L	TiVCT	2013 - 2014	RACM	●	●	●	●	○
Taurus	3.7L	TiVCT	2013 - 2014	RFA	●	●	●	●	0x0064
Taurus	3.7L	TiVCT	2013 - 2014	RTM	●	●	●	○	○
Taurus	3.7L	TiVCT	2013 - 2014	SOD-L	●	●	●	○	○
Taurus	3.7L	TiVCT	2013 - 2014	SOD-R	●	●	●	●	○
Taurus	3.7L	TiVCT	2014	GPSM	●	●	●	●	○
Taurus	3.7L	TiVCT	2014	IPM-A	●	●	●	○	0x013E
Taurus	3.7L	TiVCT	2014	RCM	●	●	●	○	○
Taurus	3.7L	TiVCT	2014	SCCM	●	●	●	●	○
Taurus	Other	Other	2012	4X4	●	●	●	●	○
Taurus	Other	Other	2012	ABS	●	●	●	○	○
Taurus	Other	Other	2012	ACM	●	●	●	○	○
Taurus	Other	Other	2012	APIM	●	●	●	●	○
Taurus	Other	Other	2012	C-CM	●	●	●	●	○
Taurus	Other	Other	2012	DCSM	●	●	●	●	○
Taurus	Other	Other	2012	DDM	●	●	●	●	○
Taurus	Other	Other	2012	DSM	●	●	●	●	○
Taurus	Other	Other	2012	DSP	●	●	●	●	○
Taurus	Other	Other	2012	FCIM	●	●	●	●	○
Taurus	Other	Other	2012	FDIM	●	●	●	●	○
Taurus	Other	Other	2012	GEM / SJB	●	●	●	●	0x0042
Taurus	Other	Other	2012	GPSM	●	●	●	●	○
Taurus	Other	Other	2012	HCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Taurus	Other	Other	2012	HCM-2	●	●	●	○	○
Taurus	Other	Other	2012	HUD	●	●	●	●	○
Taurus	Other	Other	2012	HVAC	●	●	●	●	○
Taurus	Other	Other	2012	IHCM	●	●	●	●	○
Taurus	Other	Other	2012	IPC	●	●	●	●	○
Taurus	Other	Other	2012	OCSM	●	●	●	○	○
Taurus	Other	Other	2012	PAM	●	●	●	●	○
Taurus	Other	Other	2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Taurus	Other	Other	2012	PSCM	●	●	●	○	○
Taurus	Other	Other	2012	RCM	●	●	●	●	○
Taurus	Other	Other	2012	RETM	●	●	●	●	○
Taurus	Other	Other	2012	RFA	●	●	●	●	○
Taurus	Other	Other	2012	SASM	●	●	●	●	○
Taurus	Other	Other	2012	SOD-L	●	●	●	●	○
Taurus	Other	Other	2012	SOD-R	●	●	●	●	○
Taurus X	3.5L	4V	2008 - 2009	4X4	●	●	●	●	○
Taurus X	3.5L	4V	2008 - 2009	ABS	●	●	●	●	0x0008
Taurus X	3.5L	4V	2008 - 2009	ACM	●	●	●	●	0x0016 0x0017 0x0018
Taurus X	3.5L	4V	2008 - 2009	APIM	●	●	●	○	0x0019 0x001C
Taurus X	3.5L	4V	2008 - 2009	DSM	●	●	●	●	○
Taurus X	3.5L	4V	2008 - 2009	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
Taurus X	3.5L	4V	2008 - 2009	HVAC	●	●	●	●	○
Taurus X	3.5L	4V	2008 - 2009	IC	●	●	●	●	0x0009
Taurus X	3.5L	4V	2008 - 2009	LTM	●	●	●	●	○
Taurus X	3.5L	4V	2008 - 2009	OCSM	●	●	●	○	0x000C
Taurus X	3.5L	4V	2008 - 2009	PAM	●	●	●	●	0x006C
Taurus X	3.5L	4V	2008 - 2009	PCM	●	●	●	●	0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0038 0x0080 0x0081 0x0082 0x0083 0x0084 0x00C5
Taurus X	3.5L	4V	2008 - 2009	RCM	●	●	●	●	○
Taurus X	3.5L	4V	2008 - 2009	RETM	●	●	●	●	○
Taurus X	3.5L	4V	2008 - 2009	SDARS	●	●	●	●	○
Taurus X	3.5L	4V	2008 - 2009	SECM	●	●	●	●	○
Telstar	1.8L	Other	Other	PCM	●	●	●	●	○
Telstar	2.0L	Other	Other	PCM	●	●	●	●	○
Telstar	2.5L	Other	Other	PCM	●	●	●	●	○
Thunderbird	3.8L	Other	1996 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Thunderbird	3.9L	4V	2002 - 2005	ABS/TCS	●	●	●	●	0x0008 0x0012
Thunderbird	3.9L	4V	2002 - 2005	ACM	●	●	●	●	○
Thunderbird	3.9L	4V	2002 - 2005	DDM	●	●	●	●	0x000A 0x000F
Thunderbird	3.9L	4V	2002 - 2005	EATC	●	●	●	●	○
Thunderbird	3.9L	4V	2002 - 2005	GEM	●	●	●	●	○
Thunderbird	3.9L	4V	2002 - 2005	HEC	●	●	●	●	0x0009 0x00C7
Thunderbird	3.9L	4V	2002 - 2005	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0010 0x0028 0x0031 0x0033 0x00C6 0x0024
Thunderbird	3.9L	4V	2002 - 2005	RCM	●	●	●	●	○
Thunderbird	3.9L	4V	2002 - 2005	REM	●	●	●	●	○
Thunderbird	4.6L	2V	1994 - 1997	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Thunderbird	4.6L	Other	1996	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Titan	4.0L	TF	2000 - 2002	PCM	●	●	●	●	○
Town Car	4.6L	2V	1995 - 2004	ABS/TCS	●	●	●	●	0x0008
Town Car	4.6L	2V	1995 - 2007	EATC	●	●	●	●	○
Town Car	4.6L	2V	1995 - 2011	DDM	●	●	●	●	0x000F 0x000A 0xF044 0xF045 0x0005 0x0042
Town Car	4.6L	2V	1995 - 2011	DSM	●	●	●	●	0xF041

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Town Car	4. 6L	2V	1995 - 2011	LCM	●	●	●	●	0xF027 0xF042 0xF043 0x0005
Town Car	4. 6L	2V	1995 - 2011	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009 0x0024 0x00C5
Town Car	4. 6L	2V	1996 - 1998	IAB	●	●	●	●	○
Town Car	4. 6L	2V	1998 - 2003	CPM	●	●	●	●	○
Town Car	4. 6L	2V	1998 - 2004	NGSC	●	●	●	●	○
Town Car	4. 6L	2V	1998 - 2005	ACM	●	●	●	●	0x0005
Town Car	4. 6L	2V	1998 - 2005	HEC	●	●	●	●	0x0009
Town Car	4. 6L	2V	1998 - 2006	RASM	●	●	●	●	0x0013 0x0005
Town Car	4. 6L	2V	1999 - 2011	RCM	●	●	●	●	0x000C 0x006D
Town Car	4. 6L	2V	2002 - 2003	RESCU	●	●	●	●	○
Town Car	4. 6L	2V	2003 - 2010	MC	●	●	●	●	○
Town Car	4. 6L	2V	2003 - 2010	NAV	●	●	●	●	0x0016
Town Car	4. 6L	2V	2003 - 2011	LTM	●	●	●	●	○
Town Car	4. 6L	2V	2003 - 2011	PAM	●	●	●	●	○
Town Car	4. 6L	2V	2005 - 2011	ABS	●	●	●	●	0x0008 0x0005 0xF046
Town Car	4. 6L	2V	2006 - 2011	IC	●	●	●	●	0x0005
Town Car	4. 6L	2V	2006 - 2011	RATC	●	●	●	●	○
Town Car	4. 6L	2V	2007 - 2011	VDM	●	●	●	●	0x0013 0x0014
Town Car	4. 6L	2V	2008 - 2011	HVAC	●	●	●	●	○
Tracer	1. 9L	1. 4 PT-E SFI	1996	ABS/TCS	●	●	●	●	○
Tracer	1. 9L	1. 4 PT-E SFI	1996	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Tracer	1. 9L	1. 4 PT-E SFI	1996	RAP	●	●	●	●	○
Tracer	2. 0L	SPI	1997 - 1999	ABS/TCS	●	●	●	●	0x0008
Tracer	2. 0L	SPI	1997 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083
Tracer	2. 0L	SPI	1997 - 1999	RAP	●	●	●	●	0x000A
Tracer	2. 0L	SPI	1998	ECS	●	●	●	●	○
Tracer	2. 0L	SPI	1999	IAB	●	●	●	●	○
Transit	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2014	APIM	●	●	●	●	○
Transit	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2014	AWD#1	●	●	●	●	○
Transit	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2014	CCMi	●	●	●	●	0x00F9
Transit	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2014	FCIM	●	●	●	●	○
Transit	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2014	HCM	●	●	●	○	○
Transit	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2014	PAM	●	●	●	○	○
Transit	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2014	SASM	●	●	●	○	○
Transit	2. 2L	Duratorq Turbo Diesel Common Rail Injection	2014	TRM	●	●	●	●	○
Transit	2. 2L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	APIM	●	●	●	●	○
Transit	2. 2L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	AWD#1	●	●	●	●	○
Transit	2. 2L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	CCMi	●	●	●	●	0x00F9
Transit	2. 2L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	FCIM	●	●	●	●	○
Transit	2. 2L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	HCM	●	●	●	○	○
Transit	2. 2L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	PAM	●	●	●	○	○
Transit	2. 2L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	SASM	●	●	●	○	○
Transit	2. 2L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	TRM	●	●	●	●	○
Transit	2. 2L	TDCi StgVI	2014	APIM	●	●	●	●	○
Transit	2. 2L	TDCi StgVI	2014	AWD#1	●	●	●	●	○
Transit	2. 2L	TDCi StgVI	2014	CCMi	●	●	●	●	0x00F9
Transit	2. 2L	TDCi StgVI	2014	FCIM	●	●	●	●	○
Transit	2. 2L	TDCi StgVI	2014	HCM	●	●	●	○	○
Transit	2. 2L	TDCi StgVI	2014	PAM	●	●	●	○	○
Transit	2. 2L	TDCi StgVI	2014	SASM	●	●	●	○	○
Transit	2. 2L	TDCi StgVI	2014	TRM	●	●	●	●	○
Transit	3. 2L	Duratorq Turbo Diesel Common Rail Injection	2014	TCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Transit Connect	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2014	AHCM	●	●	●	○	0x00CF
Transit Connect	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2014	APIM	●	●	●	●	0x0019
Transit Connect	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2014	BCMii	●	●	●	●	0x00D5 0x0101
Transit Connect	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2014	DDM	●	●	●	○	○
Transit Connect	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2014	GPSM	●	●	●	○	○
Transit Connect	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2014	HCM	●	●	●	○	○
Transit Connect	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2014	HVAC	●	●	●	○	○
Transit Connect	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2014	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x009A 0x00BC 0x0114
Transit Connect	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2014	PDM	●	●	●	○	○
Transit Connect	1.0L	EcoBoost – Gas Turbocharged Direct Injection	2014	TRM	●	●	●	●	○
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	AHCM	●	●	●	○	0x00CF
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	APIM	●	●	●	●	0x0019
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	BCMii	●	●	●	●	0x00D5 0x0101
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	DDM	●	●	●	○	○
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	GPSM	●	●	●	○	○
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	HCM	●	●	●	○	○
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	HVAC	●	●	●	○	○
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	PDM	●	●	●	○	○
Transit Connect	1.6L	Duratorq Turbo Diesel Common Rail Injection StgV	2014	TRM	●	●	●	●	○
Transit Connect	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2014	AHCM	●	●	●	○	0x00CF
Transit Connect	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2014	APIM	●	●	●	●	0x0019
Transit Connect	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2014	BCMii	●	●	●	●	0x00D5 0x0101
Transit Connect	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2014	DDM	●	●	●	○	○
Transit Connect	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2014	GPSM	●	●	●	○	○
Transit Connect	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2014	HCM	●	●	●	○	○
Transit Connect	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2014	HVAC	●	●	●	○	○
Transit Connect	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2014	PDM	●	●	●	○	○
Transit Connect	1.6L	EcoBoost – Gas Turbocharged Direct Injection	2014	TRM	●	●	●	●	○
Transit Connect	1.6L	TDCi ECO III	2014	AHCM	●	●	●	○	0x00CF
Transit Connect	1.6L	TDCi ECO III	2014	APIM	●	●	●	●	0x0019
Transit Connect	1.6L	TDCi ECO III	2014	BCMii	●	●	●	●	0x00D5 0x0101
Transit Connect	1.6L	TDCi ECO III	2014	DDM	●	●	●	○	○
Transit Connect	1.6L	TDCi ECO III	2014	GPSM	●	●	●	○	○
Transit Connect	1.6L	TDCi ECO III	2014	HCM	●	●	●	○	○
Transit Connect	1.6L	TDCi ECO III	2014	HVAC	●	●	●	○	○
Transit Connect	1.6L	TDCi ECO III	2014	PCM	●	●	●	○	0x0080 0x0081 0x0082 0x0083
Transit Connect	1.6L	TDCi ECO III	2014	PDM	●	●	●	○	○
Transit Connect	1.6L	TDCi ECO III	2014	TRM	●	●	●	●	○
Transit Connect	2.0L	2.0 DOHC SFI (8V)	1995 – 1997	PATS	●	●	●	●	○
Transit Connect	2.0L	2.0 DOHC SFI (8V)	1995 – 1999	ABS	●	●	●	●	○
Transit Connect	2.0L	2.0 DOHC SFI (8V)	1995 – 1999	ABS/TCS	●	●	●	●	○
Transit Connect	2.0L	2.0 DOHC SFI (8V)	1995 – 1999	CSM	●	●	●	●	○
Transit Connect	2.0L	2.0 DOHC SFI (8V)	1995 – 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0083
Transit Connect	2.0L	2.0 DOHC SFI (8V)	1999	AFCM	●	●	●	●	○
Transit Connect	2.0L	DURATEC-HE / I4	2010 – 2012	ABS	●	●	●	●	○
Transit Connect	2.0L	DURATEC-HE / I4	2010 – 2012	ACM	●	●	●	●	○
Transit Connect	2.0L	DURATEC-HE / I4	2010 – 2012	GEM / SJB	●	●	●	●	○
Transit Connect	2.0L	DURATEC-HE / I4	2010 – 2012	IC	●	●	●	●	○
Transit Connect	2.0L	DURATEC-HE / I4	2010 – 2012	OCSM	●	●	●	●	0x000C 0x006D
Transit Connect	2.0L	DURATEC-HE / I4	2010 – 2012	PAM	●	●	●	●	○
Transit Connect	2.0L	DURATEC-HE / I4	2010 – 2012	PCM	●	●	●	●	0x0009 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0023

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Transit Connect	2.0L	DURATEC-HE / I4	2010 - 2012	RCM	●	●	●	●	○
Transit Connect	2.0L	DURATEC-HE / I4	2010 - 2012	SRM	●	●	●	○	○
Transit Connect	2.0L	DURATEC-HE / I4	2010 - 2012	VSM	●	●	●	●	○
Transit Connect	2.0L	DURATEC-HE / I4	2012	APIM	●	●	●	●	○
Transit Connect	2.0L	DURATORQ DI	2001	ABS/TCS	●	●	●	●	0x0008
Transit Connect	2.0L	DURATORQ DI	2001	CSM	●	●	●	●	○
Transit Connect	2.0L	DURATORQ DI	2001	EPB	●	●	●	●	○
Transit Connect	2.0L	DURATORQ DI	2001	FFH	●	●	●	●	0x00CF
Transit Connect	2.0L	DURATORQ DI	2001	FIP	●	●	●	●	○
Transit Connect	2.0L	DURATORQ DI	2001	HEC	●	●	●	●	○
Transit Connect	2.0L	DURATORQ DI	2001	PAM	●	●	●	●	○
Transit Connect	2.0L	DURATORQ DI	2001	PATS	●	●	●	●	○
Transit Connect	2.0L	DURATORQ DI	2001	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Transit Connect	2.0L	DURATORQ DI	2001	RASM	●	●	●	●	○
Transit Connect	2.0L	DURATORQ DI	2001	RCM	●	●	●	●	○
Transit Connect	2.0L	DURATORQ DI	2001	TCM	●	●	●	●	0x003F
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	ABS/TCS	●	●	●	●	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	CSM	●	●	●	●	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	FFH	●	●	●	●	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	FIP	●	●	●	●	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	HEC	●	●	●	●	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	ICU	○	○	●	○	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	PAM	●	●	●	●	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0092
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	RASM	●	●	●	●	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	RCM	●	●	●	●	○
Transit Connect	2.0L	Duratorq Turbo Diesel Common Rail Injection	2001	TCM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS	●	●	●	●	0x0008 0x0053 0x00DD 0x00E3 0x00E4 0x00E8 0x011F 0x0135
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS/TCS	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	BCMii	●	●	●	●	0x0009 0x011C
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	CSM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	FFH	●	●	●	●	0x00CF
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	IPC	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PAM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x00A6 0x00A7 0x00A8 0x00A9 0x00B0 0x00B1 0x00B5 0x00B6 0x00C0 0x00C1 0x00C2 0x00C4
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	RCM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	ABS	●	●	●	●	0x0053 0x00DD 0x00E3 0x00E4 0x00E8 0x011F 0x0135
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	ABS/TCS	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	ACM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	BCMii	●	●	●	●	0x011C
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	CSM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	FFH	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	IPC	●	●	●	●	0xF020
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	PAM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	RCM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Inj Stage V	2006	SRM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS	●	●	●	●	0x0053 0x00DD 0x00E3 0x00E4 0x00E8 0x011F 0x0135

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS/TCS	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	BCMii	●	●	●	●	0x011C
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	CSM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	FFH	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	IPC	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PAM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	RCM	●	●	●	●	○
Transit Connect	2.2L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
Transit Connect	2.3L	DOHC SFI (16V)	2001	ABS/TCS	●	●	●	●	0x0008
Transit Connect	2.3L	DOHC SFI (16V)	2001	CSM	●	●	●	●	○
Transit Connect	2.3L	DOHC SFI (16V)	2001	HEC	●	●	●	●	○
Transit Connect	2.3L	DOHC SFI (16V)	2001	PAM	●	●	●	●	○
Transit Connect	2.3L	DOHC SFI (16V)	2001	PATS	●	●	●	●	○
Transit Connect	2.3L	DOHC SFI (16V)	2001	PCM	●	●	●	●	0x0009 0x0025 0x0080 0x0081 0x0082 0x0083
Transit Connect	2.3L	DOHC SFI (16V)	2001	RASM	●	●	●	●	○
Transit Connect	2.3L	DOHC SFI (16V)	2001	RCM	●	●	●	●	○
Transit Connect	2.3L	DURATEC-HE / I4	2006	ABS	●	●	●	●	0x0008 0x0053 0x00DD 0x00E3 0x00E4 0x00E8 0x011F 0x0135
Transit Connect	2.3L	DURATEC-HE / I4	2006	ABS/TCS	●	●	●	●	○
Transit Connect	2.3L	DURATEC-HE / I4	2006	ACM	●	●	●	●	○
Transit Connect	2.3L	DURATEC-HE / I4	2006	BCMii	●	●	●	●	0x0009 0x011C
Transit Connect	2.3L	DURATEC-HE / I4	2006	CSM	●	●	●	●	○
Transit Connect	2.3L	DURATEC-HE / I4	2006	FFH	●	●	●	●	0x00CF
Transit Connect	2.3L	DURATEC-HE / I4	2006	IPC	●	●	●	●	○
Transit Connect	2.3L	DURATEC-HE / I4	2006	PAM	●	●	●	●	○
Transit Connect	2.3L	DURATEC-HE / I4	2006	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x00AC
Transit Connect	2.3L	DURATEC-HE / I4	2006	RCM	●	●	●	●	○
Transit Connect	2.3L	DURATEC-HE / I4	2006	SRM	●	●	●	●	○
Transit Connect	2.4L	DURATORQ DI	2000	ABS/TCS	●	●	●	●	0x0008
Transit Connect	2.4L	DURATORQ DI	2000	CSM	●	●	●	●	○
Transit Connect	2.4L	DURATORQ DI	2000	EPB	●	●	●	●	○
Transit Connect	2.4L	DURATORQ DI	2000	FFH	●	●	●	●	0x00CF
Transit Connect	2.4L	DURATORQ DI	2000	FIP	●	●	●	●	○
Transit Connect	2.4L	DURATORQ DI	2000	HEC	●	●	●	●	○
Transit Connect	2.4L	DURATORQ DI	2000	PAM	●	●	●	●	○
Transit Connect	2.4L	DURATORQ DI	2000	PATS	●	●	●	●	○
Transit Connect	2.4L	DURATORQ DI	2000	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083
Transit Connect	2.4L	DURATORQ DI	2000	RASM	●	●	●	●	○
Transit Connect	2.4L	DURATORQ DI	2000	RCM	●	●	●	●	○
Transit Connect	2.4L	DURATORQ DI	2000	TCM	●	●	●	●	0x003F
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2000	HEC	●	●	●	●	○
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2000	ICU	○	○	●	○	○
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2000 - 2006	ABS/TCS	●	●	●	●	0x0008
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2000 - 2006	CSM	●	●	●	●	○
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2000 - 2006	FFH	●	●	●	●	0x00CF
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2000 - 2006	PAM	●	●	●	●	○
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2000 - 2006	PCM	●	●	●	●	0x0009 0x0080 0x0081 0x0082 0x0083 0x0092 0x0090 0x0098 0x00A6 0x00A7 0x00A8 0x00A9 0x00B0 0x00B1 0x00B5 0x00B6 0x00C0 0x00C1 0x00C2 0x00C4
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2000 - 2006	RCM	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS	●	●	●	●	0x0008 0x0053 0x00DD 0x00E3 0x00E4 0x00E8 0x011F 0x0135
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2006	BCMii	●	●	●	●	0x0009 0x011C
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2006	IPC	●	●	●	●	○
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
Transit Connect	2.4L	Duratorq Turbo Diesel Common Rail Injection	2006	TBM	●	●	●	●	○
Transit Connect	2.5L	2.5 turbo diesel engines with EPIC	Other	ABS	●	●	●	●	○
Transit Connect	2.5L	2.5 turbo diesel engines with EPIC	Other	ABS/TCS	●	●	●	●	○
Transit Connect	2.5L	2.5 turbo diesel engines with EPIC	Other	CSM	●	●	●	●	○
Transit Connect	2.5L	2.5 turbo diesel engines with EPIC	Other	PCM	●	●	●	●	0x0025 0x0080 0x0081 0x0082 0x0083 0x0083
Transit Connect	2.5L	IVCT	2014	DDM	●	●	●	●	○
Transit Connect	2.5L	IVCT	2014	FCIM	●	●	●	●	○
Transit Connect	2.5L	IVCT	2014	GPSM	●	●	●	○	○
Transit Connect	2.5L	IVCT	2014	HCM	●	●	●	●	○
Transit Connect	2.5L	IVCT	2014	HVAC	●	●	●	●	○
Transit Connect	2.5L	IVCT	2014	OCSM	●	●	●	●	0x000C
Transit Connect	2.5L	IVCT	2014	PAM	●	●	○	○	○
Transit Connect	2.5L	IVCT	2014	PCM	●	●	●	●	0x0023 0x0024 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084
Transit Connect	2.5L	IVCT	2014	PDM	●	●	●	●	○
Transit Connect	2.5L	IVCT	2014	PSCM	●	●	●	●	○
Transit Connect	2.5L	IVCT	2014	TRM	●	●	●	●	○
Transit Connect	28kWh	Battery Electric Vehicle	2011	SRM	●	●	●	○	○
Transit Connect	28kWh	Battery Electric Vehicle	2011 - 2013	ABS	●	●	●	●	○
Transit Connect	28kWh	Battery Electric Vehicle	2011 - 2013	ACCM#2	●	●	●	●	○
Transit Connect	28kWh	Battery Electric Vehicle	2011 - 2013	ACM	●	●	●	●	○
Transit Connect	28kWh	Battery Electric Vehicle	2011 - 2013	GEM / SJB	●	●	●	●	○
Transit Connect	28kWh	Battery Electric Vehicle	2011 - 2013	IC	●	●	●	●	○
Transit Connect	28kWh	Battery Electric Vehicle	2011 - 2013	OCSM	●	●	●	●	0x000C
Transit Connect	28kWh	Battery Electric Vehicle	2011 - 2013	PAM	●	●	●	●	○
Transit Connect	28kWh	Battery Electric Vehicle	2011 - 2013	PSCM	●	●	●	○	○
Transit Connect	28kWh	Battery Electric Vehicle	2011 - 2013	RCM	●	●	●	○	○
Transit Connect	28kWh	Battery Electric Vehicle	2011 - 2013	VSM	●	●	●	●	○
Transit Connect	28kWh	Battery Electric Vehicle	2013	APIM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS	●	●	●	●	0x0008 0x0053 0x00DD 0x00E3 0x00E4 0x00E8 0x011F 0x0135
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS/TCS	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	BCMii	●	●	●	●	0x0009 0x011C
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	CSM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	FFH	●	●	●	●	0x00CF
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	IPC	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PAM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0090 0x0092 0x0098 0x00A6 0x00A7 0x00A8 0x00A9 0x00B0 0x00B1 0x00B5 0x00B6 0x00C0 0x00C1 0x00C2 0x00C4
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	RCM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS	●	●	●	●	0x0053 0x00DD 0x00E3 0x00E4 0x00E8 0x011F 0x0135
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ABS/TCS	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	ACM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	BCMii	●	●	●	●	0x011C

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	CSM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	FFH	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	IPC	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PAM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	RCM	●	●	●	●	○
Transit Connect	3.2L	Duratorq Turbo Diesel Common Rail Injection	2006	SRM	●	●	●	●	○
Transit Connect	Other	Other	2013	ABS	●	●	●	●	○
Transit Connect	Other	Other	2013	ACM	●	●	●	●	○
Transit Connect	Other	Other	2013	APIM	●	●	●	●	○
Transit Connect	Other	Other	2013	GEM / SJB	●	●	●	●	○
Transit Connect	Other	Other	2013	IC	●	●	●	●	○
Transit Connect	Other	Other	2013	OCSM	●	●	●	●	○
Transit Connect	Other	Other	2013	PAM	●	●	●	●	○
Transit Connect	Other	Other	2013	RCM	●	●	●	○	○
Transit Connect	Other	Other	2013	VSM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002	HEC	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002	ICU	○	○	●	○	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	ABS/TCS	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	CSM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2007	ECS	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2009	FFH	●	●	●	●	0x00CF
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2009	PAM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2002 - 2009	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0009 0x0092 0x0092 0x006F 0x0090 0x0098 0x0099 0x00AB 0x00AC 0x00B4 0x00C1
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2009	ABS	●	●	●	●	0x002B 0x0054 0x00D7 0x00DD 0x00E2 0x00E8
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2009	ACM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2009	IC	●	●	●	●	0x0009
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2007 - 2009	SRM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2009	GEM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Duratorq Turbo Diesel Common Rail Injection	2009	RCM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Endura DI	2002	ABS/TCS	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Endura DI	2002	CSM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Endura DI	2002	ECS	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Endura DI	2002	FFH	●	●	●	●	0x00CF
Transit Connect / Tourneo Connect	1.8L	Endura DI	2002	FIP	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Endura DI	2002	HEC	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Endura DI	2002	PAM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Endura DI	2002	PCM	●	●	●	●	0x0009 0x000A 0x0080 0x0081 0x0082 0x0083
Transit Connect / Tourneo Connect	1.8L	Zetec	2002	ABS/TCS	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Zetec	2002	AFCM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Zetec	2002	CSM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Zetec	2002	ECS	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Zetec	2002	FFH	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Zetec	2002	HEC	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Zetec	2002	PAM	●	●	●	●	○
Transit Connect / Tourneo Connect	1.8L	Zetec	2002	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0084
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	ABS	●	●	●	○	0x00DD 0x00E8
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	ACM	●	●	●	○	○
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	AHCM	●	●	●	○	0x00CF
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	APIM	●	●	●	●	○
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	BCMii	●	●	●	●	0x0009 0x011C

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	CCMii	●	●	●	●	0x00F9
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	FCDIM	●	●	●	●	○
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	GPSM	●	●	●	○	○
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	HCM	●	●	●	○	○
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	IPC	●	●	●	○	○
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	IPM-A	●	●	●	●	0x00E5
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	IPM-B	●	●	●	○	○
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	PAM	●	●	●	○	○
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	PCM	●	●	●	●	0x0080 0x0081 0x0082 0x0083 0x0092 0x0098 0x0099 0x009A 0x00B0 0x00B1 0x00B3 0x00B9 0x00BC 0x00BD 0x00C1 0x00C3 0x00E7 0x013B
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	RCM	●	●	●	○	0x00EF
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	SASM	●	●	●	○	○
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	TBC	●	●	●	○	○
V362	2.2L	Duratorq Turbo Diesel Common Rail Injection	2012	TRM	●	●	●	○	○
VX-1	1.4L	K14B	Other	ABS	●	●	●	○	0x0212
VX-1	1.4L	K14B	Other	BCM#1	●	●	●	●	○
Villager	3.3L	Other	2001 - 2002	PCM	●	●	●	●	○
Windstar	3.0L	V6 OHV	1995 - 1998	GEM	●	●	●	●	○
Windstar	3.0L	V6 OHV	1995 - 1999	ABS/TCS	●	●	●	●	0x0008
Windstar	3.0L	V6 OHV	1995 - 1999	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033
Windstar	3.0L	V6 OHV	1996 - 1998	IAB	●	●	●	●	○
Windstar	3.0L	V6 OHV	1996 - 1998	PATS	●	●	●	●	○
Windstar	3.0L	V6 OHV	1998	RAP	●	●	●	●	0x000A
Windstar	3.0L	V6 OHV	1999	DDM	●	●	●	●	0x000A
Windstar	3.0L	V6 OHV	1999	FEM	●	●	●	●	○
Windstar	3.0L	V6 OHV	1999	IC	●	●	●	●	0x0009
Windstar	3.0L	V6 OHV	1999	MC	●	●	●	●	○
Windstar	3.0L	V6 OHV	1999	NGSC	●	●	●	●	○
Windstar	3.0L	V6 OHV	1999	PAM	●	●	●	●	○
Windstar	3.0L	V6 OHV	1999	RCM	●	●	●	●	○
Windstar	3.0L	V6 OHV	1999	REM	●	●	●	●	○
Windstar	3.8L	V6 OHV	1995 - 1998	GEM	●	●	●	●	○
Windstar	3.8L	V6 OHV	1995 - 2003	ABS/TCS	●	●	●	●	0x0008 0x0005 0x0012
Windstar	3.8L	V6 OHV	1995 - 2003	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0010 0x0028 0x0031 0x0033 0x0084 0x0009
Windstar	3.8L	V6 OHV	1996 - 1998	IAB	●	●	●	●	○
Windstar	3.8L	V6 OHV	1996 - 1998	PATS	●	●	●	●	○
Windstar	3.8L	V6 OHV	1998	RAP	●	●	●	●	0x000A
Windstar	3.8L	V6 OHV	1999 - 2003	DDM	●	●	●	●	0x000A 0x0005 0xF045
Windstar	3.8L	V6 OHV	1999 - 2003	FEM	●	●	●	●	0x0005 0xF042 0xF045 0xF08D 0xF090 0xF091 0xF092 0xF0B4
Windstar	3.8L	V6 OHV	1999 - 2003	IC	●	●	●	●	0x0009 0xF027 0xF08E 0xF08F
Windstar	3.8L	V6 OHV	1999 - 2003	LPSDM	●	●	●	●	○
Windstar	3.8L	V6 OHV	1999 - 2003	MC	●	●	●	●	○
Windstar	3.8L	V6 OHV	1999 - 2003	NGSC	●	●	●	●	○
Windstar	3.8L	V6 OHV	1999 - 2003	PAM	●	●	●	●	○
Windstar	3.8L	V6 OHV	1999 - 2003	RCM	●	●	●	●	0x000C
Windstar	3.8L	V6 OHV	1999 - 2003	REM	●	●	●	●	0x000F
Windstar	3.8L	V6 OHV	1999 - 2003	RPSDM	●	●	●	●	○
Windstar	3.8L	V6 OHV	2000 - 2003	DSM	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	4X4	●	●	●	●	○

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	ABS	●	●	●	●	0x0074
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	ACCM#2	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	ACM	●	●	●	○	0x0017 0x0018
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	APIM	●	●	●	●	0x0019
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	BECM	●	●	●	●	0x006E
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	DCDC	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	DCSM	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	DDM	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	DSM	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	DSP	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	FCIM	●	●	●	○	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	FDIM	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	GEM / SJB	●	●	●	●	0x000A 0x000F 0x0042
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	GPSM	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	HCM	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	HVAC	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	ILCM	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	IPC	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	OCSM	●	●	●	●	0x000C 0x0015
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	PAM	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	PCM	●	●	●	●	0x0009 0x0010 0x0023 0x0024 0x0025 0x0028 0x0031 0x0033 0x0080 0x0081 0x0082 0x0083 0x0084
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	PSCM	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	RCM	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	SOD-L	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	SOD-R	●	●	●	●	○
Zephyr/MKZ	2.5L	HEV / ATKINSON 4V	2011 - 2012	TCM	●	●	●	○	○
Zephyr/MKZ	3.0L	4V	2006	ABS	●	●	●	●	○
Zephyr/MKZ	3.0L	4V	2006	ACM	●	●	●	●	○
Zephyr/MKZ	3.0L	4V	2006	DCSM	●	●	●	●	○
Zephyr/MKZ	3.0L	4V	2006	DDM	●	●	●	●	○
Zephyr/MKZ	3.0L	4V	2006	DSM	●	●	●	●	○
Zephyr/MKZ	3.0L	4V	2006	DSP	●	●	●	●	○
Zephyr/MKZ	3.0L	4V	2006	EATC	●	●	●	●	○
Zephyr/MKZ	3.0L	4V	2006	GEM	●	●	●	●	○
Zephyr/MKZ	3.0L	4V	2006	IC	●	●	●	●	○
Zephyr/MKZ	3.0L	4V	2006	OCSM	●	●	●	○	○
Zephyr/MKZ	3.0L	4V	2006	PCM	●	●	●	●	0x0023 0x0080 0x0081 0x0082 0x0083 0x0084
Zephyr/MKZ	3.0L	4V	2006	RCM	●	●	●	●	0x0005
Zephyr/MKZ	3.0L	4V	2006	TCM	●	●	●	●	○
Zephyr/MKZ	3.5L	4V	2007	EATC	●	●	●	●	○
Zephyr/MKZ	3.5L	4V	2007	GEM	●	●	●	●	○
Zephyr/MKZ	3.5L	4V	2007 - 2009	IC	●	●	●	●	0x0005 0xF027
Zephyr/MKZ	3.5L	4V	2007 - 2009	SDARS	●	●	●	●	0x0005
Zephyr/MKZ	3.5L	4V	2007 - 2012	4X4	●	●	●	●	○
Zephyr/MKZ	3.5L	4V	2007 - 2012	ABS	●	●	●	●	0x0005 0x0012 0x0008
Zephyr/MKZ	3.5L	4V	2007 - 2012	ACM	●	●	●	●	0xF05A 0xF062 0xF07A 0x0017 0x0018
Zephyr/MKZ	3.5L	4V	2007 - 2012	DCSM	●	●	●	●	0x0005
Zephyr/MKZ	3.5L	4V	2007 - 2012	DDM	●	●	●	●	0x0005
Zephyr/MKZ	3.5L	4V	2007 - 2012	DSM	●	●	●	●	0x0005 0xF041
Zephyr/MKZ	3.5L	4V	2007 - 2012	DSP	●	●	●	●	0x0005
Zephyr/MKZ	3.5L	4V	2007 - 2012	OCSM	●	●	●	○	0x000C 0x0015 0x006D

Vehicle	Capacity	EngineType	Year	Module	Read Codes	Erase Codes	Live Data	Active Test	Specil Function
Zephyr/MKZ	3.5L	4V	2007 - 2012	PCM	●	●	●	●	0x0023 0x0025 0x0080 0x0081 0x0082 0x0083 0x0084 0x0024 0x0037
Zephyr/MKZ	3.5L	4V	2007 - 2012	RCM	●	●	●	●	0xF022 0xF05D 0x0005
Zephyr/MKZ	3.5L	4V	2007 - 2012	TCM	●	●	●	●	0x0038
Zephyr/MKZ	3.5L	4V	2008 - 2012	APIM	●	●	●	●	0x0019 0x001C
Zephyr/MKZ	3.5L	4V	2008 - 2012	GEM / SJB	●	●	●	●	0x0005 0xF044 0xF048 0xF04C 0xF057 0xF085 0xF086 0xF08A 0x000A 0x000F 0x0042 0xF042 0xF049 0xF04B
Zephyr/MKZ	3.5L	4V	2008 - 2012	HVAC	●	●	●	●	○
Zephyr/MKZ	3.5L	4V	2008 - 2012	PAM	●	●	●	●	0x0005
Zephyr/MKZ	3.5L	4V	2010 - 2012	FCIM	●	●	●	○	○
Zephyr/MKZ	3.5L	4V	2010 - 2012	FDIM	●	●	●	●	0x0005 0xF062
Zephyr/MKZ	3.5L	4V	2010 - 2012	GPSM	●	●	●	○	○
Zephyr/MKZ	3.5L	4V	2010 - 2012	HCM	●	●	●	●	○
Zephyr/MKZ	3.5L	4V	2010 - 2012	IILCM	●	●	●	●	○
Zephyr/MKZ	3.5L	4V	2010 - 2012	IPC	●	●	●	●	0x0005
Zephyr/MKZ	3.5L	4V	2010 - 2012	SOD-L	●	●	●	●	○
Zephyr/MKZ	3.5L	4V	2010 - 2012	SOD-R	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	4X4	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	ABS	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	ACM	●	●	●	○	○
Zephyr/MKZ	Other	Other	2012	APIM	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	DCSM	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	DDM	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	DSM	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	DSP	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	FCIM	●	●	●	○	○
Zephyr/MKZ	Other	Other	2012	FDIM	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	GEM / SJB	●	●	●	●	0x0042
Zephyr/MKZ	Other	Other	2012	GPSM	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	HCM	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	HVAC	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	IILCM	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	IPC	●	●	●	●	0x0009
Zephyr/MKZ	Other	Other	2012	OCSM	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	PAM	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	RCM	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	SOD-L	●	●	●	●	○
Zephyr/MKZ	Other	Other	2012	SOD-R	●	●	●	●	○

Special Function

Index	Specil Function Name	Index	Specil Function Name
0005	Programmable Module Installation	0006	Module Reprogramming
0007	Programmable Parameters	0008	ABS Service Bleed
0009	PATS Functions	000A	Remote Keyless Entry
000B	G Sensor Calibration	000C	Passenger System Reset
000D	Neutral Position Setting	000E	Ride Height Calibration
000F	Factory Keyless Entry Code	0010	Stop Use of Transmission Adaptive
0011	Power Seat Calibration	0012	IVD Initialization Sequence
0013	Pneumatic Test	0014	Accurate Trim Test
0015	Passenger Zero Seat Weight Test	0016	Microphone Test
0017	Audio Speaker Walkaround Test	0018	Infotainment Display Test
0019	Tones Test	001A	TPMS Functions
001B	Zero Speed Test	001C	Rear Tones Test
001D	Monotones Test	001E	Sensor Initialization
001F	EPB calibration.	0020	EATC Operation Check
0021	Rain Sensor Reset	0022	LPSDM and RPSDM Service Function
0023	Power Balance	0024	EVAP Test
0025	Reset PCM KAM	0026	OBDII Modes
0027	Clear Transmission Adaptive Learning	0028	Clear Transmission Adaptive Tables
0029	Configure All Three Sensors Together.	002A	Configure Both the Yaw Rate Sensor and the Lateral Acceleration Sensors.
002B	Configure the lateral acceleration sensor.	002C	Configure the pressure sensor.
002D	FFH SelfTest and Prefill Utility	002E	FFH Start Heater Utility
002F	FFH Unlock Utility	0030	Auxiliary vehicle ID reset
0031	Halt Transmission Adaptive Learning	0032	Headlamp Alignment
0033	Resume Transmission Adaptive Learning	0034	Resume Transmission Adaptive Tables
0035	Keyfob Training	0036	Transmission
0037	Transmission Learning	0038	Transmission Solenoid Body IDN
0039	VSM Service Functions	003A	A/C Test
003B	ACM	003C	ACM Security Bypass Test
003D	Air/Fuel Learning	003E	AM Antenna Reception Sensitivity Test
003F	ASM Service Functions	0040	audio configuration
0041	Auto Leveling Sensor Re-zero Procedure	0042	Tire Pressure Monitoring System
0043	BSM Radar Test	0044	Button Test
0045	CAN Bus Fault Test	0046	CCM Calibration
0047	Clear EGR Adaptive Tables	0048	Clear Fuel Injector&HP Pump Adaptive Table
0050	Clearing of Learning Value	0051	Component/Parameter Reset
0053	Configure the steering angle sensor	0054	Configure the yaw rate sensor
0055	DATA Reset	0056	DPF
0057	DPF Component Parameter	0058	DPF Manual Regeneration
0059	DPF Parameter Reset	005A	Electronic Throttle Control
005B	EPS Steering Angle Calibration	005C	ETB/EGR Initialization
005D	FACM	005E	FFH Operation Check
005F	Gauge Test	0060	ICCM Aiming Adjustment
0061	Illumination Test	0062	Input and Data Test
0063	Interior Scan Test	0064	Keyless Entry Keypad Code Reset
0065	Learning	0066	Misfire Check
0067	Misfire Monitor Neutral Profile Correction	0068	Module Identification
0069	Multifunction Output Test	006A	Network Test
006B	New FACM	006C	Parking Aid Switch Test
006D	Passenger Seat Weight Sensor ReZero	006E	Rebalance
006F	Reset the Knock Sensor Learned Values	0070	Reset Transmission Tables
0071	Resetting adaptive values	0072	RVM Aiming
0074	Service Routine	0075	Specil Ignition ON
0076	Steering angle sensor calibration	0077	Supplemental Heater test

Index	Specil Function Name	Index	Specil Function Name
0080	Mode 1 Powertrain Data	0081	Mode 6 On-Board Test Results
0082	Mode 8 - On-Board device control	0083	Mode 9 - Vehicle Information
0084	OBD Drive Cycle	0085	Service Functions
0090	Diesel Particulate Filter Static Regeneration	0091	DPF Regeneration Suspension
0092	Fuel Injector Correction Factors	0093	IQA
0094	Refill the FAT.	0095	Relearn Vehicle Data
0096	Reset Charge Air Cooler Bypass Valve Position	0097	Reset the Cooling Fan Motor Learned Values
0098	Reset the Diesel Particulate Filter Learned	0099	Reset the Exhaust Gas Recirculation Valve Learned
009A	Reset the Intake Air Throttle Valve Learned	009B	Reset / Clear Specified Function
009C	SCR Dosing Measurement Test	009D	SCR Parameter Reset
009E	SCR System Emptying	009F	SCR System Refill Activation
00A0	SCR Visual Leak Check	00A1	System Prime
00A2	WIF Reset	00A3	DPF Reset
00A4	Enter the Fuel Injector Default Count Value	00A5	Clutch Switch Learn
00A6	Engine Oil Quality History	00A7	Fuel Injection Pump Learn
00A8	Fuel Injector Pilot Correction Learn	00A9	Fuel System Leak Test
00AA	Initialize the Exhaust Gas Related Component.	00AB	Reset Differential Pressure Sensor Learned Values
00AC	Reset KAM	00AD	Reset MAF Sensor Drift.
00AE	Reset MAF Sensor Offset.	00AF	Reset the air conditioning compressor learned values.
00B0	Reset the Diesel Particulate Filter Differential Pressure Sensor Learned Values	00B1	Reset the Exhaust Gas Temperature Value
00B2	Reset the Fuel Injection Pump Learned Values	00B3	Reset the Fuel Injector Learned Values
00B4	Reset the Fuel Metering Valve Learned Values	00B5	Reset the Fuel Pressure Relief Valve Open Count Learned Value
00B6	Reset the Fuel Pressure Relief Valve Open Duration Learned Value	00B7	Reset the Fuel Rail Pressure Sensor Learned Values
00B8	Reset the Heated Exhaust Gas Oxygen Sensor Learned Values	00B9	Reset the Mass Air Flow Sensor Learned Values
00BA	Reset the Neutral Gear Position Learned Value	00BB	Reset the oil change indicator.
00BC	Reset the Powertrain Control Module Learned	00BD	Reset the Turbocharger Learned Values.
00BE	Reset the Turbocharger Variable Vane Actuator Learned Values	00BF	Reset the Turbocharger Variable Vane Position Sensor Learned Values
00C0	Reset the Vehicle Speed Limit	00C1	Reset the water in fuel Warning Indicator.
00C2	rpm Controller	00C3	Stop-Start Activation
00C4	Speed Limiting	00C5	TR sensor
00C6	Transmission Fluid Level Test	00C7	Automatic Transmission PRNDL Display Test
00CA	ABS reset and configuration.	00CB	PDC Reset
00CC	Steering Wheel Position Sensor Calibration	00CD	Preliminary Checks
00CE	Reset TCM KAM	00CF	Fuel System Prime
00D0	Remote Start	00D1	TBM SIM RAV_ID
00D2	Reset TBM Password	00D3	TBM Transit Mode
00D4	CEI Lock Configuration	00D5	BMS Reset
00D6	Navigation	00D7	Calibrate Steering Angle Sensor
00D8	Configure the steering column assembly.	00D9	Configure the longitudinal acceleration sensor.
00DA	Configure the intermediate shaft.	00DB	Module Initialization
00DC	Pull Drift Compensation	00DD	Calibrate Longitudinal Acceleration Sensor
00DE	Inhibit longitudinal accelerometer monitoring	00DF	Pull Drift Compensation enable/disable
00E0	Straight Ahead Adaption Angle Reset	00E1	Steering Rack Limiter Configuration
00E2	Pressure Sensor Calibration	00E3	Reset Pressure Sensor Offset
00E4	Enable/Disable hill launch assist .	00E5	Camera Alignment
00E6	Shift fork system learn.	00E7	Reset the High Pressure Fuel System Learned Values
00E8	BleedMASTER	00E9	FCDIM Keycode Reset
00EA	Beltminder Enable/Disable	00EB	TPMS reset.
00EC	TPMS reset after ABS module replacement	00ED	Show GEM configuration
00EE	EPB	00EF	Clear crash data memory.
00F0	Passenger Airbag Deactivation Switch	00F1	Component checks
00F2	Driver's Seat Module	00F3	Assembly Check
00F4	Inclination Sensor Calibration	00F5	Maintenance mode
00F6	Static Apply	00F7	Clear stored clutch engagement point

Index	Specil Function Name	Index	Specil Function Name
00F8	Module Configuration	00F9	CCMii Sensor Alignment
00FA	Track Key Configuration	00FB	Driver Window Motor Test.
00FC	Passenger Window Motor Test	00FD	Clear Self-learning Data
00FE	RVC Configuration	00FF	Special Function
0100	Disable GDM VIN	0101	WMM Calibration
0102	RCM	0103	Cooling Fan Test
0104	IAC System Test	0105	VCT System Test
0106	A/C Test	0107	MAF Sensor / TP Sensor Dynamic Test
0108	ATC Barcode Entry	0109	ISM Configuration
010A	Valve Calibration	010B	TP Sweep Test
010C	ICP Sensor Test	010D	Oil Aeration Test
010E	Exhaust System Test	010F	MAF Sensor Contamination Test
0110	EGR System Flow Test	0111	Neutral Tow Function
0112	LIN New Module Initialization	0113	Tachometer
0114	Camshaft Position Reference Adaption Learn	0115	Powertrain Control Module Central Car Configuration
0116	Powertrain Control Module (PCM) One Touch Start Configuration	0117	TCM Adaptive Learning
0118	On-demand lock test routine	0119	Rear Brake Adjustment
011A	ACM Configuration	011B	BCMii
011C	Car Mod	011D	SPRM Configuration
011E	EPAS Configuration	011F	Learn the vehicle variant and VIN data
0120	Burglar Service Functions	0121	The removal and installation of the selector lever or the selector lever cable.
0122	Transmission fluid drain and refill.	0123	The installation of a new TCM.
0124	The installation of a new automatic transmission with a new TCM.	0125	The installation of a new automatic transmission with the original TCM.
0126	Reset the Transmission Control Module Learned	0127	Reset the Transmission Oil learned Values
0128	Transmission Range Sensor Learn	0129	Read the ECU serial number.
012A	RCM Calibration	012B	Reset maintenance lamp
012C	Special Ignition ON	012D	IC Service Functions
012E	A/F (Fuel Ratio)	012F	Reset Expansion ID
0130	Reset security ID	0131	Lockout Mode Reset
0132	Sensor Learn Routine	0133	Ambient Air Temp Sensor Configuration
0134	Touchscreen	0135	Variant and VIN Data Learning Procedure
0136	Neutral Position Learning	0137	Clear Grade Sensor Learning Value
0138	Clear Oil Pressure Sensor Learning Value	0139	Grade Sensor Learning
013A	Oil Pressure Sensor Learning	013B	Fuel System Vaporizer Prime
013C	Reset SOBDM-C KAM	013D	Power Liftgate Initialization
013E	LDWS Camera Alignment	013F	SWS calibration
0140	Driver side	0141	Passenger side
0142	Auto Leveling Sensor	0143	Automatic 4 wheel drive
0144	Clear Learning Value	0145	CVT Learning Value Setting
0146	Headlight Zero-set	0147	Height Sensor Initial Setting
0148	Maintenance Information	0149	Reset Supply Pump Learned Values
014A	Slope sensor initialization	014B	Starter Driving Counter
014C	FFH Fuel Priming	014D	Urea Injector Test
014E	Urea Pump Test	0150	PCM Service Functions
0151	ABD Initialization	0152	Tire Size Configuration
0153	Workshop test	0154	PROXI Alignment
0155	AFS	0156	HID_HEADLAMPS
0157	Air Bleed for Electric Oil Pump	0158	Clutch System Test
0159	CVT Slope Sensor Calibration	015B	High Voltage (HV) De-energise Tool
015C	Injector ID code	0201	Mazda Vehicle Check-up
0202	Spark Duration PIDs	0203	Windshield Wiper Test
0204	Rear Window Wiper Test	0205	Cooling System Degas
0206	PAD Switch	0207	Enable Heated Screens
0208	Reader Aiming	0209	System Initialize
020A	Diesel Particulate Filter Dynamic Regeneration	020B	Coupling Calibration Data Writing

Index	Specil Function Name	Index	Specil Function Name
020C	Apply and Release Test	020D	RF KeyPad Learn Process
020E	FSC Aiming	020F	TPMS Sensor Training Mode
0210	Police Vehicle Top Speed Limit	0211	Maintenance revision status
0212	Hydraulic control test	0213	ABS
F001	Audio	F002	Battery saver
F003	Body Type	F004	Courtesy Lamp
F005	Door Trigger Disable Mode	F006	Body and Fuel Type
F007	Hazard Warning	F008	Horn Warning
F009	Master Door Trigger Disable Mode	F00A	Panic Alarm
F00B	Police Mode	F00C	Traction control system
F00D	Autolamp Off Setting	F00E	Autolamp On Setting
F00F	Police Speedometer Offset	F010	Cabin Temperature Sensor Calibration Factor
F011	Taxi Mode	F012	Low Coolant Warning
F013	Parking Brake Warning	F014	Headlamp Delay Door Open
F015	Headlamp Delay Ignition Off	F016	Headlamp Delay Remote Lock Pressed
F017	Dynamic Stability Control	F018	Hill Descent Control LED
F019	Brake System Configuration	F01A	BPM fitted
F01B	Camera fitted	F01C	Audio Interface Module
F01D	Sonar fitted	F01E	Navigation System
F01F	Parking Aid Module	F020	Odometer Write
F021	Subwoofer	F022	Driver Beltminder Status
F023	Alarm	F024	Audio Configure
F025	Autolocking While The Vehicle Is Moving	F026	Module Reset
F027	BeltMinder	F028	Electrical Auxiliary Heater Chimes
F029	Power Steering Status	F02A	Repeat flasher
F02B	Autolock/Relock Configuration Status	F02C	Autolocking Customer setting
F02D	Double Locking With REMOTE	F02E	Power Lock Configuration
F02F	Single Door Unlocking Using The REMOTE	F030	Tailgate Release REMOTE Button
F031	PAD Switch	F032	Speed Control
F033	Ambient Temperature Sensor Conformation	F034	Heated Screen(s) active during warm up
F035	Power Sunroof Or Taxi Meter Fitted	F036	Deflation Detection System
F037	Baseplate	F038	Select seat trim type.
F039	Select Vehicle Type	F03A	Repeat flasher
F03B	Internal Remote Receiver	F03C	Lock confirmation flash
F03D	Alarm system	F03E	Wash Fluid Sensor
F03F	Select Engine Type	F040	Reverse Warning Chime
F041	Easy Entry / Exit	F042	Daytime Running Lamps
F043	Turn Signal Warning Chime	F044	Autolock
F045	Horn Chirp	F046	Tire Size (rev / mile)
F047	TBM Transit Mode	F048	Perimeter Lighting
F049	Stop and taillamp outage configuration	F04A	Overspeed Warning Indicator
F04B	Autolock Configuration Status	F04C	Auto unlock
F04D	Language	F04E	Headlight Battery Saver Timeout
F04F	Heated Backlight	F050	Front Foglamps
F051	Headlamp Type	F052	Button Press Chime
F053	Not in Park Chime	F054	Oil Life
F055	Parking Brake Chime	F056	Central Unlock via Key Cylinder
F057	Two Stage Unlocking	F058	Power Door Lock Inhibit
F059	Perimeter Alarm	F05A	Satellite Digital Audio Receiver System
F05B	Autolamp	F05C	Fog Lamp
F05D	Passenger Beltminder Status	F05E	Keypad Configure
F05F	Remote Panic	F060	Remote Keyless Entry
F061	Remote open/close signal	F062	Cellular Phone Module
F063	Radio Clock	F064	Divider Bar\$I
F065	Welcome illumination	F066	Battery saver function
F067	Speedometer Accuracy Bias	F068	Dark car
F069	Horn Chirp Configuration Status	F06A	Smart Unlock

Index	Specil Function Name	Index	Specil Function Name
F06B	Fuel Economy Display Mode	F06C	Power Adjustable Pedals
F06D	Power Seat Recline	F06E	Fuel Gallon Configuration
F06F	Power Mirrors	F070	High cool blower voltage
F071	Outside Air Temperature	F072	Oil Life Status and Warning
F073	Telephone	F074	Driver Seat Recline Memory Function
F075	Pedal Memory Function	F076	Screen Display-Brand
F077	Flex Fuel	F078	APIM
F079	Steering wheel control	F07A	Auxiliary Jack
F07B	SWC POD type	F07C	Two-way front speakers
F07D	Two-way rear speakers	F07E	Trailer Brake Control Module
F07F	Family Entertainment System	F080	Mirror Turn Signals
F081	Vehicle Door Configuration	F082	Fuel Tank Configuration
F083	Fuel Tank Size	F084	Rear Tire Size (Rev/Mile)
F085	Trim Switch Inhibit	F086	Fob panic activation
F087	Tilt-Telescope Steering Wheel	F088	Autolamp Delay Time
F089	Global Close	F08A	Global Open
F08B	Auto Lock	F08C	Security Horn Alarm
F08D	Illuminated Exit	F08E	ABS Tire Warning
F08F	Sliding Door Caution	F090	Smart Lock
F091	Horn	F092	Outside Air Temperature Display
F093	Answer Back Buzzer	F094	Automatic Locks
F095	Card Key Battery Low Warning	F096	Two(2) stage door unlocking by request switch.
F097	Two(2) stage door unlocking by transmitter.	F098	Auto relock timer (with AKE)
F099	(PCM) Oil Life Used	F09A	GCC vehicle
F09B	Accessory Protocol Interface Module	F09C	Tuner setting
F09D	Smart Rear Wipe	F09E	Drip Wipe
F09F	Safety Belt Warning	FOA0	Hazzard Warning Switch
FOA1	Global Closing With REMOTE	FOA2	Tailgate release available when ignition on
FOA3	Select the type of liftgate striker plate fitted	FOA4	Reset Alarm System Via Key
FOA5	One-touch-up window function fitted	FOA6	Auto high beam sensitivity
FOA7	Unlock sequence	FOA8	Daytime dimming rate setting
FOA9	Fuel logic	FOAA	Fuel Meter Response Setting
FOAB	Voice Recognition Module	FOAC	Door ajar
FOAD	Cargo Unlock Setting	FOAE	General Unlock Setting
FOAF	Rear Door Reverse Cycling	FOB0	Mirror Puddle Lamps
FOB1	RHT Buzzer	FOB2	Electronic-Controlled Power Steering
FOB3	Heated windshield	FOB4	Speed dependent wiper function
FOB5	Audio Repeater Display	FOB6	Power Folding Mirrors
FOB7	Approach Lamps	FOB8	Key Out Apply