	MaxiSys_Geely_V2. 41 Function List (Note:For reference only)								
O This func	OTES: ● This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle. ○ This function is not supported. ▲ This function is the new feature in this version. As for special function please refer to the special function table.								
Model	System	System Type	Read Codes	Erase Codes	Ecu Info.	Live Data	Active Test	Freeze Frame	Special Function
Merrie	Engine System	Zhong Shun EFI System	•	•	0	•	0	0	
Merrie	Engine System	Zhong Shun EOBD EFI System	•	•	0	•	0	0	
Merrie	Engine System	M7 1.3/1.5/1.6 Engine	•	•	0	•		0	
Merrie	Engine System	UAES M1.5.4 System			0	0	0	0	
Merrie	Engine System	Engine System MR479Q	•			•	0	0	0x07
Merrie	Engine System	UAES M1. 5. 4 System(BOSCH)	•	•		•	•	0	
Merrie	ABS	ABS	•	•		•	•	0	
Haoqing	Engine System	Zhong Shun EFI System	•		0	•	0	0	
Haoqing	Engine System	Zhong Shun EOBD EFI System	•		0	•	0	0	
Haoqing	Engine System	M7 1.3/1.5/1.6 Engine	•		0	•	•	0	
Haoqing	Engine System	UAES M1.5.4 System	•	•	0	0	0	0	
Haoqing	Engine System	Engine System MR479Q	•	•		•	0	0	0x07
Haoqing	Engine System	UAES M1. 5. 4 System(BOSCH)	•	•		•	•	0	
Haoqing	ABS	ABS	•	•		•	•	0	
Beauty Leopard	Engine System	M7 1.3/1.5/1.6 Engine	•	•	0	•	•	0	
Beauty Leopard	Engine System	EFI E3 EOBD	•	•	0	•	•	0	
Beauty Leopard	Engine System	UAES M1.5.4 System	•	•	0	0	0	0	
Beauty Leopard	Engine System	Engine System MR479Q	•	•	•	•	0	0	0x07
Beauty Leopard	Engine System	UAES M1. 5. 4 System(BOSCH)	•	•		•	•	0	
Beauty Leopard	SRS	SRS	•	•	0	•	0	0	
Beauty Leopard	ABS	ABS	•	•	•	•	•	0	
Uliou	Engine System	Zhong Shun EFI System	•	•	0	•	0	0	
Uliou	Engine System	Zhong Shun EOBD EFI System	•	•	0	•	0	0	
Uliou	Engine System	M7 1.3/1.5/1.6 Engine	•	•	0	•	O	0	
Uliou	Engine System	UAES M1. 5. 4 System	•	•	0	0	0	0	
Uliou	Engine System	Engine System MR479Q	•	•	O	•	0	0	0x07
Uliou	Engine System	UAES M1. 5. 4 System (BOSCH)	•	•	•	•	- U	0	
Uliou	ABS	ABS	•	•	•	•	•	0	
KingKong	Engine System	UAES M7.8 System (479QN)	•	•	•	•	•	0	0x3D
KingKong	Engine System	Delphi MT22.1 System (4G15N)	•	•	•	•	•	0	
KingKong	Engine System	Delphi MT80 Engine	•	•	•	•	•	0	
KingKong	Engine System	Delphi E4 MT2Ou2 System	•	•	•	•	•	Ŏ	0x40
KingKong	Engine System	UAES E4 System (Universal	•	•	0	•	•	0	
KingKong	Engine System	UAES E4 System (EOBD Module)	•	•	•	•	•	0	
KingKong	Engine System	M7 1.3/1.5/1.6 Engine	•	•	0	•	•	0	İ
KingKong	Engine System	EFI E3_EOBD	•	•	0	•	•	0	İ
KingKong	ABS	Bosch ABS	•	•	•	•	•	0	0x0B 0x18

Mode1	System	System Type	Read Codes	Erase Codes	Ecu Info.	Live Data	Active Test	Freeze Frame	Special Function
KingKong	ABS	SABS MK70/ABS						0	0x15 0x16
KingKong	SRS	Bosch AB8 Airbag			0		0	0	0x19 0x3E 0x3F
KingKong	SRS	Bosch AB10 Airbag					0	0	0x19 0x10
KingKong	Immobilizer	Jicheng Immobilizer System (Delphi)	•	•	•	•	0	0	
Vision	Engine System	Delphi MT80 Engine		•		•	•	0	
Vision	Engine System	1.8L VVT UAES System			0			0	
Vision	Engine System	UAES M7.8 System (4G18N)						0	0x3D
Vision	Engine System	Delphi MT22.1 System (4G15N)						0	
Vision	Engine System	Hitachi Engine (4G15B)			0			0	
Vision	Engine System	UAES E3_EOBD		•	0			0	
Vision	Engine System	UAES E4 System (Universal		•	0			0	
Vision	Engine System	UAES E4 System (EOBD Module)						0	
Vision	Engine System	1.3/1.5L Engine System			0			0	
Vision	Engine System	UAES M1.5.4 System		•	0	0	0	0	
Vision	ABS	Bosch ABS						0	0x0B 0x18
Vision	ABS	SABS MK70 ABS						0	0x15 0x16
Vision	SRS	Jinheng Airbag					0	0	
Vision	SRS	Joy Long Airbag			0	0	0	0	
Vision	Immobilizer	STEC Immobilizer System					0	0	0x0E
Vision	BMBS	BMBS		•			0	0	0x35
Free Ship	Engine System	UAES M7.8 System (3G10)		•				0	0x3D
Free Ship	Engine System	EFI E3 EOBD			0			0	
Free Ship	Engine System	Delphi EU III Engine			0			0	
Free Ship	Engine System	UAES M1.5.4 System			0	0	0	0	
Free Ship	Engine System	UAES M7.8 System (479QN)						0	0x3D
Free Ship	Engine System	M7 1.3/1.5/1.6 Engine			0			0	
Free Ship	Engine System	UAES E4 System (Universal			0		0	0	
Free Ship	Engine System	UAES E4 System (EOBD Module)						0	
Free Ship	Engine System	Delphi EFI System					0	0	0x10
Free Ship	ABS	SABS MK70/ABS						0	0x15 0x16
Free Ship	ABS	Bosch ABS						0	0x0B 0x18
Free Ship	Immobilizer	Jicheng Immobilizer System (Delphi)	•	•	•	•	0	0	
Free Ship	Immobilizer	Jicheng Immobilizer System	•	•	•	•	0	0	
Free Ship	SRS	Jinheng Airbag	•	•	•	0	0	0	
Golden Eagle	Engine System	UAES M7.8 System (479QN)	•	•	•	•	•	0	0x3D
Golden Eagle	Engine System	Delphi MT22.1 System (4G15N)	•	•	•	•	•	0	
Golden Eagle	Engine System	Delphi MT80 Engine	•	•	•	•	•	0	
Golden Eagle	Engine System	Delphi E4 MT2Ou2 System	•	•	0	•	•	0	0x40
Golden Eagle	Engine System	UAES E4 System (Universal	•	•	0	•	•	0	
Golden Eagle	Engine System	UAES E4 System (EOBD Module)	•	•	•	•	•	0	
Golden Eagle	Engine System	M7 1.3/1.5/1.6 Engine	•	•	0	•	•	0	
Golden Eagle	Engine System	EFI E3 EOBD	•	•	0	•	•	0	
Golden Eagle	ABS	Bosch ABS	•	•	•	•	•	0	0x0B 0x18

Model	System	System Type	Read Codes	Erase Codes	Ecu Info.	Live Data	Active Test	Freeze Frame	Special Function
Golden Eagle	ABS	SABS MK70/ABS		•			•	0	0x15 0x16
Golden Eagle	SRS	Bosch AB8 Airbag			0	•	0	0	0x19 0x3E 0x3F
Golden Eagle	SRS	Bosch AB10 Airbag		•			0	0	0x19 0x10
Golden Eagle	Immobilizer	Jicheng Immobilizer System (Delphi)	•	•	•	•	0	0	
China Dragon	Engine System	UAES E4 System (Universal		•	0			0	
China Dragon	Engine System	UAES E4 System (EOBD Module)		•				0	
China Dragon	ABS	SABS MK70 ABS		•				0	0x15 0x16
China Dragon	SRS	Jinheng Airbag		•			0	0	
China Dragon	SRS	Jinheng 4A Airbag		•		•	0	0	
CNG System	Engine System	CNG Engine System		•				•	0x0B 0x26
EC7/-RV (C)	Engine System	UAES System (Fault Diagnosis)		•				0	
EC7/-RV (C)	Engine System	UAES System (EOBD Emission Diagnosis)	•	•	•	•	0	0	
EC7/-RV (C)	Engine System	Delphi MT80 Engine		•			•	0	
EC7/-RV (C)	SRS	SRS		•		0	0	0	0x19
EC7/-RV (C)	ABS	ABS						0	
EC7/-RV (C)	TPMS	TPMS			0			0	
EC7/-RV (C)	Instrument Panel System	Siemens Instrument Panel			0	0		0	
EC7/-RV (C)	Immobilizer	Immobilizer					0	0	0x0E
EC7/-RV (C)	Body Control System	Body Control System		•			•	0	
EC7/-RV (E)	Engine System	UAES System (Fault Diagnosis)		•			•	0	
EC7/-RV (E)	Engine System	UAES System (EOBD Emission Diagnosis)	•	•	•	•	0	0	
EC7/-RV (E)	Engine System	Delphi MT80 Engine(4G18N)	•	•		•	•	0	
EC7/-RV (E)	SRS	SRS	•	•		0	0	0	0x19
EC7/-RV (E)	ABS	ABS	•	•		•	•	0	
EC7/-RV (E)	TPMS	TPMS		•			0	0	
EC7/-RV (E)	Instrument Panel System	Siemens Instrument Panel	•	•	0	0	•	0	
EC7/-RV (E)	Immobilizer	Immobilizer		•			0	0	0x0E
EC7/-RV (E)	Body Control System	Body Control System		•				0	
Panda	Engine System	Delphi MT20U2 Engine System		•	0			0	
Panda	Engine System	3G10 Engine System		•			0	0	
Panda	Engine System	UAES E4 System (Universal		•	0			0	
Panda	Engine System	UAES E4 System (EOBD Module)		•				0	
Panda	SRS	Bosch Airbag						0	
Panda	ABS	SABS MK70/ABS						0	
Panda	Immobilizer	Jicheng Immobilizer System (Delphi)	•	•	•	•	0	0	
Panda	Immobilizer	Jicheng Immobilizer System	•	•			0	0	
Panda	Immobilizer	STEC Immobilizer System	•				0	0	0x0E
Panda	Power Steering System	Power Steering System	•	•		•	0	•	

Special_Function

:	Creating Name	2.1. C. 1.1. D					
index	Specil Function Name	index	Specil Function Name				
0x01	Version Information	0x02	Read DTCs				
0x03	Freeze Frame	0x04	Clear DTCs				
0x05	DataStream	0x06	Active Test				
0x07	Parameter Adjustment	0x08	Program				
0x09	Special Function	0x0A	02 Sensor Monitoring				
0x0B	End-of-Line Test	0x0C	Remote Control Matching				
0x0D	Service Lamp Reset	0x0E	Input Code				
0x0F	Immobilizer Matching	0x10	ECU Reset				
0x11	Warning Light Configuration	0x12	Steering Angle Sensor Calibration				
0x13	Restore Default	0x14	Automatic Bleeding				
0x15	Hydraulic Control Unit Test	0x16	Bleeding and Filling				
0x17	EOBD Module	0x18	Bleeding Mode				
0x19	Write Data	0x1A	Matching Function				
0x1B	Reset Adaptive Value	0x1C	Vehicle Service				
0x1D	Coding	0x1E	Activate Alarm Horn				
0x1F	CAN Configuration Selection	0x20	CAN Configuration Input				
0x21	Initialize Tire Location	0x22	ISU Reset				
0x23	Fast Dormancy	0x24	Shipping Mode				
0x25	Air Bleeding Function	0x26	02 Sensor Test				
0x27	Engine Test	0x28	Fuel Injector Matching				
0x29	Read Fuel Injector Code	0x2A	2-Airbag Automatch				
0x2B	6-Airbag Automatch	0x2C	End-of-Line Function				
0x2D	Brake Bleeding	0x2E	Check Program Control Service				
0x2F	Service Light	0x30	Customized List				
0x31	Coding	0x32	Basic Settings				
0x33	Security Access	0x34	Separate Reading				
0x35	System Operation	0x36	Sensor Learn				
0x37	Learn Function	0x38	Key Learn				
0x39	Weaving angle speed sensor calibration	0x3A	Configuration Function				
0x3B	AT And ABS/ESP Configuration	0x3C	Run-In				
0x3D	ECU Reset	0x3E	ECU Configuration				
0x3F	Open/Close Knock Output Command	0x40	Gear deviation learning				
0x41	ICU Configuration	0x42	Vacuumpumping And Filling				
	Change Hydraulic pressure module						
0x43	refuel state	0x44	Change EOL Detection Status				
0x45	Change Variable Code	0x46	Manual Exhaust				
0x47	Filling And drainage(3 channel)	0x48	Filling And drainage(4 channel)				
0x49	EMS Collocate ACU	0x4A	match Set				
0x4B	ABS Test						