

MaxiSys_MINI_V8.20 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.**

Model Series	Part	Systems	Ecu Info.	Read DTC	Freeze Frame	Erase DTC	Live Data	Component activation	Physical HW
R50/R52/R53	Body	MRS/AB Airbag/ACSM	●	●	○	●	●	○	●
R50/R52/R53	Body	AIC Automatic Interval control	●	●	○	●	●	○	○
R50/R52/R53	Body	BM On-board monitor	●	●	○	●	●	●	○
R50/R52/R53	Body	CDC CD Changer	●	●	○	●	○	●	●
R50/R52/R53	Body	CVM/CVM2 Convertible top module	●	●	○	●	●	●	●
R50/R52/R53	Body	DSP Digital Sound Processor	●	●	○	●	●	○	○
R50/R52/R53	Body	IHKA Heater/automatic A/C control	●	●	○	●	●	●	●
R50/R52/R53	Body	KOM Instrument cluster	●	●	○	●	●	●	○
R50/R52/R53	Body	LRA Automatic headlight vertical aim control	●	●	○	●	●	●	○
R50/R52/R53	Body	MFL Multifunction steering wheel I	●	●	○	●	○	○	○
R50/R52/R53	Body	MFL Multifunction steering wheel II	●	●	○	●	○	○	○
R50/R52/R53	Body	NAJ Navigation computer, Japan	●	●	○	●	●	●	○
R50/R52/R53	Body	NAV Navigation computer, Europe	●	●	○	●	●	○	○
R50/R52/R53	Body	PDC Park distance control	●	●	○	●	●	●	●
R50/R52/R53	Body	RAD Radio	●	●	○	●	●	●	●
R50/R52/R53	Body	RLS Rain/Light Sensor	●	●	○	●	●	○	●
R50/R52/R53	Body	SBBF Seat occupancy, passenger	●	●	○	●		○	○
R50/R52/R53	Body	SHD Sliding/tilting sunroof	●	●	○	●	●	●	●
R50/R52/R53	Body	ULF Universal charging and hands-free facility	●	●	○	●	●	●	●
R50/R52/R53	Body	VID Video module	●	●	○	●	○	○	○
R50/R52/R53	Body	ZKE Central body electronics BC1	●	●	○	●	●	●	○
R50/R52/R53	Body	ZKE Central body electronics BC1 (Redesign)	●	●	○	●	●	●	○
R50/R52/R53	Chassis	ABS/ASC/DSC Dynamic Stability Control	●	●	○	●	●	●	●
R50/R52/R53	Chassis	EHPS Electro-hydraulic steering assistance	●	●	○	●	●	●	○
R50/R52/R53	Chassis	LEW Steering-angle sensor	●	●	○	●	●	○	○
R50/R52/R53	Chassis	RDC Tyre pressure control	●	●	○	●	●	●	●

Model Series	Part	Systems	Ecu Info.	Read DTC	Freeze Frame	Erase DTC	Live Data	Component activation	Physical HW
R50/R52/R53	Chassis	RPW tyre-blowout warning system	●	●	○	●	●	○	○
R50/R52/R53	Drive	DME/DDE (Engine Electronics)	●	●	○	●	●	●	●
R50/R52/R53	Drive	EGS/AGS (Transmission Control)	●	●	○	●	●	●	●
R50/R52/R53	Drive	EWS Vehicle immobilizer	●	●	○	●	●	●	○
R55/R56/R57	Body	MRS/AB Airbag/ACSM	●	●	●	●	●	○	●
R55/R56/R57	Body	AHM Trailer module	●	●	●	●	●	●	●
R55/R56/R57	Body	AMPH Hi-Fi amplifier	●	●	●	●	●	●	●
R55/R56/R57	Body	CA Comfort access system	●	●	●	●	●	○	●
R55/R56/R57	Body	CAN communication analysis	●	●	●	○	○	○	○
R55/R56/R57	Body	CCC-A Applications	●	●	●	●	●	●	●
R55/R56/R57	Body	CCC-ANT Aerial tuner	●	●	●	●	●	●	●
R55/R56/R57	Body	CCC-ASK Audio system controller	●	●	●	●	●	●	●
R55/R56/R57	Body	CCC-B0 User interface	●	●	●	●	●	●	●
R55/R56/R57	Body	CCC-GW Gateway	●	●	●	●	●	●	●
R55/R56/R57	Body	CDC CD Changer	●	●	●	●	○	●	●
R55/R56/R57	Body	CID Central information display	●	●	●	●	●	●	●
R55/R56/R57	Body	CVM/CVM2 Convertible top module	●	●	●	●	●	●	●
R55/R56/R57	Body	DAB Digital tuner	●	●	●	●	●	●	●
R55/R56/R57	Body	FRM footwell module	●	●	●	●	●	●	●
R55/R56/R57	Body	IBOC Digital tuner US	●	●	●	●	●	○	●
R55/R56/R57	Body	IHKA Heater/automatic A/C control	●	●	●	●	●	●	●
R55/R56/R57	Body	IHKS Integrated heating/air-conditioning control	●	●	●	●	●	●	●
R55/R56/R57	Body	IHS Integrated heating control	●	●	●	●	●	●	●
R55/R56/R57	Body	INSTR Instrument cluster	●	●	●	●	●	●	●
R55/R56/R57	Body	JBE Junction-box electronics	●	●	●	●	●	●	●
R55/R56/R57	Body	JNAV Navigation system, Japan	●	●	●	●	●	●	●
R55/R56/R57	Body	MJOY MINI joystick	●	●	●	●	●	●	●
R55/R56/R57	Body	MOST system analysis	●	●	●	●	○	○	○
R55/R56/R57	Body	PDC Park distance control	●	●	●	●	●	●	●
R55/R56/R57	Body	RAD Radio	●	●	●	●	●	●	●
R55/R56/R57	Body	RAD2-B0 User interface	●	●	●	●	●	●	●
R55/R56/R57	Body	RAD2-GW Gateway	●	●	●	●	●	●	●
R55/R56/R57	Body	SDARS Satellite tuner	●	●	●	●	●	●	●
R55/R56/R57	Body	SHD Sliding/tilting sunroof	●	●	●	●	●	●	●
R55/R56/R57	Body	SZL Switch centre, steering column	●	●	●	●	●	●	●
R55/R56/R57	Body	ULF-SBX Interface box	●	●	●	●	●	●	●

Model Series	Part	Systems	Ecu Info.	Read DTC	Freeze Frame	Erase DTC	Live Data	Component activation	Physical HW
R55/R56/R57	Body	ULF-SBX-H Interface box High	●	●	●	●	●	●	●
R55/R56/R57	Body	VM Video Module	●	●	●	●	●	●	●
R55/R56/R57	Chassis	ABS/ASC/DSC Dynamic Stability Control	●	●	●	●	●	●	●
R55/R56/R57	Chassis	EPS Electronic Power Steering	●	●	●	●	●	●	●
R55/R56/R57	Chassis	RDC Tyre pressure control	●	●	●	●	●	●	●
R55/R56/R57	Drive	CAS Car Access System	●	●	●	●	●	●	●
R55/R56/R57	Drive	DME/DDE (Engine Electronics)	●	●	●	●	●	●	●
R55/R56/R57	Drive	EGS/AGS (Transmission Control)	●	●	●	●	●	●	●
R58/R59	Body	MRS/AB Airbag/ACSM	●	●	●	●	●	○	●
R58/R59	Body	AHM Trailer module	●	●	●	●	●	●	●
R58/R59	Body	AMPH Hi-Fi amplifier	●	●	●	●	●	●	●
R58/R59	Body	CA Comfort access system	●	●	●	●	●	○	●
R58/R59	Body	CBX-ECALL Combox emergency call	●	●	●	●	●	●	○
R58/R59	Body	CHAMP-BO User interface	●	●	●	●	●	●	●
R58/R59	Body	CHAMP-GW Gateway	●	●	●	●	●	●	●
R58/R59	Body	CID Central information display	●	●	●	●	●	●	●
R58/R59	Body	FRM footwell module	●	●	●	●	●	●	●
R58/R59	Body	IBOC Digital tuner US	●	●	●	●	●	○	●
R58/R59	Body	IHKA Heater/automatic A/C control	●	●	●	●	●	●	●
R58/R59	Body	INSTR Instrument cluster	●	●	●	●	●	●	●
R58/R59	Body	JBE Junction-box electronics	●	●	●	●	●	●	●
R58/R59	Body	MJOY MINI joystick	●	●	●	●	●	●	●
R58/R59	Body	PDC Park distance control	●	●	●	●	●	●	●
R58/R59	Body	SHD Sliding/tilting sunroof	●	●	●	●	●	●	●
R58/R59	Body	SZL Steering column switch centre 2	●	●	●	●	●	●	●
R58/R59	Body	ULF-SBX Interface box	●	●	●	●	●	●	●
R58/R59	Body	ULF-SBX-H Interface box High	●	●	●	●	●	●	●
R58/R59	Chassis	ABS/ASC/DSC Dynamic Stability Control	●	●	●	●	●	●	●
R58/R59	Chassis	EDC Damper Control	●	●	●	●	●	●	●
R58/R59	Chassis	EPS Electronic Power Steering	●	●	●	●	●	●	●
R58/R59	Drive	CAS Car Access System	●	●	●	●	●	●	●
R58/R59	Drive	DME/DDE (Engine Electronics)	●	●	●	●	●	●	●
R58/R59	Drive	EGS/AGS (Transmission Control)	●	●	●	●	●	●	●
R60	Body	MRS/AB Airbag/ACSM	●	●	●	●	●	○	●
R60	Body	AHM Trailer module	●	●	●	●	●	●	●
R60	Body	AMPH Hi-Fi amplifier	●	●	●	●	●	●	●

Model Series	Part	Systems	Ecu Info.	Read DTC	Freeze Frame	Erase DTC	Live Data	Component activation	Physical HW
R60	Body	CA Comfort access system	●	●	●	●	●	○	●
R60	Body	CBX-ECALL Combox emergency call	●	●	●	●	●	●	○
R60	Body	CHAMP-BO User interface	●	●	●	●	●	●	●
R60	Body	CHAMP-GW Gateway	●	●	●	●	●	●	●
R60	Body	CID Central information display	●	●	●	●	●	●	●
R60	Body	FRM footwell module	●	●	●	●	●	●	●
R60	Body	IBOC Digital tuner US	●	●	●	●	●	○	●
R60	Body	IHKA Heater/automatic A/C control	●	●	●	●	●	●	●
R60	Body	INSTR Instrument cluster	●	●	●	●	●	●	●
R60	Body	JBE Junction-box electronics	●	●	●	●	●	●	●
R60	Body	MJOY MINI joystick	●	●	●	●	●	●	●
R60	Body	PDC Park distance control	●	●	●	●	●	●	●
R60	Body	SHD Sliding/tilting sunroof	●	●	●	●	●	●	●
R60	Body	SZL Steering column switch centre 2	●	●	●	●	●	●	●
R60	Body	ULF-SBX Interface box	●	●	●	●	●	●	●
R60	Body	ULF-SBX-H Interface box High	●	●	●	●	●	●	●
R60	Chassis	ABS/ASC/DSC Dynamic Stability Control	●	●	●	●	●	●	●
R60	Chassis	EDC Damper Control	●	●	●	●	●	●	●
R60	Chassis	EPS Electronic Power Steering	●	●	●	●	●	●	●
R60	Drive	CAS Car Access System	●	●	●	●	●	●	●
R60	Drive	DME/DDE(Engine Electronics)	●	●	●	●	●	●	●
R60	Drive	EGS/AGS(Transmission Control)	●	●	●	●	●	●	●
F56	Body	MRS/AB Airbag/ACSM	●	●	●	●	●	○	●
F56	Body	AHM Trailer module	●	●	●	●	●	●	●
F56	Body	AMPH Hi-Fi amplifier	●	●	●	●	●	●	●
F56	Body	AMPT Top Hi-Fi amplifier	●	●	●	●	●	●	●
F56	Body	ASD Active Sound Design	●	●	●	●	●	●	○
F56	Body	CBX-ECALL Combox emergency call	●	●	●	●	●	●	○
F56	Body	CIC Car Information Computer	●	●	●	●	●	●	●
F56	Body	CON Controller	●	●	●	●	●	●	●
F56	Body	DVDC DVD Changer	●	●	●	●	○	●	●
F56	Body	FZD Function centre, roof	●	●	●	●	●	●	●
F56	Body	HKL Rear-lid lift	●	●	●	●	●	●	●
F56	Body	IHKA Heater/automatic A/C control	●	●	●	●	●	●	●
F56	Body	INSTR Instrument cluster	●	●	●	●	●	●	●
F56	Body	KAFAS Camera-based driver-assistance systems	●	●	●	●	●	●	○

Model Series	Part	Systems	Ecu Info.	Read DTC	Freeze Frame	Erase DTC	Live Data	Component activation	Physical HW
F56	Body	PMA Parking assistant	●	●	●	●	●	●	○
F56	Body	SMFA Seat module, driver	●	●	●	●	●	●	●
F56	Body	SZL Switch centre, steering column	●	●	●	●	●	●	●
F56	Body	ZGM Central Gateway Module	●	●	●	●	○	○	●
F56	Body	TRSVC_allround-view camera	●	●	●	●	●	●	○
F56	Chassis	ABS/ASC/DSC Dynamic Stability Control	●	●	●	●	●	●	●
F56	Chassis	AL active steering	●	●	●	●	●	○	●
F56	Drive	CAS Car Access System	●	●	●	●	●	●	●
F56	Drive	DME/DDE (Engine Electronics)	●	●	●	●	●	●	●
F56	Drive	EGS/AGS (Transmission Control)	●	●	●	●	●	●	●

Service Function List

备注:

- This function is supported. ▲ This function is the new feature in this version.
- This function is not supported.

All functions are available to R/F Chassis. In the actual test procedure, different menus will be displayed depending on the model configuration.

Part	Components	Status
Maintenance	CBS reset Key Word Protocol	●
Maintenance	CBS Reset UDS	▲
Maintenance	CBS reset, engine oil	▲
Maintenance	CBS vehicle data correction	▲
Maintenance	Charging the battery via diagnostic socket	▲
Maintenance	Delete transport mode	▲
Maintenance	Reset pre-delivery check	▲
Maintenance	Setting the transport mode	▲
Maintenance	Write service history	▲
Vehicle information	Check Control messages	▲
Vehicle information	Integration level	▲
Vehicle information	KOMBI: Convertible top opening time display	▲
Vehicle information	Read Check Control history memory	▲
Vehicle information	Total counter, convertible top opening time	▲
Body	A/C compressor running-in protection	▲
Body	Activate deactivate test card	▲
Body	Activate SDARS	▲
Body	Add tuner section	▲
Body	Analysis of the wake-up control units	▲
Body	Auxiliary heater: Initialisation of the Telestart transmitter	▲
Body	Calibrating the expansion valves of the heat pump circuit	▲
Body	Calibration run for flap motors	●
Body	Change personalisation data of remote key	●
Body	Create boot file again	●
Body	Delete the personal profile	▲
Body	Drain or fill the refrigerant circuit	●
Body	Drain or fill the refrigerant circuit of the heat pump	●
Body	DWA: Check by false alarm (with CA)	▲
Body	DWA: Read or delete alarm memory	▲
Body	Evaluate closed-circuit current monitoring	▲
Body	Evaluate state of battery charge	▲
Body	Flexible diagnosis module	▲
Body	High-voltage safety: Status	▲
Body	HIP module reset	▲
Body	Ignition key: Personalisation number	●
Body	Individual test for aerials in vehicle	▲
Body	Initialise power window regulators	●
Body	Initialise rain sensor	●
Body	Initialise slide/tilt sunroof	●
Body	Initialise slide/tilt sunroof.	●
Body	Initialise window regulators	●
Body	Lock and enable master key	●
Body	Lock and enable remote control key	●
Body	Log on mobile phone	▲
Body	MOST ring: Store configuration	●
Body	MOST: storing the desired configuration	●
Body	Navigation system: DVD lock	▲
Body	Power management: Evaluating the battery state of charge	▲
Body	Power-down command	●
Body	Rain sensor initialisation	●
Body	Recode seat-occupancy mat	●
Body	Register battery replacement	●
Body	Release electric auxiliary heater	●
Body	Ride height sensors: Start-up	●
Body	Roll-over protection system	●
Body	Run-in protection for A/C compressor	●
Body	Safety system (airbag): Coding data	●
Body	Seat occupancy detection, front passenger	●
Body	Teach in front wiper	●

Part	Components	Status
Body	ZGM: FlexRay initialisation	●
Body	Newly address the air distribution flap motors	●
Chassis and suspension	Workshop mode, Automatic Hold brake	●
Chassis and suspension	Adjustment of steering torque sensor	●
Chassis and suspension	Adjustment of the driving dynamics sensors	●
Chassis and suspension	Brake bleeding procedure	●
Chassis and suspension	DSC control unit adjustment	●
Chassis and suspension	DSC: Bleeding routine	●
Chassis and suspension	DSC: Brake line mix-up test	▲
Chassis and suspension	DSC: Brake line reversal check	▲
Chassis and suspension	DSC: Pressure sensor adjustment	▲
Chassis and suspension	DSC: Sensor adjustment	▲
Chassis and suspension	DSC: Steering angle sensor adjustment	●
Chassis and suspension	PSC adjustment	●
Chassis and suspension	PSC: Steering start-up	●
Chassis and suspension	Service function, pressure encoding	●
Chassis and suspension	Start-up for brake pedal travel sensor	●
Chassis and suspension	Start-up, Automatic Hold brake	●
Driver assistance	All-round vision camera: Check of the programming	●
Driver assistance	HUD: - Setting picture geometry	▲
Driver assistance	KAFAS: Calibration	▲
Driver assistance	Pressure coding service function, RDC integrated	▲
Driver assistance	Replace combiner	▲
Driver assistance	TLC: Calibrate vibration motor	▲
Engine	Activation fuel pump control module	▲
Engine	Activation/deactivation terminal 15	●
Engine	Adaptation of fuel quantity control valve	▲
Engine	Adaptation, hot film air mass meter	▲
Engine	Adjusting the starting torque	▲
Engine	Adjustment of exhaust-gas recirculation	▲
Engine	Adjustment of idle speed	●
Engine	Adjustment, consumption calculation	●
Engine	Automatic engine start-stop function: Starter exchange	●
Engine	Automatic engine start-stop function: Teach in zero-gear sensor	▲
Engine	Bleeding the fuel system	▲
Engine	Charging the high-voltage battery: Read out history of last charging procedures	▲
Engine	Clear adaptations	●
Engine	Composition of the high-voltage battery unit: Read out serial numbers	▲
Engine	Compression test	▲
Engine	Consumption calculation adjustment	▲
Engine	Delete install mode	▲
Engine	Diesel particulate filter: - Request regeneration	▲
Engine	Diesel particulate filter: Replacement	▲
Engine	Diesel particulate filter: Request regeneration	▲
Engine	DME: Clear adaptations	▲
Engine	DME: Delete adaptation variable camshaft timing control	▲
Engine	EGR adaptation	▲
Engine	EGS: Reset adaptation values	▲
Engine	EGS: Teach in neutral position	●
Engine	EGS: transmission fluid adjustment	●
Engine	Electronic immobiliser (EWS): Reset starter lock	●
Engine	EME: Delete install mode	●
Engine	EME: Read out the adjustment value of the rotor position sensor	●
Engine	EME: Reset vacuum pump operating time	●
Engine	EME: Rotor position sensor adjustment	▲
Engine	EME: Teach in parking lock module	▲
Engine	Engine control: Read measured value	▲
Engine	Engine operating values record	▲
Engine	European on-board diagnosis readiness codes	▲
Engine	EWS adjustment	▲
Engine	EWS starting value	▲
Engine	Exhaust-gas recirculation	●
Engine	Fuel consumption display adjustment	▲
Engine	Fuel quality identification	▲
Engine	Fuel tank pressure sensor adjustment	▲
Engine	Gear sensor	▲
Engine	Idle speed adjustment	●
Engine	Injection quantity compensation	●

Part	Components	Status
Engine	Internal engine pressure	▲
Engine	Learn Valvetronic limit positions	●
Engine	Mass meter	▲
Engine	Mean quantity adaptation	▲
Engine	MSA: Read history memory	●
Engine	MSA: System check	●
Engine	On-board Diagnosis Readiness Codes	●
Engine	RDME: Delete install mode	▲
Engine	Reading out the readiness codes	▲
Engine	Regulation of switching speed	▲
Engine	Release correction, additive level 1	▲
Engine	Release correction, additive level 2	▲
Engine	REME: Delete install mode	▲
Engine	Reset adaptation values	▲
Engine	Reset production mode	▲
Engine	Reset production mode, preheating control unit	▲
Engine	Reset starter lock	▲
Engine	Reset the internal ELV fault counter	▲
Engine	Service start range extender	▲
Engine	Smooth running control	▲
Engine	Starting torque adjustment	▲
Engine	Starting up the high-voltage battery unit	▲
Engine	Start-up, fuel pump control	▲
Engine	Teach in drive position actuator	▲
Engine	Transmission control unit: Reset adaptation values	▲
Engine	Valvetronic adaptation limit positions	●
Engine	VANOS adaptation	●
Maintenance	Enabling, navigation, automatic	○
Maintenance	Manual enabling of navigation function	○
Body	Updating online services	○

Coding List

Model Series	Systems	Coding
R50	ABS/ASC/DSC Dynamic Stability Control	●
R50	AIC Automatic Interval Control	●
R50	CVM Convertible top module	●
R50	DME Digital Engine/Gearbox Electronic 2	●
R50	EWS Electronic immobilizer	●
R50	KOM Instrument cluster	●
R50	KOM2 additional instruments	●
R50	LEW Steering-angle sensor	●
R50	MRS Multiple Restraint System IV	●
R50	PDC Park Distance Control	●
R50	RAD Radio	●
R50	SHD Sliding/tilting sunroof	●
R50	ULF Universal charging and hands-free facility	●
R50	VID Video module	●
R50	ZKE Central body electronics BC1	●
R52	ABS/ASC/DSC Dynamic Stability Control	●
R52	AIC Automatic Interval Control	●
R52	CVM Convertible top module	●
R52	DME Digital Engine/Gearbox Electronic 2	●
R52	EWS Electronic immobilizer	●
R52	KOM Instrument cluster	●
R52	KOM2 additional instruments	●
R52	LEW Steering-angle sensor	●
R52	MRS Multiple Restraint System IV	●
R52	PDC Park Distance Control	●
R52	RAD Radio	●
R52	SHD Sliding/tilting sunroof	●
R52	ULF Universal charging and hands-free facility	●
R52	VID Video module	●
R52	ZKE Central body electronics BC1	●
R53	ABS/ASC/DSC Dynamic Stability Control	●
R53	AIC Automatic Interval Control	●
R53	CVM Convertible top module	●
R53	DME Digital Engine/Gearbox Electronic 2	●
R53	EWS Electronic immobilizer	●
R53	KOM Instrument cluster	●
R53	KOM2 additional instruments	●
R53	LEW Steering-angle sensor	●
R53	MRS Multiple Restraint System IV	●
R53	PDC Park Distance Control	●
R53	RAD Radio	●
R53	SHD Sliding/tilting sunroof	●
R53	ULF Universal charging and hands-free facility	●
R53	VID Video module	●
R53	ZKE Central body electronics BC1	●
R55	ABS/ASC/DSC Dynamic Stability Control	●
R55	AHM Trailer module	●
R55	CA Comfort access system	●
R55	CAS Car Access System	●
R55	CCC-A Applications	●
R55	CCC-ANT Aerial tuner	●
R55	CCC-B0 User interface	●

Model Series	Systems	Coding
R55	CCC-B0 User interface	●
R55	CCC-GW Gateway	●
R55	CVM Convertible top module	●
R55	DAB Digital tuner	●
R55	DME Motor Electronics	●
R55	EPS Electronic Power Steering	●
R55	FRM Footwell module	●
R55	IHKA Integrated automatic heating/air conditioning	●
R55	INSTR Instrument cluster	●
R55	JBE Junction-box electronics	●
R55	PDC Park Distance Control	●
R55	SHD Sliding/tilting sunroof	●
R55	SZL Switch centre, steering column	●
R55	ULF-SBX Interface box	●
R55	ULF-SBX-H Interface box High	●
R56	ABS/ASC/DSC Dynamic Stability Control	●
R56	AHM Trailer module	●
R56	CA Comfort access system	●
R56	CAS Car Access System	●
R56	CCC-A Applications	●
R56	CCC-ANT Aerial tuner	●
R56	CCC-B0 User interface	●
R56	CCC-B0 User interface	●
R56	CCC-GW Gateway	●
R56	CVM Convertible top module	●
R56	DAB Digital tuner	●
R56	DME Motor Electronics	●
R56	EPS Electronic Power Steering	●
R56	FRM Footwell module	●
R56	IHKA Integrated automatic heating/air conditioning	●
R56	INSTR Instrument cluster	●
R56	JBE Junction-box electronics	●
R56	PDC Park Distance Control	●
R56	SHD Sliding/tilting sunroof	●
R56	SZL Switch centre, steering column	●
R56	ULF-SBX Interface box	●
R56	ULF-SBX-H Interface box High	●
R57	ABS/ASC/DSC Dynamic Stability Control	●
R57	AHM Trailer module	●
R57	CA Comfort access system	●
R57	CAS Car Access System	●
R57	CCC-A Applications	●
R57	CCC-ANT Aerial tuner	●
R57	CCC-B0 User interface	●
R57	CCC-B0 User interface	●
R57	CCC-GW Gateway	●
R57	CVM Convertible top module	●
R57	DAB Digital tuner	●
R57	DME Motor Electronics	●
R57	EPS Electronic Power Steering	●
R57	FRM Footwell module	●
R57	IHKA Integrated automatic heating/air conditioning	●
R57	INSTR Instrument cluster	●
R57	JBE Junction-box electronics	●

Model Series	Systems	Coding
R57	PDC Park Distance Control	●
R57	SHD Sliding/tilting sunroof	●
R57	SZL Switch centre, steering column	●
R57	ULF-SBX Interface box	●
R57	ULF-SBX-H Interface box High	●
R58	ABS/ASC/DSC Dynamic Stability Control	●
R58	AHM Trailer module	●
R58	CA Comfort access system	●
R58	CAS Car Access System	●
R58	CCC-A Applications	●
R58	CCC-ANT Aerial tuner	●
R58	CCC-B0 User interface	●
R58	CCC-B0 User interface	●
R58	CCC-GW Gateway	●
R58	CVM Convertible top module	●
R58	DAB Digital tuner	●
R58	DME Motor Electronics	●
R58	EPS Electronic Power Steering	●
R58	FRM Footwell module	●
R58	IHKA Integrated automatic heating/air conditioning	●
R58	INSTR Instrument cluster	●
R58	JBE Junction-box electronics	●
R58	PDC Park Distance Control	●
R58	SHD Sliding/tilting sunroof	●
R58	SZL Switch centre, steering column	●
R58	ULF-SBX Interface box	●
R58	ULF-SBX-H Interface box High	●
R59	ABS/ASC/DSC Dynamic Stability Control	●
R59	AHM Trailer module	●
R59	CA Comfort access system	●
R59	CAS Car Access System	●
R59	CCC-A Applications	●
R59	CCC-ANT Aerial tuner	●
R59	CCC-B0 User interface	●
R59	CCC-B0 User interface	●
R59	CCC-GW Gateway	●
R59	CVM Convertible top module	●
R59	DAB Digital tuner	●
R59	DME Motor Electronics	●
R59	EPS Electronic Power Steering	●
R59	FRM Footwell module	●
R59	IHKA Integrated automatic heating/air conditioning	●
R59	INSTR Instrument cluster	●
R59	JBE Junction-box electronics	●
R59	PDC Park Distance Control	●
R59	SHD Sliding/tilting sunroof	●
R59	SZL Switch centre, steering column	●
R59	ULF-SBX Interface box	●
R59	ULF-SBX-H Interface box High	●
R60	ABS/ASC/DSC Dynamic Stability Control	●
R60	AHM Trailer module	●
R60	CA Comfort access system	●
R60	CAS Car Access System	●
R60	CCC-A Applications	●

Model Series	Systems	Coding
R60	CCC-ANT Aerial tuner	●
R60	CCC-B0 User interface	●
R60	CCC-B0 User interface	●
R60	CCC-GW Gateway	●
R60	CVM Convertible top module	●
R60	DAB Digital tuner	●
R60	DME Motor Electronics	●
R60	EPS Electronic Power Steering	●
R60	FRM Footwell module	●
R60	IHKA Integrated automatic heating/air conditioning	●
R60	INSTR Instrument cluster	●
R60	JBE Junction-box electronics	●
R60	PDC Park Distance Control	●
R60	SHD Sliding/tilting sunroof	●
R60	SZL Switch centre, steering column	●
R60	ULF-SBX Interface box	●
R60	ULF-SBX-H Interface box High	●
R61	ABS/ASC/DSC Dynamic Stability Control	●
R61	AHM Trailer module	●
R61	CA Comfort access system	●
R61	CAS Car Access System	●
R61	CCC-A Applications	●
R61	CCC-ANT Aerial tuner	●
R61	CCC-B0 User interface	●
R61	CCC-B0 User interface	●
R61	CCC-GW Gateway	●
R61	CVM Convertible top module	●
R61	DAB Digital tuner	●
R61	DME Motor Electronics	●
R61	EPS Electronic Power Steering	●
R61	FRM Footwell module	●
R61	IHKA Integrated automatic heating/air conditioning	●
R61	INSTR Instrument cluster	●
R61	JBE Junction-box electronics	●
R61	PDC Park Distance Control	●
R61	SHD Sliding/tilting sunroof	●
R61	SZL Switch centre, steering column	●
R61	ULF-SBX Interface box	●
R61	ULF-SBX-H Interface box High	●
F56	ACSM Crash Safety Module	●
F56	TRSVC allround-view camera	●
F56	DME Digital Motor Electronics	●
F56	EGS transmission management	●
F56	DSC Dynamic Stability Control	●
F56	DVDC DVD Changer	●
F56	AMPT Top Hi-Fi amplifier	●
F56	CAS Car Access System	●
F56	FZD Function centre, roof	●
F56	KAFAS Camera-based driver-assistance systems	●
F56	INSTR Instrument cluster	●
F56	CBX-ECALL Combox emergency call	●
F56	CIC Car Information Computer	●
F56	CON Controller	●
F56	IHKA Integrated automatic heating/air conditioning	●