MaxiSys_Benz_sprinter_V3.00 Function List (Note:For reference only)

NOTES:

- This function is supported.

 * This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Model y	rear	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of O	1/2006	Sprinter	906	Drive	CDI4-Common Rail Diesel Injection	•	•	•	•	•	•	•	F001 F002 F003 F004 F005 F006 F007 F008 F009 F00A F00B F00C F00D F00E F00F F010
As of 0	1/2006	Sprinter	906	Drive	CDI3-Common Rail Diesel Injection	•	•	•	•	•	•	•	F001 F003 F004 F00D F009 F002
As of O	1/2006	Sprinter	906	Drive	CDID2-Common Rail Diesel Injection	•	•	•	•	•	•	•	F011 F004 F002 F005 F006 F007 F008 F012 F013 F014 F015 F016 F017 F018 F019 F01A F01B F01C F01D F01E F01F F020 F021 F022 F023 F00F F024 F025 F026 F027 F00D F028 F029 F02A F010 F02B
As of 0	1/2006	Sprinter	906	Drive	CDI6-Common Rail Diesel Injection	•	•	•	•	•	•	•	F011 F004 F00D F002 F005 F006
As of 0	1/2006	Sprinter	906	Drive	CDI4-Common Rail Diesel Injection	•	•	•	•	•	•	•	F001 F002 F003 F004 F005 F006
As of 0	1/2006	Sprinter	906	Drive	ME 97-Motor electronics 9.7	•	•	•	•	•	•	•	F041 F042 F004
As of 0	1/2006	Sprinter	906	Drive	ME-SFI-Motor electronics	•	•	•	•	•	•	•	F004 F043 F044 F026 F045 F046
As of 0	1/2006	Sprinter	906	Drive	NGT-Natural Gas Technology	•	0	0	0	•	0	•	
As of 0	1/2006	Sprinter	906	Drive	EGS Electronic transmission control	•	•	•	•	•	•	•	F04A F04B F04C F04D F04E F04F
As of 0	1/2006	Sprinter	906	Drive	EWM-Electronic selector lever module	•	•	•	•	•	•	•	
As of 0	1/2006	Sprinter	906	Drive	VG-Transfer case	•	•	•	•	•	•	0	
As of 0	1/2006	Sprinter	906	Drive	SCR-Selective Catalytic Reduction	•	•	0	•	•	•	0	
As of 0	1/2006	Sprinter	906	Drive	FSCU-Fuel pump	•	•	•	•	•	•	0	
As of 0	1/2006	Sprinter	906	Chassis	ESP-Electronic stability program	•	•	•	•	•	•	•	F059
As of 0	1/2006	Sprinter	906	Chassis	ESP9-Electronic stability program	•	•	•	•	0	•	0	
As of 0	1/2006	Sprinter	906	Chassis	RDK Tire pressure monitor(Up to model year	•	•	•	•	•	•	•	F05A F05B F05C
As of 0	1/2006	Sprinter	906	Chassis	RDK Tire pressure monitor(As of model year	•	•	•	•	•	0	•	F05B F05C F05D
As of 0	1/2006	Sprinter	906	Chassis	ENR-Electronic rear axle level control	•	•	•	•	•	•	•	F05E F05F F060
As of 0	1/2006	Sprinter	906	Body	EZS-Electronic ignition switch	•	•	•	•	•	•	0	F061 F062 F002 F063 F064 F065
As of 0	1/2006	Sprinter	906	Body	EZS-Electronic ignition switch	•	•	•	•	•	•	0	F002 F06D F06E F062
As of 0	1/2006	Sprinter	906	Body	EZS-Electronic ignition switch	•	•	•	•	•	•	0	
As of 0	1/2006	Sprinter	906	Body	OBF-Upper control panel	•	•	•	•	•	•	•	
As of 0	1/2006	Sprinter	906	Body	OBF2-Upper control panel	•	•	•	•	•	•	•	
As of 0	1/2006	Sprinter	906	Body	SAM-Signal acquisition and actuation module	•	•	•	•	•	•	•	
As of 0	1/2006	Sprinter	906	Body	ALWR-Headlamp range adjustment	•	•	•	•	•	•	•	F06F
As of 0	1/2006	Sprinter	906	Body	AAG-Trailer connection unit	•	•	•	•	•	0	•	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2006	Sprinter	906	Body	DBE-Overhead control panel	•	•	•	•	•	•	•	F070 F071 F072 F073 F074 F075 F076 F077
As of 01/2006	Sprinter	906	Body	KE-Keyless Entry	•	•	•	•	•	•	•	
As of 01/2006	Sprinter	906	Body	MRM-Steering column module	•	•	•	•	•	•	•	
As of 01/2006	Sprinter	906	Body	SRS-supplemental restraint system	•	•	•	•	•	•	•	F078
As of 01/2006	Sprinter	906	Body	SRS-Supplemental restraint	•	•	0	•	•	•	•	F079
As of 01/2006	Sprinter	906	Information and	KI-Instrument cluster	•	•	0	•	•	•	•	F07A F07B F07C F07D F07E F07F F080 F081 F082 F083 F084 F085
As of 01/2006	Sprinter	906	Information	MTCO-Modular tachograph	•	•	•	•	•	•	0	
As of 01/2006	Sprinter	906	Information	PTS-Parktronic system	•	•	•	•	•	•	•	F093 F094 F095
As of 01/2006	Sprinter	906	Information	RADIO Sound 5	•	•	•	•	•	•	0	
As of 01/2006	Sprinter	906	Information	AGW-Audio gateway (MOST network management,	•	•	•	•	•	•	0	
As of 01/2006	Sprinter	906	Information	RADIO Sound 20	•	•	•	•	•	•	0	
As of 01/2006	Sprinter	906	Information	COMAND or AUDIO	•	•	0	•	•	•	0	
As of 01/2006	Sprinter	906	Information	SOUND 5NG	•	•	•	•	•	•	0	
As of 01/2006	Sprinter	906	Information	NAVI-Navigation system (COMAND, SOUND 50)	•	•	•	•	•	•	0	
As of 01/2006	Sprinter	906	Information	CDW-CD changer	•	•	•	•	•	•	0	
As of 01/2006	Sprinter	906	Information	TEL-Telephone control unit	•	•	•	•	•	•	0	
As of 01/2006	Sprinter	906	Information	FSE Hands-free system (Bluetooth)	•	•	0	•	•	•	•	
As of 01/2006	Sprinter	906	Seats and	TSG-Door control module front driver side	•	•	•	•	•	•	•	
As of 01/2006	Sprinter	906	Seats and	STL-Left electric sliding door	•	•	•	•	•	•	•	
As of 01/2006	Sprinter	906	Seats and	STR-Right electric sliding door	•	•	•	•	•	•	•	
As of 01/2006	Sprinter	906	Air	KLA-Automatic air conditioning	•	•	0	•	•	•	•	F096
As of 01/2006	Sprinter	906	Air	PTC-Heater booster	•	•	•	•	•	•	•	
As of 01/2006	Sprinter	906	Air	ZHE-Auxiliary heater	•	•	•	•	•	•	•	
As of 01/2006	Sprinter	906	Air	ZHZ-Heater booster	•	•	•	•	•	•	•	
As of 01/2006	Sprinter	906	Special	PSM-Parameterizable Special Module	•	•	•	•	•	•	•	
As of 01/2006	Sprinter	906 (VW	Drive	ASG-Automatic gearshift system	•	•	0	•	•	•	0	
As of 01/2006	Sprinter	906 (VW	Chassis	ESP-Electronic stability program	•	•	•	•	•	•	•	F059
As of 01/2006	Sprinter	906 (VW	Chassis	RDK Tire pressure monitor(Up to model year	•	•	•	•	•	•	•	F05A F05B F05C
As of 01/2006	Sprinter	906 (VW	Body	EZS-Electronic ignition switch	•	•	•	•	•	•	0	
As of 01/2006	Sprinter		Body	OBF-Upper control panel	•	•	•	•	•	•	•	
As of 01/2006	Sprinter	906 (VW	Body	SAM-Signal acquisition and actuation module	•	•	•	•	•	•	•	
As of 01/2006	Sprinter	906 (VW	Body	AAG-Trailer connection unit	•	•	•	•	•	0	•	
As of 01/2006	Sprinter		Body	DBE-Overhead control panel	•	•	•	•	•	•	•	F070 F071 F072 F073 F074 F075
As of 01/2006	Sprinter		Body	MRM-Steering column module	•	•	•	•	•	•	•	
As of 01/2006	Sprinter	906 (VW	Body	SRS-supplemental restraint system	•	•	•	•	•	•	•	F078
As of 01/2006	Sprinter	906(VW LT3)	Information and	KI-Instrument cluster	•	•	0	•	•	•	•	F07A F07B F07C F07D F07E F07F F080 F081 F082 F083 F084 F085
As of 01/2006	Sprinter	906 (VW	Information	MTCO-Modular tachograph	•	•	•	•	•	•	0	
As of 01/2006	Sprinter	906 (VW	Information	PTS-Parktronic system	•	•	•	•	•	•	•	F093 F094 F095

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2006	Sprinter	906 (VW	Information	FSE Hands-free system (Bluetooth)	•	•	0	•	•	•	•	
As of 01/2006	Sprinter	906 (VW	Information	AGW-Audio gateway (MOST network management,	•	•	•	•	•	•	0	
As of 01/2006	Sprinter	906 (VW	Information	RADIO Sound 20	•	•	•	•	•	•	0	
As of 01/2006	Sprinter	906 (VW	Information	COMAND or AUDIO	•	•	0	•	•	•	0	
As of 01/2006	Sprinter	906 (VW	Information	RADIO Sound 5	•	•	•	•	•	•	0	
As of 01/2006	Sprinter	906 (VW	Information	SOUND 5NG	•	•	•	•	•	•	0	
As of 01/2006	Sprinter	906 (VW	Information	NAVI-Navigation system (COMAND, SOUND 50)	•	•	•	•	•	•	0	
As of 01/2006	Sprinter	906 (VW	Information	CDW-CD changer	•	•	•	•	•	•	0	
As of 01/2006	Sprinter	906 (VW	Information	TEL-Telephone control unit	•	•	•	•	•	•	0	
As of 01/2006	Sprinter	906 (VW	Seats and	TSG-Door control module front driver side	•	•	•	•	•	•	•	
As of 01/2006	Sprinter	906 (VW	Air	KLA-Automatic air conditioning	•	•	0	•	•	•	•	F096
As of 01/2006	Sprinter	906 (VW	Air	PTC-Heater booster	•	•	•	•	•	•	•	
As of 01/2006	Sprinter	906 (VW	Air	ZHE-Auxiliary heater	•	•	•	•	•	•	•	
As of 01/2006	Sprinter	906 (VW	Air	ZHZ-Heater booster	•	•	•	•	•	•	•	
As of 01/2006	Sprinter	906 (VW	Special	PSM-Parameterizable Special Module	•	•	•	•	•	•	•	
From 2002 to	Sprinter	90x.6;6	Body	EZS-Electronic ignition switch	•	•	•	•	•	•	0	F061 F062 F002 F063 F064 F065
From 2002 to	Sprinter	90x.6;6	Body	EZS-Electronic ignition switch	•	•	•	•	•	•	0	F002 F06D F06E F062
From 2002 to	Sprinter	90x.6;6	Body	EZS-Electronic ignition switch	•	•	•	•	•	•	0	
From 2002 to	VANEO	414	Drive	ECM-Engine control monolith	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Chassis	ESP-Electronic stability program	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Body	ABW-Airbag with window airbag	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Body	DAS-Drive authorization system	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Body	ATA-Anti-theft alarm system	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Information	IC-Instrument cluster	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Information	PTS-Parktronic system	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Information	Radio (SOUND series)	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Information	AUDIO/APS-Auto pilot system	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Information	COMAND	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Information	CDC-CD changer	•	•	0	•	0	0	0	
From 2002 to	VANEO	414	Information	CTEL-Cellular telephone 1 (fixed	•	•	0	•	0	0	0	
From 2002 to	VANEO	414	Information	UHI-Cellular telephone (fixed installation	•	•	0	•	•	0	0	
From 2002 to	VANEO	414	Seats and	CL-Central locking control unit	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Air	HEAT/TAC-Automatic temperature control	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Drive	ECM-Engine control monolith	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Drive	ACS-Automatic clutch system	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Chassis	ESP-Electronic stability program	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Body	ABW-Airbag with window airbag	•	•	0	•	•	*	0	
From 2002 to 2005	VANEO	414	Body	DAS-Drive authorization system	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Body	ATA-Anti-theft alarm system	•	•	0	•	•	*	0	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2002 to	VANEO	414	Information	IC-Instrument cluster	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Information	PTS-Parktronic system	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Information	Radio (SOUND series)	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Information	AUDIO/APS-Auto pilot system	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Information	COMAND	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Information	CDC-CD changer	•	•	0	•	0	0	0	
From 2002 to	VANEO	414	Information	CTEL-Cellular telephone 1 (fixed	•	•	0	•	0	0	0	
From 2002 to	VANEO	414	Information	UHI-Cellular telephone (fixed installation	•	•	0	•	•	0	0	
From 2002 to	VANEO	414	Seats and	CL-Central locking control unit	•	•	0	•	•	•	0	
From 2002 to 2005	VANEO	414	Air conditioning	HEAT/TAC-Automatic temperature control	•	•	0	•	•	*	0	
From 2002 to 2005	VANEO	414	Drive	ECM-Engine control monolith	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Drive	FTC-Front transmission control	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Drive	FTC-Front transmission control	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Drive	ESM-Electronic selector module	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Chassis	ESP-Electronic stability program	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Body	ABW-Airbag with window airbag	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Body	DAS-Drive authorization system	•	•	0	•	•	*	0	
From 2002 to 2005	VANEO	414	Body	ATA-Anti-theft alarm system	•	•	0	•	•	*	0	
From 2002 to 2005	VANEO	414	Information and	IC-Instrument cluster	•	•	0	•	•	*	0	
From 2002 to 2005	VANEO	414	Information and	PTS-Parktronic system	•	•	0	•	•	*	0	
From 2002 to 2005	VANEO	414	Information and	Radio (SOUND series)	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Information	AUDIO/APS-Auto pilot system	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Information	COMAND	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Information	CDC-CD changer	•	•	0	•	0	0	0	
From 2002 to	VANEO	414	Information	CTEL-Cellular telephone 1 (fixed	•	•	0	•	0	0	0	
From 2002 to	VANEO	414	Information	UHI-Cellular telephone (fixed installation	•	•	0	•	•	0	0	
From 2002 to	VANEO	414	Seats and	CL-Central locking control unit	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Air	HEAT/TAC-Automatic temperature control	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Drive	CDI-Common Rail Diesel Injection	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Chassis	ESP-Electronic stability program	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Body	ABW-Airbag with window airbag	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Body	DAS-Drive authorization system	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Body	ATA-Anti-theft alarm system	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Information	IC-Instrument cluster	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Information	PTS-Parktronic system	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Information	Radio (SOUND series)	•	•	0	•	•	•	0	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes		Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2002 to	VANEO	414	Information	AUDIO/APS-Auto pilot system	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Information	COMAND	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Information	CDC-CD changer	•	•	0	•	0	0	0	
From 2002 to	VANEO	414	Information	CTEL-Cellular telephone 1 (fixed	•	•	0	•	0	0	0	
From 2002 to	VANEO	414	Information	UHI-Cellular telephone (fixed installation	•	•	0	•	•	0	0	
From 2002 to	VANEO	414	Seats and	CL-Central locking control unit	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Air	HEAT/TAC-Automatic temperature control	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Drive	CDI-Common Rail Diesel Injection	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Drive	ACS-Automatic clutch system	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Chassis	ESP-Electronic stability program	•	•	0	•	•	*	0	
From 2002 to 2005	VANEO	414	Body	ABW-Airbag with window airbag	•	•	0	•	•	*	0	
From 2002 to 2005	VANEO	414	Body	DAS-Drive authorization system	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Body	ATA-Anti-theft alarm system	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Information	IC-Instrument cluster	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Information	PTS-Parktronic system	•	•	0	•	•	*	0	
From 2002 to 2005	VANEO	414	Information and	Radio (SOUND series)	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Information	AUDIO/APS-Auto pilot system	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Information	COMAND	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Information	CDC-CD changer	•	•	0	•	0	0	0	
From 2002 to	VANEO	414	Information	CTEL-Cellular telephone 1 (fixed	•	•	0	•	0	0	0	
From 2002 to	VANEO	414	Information	UHI-Cellular telephone (fixed installation	•	•	0	•	•	0	0	
From 2002 to	VANEO	414	Seats and	CL-Central locking control unit	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Air	HEAT/TAC-Automatic temperature control	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Drive	CDI-Common Rail Diesel Injection	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Drive	FTC-Front transmission control	•	•	0	•	•	*	0	
From 2002 to 2005	VANEO	414	Drive	FTC-Front transmission control	•	•	0	•	•	•	0	
2005	VANEO	414	Drive	ESM-Electronic selector module	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Chassis	ESP-Electronic stability program	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Body	ABW-Airbag with window airbag	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Body	DAS-Drive authorization system	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Body	ATA-Anti-theft alarm system	•	•	0	•	•	*	0	
From 2002 to	VANEO	414	Information	IC-Instrument cluster	•	•	0	•	•	*	0	
From 2002 to 2005	VANEO	414	Information and	PTS-Parktronic system	•	•	0	•	•	*	0	
From 2002 to 2005	VANEO	414	Information and	Radio (SOUND series)	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Information	AUDIO/APS-Auto pilot system	•	•	0	•	•	•	0	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2002 to	VANEO	414	Information	COMAND	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Information	CDC-CD changer	•	•	0	•	0	0	0	
From 2002 to	VANEO	414	Information	CTEL-Cellular telephone 1 (fixed	•	•	0	•	0	0	0	
From 2002 to	VANEO	414	Information	UHI-Cellular telephone (fixed installation	•	•	0	•	•	0	0	
From 2002 to	VANEO	414	Seats and	CL-Central locking control unit	•	•	0	•	•	•	0	
From 2002 to	VANEO	414	Air	HEAT/TAC-Automatic temperature control	•	•	0	•	•	*	0	
As of 01/2006	VITO	638		AB-Airbag	•	•	0	•	•	*	0	
As of 01/2006	VITO	638		WSP immobilizer	•	•	0	•	•	0	0	
As of 01/2008	VITO/VIANO	639	Drive	ME-SFI 2.8-Motor electronics 2.8	•	•	0	•	•	•	•	F097 F001 F098 F099 F048 F09A
As of 01/2008	VITO/VIANO	639	Drive	EGS electronic transmission control	•	•	•	•	•	•	•	F04A F09C F09D F055 F09E F09F
As of 01/2008	VITO/VIANO	639	Drive	ESM-Electronic selector module	•	•	0	•	•	•	•	
As of 01/2008	VITO/VIANO	639	Chassis	ESP-Electronic stability program	•	•	0	•	•	•	•	F0A6
As of 01/2008	VITO/VIANO	639	Chassis	ESP-Electronic stability program	•	•	•	•	•	•	•	F0A7 F0A8
As of 01/2008	VITO/VIANO	639	Chassis	ENR-Electronic rear axle level control	•	•	0	•	0	•	•	F0A9 F05E
As of 01/2008	VITO/VIANO	639	Chassis	TPC-Tire pressure monitor	•	•	•	•	•	•	•	F0AA F05A F05B F080 F0AB
As of 01/2008	VITO/VIANO	639	Body	CGW-Central gateway	•	•	•	•	0	•	0	
As of 01/2008	VITO/VIANO	639	Body	EZS-Electronic ignition switch	•	•	•	•	•	•	0	F069 F0AC F06A F0AD F0AE F0AF
As of 01/2008	VITO/VIANO	639	Body	SRS-supplemental restraint system	•	•	0	•	•	•	0	F0B3
As of 01/2008	VITO/VIANO	639	Body	SRS-supplemental restraint system	•	•	0	•	•	•	0	F0B4 F078
As of 01/2008	VITO/VIANO	639	Body	SAM-Signal acquisition and actuation module	•	•	0	•	•	•	•	
As of 01/2008	VITO/VIANO	639	Body	UCP-Upper control panel	•	•	0	•	•	0	•	
As of 01/2008	VITO/VIANO	639	Body	OCP-Overhead control panel	•	•	0	•	•	0	•	
As of 01/2008	VITO/VIANO	639	Body	SDE-H-Rear sliding roof unit	•	•	0	•	•	0	•	F0B5 F0B6 F0B7
As of 01/2008	VITO/VIANO	639	Body	AHE-Trailer recognition	•	•	0	•	•	0	•	
As of 01/2008	VITO/VIANO	639	Body	AAG-Trailer connection unit	•	•	•	•	•	0	•	
As of 01/2008	VITO/VIANO	639	Information	IC-Instrument cluster	•	•	0	•	•	0	•	FOB8 FOB9 FOBA FOBB
As of 01/2008	VITO/VIANO	639	Information	IC-Instrument cluster	•	•	0	•	•	•	•	FOBC FOBA FOBD
As of 01/2008	VITO/VIANO	639	Information	PTS-Parktronic system	•	•	•	•	•	•	•	
As of 01/2008	VITO/VIANO	639	Information	RADIO Sound 5	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information	AUDIO/APS-Auto pilot system	•	•	0	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information and	COMAND	•	•	0	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information and	HRA-Headlamp range adjustment	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information	Radio (SOUND series)	•	•	0	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information	CDC-CD changer	•	•	0	•	0	0	0	
As of 01/2008	VITO/VIANO	639		CTEL-Cellular telephone 1 (fixed	•	•	0	•	0	0	0	
As of 01/2008	VITO/VIANO	639		UHI-Cellular telephone (fixed installation or portable)(D2B)	•	•	0	•	•	0	0	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes		Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2008	VITO/VIANO	639	Information and	VCS-Voice control system	•	•	0	•	•	0	0	
As of 01/2008	VITO/VIANO	639	Information and	TV-TV tuner	•	•	0	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information and	NAVI-Navigation system (COMAND, SOUND 50)	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	and	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	and	RADIO Sound 20	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information and	SOUND 5NG	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information and	CDW-CD changer	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information and Information	TEL-Telephone control unit	•	•	•	•	•	•	0	
,	VITO/VIANO VITO/VIANO	639 639	and Seats and	AVN-Headlamp range adjustmen DCM-FL-Door control module front left	•	•	0	•	•	•	0	FOBE
	VITO/VIANO VITO/VIANO	639	Seats and	DCM-FR-Door control module front right	•		0	•	•	•		FOBF
	VITO/VIANO VITO/VIANO	639		STE-R-ESD [STE] Right electric sliding door	-	•	0		•	•		FOCO FOC1 FOC2
	VITO/VIANO VITO/VIANO	639	Seats and Seats and	STE-L-ESD [STE] Right electric sliding door	•		0	•	•	•		F0C0 F0C1 F0C2 F0C0 F0C1 F0C2
	VITO/VIANO VITO/VIANO	639	Seats and doors	ESA driver-Electric seat adjustment driver (with memory)	•	•	0	•	•	0		F0C3 F0C4 F0C5 F0C6 F0C7
As of 01/2008	VITO/VIANO	639	Seats and doors	ESA passenger-Electric seat adjustment front passenger (with memory)	•	•	0	•	•	0	•	F0C3 F0C4 F0C5 F0C6 F0C7
As of 01/2008	VITO/VIANO	639	Air conditioning	REAR AC-Rear air conditioning	•	•	•	•	•	•	•	F0C8
As of 01/2008	VITO/VIANO	639	Air conditioning	AAC-Automatic air conditioning	•	•	0	•	•	•	•	F0C9
	VITO/VIANO	639	Air conditioning	STH-Stationary heater	•	•	•	•	•	•	•	
	VITO/VIANO	639	Special	PSM-Parameterizable Special Module	•	•	•	•	0	•	0	
As of 01/2008	VITO/VIANO	639	Special	PSM-Parameterizable Special Module	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Drive	CDI-Common Rail Diesel Injection	•	•	•	•	•	•	•	FOCA FOO8 FOO7 FOO1 FOCB FOCC FOCD FOCE FOCF FODO FOD1 FOD2
As of 01/2008	VITO/VIANO	639	Drive	CDI-Common Rail Diesel Injection	•	•	•	•	•	•		FOCA FOO8 FOO7 FOO1 FOCB FOCC FOCD FOCE FOCF FODO FOD1 FOD2
As of 01/2008	VITO/VIANO	639	Drive	CDI4-Common Rail Diesel Injection	•	•	•	•	•	•	•	F001 F002 F003 F004 F005 F006 F007 F008 F009 F00A F00B F00C F00D F00E F00F F010
	VITO/VIANO	639	Drive	CDI4-Common Rail Diesel Injection	•	•	•	•	•	•	•	FOCA FOOE FOO8 FOO7 FOO1 FOOD FOD3 FOD4 FOCC FOD5
	VITO/VIANO	639	Chassis	ESP-Electronic stability program	•	•	0	•	•	•	•	F0A6
	VITO/VIANO	639	Chassis	ESP-Electronic stability program	•	•	•	•	•	•	•	F0A7 F0A8
	VITO/VIANO	639	Chassis	ENR-Electronic rear axle level control	•	•	0	•	0	•	•	F0A9 F05E
As of 01/2008	VITO/VIANO	639	Chassis	TPC-Tire pressure monitor	•	•	•	•	•	•	•	F0AA F05A F05B F080 F0AB

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes		Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2008	VITO/VIANO	639	Body	CGW-Central gateway	•	•	•	•	0	•	0	
As of 01/2008	VITO/VIANO	639	Body	EZS-Electronic ignition switch	•	•	•	•	•	•	0	F069 F0AC F06A F0AD F0AE F0AF F0B0 F0B1 F0B2 F06C
	VITO/VIANO	639	Body	SRS-supplemental restraint system	•	•	0	•	•	•	0	F0B3
	VITO/VIANO	639	Body	SRS-supplemental restraint system	•	•	0	•	•	•	0	F0B4 F078
	VITO/VIANO	639	Body	SAM-Signal acquisition and actuation module	•	•	0	•	•	•	•	
As of 01/2008	VITO/VIANO	639	Body	UCP-Upper control panel	•		0	•	•	0	•	
	VITO/VIANO	639	Body	OCP-Overhead control panel	•	•	0	•	•	0	•	
As of 01/2008	VITO/VIANO	639	Body	SDE-H-Rear sliding roof unit	•		0	•	•	0	•	F0B5 F0B6 F0B7
As of 01/2008	VITO/VIANO	639	Body	AHE-Trailer recognition	•		0	•	•	0	•	
As of 01/2008	VITO/VIANO	639	Body	AAG-Trailer connection unit	•	•	•	•	•	0	•	
As of 01/2008	VITO/VIANO	639	Information and	IC-Instrument cluster	•	•	0	•	•	0	•	FOB8 FOB9 FOBA FOBB
As of 01/2008	VITO/VIANO	639	Information and	IC-Instrument cluster	•	•	0	•	•	•	•	FOBC FOBA FOBD
As of 01/2008	VITO/VIANO	639	Information and	PTS-Parktronic system	•	•	•	•	•	•	•	
As of 01/2008	VITO/VIANO	639	Information and	RADIO Sound 5	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information and	AUDIO/APS-Auto pilot system	•	•	0	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information and	COMAND	•	•	0	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information and	Radio (SOUND series)	•	•	0	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information and	CDC-CD changer	•	•	0	•	0	0	0	
As of 01/2008	VITO/VIANO	639	Information and	CTEL-Cellular telephone 1 (fixed installation or portable) (D2B)	•	•	0	•	0	0	0	
As of 01/2008	VITO/VIANO	639		UHI-Cellular telephone (fixed installation or portable)(D2B)	•	•	0	•	•	0	0	
As of 01/2008	VITO/VIANO	639	Information and	VCS-Voice control system	•	•	0	•	•	0	0	
As of 01/2008	VITO/VIANO	639	Information and	TV-TV tuner	•	•	0	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information and	NAVI-Navigation system (COMAND, SOUND 50)	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	and	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	and	RADIO Sound 20	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information and	SOUND 5NG	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information and	CDW-CD changer	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Information and	TEL-Telephone control unit	•	•	•	•	•	•	0	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
	VITO/VIANO	639	Seats and	DCM-FL-Door control module front left	•	•	0	•	•	•	•	F0BE
As of 01/2008	VITO/VIANO	639	Seats and	DCM-FR-Door control module front right	•	•	0	•	•	•	•	F0BF
As of 01/2008	VITO/VIANO	639	Seats and	STE-R-ESD [STE] Right electric sliding door	•	•	0	•	•	•	•	F0C0 F0C1 F0C2
As of 01/2008	VITO/VIANO	639	Seats and	STE-L-ESD [STE] Left electric sliding door	•	•	0	•	•	•	•	F0C0 F0C1 F0C2
As of 01/2008	VITO/VIANO	639	Seats and doors	ESA driver-Electric seat adjustment driver (with memory)	•	•	0	•	•	0	•	F0C3 F0C4 F0C5 F0C6 F0C7
As of 01/2008	VITO/VIANO	639	Seats and doors	ESA passenger-Electric seat adjustment front passenger (with memory)	•	•	0	•	•	0	•	F0C3 F0C4 F0C5 F0C6 F0C7
As of 01/2008	VITO/VIANO	639	Air conditioning	REAR AC-Rear air conditioning	•	•	•	•	•	•	•	F0C8
As of 01/2008	VITO/VIANO	639	Air conditioning	AAC-Automatic air conditioning	•	•	0	•	•	•	•	F0C9
As of 01/2008	VITO/VIANO	639	Air conditioning	PTC-Heater booster	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Air conditioning	PTC-Heater booster	•	•	•	•	•	•	•	
As of 01/2008	VITO/VIANO	639	Air conditioning	STH-Stationary heater	•	•	•	•	•	•	•	
As of 01/2008	VITO/VIANO	639	Special	PSM-Parameterizable Special Module	•	•	•	•	0	•	0	
As of 01/2008	VITO/VIANO	639	Special	PSM-Parameterizable Special Module	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Drive	CDI-Common Rail Diesel Injection	•	•	•	•	•	•	•	FOCA FOO8 FOO7 FOO1 FOCB FOCC FOCD FOCE FOCF FOD0 FOD1 FOD2
As of 01/2008	VITO/VIANO	639	Drive	CDI-Common Rail Diesel Injection	•	•	•	•	•	•	•	FOCA FOO8 FOO7 FOO1 FOCB FOCC FOCD FOCE FOCF FOD0 FOD1 FOD2
As of 01/2008	VITO/VIANO	639	Drive	CDI4-Common Rail Diesel Injection	•	•	•	•	•	•	•	F001 F002 F003 F004 F005 F006 F007 F008 F009 F00A F00B F00C F00D F00E F00F F010
As of 01/2008	VITO/VIANO	639	Drive	CDI4-Common Rail Diesel Injection	•	•	•	•	•	•	•	FOCA FOOE FOO8 FOO7 FOO1 FOOD FOD3 FOD4 FOCC FOD5
As of 01/2008	VITO/VIANO	639	Drive	EGS electronic transmission control	•	•	•	•	•	•	•	F04A F09C F09D F055 F09E F09F F0A0 F0A1 F0A2 F0A3 F0A4 F0A5
As of 01/2008	VITO/VIANO	639	Drive	EGS Electronic transmission control	•	•	•	•	•	•	•	F04A F04B F04C F04D F04E F04F F050 F051 F052 F053 F054 F055 F056 F057 F058
As of 01/2008	VITO/VIANO	639	Drive	EGS Electronic transmission control	•	•	0	•	•	•	•	F04A F04B F04C F04D F04E F04F F050 F051 F052 F053 F054 F055 F056 F057 F058
	VITO/VIANO	639	Drive	ESM-Electronic selector module	•	•	0	•	•	•	•	
	VITO/VIANO	639	Chassis	ESP-Electronic stability program	•	•	0	•	•	•	•	F0A6
	VITO/VIANO	639	Chassis	ESP-Electronic stability program	•	•	•	•	•	•		F0A7 F0A8
	VITO/VIANO	639	Chassis	ENR-Electronic rear axle level control	•	•	0	•	0	•	•	F0A9 F05E
	VITO/VIANO	639	Chassis	TPC-Tire pressure monitor	•	•	•	•	<u> </u>	•	•	F0AA F05A F05B F080 F0AB
As of 01/2008	VITO/VIANO	639	Body	CGW-Central gateway	•	•	•	•	0	•	0	
	VITO/VIANO	639	Body	EZS-Electronic ignition switch	•	•	•	•	•	•	0	F069 F0AC F06A F0AD F0AE F0AF F0B0 F0B1 F0B2 F06C
	VITO/VIANO	639	Body	SRS-supplemental restraint system	•	•	0	•	•	•	0	F0B3
As of 01/2008	VITO/VIANO	639	Body	SRS-supplemental restraint system	•		0	•	•	•	0	F0B4 F078

Model	year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes		Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
		VITO/VIANO	639	Body	SAM-Signal acquisition and actuation module	•	•	0	•	•	•	•	
		VITO/VIANO	639	Body	UCP-Upper control panel	•	•	0	•	•	0	•	
		VITO/VIANO	639	Body	OCP-Overhead control panel	•	•	0	•	•	0	•	
		VITO/VIANO	639	Body	SDE-H-Rear sliding roof unit	•	•	0	•	•	0	•	F0B5 F0B6 F0B7
		VITO/VIANO	639	Body	AHE-Trailer recognition	•	•	0		•	0	•	
As of	01/2008	VITO/VIANO	639	Body	AAG-Trailer connection unit	•	•	•	•	•	0	•	
As of	01/2008	VITO/VIANO	639	Information and	IC-Instrument cluster	•	•	0	•	•	0	•	FOB8 FOB9 FOBA FOBB
As of	01/2008	VITO/VIANO	639	Information and	IC-Instrument cluster	•	•	0	•	•	•	•	FOBC FOBA FOBD
As of	01/2008	VITO/VIANO	639	Information and	PTS-Parktronic system	•	•	•	•	•	•	•	
As of	01/2008	VITO/VIANO	639	Information and	RADIO Sound 5	•	•	•	•	•	•	0	
As of	01/2008	VITO/VIANO	639	Information and	AUDIO/APS-Auto pilot system	•	•	0	•	•	•	0	
As of	01/2008	VITO/VIANO	639	Information and	COMAND	•	•	0	•	•	•	0	
As of	01/2008	VITO/VIANO	639	Information and	Radio (SOUND series)	•	•	0	•	•	•	0	
As of	01/2008	VITO/VIANO	639	Information and	CDC-CD changer	•	•	0	•	0	0	0	
As of	01/2008	VITO/VIANO	639	Information and	CTEL-Cellular telephone 1 (fixed installation or portable)(D2B)	•	•	0	•	0	0	0	
As of	01/2008	VITO/VIANO	639	Information and	UHI-Cellular telephone (fixed installation or portable)(D2B)	•	•	0	•	•	0	0	
As of	01/2008	VITO/VIANO	639	Information and	VCS-Voice control system	•	•	0	•	•	0	0	
As of	01/2008	VITO/VIANO	639	Information and	TV-TV tuner	•	•	0	•	•	•	0	
As of	01/2008	VITO/VIANO	639	Information and	NAVI-Navigation system (COMAND, SOUND 50)	•	•	•	•	•	•	0	
As of	01/2008	VITO/VIANO	639	Information and	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	•	•	•	•	•	•	0	
As of	01/2008	VITO/VIANO	639	Information and	RADIO Sound 20	•	•	•	•	•	•	0	
As of	01/2008	VITO/VIANO	639	Information and	SOUND 5NG	•	•	•	•	•	•	0	
As of	01/2008	VITO/VIANO	639	Information and	CDW-CD changer	•	•	•	•	•	•	0	
		VITO/VIANO	639	Information and	TEL-Telephone control unit	•	•	•	•	•	•	0	
As of		VITO/VIANO	639	Seats and	DCM-FL-Door control module front left	•	•	0	•	•	•	•	FOBE
As of		VITO/VIANO	639	Seats and	DCM-FR-Door control module front right	•	•	0	•	•	•	•	F0BF
		VITO/VIANO	639	Seats and	STE-R-ESD [STE] Right electric sliding door	•	•	0	•	•	•	•	F0C0 F0C1 F0C2
As of	01/2008	VITO/VIANO	639	Seats and	STE-L-ESD [STE] Left electric sliding door	•	•	0	•	•	•	•	F0C0 F0C1 F0C2

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
As of 01/2008	VITO/VIANO	639	Seats and doors	ESA driver-Electric seat adjustment driver (with memory)	•	•	0	•	•	0	•	F0C3 F0C4 F0C5 F0C6 F0C7
As of 01/2008	VITO/VIANO	639	Seats and doors	ESA passenger-Electric seat adjustment front passenger (with memory)	•	•	0	•	•	0	•	F0C3 F0C4 F0C5 F0C6 F0C7
As of 01/2008	VITO/VIANO	639	Air conditioning	REAR AC-Rear air conditioning	•	•	•	•	•	•	•	F0C8
As of 01/2008	VITO/VIANO	639	Air conditioning	AAC-Automatic air conditioning	•	•	0	•	•	•	•	F0C9
As of 01/2008	VITO/VIANO	639	Air conditioning	STH-Stationary heater	•	•	•	•	•	•	•	
As of 01/2008	VITO/VIANO	639	Air conditioning	PTC-Heater booster	•	•	•	•	•	•	0	
As of 01/2008	VITO/VIANO	639	Air conditioning	PTC-Heater booster	•	•	•	•	•	•	•	
As of 01/2008	VITO/VIANO	639	Special	PSM-Parameterizable Special Module			•		0	•	0	
As of 01/2008	VITO/VIANO	639	Special	PSM-Parameterizable Special Module	•	•	•	•	•	•	0	
From 2004 to 2007	VANEO	639	Drive	ME-SFI 2.8-Motor electronics 2.8	•	•	0	•	•	•	•	F097 F001 F098 F099 F048 F09A F09B
From 2004 to 2007	VANEO	639	Drive	ME 97-Motor electronics 9.7	•	•	•	•	•	•	•	F041 F042 F004
From 2004 to 2007	VANEO	639	Drive	CDI-Common Rail Diesel Injection	•	•	•	•	•	•	•	FOCA FOO8 FOO7 FOO1 FOCB FOCC FOCD FOCE FOCF FOD0 FOD1 FOD2
From 2004 to 2007	VANEO	639	Drive	CDI-Common Rail Diesel Injection	•	•	•	•	•	•	•	FOCA FOO8 FOO7 FOO1 FOCB FOCC FOCD FOCE FOCF FOD0 FOD1 FOD2
From 2004 to 2007	VANEO	639	Body	EZS-Electronic ignition switch	•	•	•	•	•	•	0	F069 F0AC F06A F0AD F0AE F0AF F0B0 F0B1 F0B2 F06C
From 2004 to 2007	VANEO	639	Body	EZS-Electronic ignition switch	•	•	•	•	•	•	0	F0B1 F0B2 F069 F06A F06B F06C
From 2004 to 2007	VANEO	639_M08	Drive	ME 97-Motor electronics 9.7	•	•	•	•	•	•	•	F041 F042 F004
From 2004 to 2007	VANEO	639_M08	Drive	ME-SFI 2.8-Motor electronics 2.8	•	•	0	•	•	•	•	F097 F001 F098 F099 F048 F09A F09B
From 2004 to 2007	VANEO	639_M08	Drive	EGS Electronic transmission control	•	•	•	•	•	•	•	F04A F04B F04C F04D F04E F04F F050 F051 F052 F053 F054 F055 F056 F057 F058
From 2004 to 2007	VANEO	639_M08	Drive	EGS electronic transmission control	•	•	•	•	•	•	•	F04A F09C F09D F055 F09E F09F F0A0 F0A1 F0A2 F0A3 F0A4 F0A5
From 2004 to 2007	VANEO	639_M08	Drive	ESM-Electronic selector module	•	•	0	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	Drive	FSCU-Fuel pump	•	•	•	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Chassis	ESP-Electronic stability program	•	•	•	•	•	•	•	F0A7 F0A8
From 2004 to 2007	VANEO	639_M08	Chassis	ENR-Electronic rear axle level control	•	•	0	•	0	•	•	F0A9 F05E
From 2004 to 2007	VANEO	639_M08	Chassis	TPC-Tire pressure monitor	•	•	•	•	•	•	•	F0AA F05A F05B F080 F0AB

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2004 to 2007	VANEO	639_M08	Body	EZS-Electronic ignition switch	•	•	•	•	•	•	0	F0B1 F0B2 F069 F06A F06B F06C
From 2004 to 2007	VANEO	639_M08	Body	SAM-Signal acquisition and actuation module	•	•	0	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	Body	SAM-Signal acquisition and actuation module	•	•	0	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	Body	OBF2-Upper control panel	•	•	•	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	Body	UCP-Upper control panel	•	•	0	•	•	0	•	
From 2004 to 2007	VANEO	639_M08	Body	SRS-supplemental restraint system	•	•	0	•	•	•	0	F0B4 F078
From 2004 to 2007	VANEO	639_M08	Body	SRS-supplemental restraint system	•	•	0	•	•	•	0	F0B4 F078
From 2004 to 2007	VANEO	639_M08	Body	AAG-Trailer connection unit	•	•	•	•	•	0	•	
From 2004 to 2007	VANEO	639_M08	Body	OCP-Overhead control panel	•	•	0	•	•	0	•	
From 2004 to 2007	VANEO	639_M08	Body	SDE-H-Rear sliding roof unit	•	•	0	•	•	0	•	F0B5 F0B6 F0B7
From 2004 to 2007	VANEO	639_M08	Body	ALWR-Headlamp range adjustment	•	•	•	•	•	•	•	F06F
From 2004 to 2007	VANEO	639_M08	Information and	IC-Instrument cluster	•	•	0	•	•	•	•	FOBC FOBA FOBD
From 2004 to 2007	VANEO	639_M08	Information and	PTS-Parktronic system	•	•	•	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	Information and	PTS-Parktronic system	•	•	0	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	Information and	DTCO-Digital tachograph	•	•	0	•	0	•	0	
From 2004 to 2007	VANEO	639_M08	Information and	FSE Hands-free system (Bluetooth)	•	•	0	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	Information and	SOUND 5NG	•	•	•	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Information and	RADIO Sound 5	•	•	•	•	•	•	0	
From 2004 to	VANEO	639_M08	Information and	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	•	•	•	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Information and	RADIO Sound 20	•	•	•	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Information and	COMAND or AUDIO	•	•	0	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Information and	NAVI-Navigation system (COMAND, SOUND 50)	•	•	•	•	•	•	0	
From 2004 to	VANEO	639_M08	Information and	AVN-Headlamp range adjustmen	•	•	0	•	•	•	0	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes		Freeze Frame	Active Test	Special Function
From 2004 to 2007	VANEO	639_M08	Information and	CDW-CD changer	•	•	•	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Information and	TEL-Telephone control unit	•	•	•	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Seats and doors	DCM-FL-Door control module front left	•	•	0	•	•	•	•	FOBE
From 2004 to 2007	VANEO	639_M08	Seats and doors	DCM-FR-Door control module front right	•	•	0	•	•	•	•	F0BF
From 2004 to 2007	VANEO	639_M08	Seats and doors	STE-R-ESD [STE] Right electric sliding door	•	•	0	•	•	•	•	F0C0 F0C1 F0C2
From 2004 to 2007	VANEO	639_M08	Seats and doors	STE-L-ESD [STE] Left electric sliding door	•	•	0	•	•	•	•	F0C0 F0C1 F0C2
From 2004 to 2007	VANEO	639_M08	Seats and doors	ESA driver-Electric seat adjustment driver (with memory)	•	•	0	•	•	0	•	F0C3 F0C4 F0C5 F0C6 F0C7
From 2004 to 2007	VANEO	639_M08	Seats and doors	ESA passenger-Electric seat adjustment front passenger (with memory)	•	•	0	•	•	0	•	F0C3 F0C4 F0C5 F0C6 F0C7
From 2004 to 2007	VANEO	639_M08	Air conditioning	REAR AC-Rear air conditioning	•	•	•	•	•	•	•	F0C8
From 2004 to 2007	VANEO	639_M08	Air conditioning	AAC-Automatic air conditioning	•	•	0	•	•	•	•	F0C9
From 2004 to 2007	VANEO	639_M08	Air conditioning	STH-Stationary heater	•	•	•	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	Air conditioning	PTC-Heater booster	•	•	•	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Air conditioning	PTC-Heater booster	•	•	•	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	Special bodies	PSM-Parameterizable Special Module	•	•	•	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Drive	CDID2-Common Rail Diesel Injection	•	•	•	•	•	•	•	F011 F004 F002 F005 F006 F007 F008 F012 F013 F014 F015 F016 F017 F018 F019 F01A F01B F01C F01D F01E F01F F020 F021 F022 F023 F00F F024 F025 F026 F027 F00D F028 F029 F02A F010 F02B
From 2004 to 2007	VANEO	639_M08	Drive	CDI4-Common Rail Diesel Injection	•	•	•	•	•	•		F001 F002 F003 F004 F005 F006 F007 F008 F009 F00A F00B F00C F00D F00E F00F F010
From 2004 to 2007	VANEO	639_M08	Drive	CDI6-Common Rail Diesel Injection	•	•	•	•	•	•		F011 F004 F00D F002 F005 F006 F007 F008 F02D F02E F02F F016 F030 F031 F032 F033 F034 F035 F036 F037 F038 F024 F00F F039 F010 F00E F026 F03A F03B F03C
From 2004 to 2007	VANEO	639_M08	Drive	CDI-Common Rail Diesel Injection	•	•	•	•	•	•	_	FOCA FOO8 FOO7 FOO1 FOCB FOCC FOCD FOCE FOCF FOD0 FOD1 FOD2
From 2004 to 2007	VANEO	639_M08	Drive	EGS Electronic transmission control	•	•	•	•	•	•		F04A F04B F04C F04D F04E F04F F050 F051 F052 F053 F054 F055 F056 F057 F058

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2004 to 2007	VANEO	639_M08	Drive	EGS electronic transmission control	•	•	•	•	•	•	•	F04A F09C F09D F055 F09E F09F F0A0 F0A1 F0A2 F0A3 F0A4 F0A5
From 2004 to 2007	VANEO	639_M08	Drive	ESM-Electronic selector module	•	•	0	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	Drive	FSCU-Fuel pump	•	•	•	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Chassis	ESP-Electronic stability program	•	•	•	•	•	•	•	F0A7 F0A8
From 2004 to 2007	VANEO	639_M08	Chassis	ENR-Electronic rear axle level control	•	•	0	•	0	•	•	F0A9 F05E
From 2004 to 2007	VANEO	639_M08	Chassis	TPC-Tire pressure monitor	•	•	•	•	•	•	•	F0AA F05A F05B F080 F0AB
From 2004 to 2007	VANEO	639_M08	Body	EZS-Electronic ignition switch	•	•	•	•	•	•	0	F0B1 F0B2 F069 F06A F06B F06C
From 2004 to 2007	VANEO	639_M08	Body	SAM-Signal acquisition and actuation module	•	•	0	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	Body	SAM-Signal acquisition and actuation module	•	•	0	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	Body	OBF2-Upper control panel	•	•	•	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	Body	UCP-Upper control panel	•	•	0	•	•	0	•	
From 2004 to 2007	VANEO	639_M08	Body	SRS-supplemental restraint system	•	•	0	•	•	•	0	F0B4 F078
From 2004 to 2007	VANEO	639_M08	Body	SRS-supplemental restraint system	•	•	0	•	•	•	0	F0B4 F078
From 2004 to 2007	VANEO	639_M08	Body	AAG-Trailer connection unit	•	•	•	•	•	0	•	
From 2004 to 2007	VANEO	639_M08	Body	OCP-Overhead control panel	•	•	0	•	•	0	•	
From 2004 to 2007	VANEO	639_M08	Body	SDE-H-Rear sliding roof unit	•	•	0	•	•	0	•	F0B5 F0B6 F0B7
From 2004 to 2007	VANEO	639_M08	Body	ALWR-Headlamp range adjustment	•	•	•	•	•	•	•	F06F
From 2004 to 2007	VANEO	639_M08	Information and	IC-Instrument cluster	•	•	0	•	•	•	•	FOBC FOBA FOBD
2007	VANEO	639_M08	and	PTS-Parktronic system	•	•	•	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	and	PTS-Parktronic system	•	•	0	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	and	DTCO-Digital tachograph	•	•	0	•	0	•	0	
From 2004 to 2007	VANEO	639_M08	Information and	FSE Hands-free system (Bluetooth)	•	•	0	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	Information and	SOUND 5NG	•	•	•	•	•	•	0	

Model year	Vehicle Type	Model Series	Control Unit Groups	System Name	Ecu Info.	Read Codes	Event Memory	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
From 2004 to 2007	VANEO	639_M08	Information and	RADIO Sound 5	•	•	•	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Information and	AGW-Audio gateway (MOST network management, diagnosis gateway, radio tuner)	•	•	•	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Information and	RADIO Sound 20	•	•	•	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Information and	COMAND or AUDIO	•	•	0	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Information and	NAVI-Navigation system (COMAND, SOUND 50)	•	•	•	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Information and	AVN-Headlamp range adjustmen	•	•	0	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Information and	CDW-CD changer	•	•	•	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Information and	TEL-Telephone control unit	•	•	•	•	•	•	0	
2007	VANEO	639_M08	Seats and doors	DCM-FL-Door control module front left	•	•	0	•	•	•	•	FOBE
From 2004 to 2007	VANEO	639_M08	Seats and doors	DCM-FR-Door control module front right	•	•	0	•	•	•	•	FOBF
From 2004 to 2007	VANEO	639_M08	Seats and doors	STE-R-ESD [STE] Right electric sliding door	•	•	0	•	•	•	•	F0C0 F0C1 F0C2
From 2004 to 2007	VANEO	639_M08	Seats and doors	STE-L-ESD [STE] Left electric sliding door	•	•	0	•	•	•	•	F0C0 F0C1 F0C2
From 2004 to 2007	VANEO	639_M08	Seats and doors	ESA driver-Electric seat adjustment driver (with memory)	•	•	0	•	•	0	•	F0C3 F0C4 F0C5 F0C6 F0C7
From 2004 to 2007	VANEO	639_M08	Seats and doors	ESA passenger-Electric seat adjustment front passenger (with memory)	•	•	0	•	•	0	•	F0C3 F0C4 F0C5 F0C6 F0C7
From 2004 to 2007	VANEO	639_M08	Air conditioning	REAR AC-Rear air conditioning	•	•	•	•	•	•	•	F0C8
From 2004 to 2007	VANEO	639_M08	Air conditioning	AAC-Automatic air conditioning	•	•	0	•	•	•	•	F0C9
From 2004 to 2007	VANEO	639_M08	Air conditioning	STH-Stationary heater	•	•	•	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	Air conditioning	PTC-Heater booster	•	•	•	•	•	•	0	
From 2004 to 2007	VANEO	639_M08	Air conditioning	PTC-Heater booster	•	•	•	•	•	•	•	
From 2004 to 2007	VANEO	639_M08	Special bodies	PSM-Parameterizable Special Module	•	•	•	•	•	•	0	

${\tt Specil_Function}$

Index	Specil Function Name	Index	Specil Function Name
F001	Drive authorization	F002	Write VIN.
F003	Tire size Teach-in process after replacement	F004	Maximum vehicle speed limit Teaching in the diesel particulate
F005	of component Diesel particulate	F006	filter after replacing the engine
1 000	filter	1 000	control unit
E007	Regeneration of diesel particulate	E000	Regeneration of diesel particulate
F007	filter when driving	F008	filter
F009	Limit values Working speed control	F00A	Initialize component Hot film mass
	Dimit values working speed control	1 0 011	air flow sensor.
F00B	Teach in component Throttle valve.	F00C	Initialize system 'Rail pressure regulation'.
	Adjustment of injector injection		Teach in used diesel particulate
F00D	quantities	F00E	filter.
F00F	Teach in new diesel particulate	F010	Reset fill factor of air filter.
F00F	filter.	F010	Reset IIII lactor of air litter.
F011	Activate drive authorization	F012	B2/12 (Hot film mass air flow sensor)
F013	B4/16 (Rail pressure sensor)	F014	B28/18 (Diesel particulate filter
			differential pressure sensor) M3/5 (Fuel pump with fuel level
F015	B85/2 (Oxygen sensor) M16/45 (Throttle valve actuator)	F016	
F017		F018	M72/1 (Intake port shutoff actuator)
F019 F01B	R9 (Glow plugs) Y94/3 (Quantity control valve)	F01A F01C	Y74/5 (Pressure regulator valve)
F01D	Diesel particulate filter	F01E	Turbocharger Air filter
F01D F01F		F01E F020	
FU1F	Leak in system Charge air	FU2U	Leak in system Exhaust Quick teach-in of the zero quantity
F021	Type approval number	F022	calibration values at idle
F023	Quick teach-in of the zero	F024	Resetting the lambda values
	quantity calibration values while		
F025	Activate fuel pump.	F026	Learning of the throttle valve stop
F027	Teach—in of intake port shutoff	F028	Teach in component 48584.
F029	Teach in component Charge pressure positioner.	F02A	Teach in component Quantity control valve.
F02B	Teach in component Glow output	F02C	
FU2B	stage.	F02C	Deletion of values
F02D	B4/17 (Rail pressure sensor)	F02E	B16/12 (Temperature sensor upstream
	B28/20 (Diesel particulate filter		of SCR catalytic converter)
F02F	differential pressure sensor)	F030	M16/48 (Throttle valve actuator)
F031	Y74/6 (Pressure regulator valve)	F032	Y76 (Injectors)
F033	Y130 (AdBlue?injection valve)	F034	SCR catalytic converter
	Teach in component NOx sensor		Teach in component Status of NOx
F035	upstream of SCR catalytic	F036	sensor downstream of SCR catalytic
F037	Reset quantity mean value	F038	Reset values for HFM drift
	adaptation data.		compensation.
F039	Teach in component Diesel	F03A	Teach in component Differential
	oxidation catalytic converter. Exhaust gas recirculation valve		pressure sensor. Teach in component Pressure control
F03B	teach-in	F03C	valve.
F03D	Teach in component Y130	F03E	Initialize system 'SCR'.
מפטיז	(AdBlue?injection valve).	LOSE	·
DAGE	Teach in component SCR catalytic	D0.40	Teach in component B16/12
F03F	converter.	F040	(Temperature sensor upstream of SCR
F041	Drive authorization system	F042	catalytic converter). Initial startup
F041 F043	Ignition	F042 F044	Fuel quantity
	Learning of the recirculated air		Teach in of drive authorization
F045	flap stop	F046	system
F047	CNG compressed natural gas Mode	F048	Resetting of sensor adaptation
F049	Activate or deactivate component	F04A	Definition
1,049	Y107/9 (Low pressure shutoff	1'U4A	Det till (1011

Index	Specil Function Name	Index	Specil Function Name
	Important information on		Important information on the
F04B	adaptation limit values	F04C	combination possibilities for
E0.4D	_	EO 4E	adapation end stop values
F04D F04F	Adaptation values of shift 1-2:	F04E	Adaptation values of shift 2-3:
	Adaptation values of shift 3-4:	F050 F052	Adaptation values of shift 4-5:
F051 F053	Adaptation values of shift 5-4: Adaptation values of shift 3-2:	F054	Adaptation values of shift 4-3: Adaptation values of shift 2-1:
F055	Display all adaptation data.	F054 F056	Resetting of adaptation data
F057	Transmission control	F058	Torque converter lockup clutch
1.001	Calibration of component B24/15	1.000	Initial startup with automatic
F059	(Yaw rate, lateral and	F05A	takeover of settings of previous
	longitudinal acceleration sensor)		control unit
	Initial startup with manual		
F05B	settings input for new control	F05C	Write wheel electronics
	unit, For example: The previous		identification number.
EUED	control unit can no longer be	F05E	Lovel colibration
F05D F05F	Coding display A9/1m1 (Air compressor motor)	F060	Level calibration Y36 (Level control valve unit)
1601	Activation(ELV-Electric steering	F000	Central locking(Customer-specific
F061	lock)	F062	settings)
F063	EZS:Detach transport protection.	F064	ELV: Detach transport protection.
F065	EZS:Personalizing	F066	ELV: Personalizing
F067	Activate control module EZS.	F068	Activate control module ELV.
F069	Disable key or key track.	F06A	Once again authorize key or key
F06B	Teach in additional key.	F06C	Program replacement keys.
F06D	Step 1 Determine random number for	F06E	Step 2 Enter the encrypted random
F00D	teach-in of transponder key.	FUOE	number generated by FDOK.
F06F	Calibrate control unit LWR.	F070	Perform normalizing of component
			Sliding/tilting roof.
F071	Perform denormalization of component Sliding/tilting roof.	F072	Delete denormalization causes.
F073	Inversion of rotation direction	F074	Reset alarm sources.
	Teach in component Battery-		
F075	operated horn.	F076	Teach in component Rain/light sensor.
F077	Function 'Silent alarm'	F078	Interlock control module.
F079	Read coding.1	F07A	Reset of maintenance interval display
F07B	Key track All	F07C	Key track 1
F07D	Key track 2	F07E	Key track 3-8
F07F	All coding settings	F080	Variant coding
F081	Menu settings(Basic settings)	F082	Trip computer1
F083	Trip computer2	F084	Lighting
F085	Parameterization of the current	F086	Parameter Instrument cluster
F087	oil data record ASSYST Active Service System	F088	Vehicle equipment
F087	Configuration Indicators	F08A	Vehicle speed display
	Configuration indicators Configuration of menu items in		
F08B	multifunction display	F08C	Parameter TCO Tachograph
EUOD	Parameter ESP Electronic Stability	EVOE	Demonstra Coot halt maniful
F08D	Program	F08E	Parameter Seat belt reminder warning
F08F	Tank parameters	F090	Fuel tank characteristic curve
F091	Extended tank algorithm	F092	Fuel tank sensor tight installation
			recognition
F093	Customer-specific settings 1	F094	Customer-specific settings 2
F095 F097	Customer-specific settings 3 Default initialization	F096 F098	Teach in actuator motors. Tester identification
F097 F099	Check sensor adaptation.	F098 F09A	Check mixture adaptation.
F099 F09B	Resetting of mixture adaptation	F09A F09C	Resetting of adaptation data
F09B F09D	Performing adaptation	F09C F09E	Adaptation data of power upshifts
	Adaptation data deceleration		
F09F	upshifts	F0A0	Adaptation data power downshifts
EOA1	Adaptation data deceleration	F0A2	Adaptation data filling pressure and
FOA1	downshifts	rUA2	filling time

Index	Specil Function Name	Index	Specil Function Name
F0A3	Notes on combinations of adaptation data	F0A4	Filling pressure
F0A5	Filling time and switching time	F0A6	Component B24/8 (Steering angle sensor): Perform calibration.
F0A7	Component : B24/8 (Steering angle sensor):Perform calibration.	F0A8	Component: B24/15 (Yaw rate, lateral and longitudinal acceleration sensor):Perform calibration.
F0A9	Replace control module. (Only the calibration data are transferred.	FOAA	Writing of specified pressure values.
F0AB	Tire pressure set values	FOAC	Disable key or key track with the workshop key.
FOAD	Detach transport protection. N73 (Electronic ignition switch (EIS [EZS]))	F0AE	Detach transport protection. N26/5 (Electric steering lock)
FOAF	Personalizing N73 (Electronic ignition switch (EIS [EZS]))	F0B0	Personalizing N26/5 (Electric steering lock)
F0B1	Drive authorization system(EZS ESL CDI) - Detach transport protection. Personalizing.	F0B2	Drive authorization system(EZS ESL ME-SFI) - Detach transport protection. Personalizing. Activating
F0B3	Vehicle ident no.	F0B4	Transmit key ID to control unit N2/11 (Supplemental restraint system
F0B5	Normalizing routine/Learning	F0B6	Adapt obstruction protection.
F0B7	Coding of sliding/tilting roof function of 'automatic operation'	F0B8	Learning to the drive authorization system
F0B9	Setting main odometer forward and back	FOBA	Setting main odometer forward
F0BB	ASSYST settings	F0BC	Personalizing
FOBD	Resetting menu settings to manufacturer default settings	F0BE	Parameterization of N69/1 (Left front door control unit (DCM-LF [TSG-VL])) Power window
F0BF	Parameterization of N69/2 (Right front door control unit (DCM-RF [TSG-VR])) Power window	F0C0	Normalizing
F0C1	Detection of sliding movement	F0C2	Denormalization
F0C3	Normalizing of forward/back adjustment	F0C4	Normalizing of height adjustment at front
F0C5	Normalizing of height adjustment at rear	F0C6	Normalizing of head restraint adjustment
F0C7	Normalizing of backrest adjustment	F0C8	Perform normalizing of component A32/2m3 (Rear blending air flap actuator motor).
F0C9	Normalizing of positioning motors	FOCA	Initialization of system 'Diesel particulate filter'
F0CB	Adjustment of injector injection quantities/Injector shutoff	F0CC	Initialization of system 'Air intake, turbocharging'
FOCD	Initialization of system 'Catalytic converter'	F0CE	Tire circumference parameter
F0CF	Idle speed adjustment(840 1/min)	F0D0	Idle speed adjustment(800 1/min)
F0D1	Extension of run-on time	FOD2	Adjustment value of start quantity
F0D3	Initialization of system 'Air filter'	F0D4	Initialization of system 'Throttle valve positioner'
F0D5	Initialization of system 'Common Rail'		